



7. EUT Testing Position and Antenna Location

Test Position 1



Test Position 2



Test Position 3



Test Position 4



Test Position 2 (Remove rear cover)

