

Disney MEET THE ROBINSONS

3+

Time Machine Remote Control Vehicle Véhicule à remonter le temps télécommandé

 


Remove batteries when not in use or discharged
Enlever la batterie quand n'en opération ou décharger pas


For best results use on a smooth surface or short pile carpet.
Pour un meilleur résultat, utiliser sur une surface lisse ou un tapis aigüilleté.

Requires 1 X 9V (Not included),
rechargeable 4.8V Ni-MH/Adaptor (Input: 100-120V AC, Output: 6V DC) (Included)
Fonctionne avec 1 pile 9V (Non compris),
rechargeable 4.8V Ni-MH/Adaptor (Input: 100-120V AC, Output: 6V DC) (fournies)


Please retain this information for future reference.
Conservare questi informazioni per eventuale riferimento.

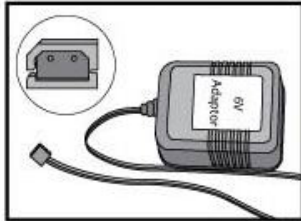

 
Charger : Input AC 100-120V ~ 60 Hz 35mA
Output 6V, DC 250mA

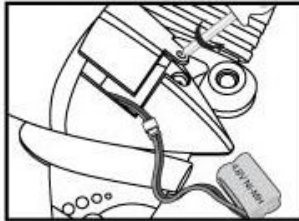

 Rechargeable Battery Pack :
NIMH, 4.8V (1.2V each)
Rated capacity 300 mAh

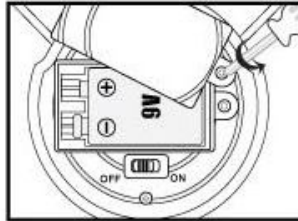

 Requires 1 x 9V battery (Not included)
Fonctionne avec 1 pile 9V (Non compris)

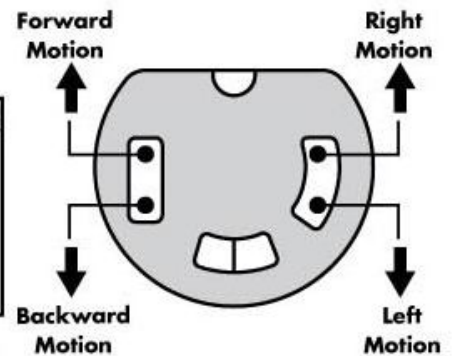

Warning: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.