

## **Operational Description:**

Functional Description: Radio Control Bob Car, battery compartment on car body , DC supply - insert 6 pcs size AA batteries as per instruction and engraving on battery compartment. Remote Control, use 1 pc 9 voltage battery.

Step 1. start with turn the ON/OFF button to position “ON” at the bottom of the chassis, come with the “Engine sound” , “Left and Right head light(yellow color), Top Front light” will on.

Step 2 Remote control- turn the ON/OFF button to position “ON”, red light on the top will on.

Step 3 push the joystick on the left forward; car will go forward and both head light (yellow color) in the front, front red light in the middle, both rear lights and middle (red color) will on.

Step 4. push the joystick on the left backward, car will go backward and both head light (yellow color) in the front, front red light in the middle, both rear lights and middle (red color) will on.

Step 5. joystick on the right control turning directions “Left turn and Right turn”. Push left car should go left hand side; or push right car should go right.