

Wireless Multi-Touchpad Mini Keyboard Installation Guide

Introduction

The *Wireless Multi-Touchpad Mini Keyboard* offers performance, value and convenience of wireless connectivity.

Features and Benefits

- Plug and play - no additional drivers needed
- Slim, light weight 88-key wireless keyboard - extremely portable
- Multi-touch touchpad with 3-button mouse function, including tapping, scrolling
- Low profile tactile keys for comfort, precise and quiet typing
- 8 hot keys for internet, e-mail and multimedia functions

Package Contents

- *Wireless Multi-Touchpad Mini Keyboard*
- 2 AAA batteries
- Installation guide

System Requirements

- PC computer with an available USB port
- Windows® 8 (32-/64-bit) / 7 (32-/64-bit) / Vista (32-/64-bit) / XP (32-/64-bit) / Server 2003 & 2008 (32-/64-bit) / Server 2008 R2

Specifications

Keyboard

- LED: Low battery indicator
- Batteries: 2 AAA
- Pairing button
- Key press force: 61g $\pm$ 9g
- Key switch life: ~ 10 million cycles
- Number of keys: 88 + 8 hot keys
- Operating distance: up to 33ft/10m (max)
- Operating frequency: 2.4 GHz
- Operating mode current consumption: 8mA (max)
- Sleep mode current consumption: 15uA
- Sleep mode: After 8-10 minutes of inactivity
- Two snap open legs for tilt and height adjustment
- Dimensions: 12 1/4" x 8 11/16" x 3/4"

Touchpad

- Multi-finger touch technology touchpad
- Supports 3-button mouse with tap and scroll
- Built-in left and right mouse button below touchpad

Keyboard Layout



Keyboard Buttons

- 1 *Home* - Starts the default Web browser and loads your home page - when web browser is already running your home page will load
- 2 *Search* - Opens Windows search feature
- 3 *Favorites* - Opens your list of favorite websites
- 4 *Email* - Starts the default email program
- 5 *Volume down* - Decreases the system sound
- 6 *Volume up* - Increases the system sound
- 7 *Stop* - Stops playing the current media track (Windows Media Player only)
- 8 *Play/Pause* - Switch between playing and pausing the current media track (Windows Media Player only)
- 9 *Num Lock* - Enables or disables Num Lock
- 10 *Low battery LED* - Replace the batteries as soon as possible when LED flashes
- 11 *Fn* (function key) - Works in conjunction with the Num Lock key to temporarily override the integrated numeric keypad in order to type the letter on the corresponding key
- 12 *Multi-touch touchpad* - Controls cursor and various mouse functions
- 13 Left click button
- 14 Right click button
- 15 This key functions as right-click button

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.**