


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

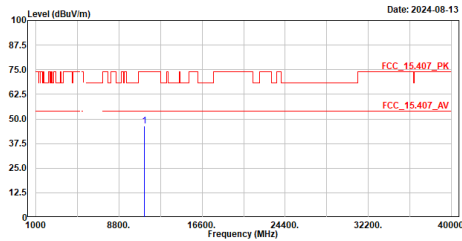


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	46.59	74.00	-27.41	54.38	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

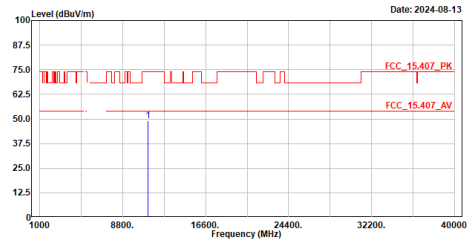


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	49.05	74.00	-24.95	56.84	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

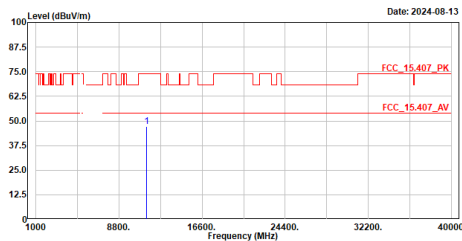


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	47.21	74.00	-26.79	54.42	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

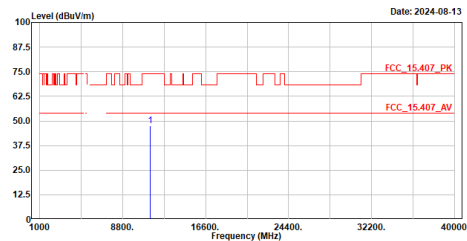


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	47.50	74.00	-26.50	54.71	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

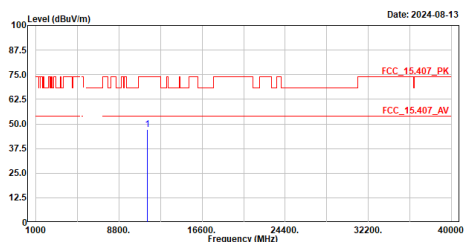


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	47.04	74.00	-26.96	54.18	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

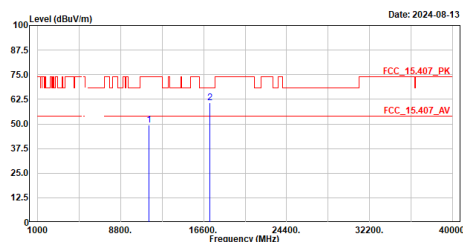


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	49.29	74.00	-24.71	56.43	-7.14	Peak
2	17160.000	60.84	68.22	-7.38	61.03	-0.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

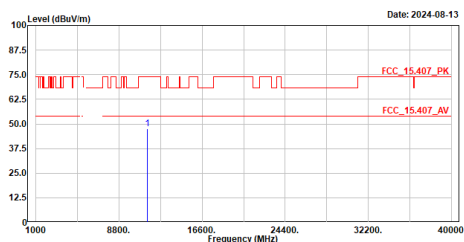


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.51	74.00	-26.49	54.61	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

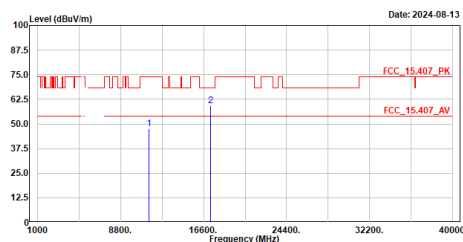


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.69	74.00	-26.31	54.79	-7.10	Peak
2	17235.000	59.25	68.22	-8.97	59.78	-0.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

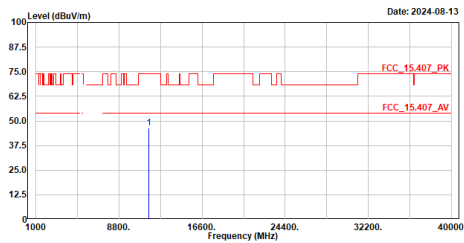


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	46.31	74.00	-27.69	53.50	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

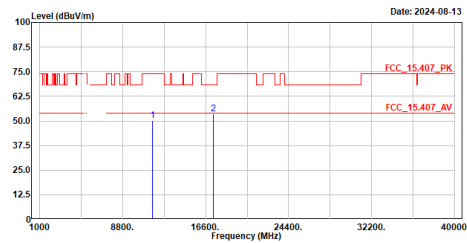


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	50.26	74.00	-23.74	57.45	-7.19	Peak
2	17355.000	53.56	68.22	-14.66	53.99	-0.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

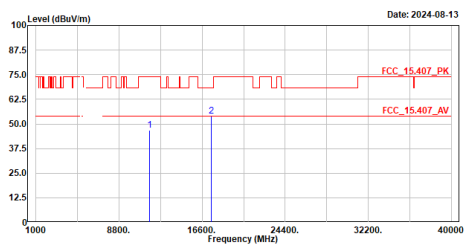


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.94	74.00	-27.06	54.12	-7.18	Peak
2	17475.000	53.88	68.22	-14.34	54.09	-0.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

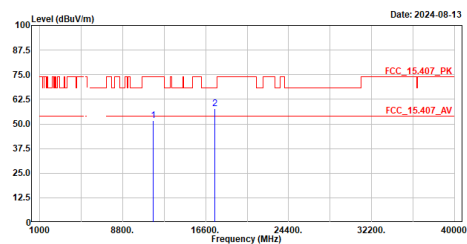


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	51.65	74.00	-22.35	58.83	-7.18	Peak
2	17475.000	57.66	68.22	-10.56	57.87	-0.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

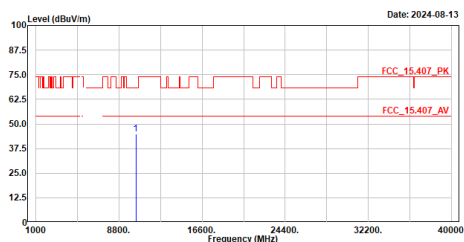


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.00	68.22	-23.22	54.32	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

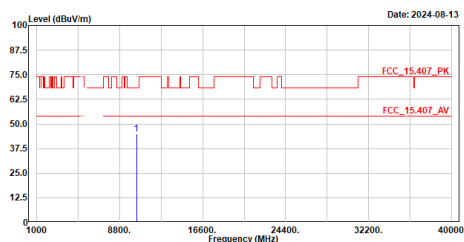


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	44.98	68.22	-23.24	54.30	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

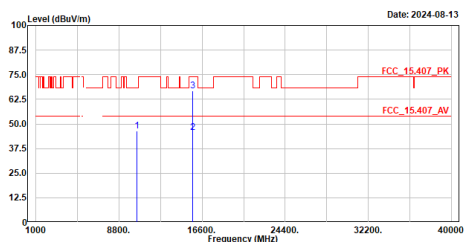


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	46.49	68.22	-21.73	55.84	-9.35	Peak
2	15690.000	45.82	54.00	-8.18	46.97	-1.15	Average
3	15690.000	66.78	74.00	-7.22	67.93	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

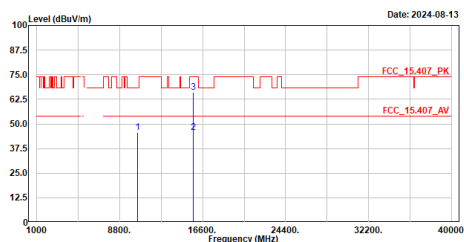


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.70	68.22	-22.52	55.05	-9.35	Peak
2	15690.000	45.62	54.00	-8.38	46.77	-1.15	Average
3	15690.000	65.92	74.00	-8.08	67.07	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

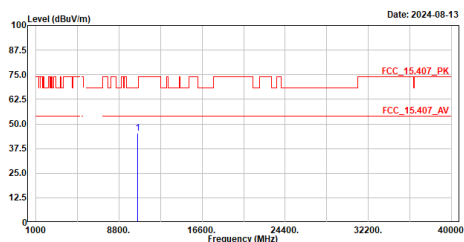


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	45.37	68.22	-22.85	54.51	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

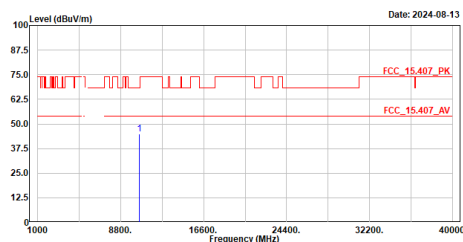


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	45.08	68.22	-23.14	54.22	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

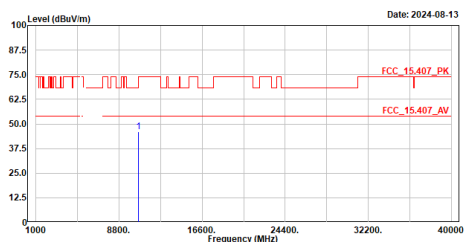


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	46.10	74.00	-27.90	54.95	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

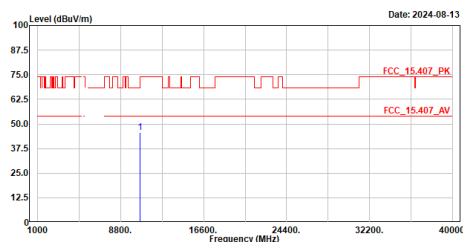


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	45.55	74.00	-28.45	54.40	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

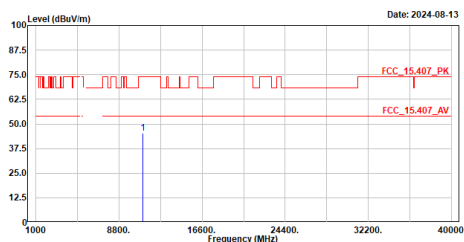


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.26	74.00	-28.74	53.62	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

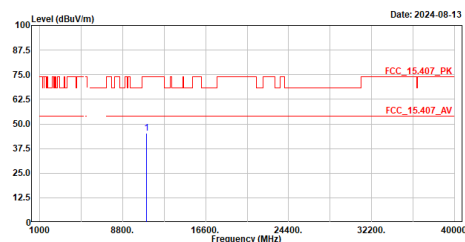


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.35	74.00	-28.65	53.71	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

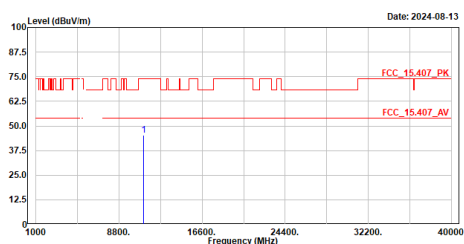


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.30	74.00	-28.70	53.29	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

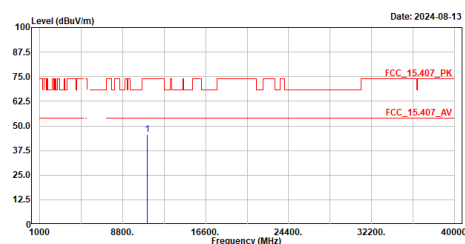


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.66	74.00	-28.34	53.65	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

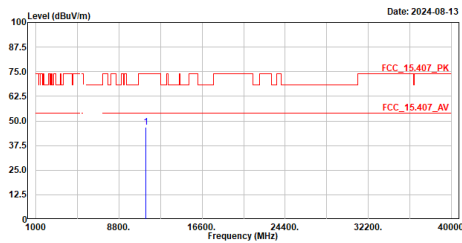


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	46.80	74.00	-27.20	54.16	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

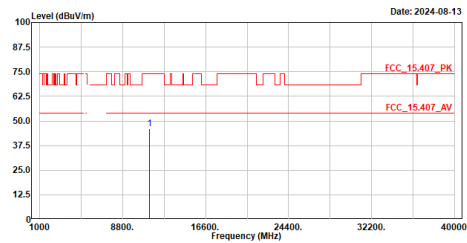


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	46.17	74.00	-27.83	53.53	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5710MHz
TEST BY :Caster

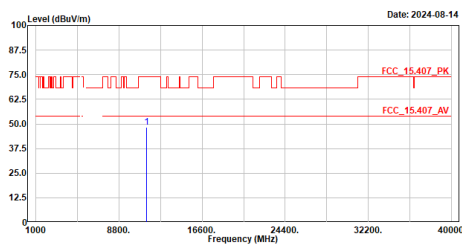


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	48.27	74.00	-25.73	55.44	-7.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5710MHz
TEST BY :Caster

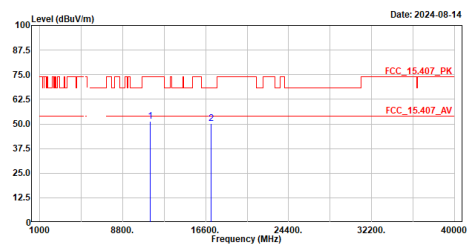


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	51.31	74.00	-22.69	58.48	-7.17	Peak
2	17130.000	50.17	68.22	-18.05	50.36	-0.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

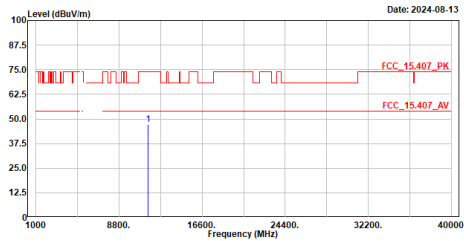


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	47.34	74.00	-26.66	54.45	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

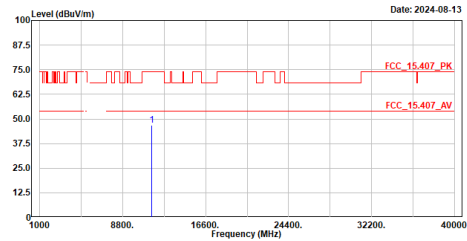


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.69	74.00	-27.31	53.80	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

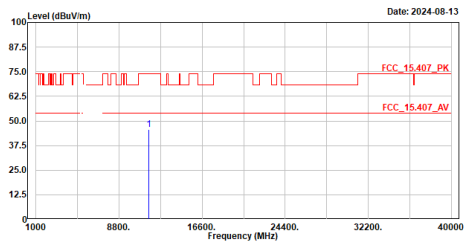


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.66	74.00	-28.34	52.90	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

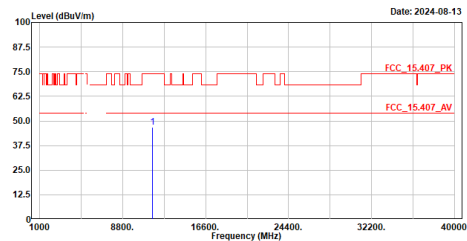


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.97	74.00	-27.03	54.21	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

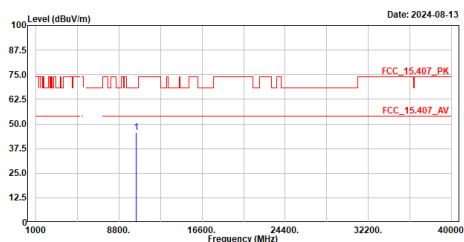


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	45.59	68.22	-22.63	54.97	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

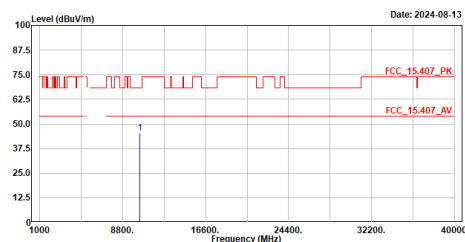


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	45.48	68.22	-22.82	54.78	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

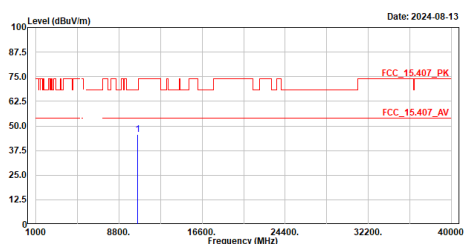


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.48	68.22	-22.74	54.41	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

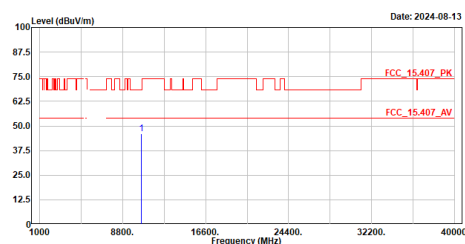


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.92	68.22	-22.30	54.85	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

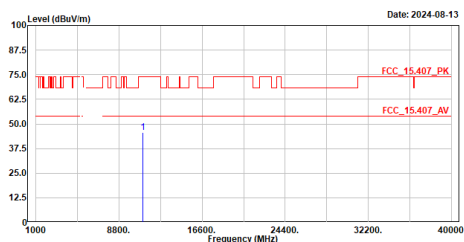


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	45.66	74.00	-28.34	53.81	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

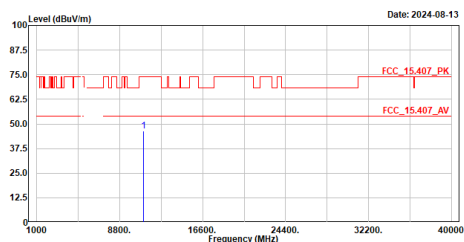


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	46.48	74.00	-27.52	54.63	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

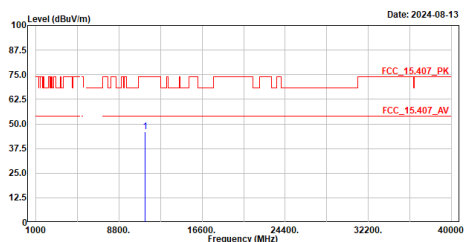


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.20	74.00	-27.80	53.73	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

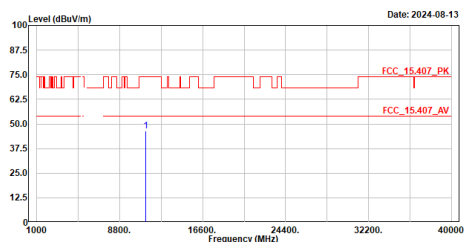


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.56	74.00	-27.44	54.09	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

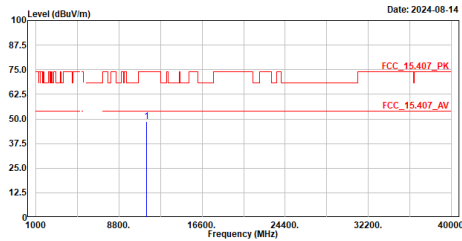


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	48.87	74.00	-25.13	56.13	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

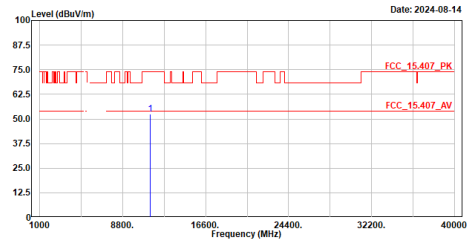


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	52.51	74.00	-21.49	59.77	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

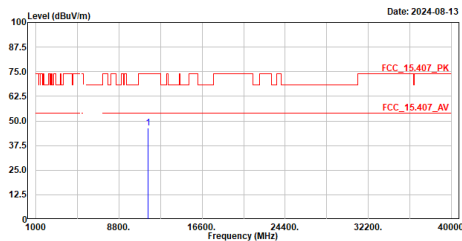


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	46.44	74.00	-27.56	53.58	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

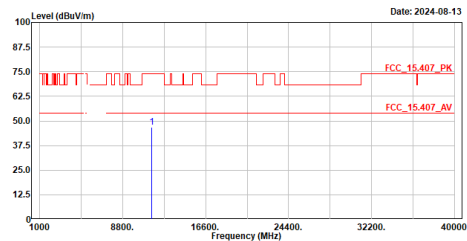


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	46.93	74.00	-27.07	54.07	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


DC Power Supply mode

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

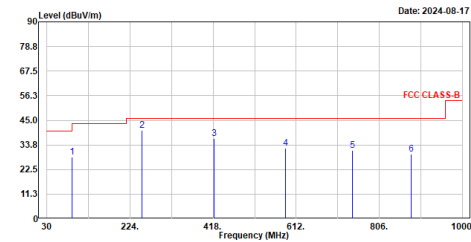

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

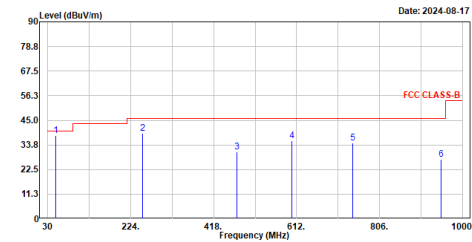

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

PoE mode


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

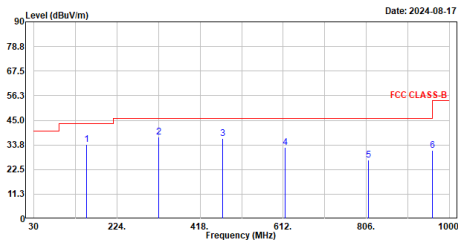

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	152.220	33.84	43.50	-9.66	57.66	-23.82	QP
2	321.970	37.25	46.00	-8.75	59.50	-22.25	QP
3	470.380	36.69	46.00	-9.31	55.12	-18.43	QP
4	615.880	32.71	46.00	-13.29	48.04	-15.33	QP
5	810.850	26.87	46.00	-19.13	39.32	-12.45	QP
6	960.230	31.20	54.00	-22.80	42.00	-10.80	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

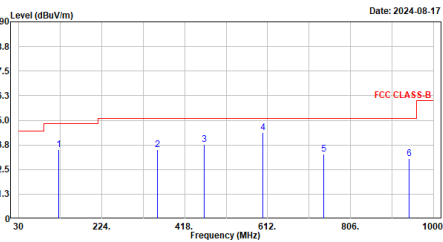

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	124.090	31.69	43.50	-11.81	57.67	-25.98	QP
2	354.950	31.74	46.00	-14.26	53.48	-21.74	QP
3	463.590	34.08	46.00	-11.92	52.52	-18.44	QP
4	600.360	39.38	46.00	-6.62	54.68	-15.30	QP
5	742.950	29.65	46.00	-16.35	42.83	-13.18	QP
6	942.770	27.60	46.00	-18.40	38.30	-10.70	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Peter

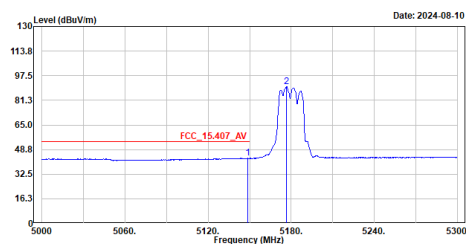


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.500	43.20	54.00	-10.80	28.80	14.40	Average
2	5176.700	90.39	-----	-----	75.94	14.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Peter

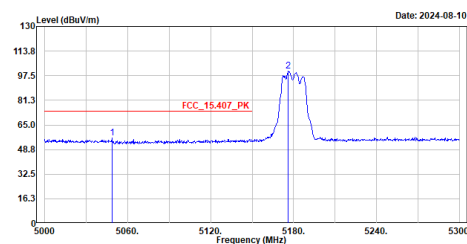


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5048.600	56.41	74.00	-17.59	42.11	14.30	Peak
2	5176.100	100.36	-----	-----	85.91	14.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Peter

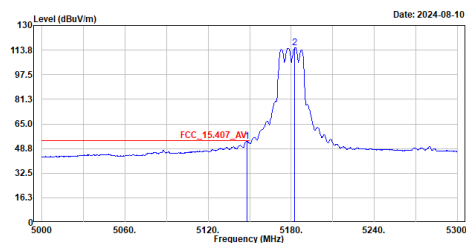


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.900	53.45	54.00	-0.55	39.05	14.40	Average
2	5182.700	115.21	-----	-----	100.74	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Peter

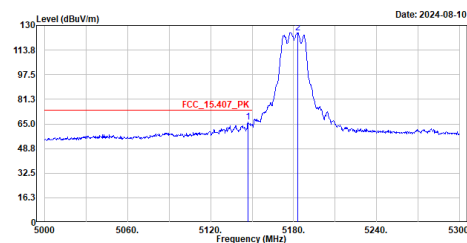


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.000	66.06	74.00	-7.94	51.66	14.40	Peak
2	5183.000	125.31	-----	-----	110.84	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B1
TEST BY :Peter

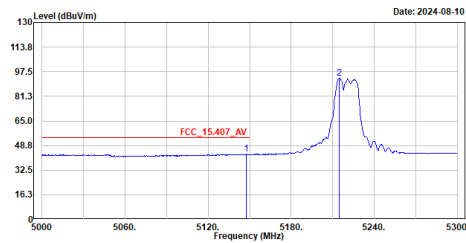


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	42.94	54.00	-11.06	28.54	14.40	Average
2	5214.800	93.35	-----	-----	78.85	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B1
TEST BY :Peter

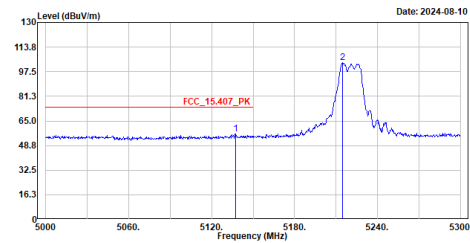


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5137.400	56.44	74.00	-17.56	42.05	14.39	Peak
2	5214.500	103.37	-----	-----	88.87	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B1
TEST BY :Peter

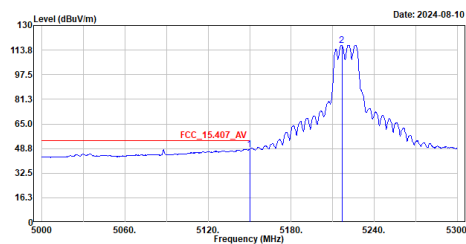


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	48.28	54.00	-5.72	33.88	14.40	Average
2	5216.600	116.95	-----	-----	102.44	14.51	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B1
TEST BY :Peter

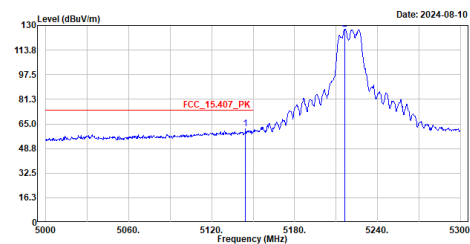


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.600	61.76	74.00	-12.24	47.37	14.39	Peak
2	5216.300	127.60	-----	-----	113.09	14.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B2
TEST BY :Peter

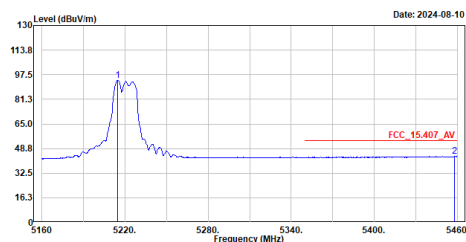


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	93.82	-----	-----	79.32	14.50	Average
2	5457.900	43.58	54.00	-10.42	28.54	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B2
TEST BY :Peter

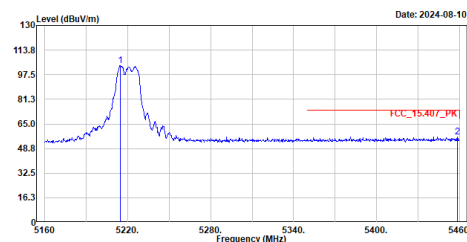


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	103.71	-----	-----	89.21	14.50	Peak
2	5458.500	56.44	74.00	-17.56	41.40	15.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B2
TEST BY :Peter

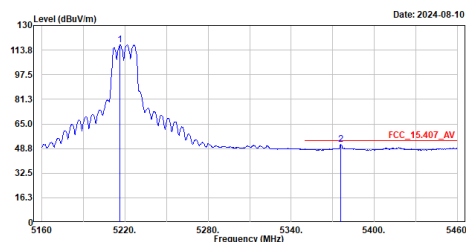


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5216.400	117.17	-----	-----	102.66	14.51	Average
2	5376.000	51.55	54.00	-2.45	36.95	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B2
TEST BY :Peter

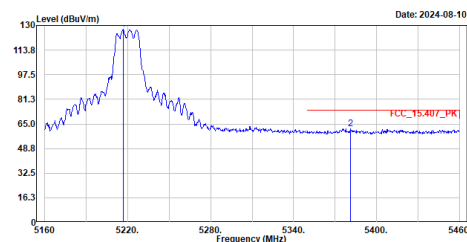


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5216.700	127.48	-----	-----	112.97	14.51	Peak
2	5381.400	61.98	74.00	-12.02	47.37	14.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

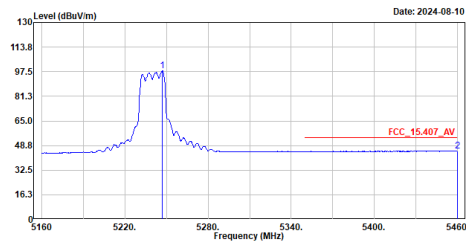


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5247.000	98.29	-----	-----	83.82	14.47	Average
2	5460.000	45.35	54.00	-8.65	30.30	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

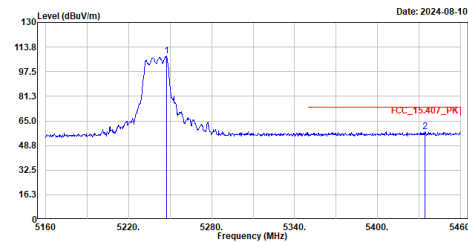


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5247.300	107.94	-----	-----	93.47	14.47	Peak
2	5434.200	57.82	74.00	-16.18	42.97	14.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

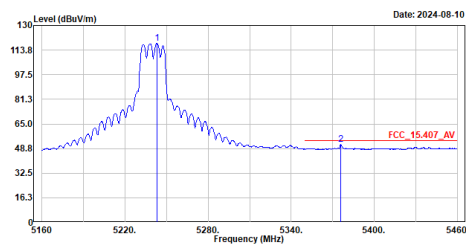


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5243.100	118.41	-----	-----	103.92	14.49	Average
2	5376.000	51.30	54.00	-2.70	36.70	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

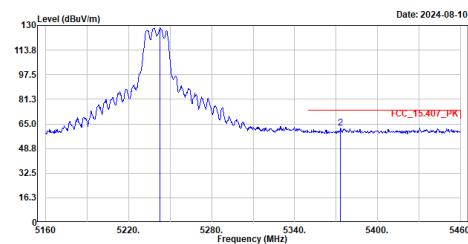


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5242.800	128.44	-----	-----	113.95	14.49	Peak
2	5373.300	62.40	74.00	-11.60	47.81	14.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

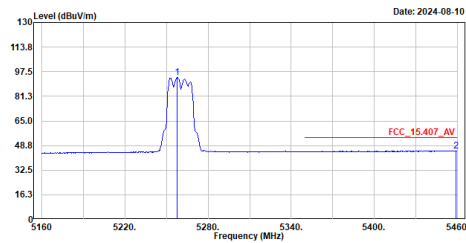


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5257.800	93.80	-----	-----	79.32	14.48	Average
2	5458.800	45.37	54.00	-8.63	30.32	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

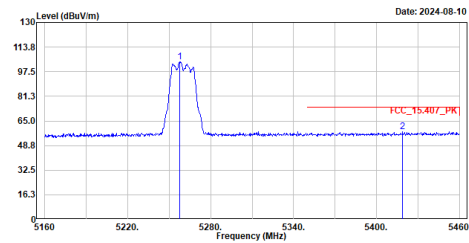


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5257.500	104.04	-----	-----	89.56	14.48	Peak
2	5418.900	57.91	74.00	-16.09	43.16	14.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

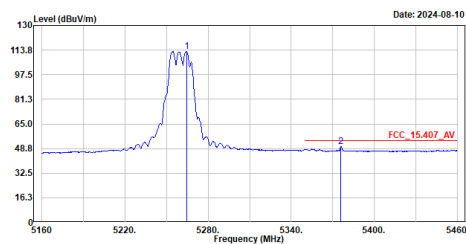


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5264.400	112.74	-----	-----	98.25	14.49	Average
2	5376.000	50.28	54.00	-3.72	35.68	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

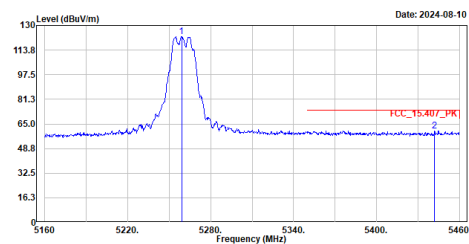


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5259.000	122.71	-----	-----	108.22	14.49	Peak
2	5442.000	60.50	74.00	-13.50	45.60	14.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

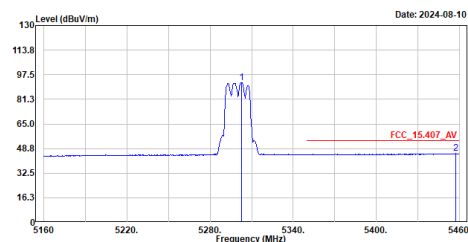


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5302.800	92.44	-----	-----	77.90	14.54	Average
2	5457.300	45.43	54.00	-8.57	30.40	15.03	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

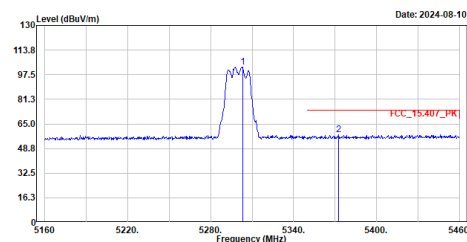


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5303.100	102.60	-----	-----	88.06	14.54	Peak
2	5372.700	57.95	74.00	-16.05	43.37	14.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

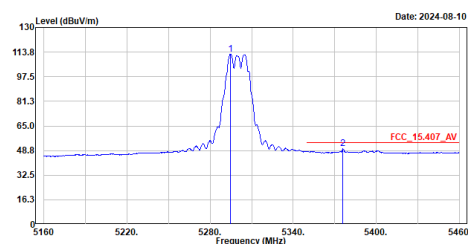


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	112.33	-----	-----	97.79	14.54	Average
2	5376.000	49.89	54.00	-4.11	35.29	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

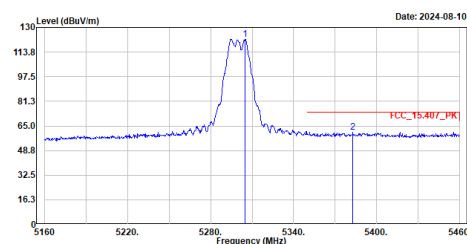


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5304.900	122.09	-----	-----	107.55	14.54	Peak
2	5382.900	61.07	74.00	-12.93	46.45	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

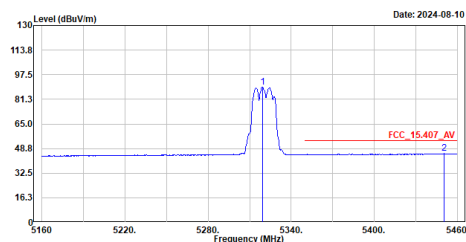


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	89.51	-----	-----	74.98	14.53	Average
2	5450.400	45.38	54.00	-8.62	30.41	14.97	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

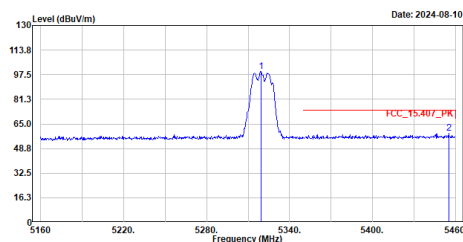


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	99.70	-----	-----	85.17	14.53	Peak
2	5455.200	58.63	74.00	-15.37	43.62	15.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

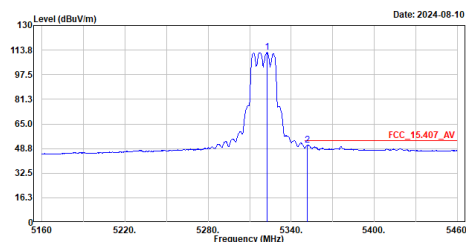


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5322.600	112.18	-----	-----	97.65	14.53	Average
2	5351.700	51.22	54.00	-2.78	36.69	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

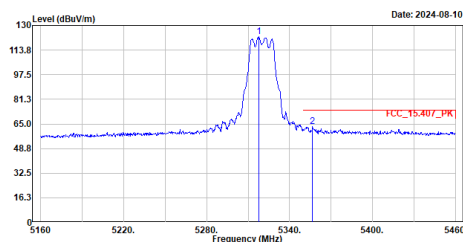


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5317.800	122.40	-----	-----	107.87	14.53	Peak
2	5356.500	63.27	74.00	-10.73	48.72	14.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

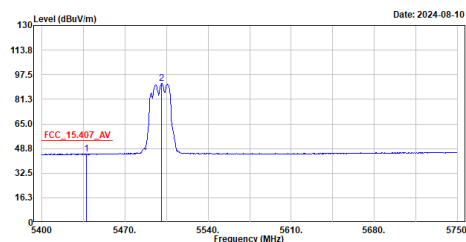

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5437.450	45.33	54.00	-8.67	30.46	14.87	Average
2	5500.800	91.77	-----	-----	76.34	15.43	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

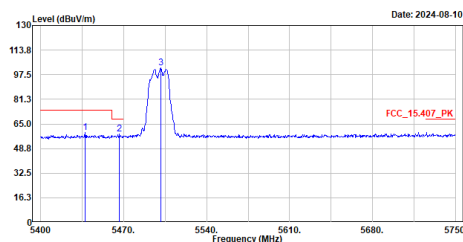

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5437.450	59.32	74.00	-14.68	44.45	14.87	Peak
2	5466.500	58.30	68.22	-9.92	43.18	15.12	Peak
3	5501.500	101.80	-----	-----	86.35	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

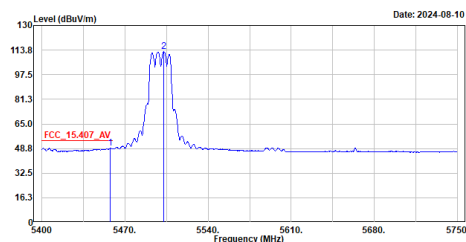

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.400	49.02	54.00	-4.98	33.99	15.03	Average
2	5502.900	112.74	-----	-----	97.29	15.45	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

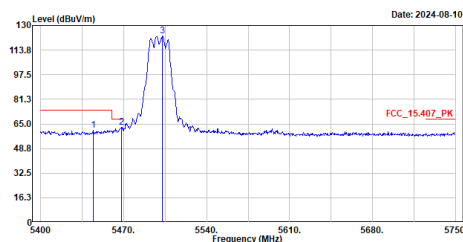

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5444.450	60.87	74.00	-13.13	45.94	14.93	Peak
2	5468.250	62.79	68.22	-5.43	47.66	15.13	Peak
3	5502.900	122.96	-----	-----	107.51	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

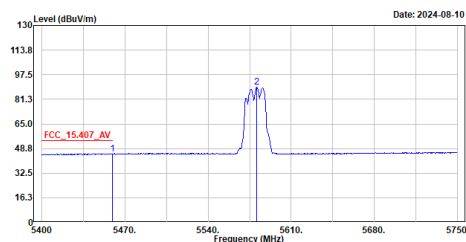

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	45.29	54.00	-8.71	30.24	15.05	Average
2	5580.950	89.28	-----	-----	73.95	15.33	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

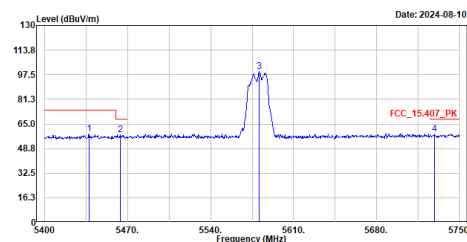

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5437.450	58.20	74.00	-15.80	43.33	14.87	Peak
2	5464.050	57.79	68.22	-10.43	42.69	15.10	Peak
3	5580.950	99.69	-----	-----	84.36	15.33	Peak
4	5729.000	58.21	68.22	-10.01	42.07	16.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

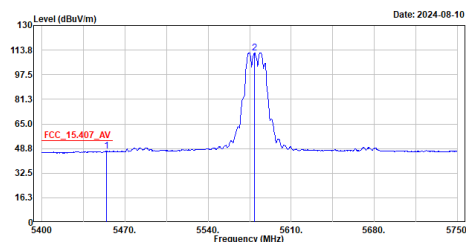

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5454.600	46.90	54.00	-7.10	31.89	15.01	Average
2	5579.200	112.05	-----	-----	96.72	15.33	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

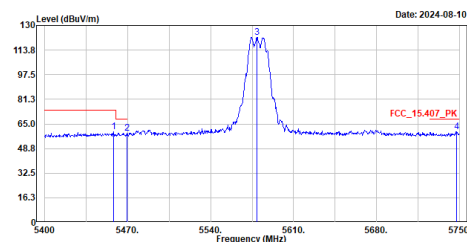

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	59.69	74.00	-14.31	44.65	15.04	Peak
2	5469.650	58.80	68.22	-9.42	43.65	15.15	Peak
3	5579.200	122.30	-----	-----	106.97	15.33	Peak
4	5747.550	59.95	68.22	-8.27	43.72	16.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
TEST BY :Peter

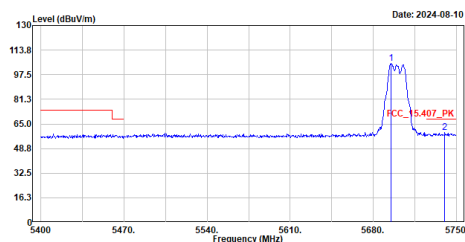


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.050	104.98	-----	-----	89.01	15.97	Peak
2	5740.200	59.35	68.22	-8.87	43.16	16.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5700MHz
TEST BY :Peter

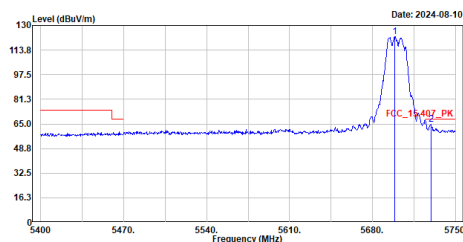


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5698.900	122.63	-----	-----	106.64	15.99	Peak
2	5729.350	64.54	68.22	-3.68	48.40	16.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
TEST BY :Peter

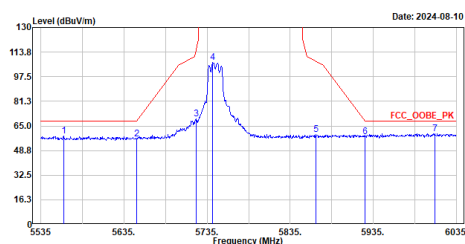


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5562.500	58.33	68.22	-9.89	42.94	15.39	Peak
2	5650.000	56.51	68.23	-11.72	40.85	15.66	Peak
3	5721.500	69.53	114.22	-44.69	53.42	16.11	Peak
4	5742.000	106.87	-----	-----	90.66	16.21	Peak
5	5866.000	59.38	107.72	-48.34	43.09	16.29	Peak
6	5925.000	57.73	68.23	-10.50	41.35	16.38	Peak
7	6009.500	59.96	68.22	-8.26	43.43	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5745MHz
TEST BY :Peter

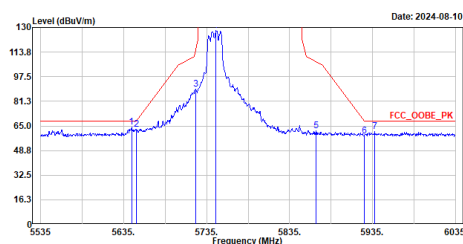


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5644.500	64.14	68.22	-4.08	48.51	15.63	Peak
2	5650.000	62.69	68.23	-5.54	47.03	15.66	Peak
3	5721.500	89.13	114.22	-25.09	73.02	16.11	Peak
4	5746.500	127.82	-----	-----	111.59	16.23	Peak
5	5866.500	61.99	107.58	-45.59	45.70	16.29	Peak
6	5925.000	58.60	68.23	-9.63	42.22	16.38	Peak
7	5938.000	61.20	68.22	-7.02	44.83	16.37	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

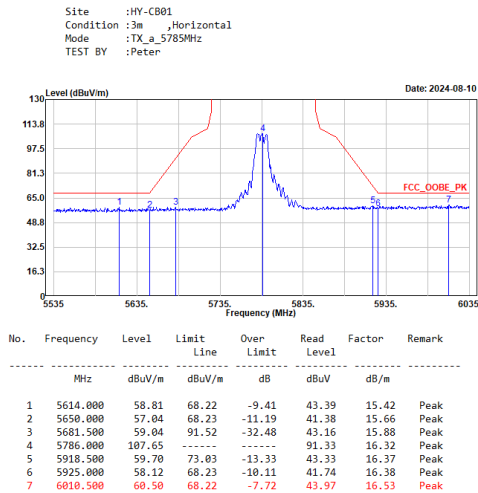


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

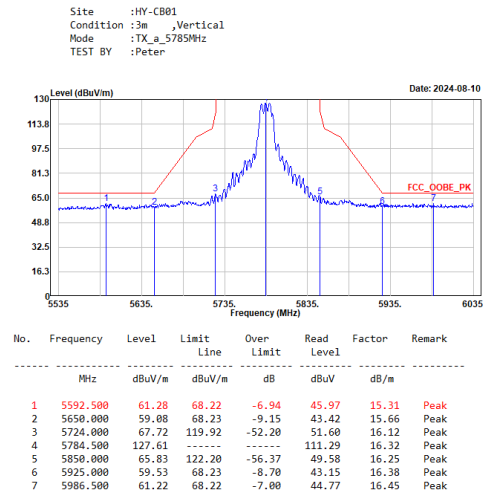

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

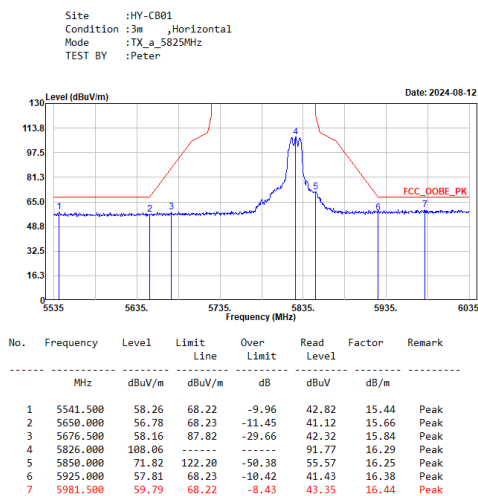


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

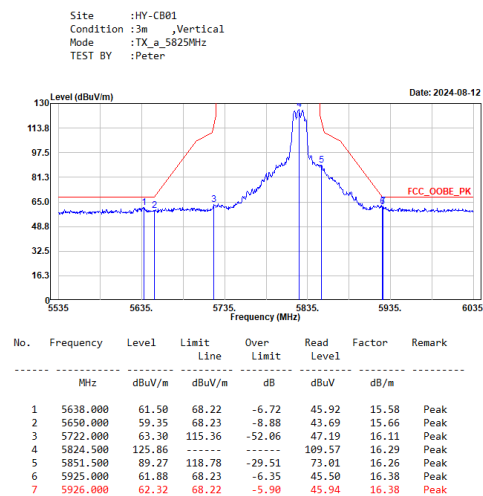

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

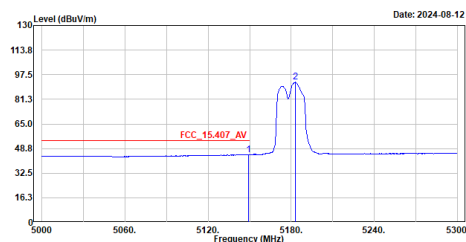


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.400	44.66	54.00	-9.34	30.26	14.40	Average
2	5183.000	92.51	-----	-----	78.04	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

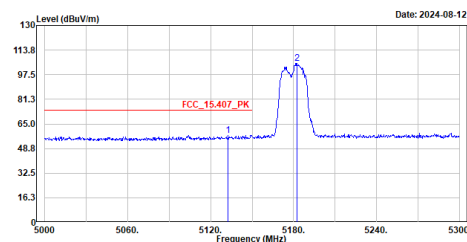


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5132.600	57.60	74.00	-16.40	43.22	14.38	Peak
2	5182.400	105.11	-----	-----	90.64	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

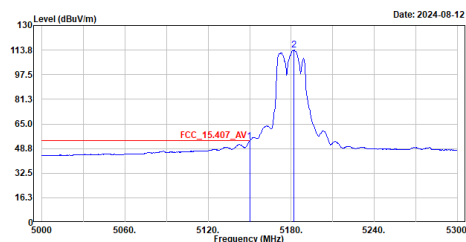


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	53.34	54.00	-0.66	38.94	14.40	Average
2	5181.000	113.63	-----	-----	99.16	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

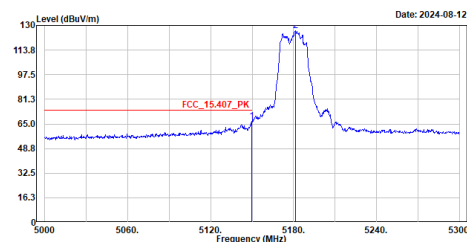


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.700	66.54	74.00	-7.46	52.14	14.40	Peak
2	5181.200	126.52	-----	-----	112.05	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

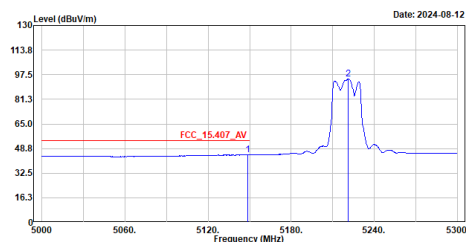


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	44.72	54.00	-9.28	30.32	14.40	Average
2	5221.400	94.80	-----	-----	80.30	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

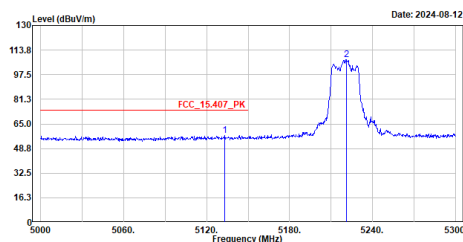


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5132.900	57.34	74.00	-16.66	42.96	14.38	Peak
2	5221.400	107.42	-----	-----	92.92	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

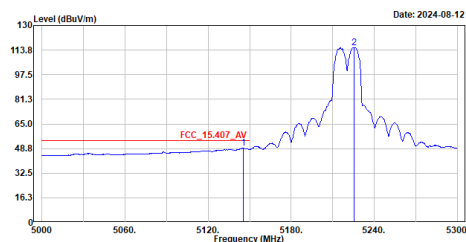


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.500	48.96	54.00	-5.04	34.56	14.40	Average
2	5225.300	115.34	-----	-----	100.84	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

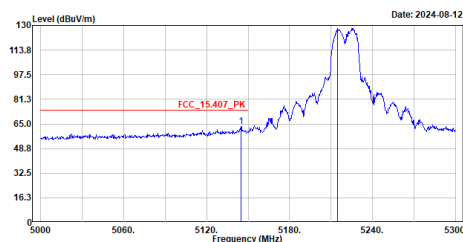


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.900	63.37	74.00	-10.63	48.97	14.40	Peak
2	5224.800	128.14	-----	-----	113.64	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

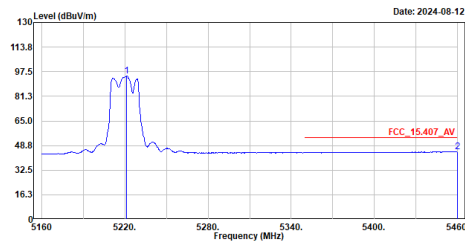


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5221.200	94.92	-----	-----	80.41	14.51	Average
2	5460.000	44.66	54.00	-9.34	29.61	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

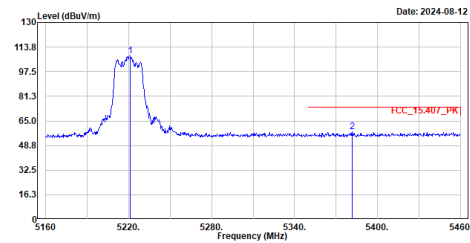


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5220.900	108.10	-----	-----	93.59	14.51	Peak
2	5381.700	57.90	74.00	-16.10	43.28	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

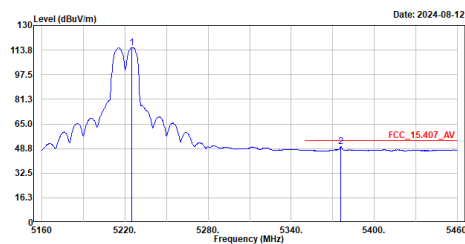


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5225.100	115.29	-----	-----	100.79	14.50	Average
2	5376.000	50.14	54.00	-3.86	35.54	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

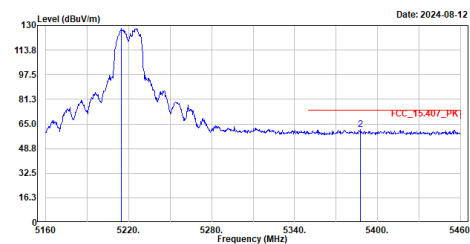


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	128.27	-----	-----	113.77	14.50	Peak
2	5387.700	61.35	74.00	-12.65	46.73	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

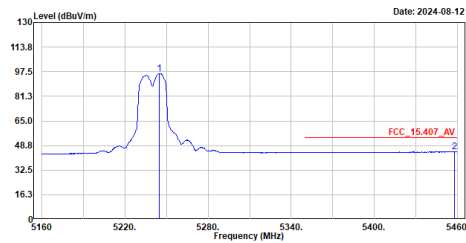


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5244.600	96.27	-----	-----	81.79	14.48	Average
2	5458.200	44.71	54.00	-9.29	29.67	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

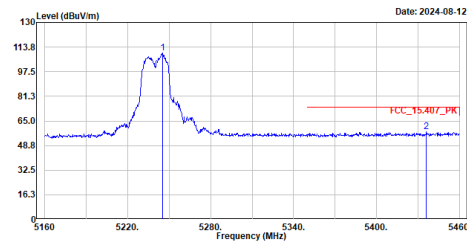


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5245.200	109.94	-----	-----	95.46	14.48	Peak
2	5436.000	57.72	74.00	-16.28	42.85	14.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

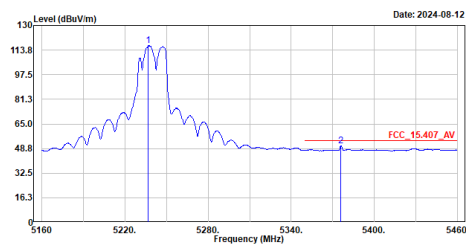


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5236.800	116.59	-----	-----	102.10	14.49	Average
2	5376.000	50.55	54.00	-3.45	35.95	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

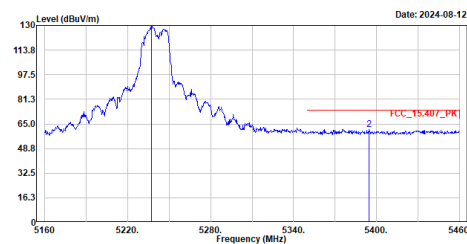


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5237.100	129.84	-----	-----	115.35	14.49	Peak
2	5394.600	61.26	74.00	-12.74	46.62	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

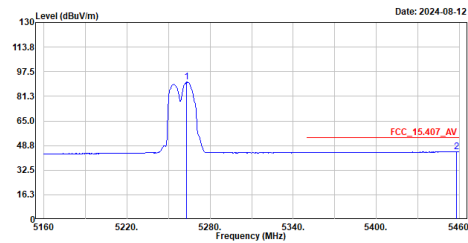


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5263.200	90.69	-----	-----	76.20	14.49	Average
2	5457.900	44.60	54.00	-9.40	29.56	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

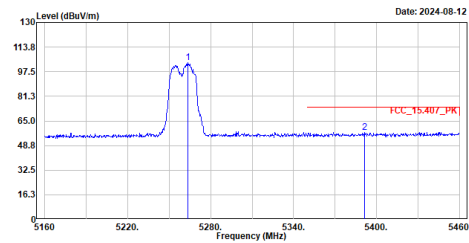


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5263.500	103.55	-----	-----	89.06	14.49	Peak
2	5391.600	57.57	74.00	-16.43	42.93	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

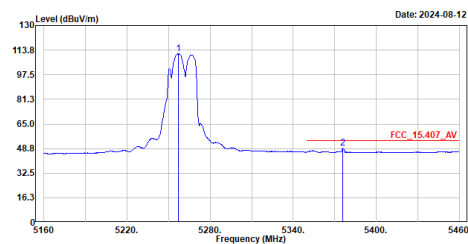


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5256.900	111.50	-----	-----	97.02	14.48	Average
2	5376.000	48.86	54.00	-5.14	34.26	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

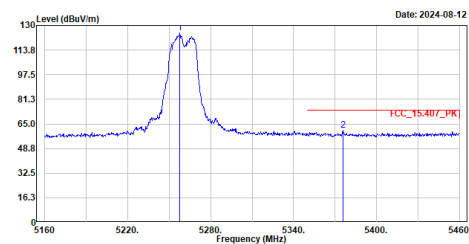


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5257.800	124.91	-----	-----	110.43	14.48	Peak
2	5376.000	60.83	74.00	-13.17	46.23	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

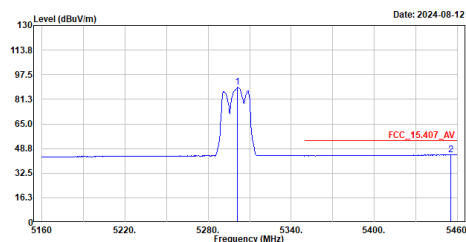


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5301.300	89.13	-----	-----	74.59	14.54	Average
2	5455.200	44.62	54.00	-9.38	29.61	15.01	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

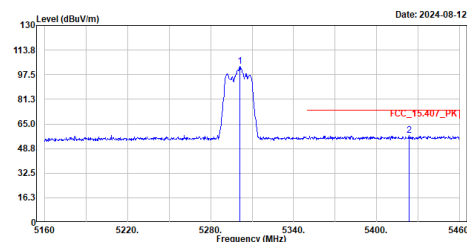


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5301.300	102.96	-----	-----	88.42	14.54	Peak
2	5423.400	57.37	74.00	-16.63	42.60	14.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

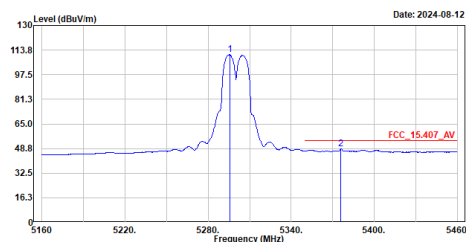


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5295.600	110.77	-----	-----	96.23	14.54	Average
2	5375.700	48.67	54.00	-5.33	34.07	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

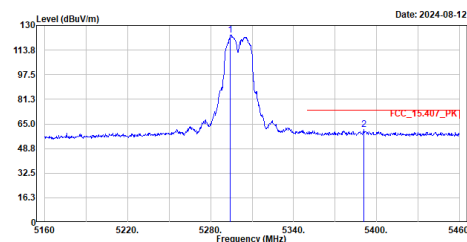


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.400	123.86	-----	-----	109.32	14.54	Peak
2	5390.700	61.20	74.00	-12.80	46.56	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

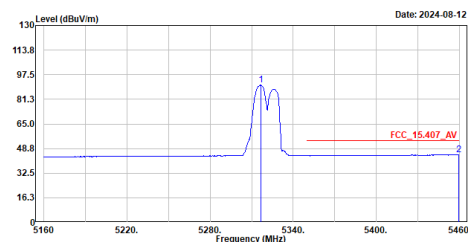


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5316.600	90.62	-----	-----	76.08	14.54	Average
2	5459.700	44.67	54.00	-9.33	29.62	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

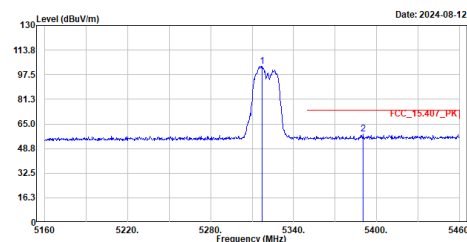


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5317.200	103.04	-----	-----	88.50	14.54	Peak
2	5390.400	58.19	74.00	-15.81	43.55	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

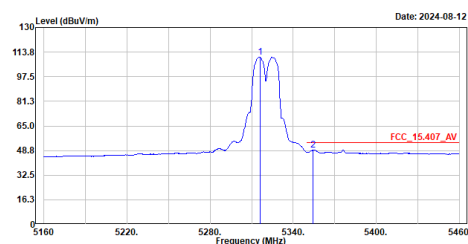


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5316.000	110.41	-----	-----	95.87	14.54	Average
2	5354.400	49.03	54.00	-4.97	34.49	14.54	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

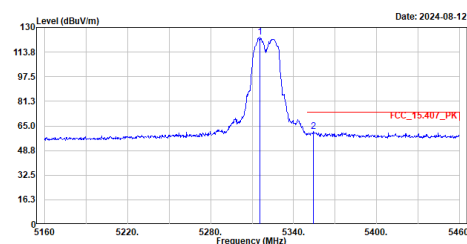


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5315.700	123.85	-----	-----	109.31	14.54	Peak
2	5354.400	61.27	74.00	-12.73	46.73	14.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

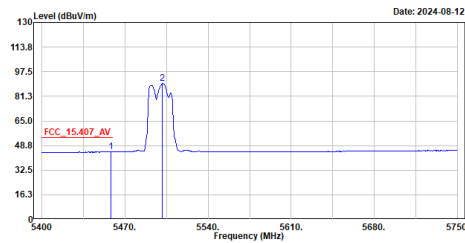


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.450	44.60	54.00	-9.40	29.56	15.04	Average
2	5501.500	89.93	-----	-----	74.48	15.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

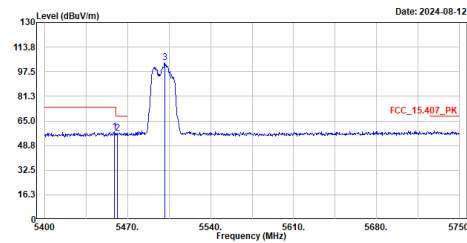


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	57.68	74.00	-16.32	42.63	15.05	Peak
2	5461.250	57.04	68.22	-11.18	41.97	15.07	Peak
3	5501.150	103.62	-----	-----	88.19	15.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

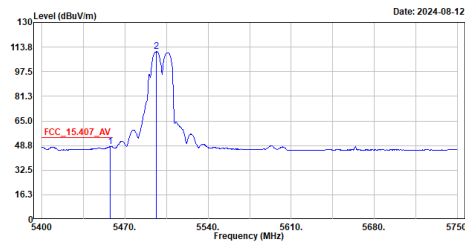


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.750	48.00	54.00	-6.00	32.96	15.04	Average
2	5496.600	110.75	-----	-----	95.34	15.41	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

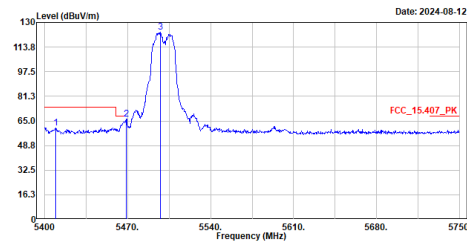


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5409.100	60.57	74.00	-13.43	45.87	14.70	Peak
2	5468.950	66.30	68.22	-1.92	51.16	15.14	Peak
3	5497.650	123.60	-----	-----	108.19	15.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

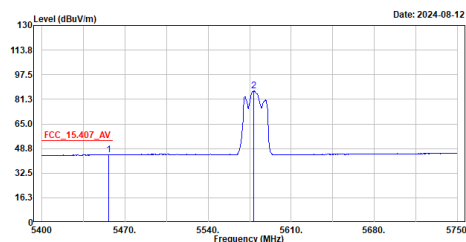


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	44.75	54.00	-9.25	29.72	15.03	Average
2	5578.500	87.02	-----	-----	71.68	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

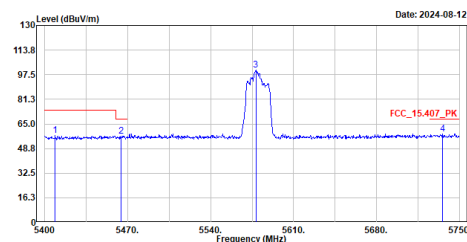


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5408.750	57.50	74.00	-16.50	42.80	14.70	Peak
2	5464.400	56.97	68.22	-11.25	41.87	15.10	Peak
3	5578.150	100.49	-----	-----	85.15	15.34	Peak
4	5736.000	58.56	68.22	-9.66	42.39	16.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

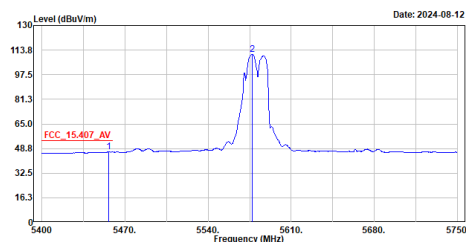


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	46.56	54.00	-7.44	31.53	15.03	Average
2	5577.100	111.05	-----	-----	95.71	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

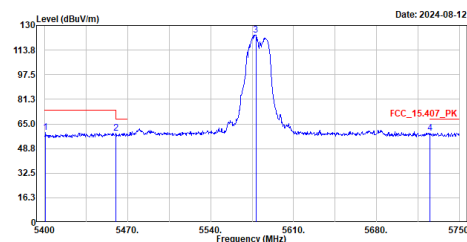

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5400.700	59.21	74.00	-14.79	44.55	14.66	Peak
2	5460.200	58.78	68.22	-9.44	43.72	15.06	Peak
3	5578.150	123.00	-----	-----	108.46	15.34	Peak
4	5725.150	59.00	68.22	-9.22	42.88	16.12	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

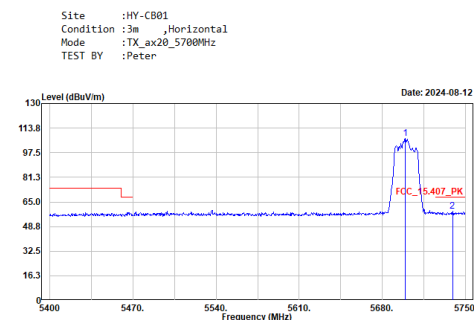


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5699.250	106.86	-----	-----	90.86	16.00	Peak
2	5739.150	59.04	68.22	-9.18	42.85	16.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

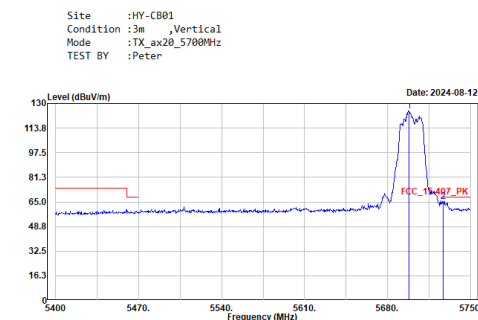


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5697.850	125.06	-----	-----	109.07	15.99	Peak
2	5726.900	65.48	68.22	-2.74	49.35	16.13	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

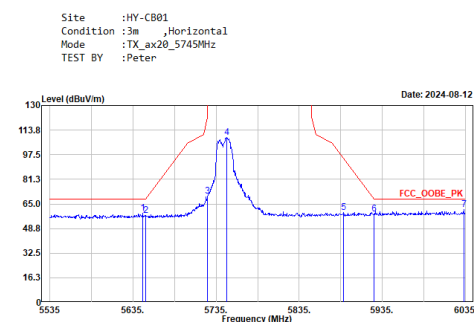


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5646.500	58.82	68.22	-9.40	43.18	15.64	Peak
2	5650.000	57.45	68.23	-10.78	41.79	15.66	Peak
3	5725.000	70.37	122.20	-51.83	54.25	16.12	Peak
4	5748.000	109.02	-----	-----	92.79	16.23	Peak
5	5888.500	59.22	95.22	-36.00	42.88	16.34	Peak
6	5925.000	58.39	68.23	-9.84	42.01	16.38	Peak
7	5933.000	61.43	68.22	-6.79	44.82	16.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

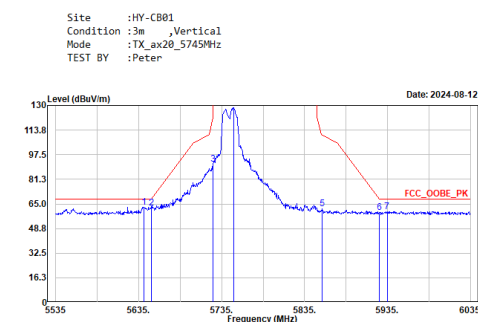

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5641.000	62.95	68.22	-5.27	47.34	15.61	Peak
2	5650.000	62.38	68.23	-5.85	46.72	15.66	Peak
3	5725.000	91.34	122.20	-30.86	75.22	16.12	Peak
4	5750.000	128.76	-----	-----	112.52	16.24	Peak
5	5856.500	61.77	110.38	-48.61	45.50	16.27	Peak
6	5925.000	59.45	68.23	-8.78	43.07	16.38	Peak
7	5934.500	60.08	68.22	-8.14	43.71	16.37	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

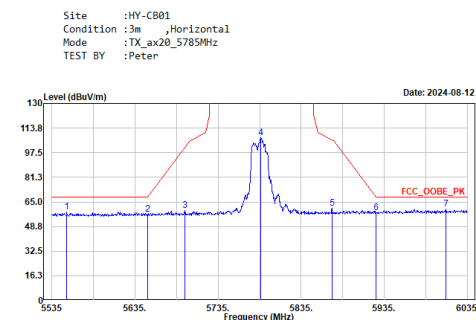

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5553.000	58.34	68.22	-9.88	42.92	15.42	Peak
2	5650.000	56.83	68.23	-11.40	41.17	15.66	Peak
3	5695.000	59.59	101.50	-41.91	43.62	15.97	Peak
4	5786.000	107.60	-----	-----	91.28	16.32	Peak
5	5872.000	60.60	106.04	-45.44	44.30	16.30	Peak
6	5925.000	57.66	68.23	-10.57	41.28	16.38	Peak
7	6009.500	60.21	68.22	-8.01	43.68	16.53	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

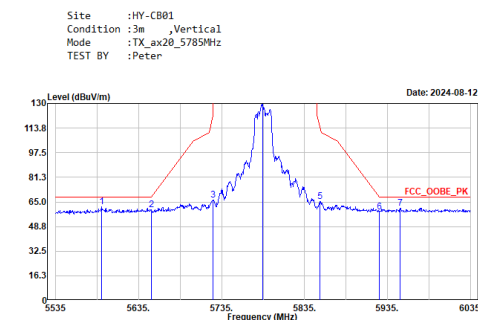

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5590.500	61.68	68.22	-6.54	46.38	15.30	Peak
2	5650.000	59.93	68.23	-8.30	44.27	15.66	Peak
3	5725.000	66.46	122.20	-55.74	50.34	16.12	Peak
4	5784.500	129.36	-----	-----	113.04	16.32	Peak
5	5853.500	65.19	114.22	-49.03	48.93	16.26	Peak
6	5925.000	58.37	68.23	-9.86	41.99	16.38	Peak
7	5950.500	60.72	68.22	-7.50	44.37	16.35	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

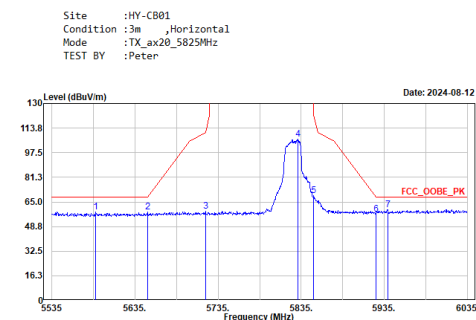

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5588.000	58.38	68.22	-9.84	43.07	15.31	Peak
2	5650.000	58.18	68.23	-10.05	42.52	15.66	Peak
3	5720.000	58.96	110.80	-51.84	42.86	16.10	Peak
4	5831.500	106.49	-----	-----	90.21	16.28	Peak
5	5850.000	69.01	122.20	-53.19	52.76	16.25	Peak
6	5925.000	57.06	68.23	-11.17	40.68	16.38	Peak
7	5939.000	60.09	68.22	-8.13	43.72	16.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

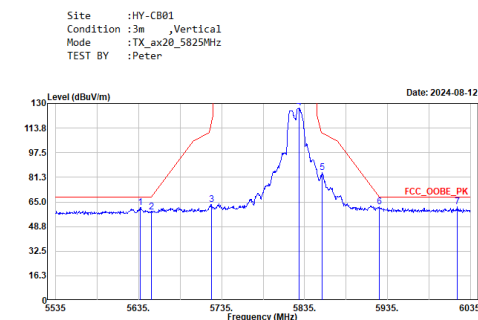

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5637.000	61.41	68.22	-6.81	45.84	15.57	Peak
2	5650.000	58.24	68.23	-9.99	42.58	15.66	Peak
3	5722.500	63.31	116.50	-53.19	47.20	16.11	Peak
4	5828.500	127.28	-----	-----	111.00	16.28	Peak
5	5856.000	84.28	110.52	-26.24	68.01	16.27	Peak
6	5925.000	61.84	68.23	-6.39	45.46	16.38	Peak
7	6019.000	62.02	68.22	-6.20	45.46	16.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.