



Radio Controlled Vehicles

OPERATING INSTRUCTIONS:

BATTERY REQUIREMENTS
(BATTERIES NOT INCLUDED.)

Vehicle: 3X AAA Batteries

Transmitter: 1 X 9V Battery

FCC NOTE:

The Manufacturer is not responsible for any
Radio or TV Interference caused by the
unauthorized modificationz of this equipment.
Such modifications could void the user's
authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. The device may not cause harmful interference and
2. This device must accept any interference received
including interference that may cause undesired
operation.

ATTENTION PARENTS:

It is recommended that this Toy and all
accessories be periodically examined for
potential hazards and that any potentially
hazardous parts be repaired or replaced.

HOW TO INSTALL BATTERIES IN VEHICLE:

1. Push the ON/OFF Switch to the OFF position.
2. Open the Battery Cover.
3. Insert the "AAA" Batteries Into the Battery
Compartment. (See diagram #1)
4. Replace Battery Cover.

NOTE: REMOVE BATTERIES AFTER YOU HAVE
FINISHED USING YOUR VEHICLE.

DIAGRAM #1


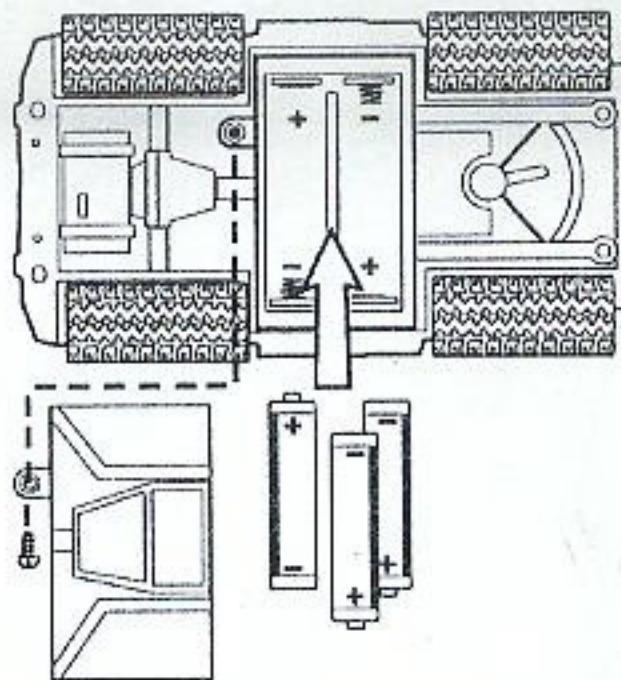


DIAGRAM #2

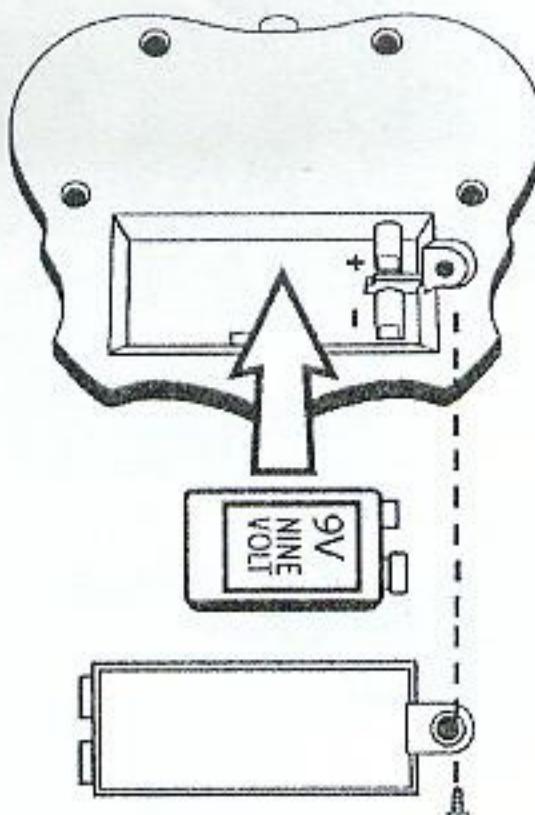

HOW TO INSTALL BATTERY IN TRANSMITTER:

(USING 1 X 9V BATTERY)

1. Remove the Screw and open the Battery Cover
on the back of the Transmitter.
2. Insert a 9 Volt Battery by following the engraved
symbols. (See Diagram #2)
3. Replace the Battery Cover and the Screw.

USING YOUR VEHICLE:

1. Ensure that band selector switch on remote and
car are set to the same number.
2. Turn power switch to "ON" position.
3. Use Controller to operate vehicle.
4. After operation, turn off car and remove batteries.

PERFORMANCE TIPS:

- * Use fresh Alkaline Batteries.
- * Do not drive through Water.
- * Do not drive in Grass, Sand or Carpet.
- * Be sure to rest Vehicle for 30 Minutes
after every 15 minutes of operation.
- * Electrical, CB Interference, Mobile Phones,
Air Conditioning, Elevators and Steel Girders
in building will affect the Vehicle operation.
- * Do not leave the Vehicle or Transmitter near
a source of heat or under direct Sunlight for
long periods of time.
- * Make sure ON/OFF Switch on your Vehicle is
"OFF" when not in use.
- * Remove the Batteries from the Vehicle and
Transmitter when not in use.