

Games

The phone comes with a pre-installed game and allows you to download new games.

More Games

Select this menu to download more games from the internet via WAP. You must first set the parameters in WAP settings.

Settings

This menu is similar to WAP settings menu and lets you set connection parameters.

About

This menu displays the version details of the software platform.

Help

This displays useful notes and hints in using this menu.

Tetris

The popular Tetris game originally from Alexey

Pjittnov comes pre-installed with the phone. Shaped blocks fall into a pit where you must arrange them so they fit neatly - a sort of juggling in one direction. The more blocks you can place into a horizontal line simultaneously, the more you score. When a horizontal line is filled, it will be eliminated, if there was no more space for the blocks to fall, the player lost the game.

Use RIGHT navigation key or "6" key to move the falling blocks to the right, use the Left navigation key or "4" key to move the falling blocks to the left, use the Up navigation key or "5" key to turn the falling blocks, and use the Down navigation key or the "8" key to make the blocks fall faster.

Camera

Before taking a photo, some features need to be set. See the settings menu.

Camera function allows you to take photos and to use them for different purposes.

Once a photo is taken, you can save it in the mobile, edit it in various ways, set it as wallpaper, and send it to the other mobiles. Select the Camera Menu. The camera is now on. Look into your phone display and position your subject and your phone (as the camera) accordingly.

Zoom in using the Up navigation key and zoom out using the Down navigation key. Choose orientation (portrait or landscape) using the Right navigation key. A human figure icon will appear on the top right side of the display to indicate which orientation is used. Press the Left navigation key to set the illumination. Indicator icon will appear on the left top side of the display - no icon: normal illumination, mountain/shadow icon: to avoid backlighting; moon icon: low illumination.

Press Timer to shoot. Choose Save to store the image taken or Back to cancel and re-take. Options menu appears, giving you the option to choose between:

New: Allows you to take a new photo.

Edit Picture: Allows you to retouch the picture.

Rename: Allows you to modify the name of photo.

Add to contact: Allows you to add the photo to contact, the photo will display when you call/receive this contact.

Send by MMS: Allows you to send the photo by MMS(see the Message menu) .

Input Methods

You will need to input text in many instances while using your phone. For example, creating a phone book entry, creating or editing a greeting note, setting WAP parameters, setting alarms and reminders, and writing a text message, etc. Your phone comes with several text input methods to help you accomplish your task easily.

123 Mode

Numeric mode is indicated by 123. It enables you to enter numbers into a text message. Press keys corresponding to the desired digits, and manually switch back to the text entry mode of choice.

ABC Mode

This mode is indicated by ABC. When typing in ABC mode, press the key labeled with the desired character:

Once for the first character; Twice for the


second character and so on.


For example, you press the 2 key three times quickly to display the character "C", the 5 key two times quickly to display the character "K", the cursor moves to the right when you press a different key. When entering the same character twice or a different character on the same key, just wait for a few seconds for the cursor to move right automatically, and then select the next character.

-Shifting a Case

To shift the case of the next character(s) that you want to type, press the key one or more times. There are two case types: Lower Case is indicated by ABC on the display, and Upper Case is indicated by ABC with a broken arrow in front.

-Adding a Symbol

To add a symbol, press the  key to go to the symbols chart, use the Up/Down navigation keys to move the cursor to the line where your

desired symbol is located, use the Left/Right navigation keys or press the number (1 to *) of the column where the symbol is located to move the cursor to the desired symbol, then press the  key (OK) to select it to insert.

-Adding a Space

The "0" acts as the space bar for the keypad, each press of the "0" key moves the cursor one space to the right.

List of characters available:

Key	Characters in the Order Displayed	
1	. , - ? ! ' @ : 1	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	(space)	

T9 Mode

T9 mode is a predictive text input method based on a built in dictionary. You can add a new word to the dictionary. You start inputting using "2" to "9" keys by pressing each key once for a single letter, the word changes after each key press.

If the word appeared highlighted on the display is correct, press the "0" key to confirm and make a space, otherwise use the Up/Down navigation keys to scroll to a correct word.

Battery precautions

- The phone is powered by rechargeable battery. Charge the battery when power is weak. You will achieve optimum battery life by allowing the battery to fully discharge before recharging it.
- When the battery charger is not in use, disconnect it from its power source. Do not leave the battery connected to the charger for over a week. Over charging may shorten battery's life.
- Temperature extremes affect the ability of your battery to charge. It may require cooling or warming up first. If the battery temperature exceeds 40°C (104 F) , it will not charge.
- Use the battery only for its intended purpose. Avoid battery short circuits. A short circuit the battery occurs when a metallic object makes a direct connection on the terminals (+ / -).
- Do not use a damaged battery.
- Do not leave the battery in extremely hot or cold places to avoid shortening battery life. A battery exposed to hot or cold temperature will prevent the phone from functioning properly, even when the battery is fully charged. Keep the battery in cool places, between 15°C to 25°C (50 F to 77 F).
- Recycle used batteries. Do not dispose of batteries in a fire! Dispose of batteries as required by local ordinances or regulations.

Battery precautions 45 

Care and Maintenance


The suggestion below will help you in taking care of your phone.


- Keep the phone and all accessories out of children's reach.
- Keep the phone dry. Liquids contain minerals that can corrode electronic circuits.
- Keep the phone away from extreme temperatures. High temperatures can shorten the life of electronic devices, melt plastics, and damage batteries.
- Do not attempt to open the phone or take it apart. Non-expert handling may damage the phone.
- Do not use strong cleaning solvents to clean the phone.
- Use the battery type as specified in the instructions, or as provided by the manufacturer.

 46 Care and Maintenance

Telephone spec

Handset Weight: About 75g
Dimensions: 104×44×14mm
Battery: Li-ion Battery
Battery capacity : 500mAh
Standby Time : About 80-150 hours
Talk time : 2 - 3 hours
Band: PCS1900MHz

 **warning:**The consequence caused by that the user does not observe above-mentioned suggestions or the mistake to use the cell-phone, the producer does not shoulder any responsibility.

 **announce:**If involve the edition to upgrade, the producer will not issue a separate notice .
