




## Panel Descriptions

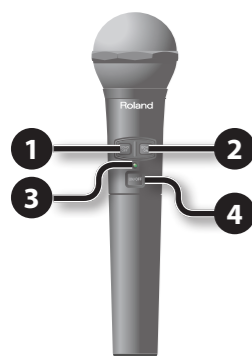

### 1 [ECHO OFF] switch

This turns off the echo that applies to the wireless mic.

### 2 [ECHO ON] switch

This turns on the echo that applies to the wireless mic. If the panel's [ECHO] knob is in the OFF position, there will be no echo even if you press the [ECHO ON] switch.

### 3 Power indicator

This will light when the wireless mic is switched on.

### 4 Power switch

 
This turns the wireless mic's power on/off.

## Installing Batteries

1. Turn off the mic's power switch.
2. Turn the grip in the direction of the arrow to remove it.



3. Insert the batteries, making sure that the polarity is correct.



4. Turn the grip in the direction of the arrow to reattach it.



\* If you leave the wireless mic powered on, its power will automatically turn off two hours after the last operation.

## About batteries

### Batteries that can be used with the DR-WM55 wireless mic

- Alkaline battery (AA, LR6) x 2
  - Rechargeable Ni-MH battery (AA, HR6) x 2
- \* The power indicator will blink when the mic batteries run low. Replace the battery as soon as possible.

### Expected battery life under continuous use:

Type of battery	Battery life
Alkaline battery (AA, LR6)	approx. 24 hours
Rechargeable Ni-MH battery (AA, HR6)	approx. 24 hours

\* These figures will vary depending on the specifications of the batteries and the actual conditions of use.

### Caution regarding batteries

- Incorrect handling of batteries, rechargeable Ni-MH battery, or a battery charger can cause leakage, overheating, fire, or explosion. Before use, you must read and strictly observe all of the precautions that accompany the batteries, rechargeable Ni-MH battery, or battery charger.
- When using rechargeable Ni-MH batteries and a charger, use only the combination of rechargeable Ni-MH battery and charger specified by the battery manufacturer.
- Carefully read and observe the cautions and handling instructions that accompany the batteries.
- When using rechargeable Ni-MH batteries, please be aware that the battery life will normally shorten each time they are recharged.

## Main Specifications

Type	Dynamic
Polar Pattern	Uni Directional
Wireless Transmission Method	Roland original 2.4 GHz (ISM band)
Outreach	line-of-sight 20 m (This figure will vary depending on the actual conditions of use and the environment.)
Controls	[POWER] Switch, [ECHO ON] Switch, [ECHO OFF] Switch
Indicator	Power
Power Supply	DC 3 V: Alkaline battery (AA, LR6) x 2, Rechargeable Ni-MH battery (AA, HR6) x 2
Expected battery life under continuous use:	Alkaline battery (AA, LR6): approx. 24 hours Rechargeable Ni-MH battery (AA, HR6): approx. 24 hours (These figures will vary depending on the actual conditions of use.)
Dimensions	59 (W) x 214 (H) mm 2-3/8 (W) x 8-7/16 (H) inches
Weight	164 g 6 oz (Excluding Battery)

\* 0 dBu = 0.775 Vrms

\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

## Using the Unit Safely

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY", and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Also, in order to feel assured that you're thoroughly familiar with all the great features this product offers, make sure to carefully read this document, as well as the operating instructions that came with your receiving device. Please keep the operating instructions close at hand, so you can refer to them whenever you need.

### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

#### About ⚠ WARNING and ⚠ CAUTION Notices

<b>⚠ WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
<b>⚠ CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

#### About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

#### ⚠ WARNING

Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

Immediately turn the power off, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:

- Objects have fallen into, or liquid has been spilled onto the unit; or
- If smoke or unusual odor occurs
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

Protect the unit from strong impact.  
(Do not drop it!)

Batteries must never be recharged, heated, taken apart, or thrown into fire or water.

Never expose batteries to excessive heat such as sunshine, fire or the like.

Incorrect handling of batteries, rechargeable Ni-MH battery, or a battery charger can cause leakage, overheating, fire, or explosion. Before use, you must read and strictly observe all of the precautions that accompany the batteries, rechargeable Ni-MH battery, or battery charger.

When using rechargeable Ni-MH battery and a charger, use only the combination of rechargeable Ni-MH battery and charger specified by the battery manufacturer.

#### ⚠ CAUTION

If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions.

- Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity.
- Avoid using new batteries together with used ones. In addition, avoid mixing different types of batteries.
- Remove the batteries whenever the unit is to remain unused for an extended period of time.
- If a battery has leaked, use a soft piece of cloth or paper towel to wipe all remnants of the discharge from the battery compartment. Then install new batteries. To avoid inflammation of the skin, make sure that none of the battery discharge gets onto your hands or skin. Exercise the utmost caution so that none of the discharge gets near your eyes. Immediately rinse the affected area with running water if any of the discharge has entered the eyes.
- Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.

## IMPORTANT NOTES

### Power Supply: Use of Batteries

- Batteries are supplied with the unit. The life of these batteries may be limited, however, since their primary purpose was to enable testing.
- If operating this product on batteries, please use alkaline batteries or rechargeable Ni-MH battery.

### Placement

- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.

