


TRANSMITTER ASSEMBLY

Important Note: The transmitter is not water-resistant and should never come in contact with water.

- ❑ 1. Remove the transmitter antenna from the transmitter box and screw it into the top of the transmitter. To ensure that the antenna is attached, lightly pull on the base of the antenna. If it slides out, it is not installed properly.

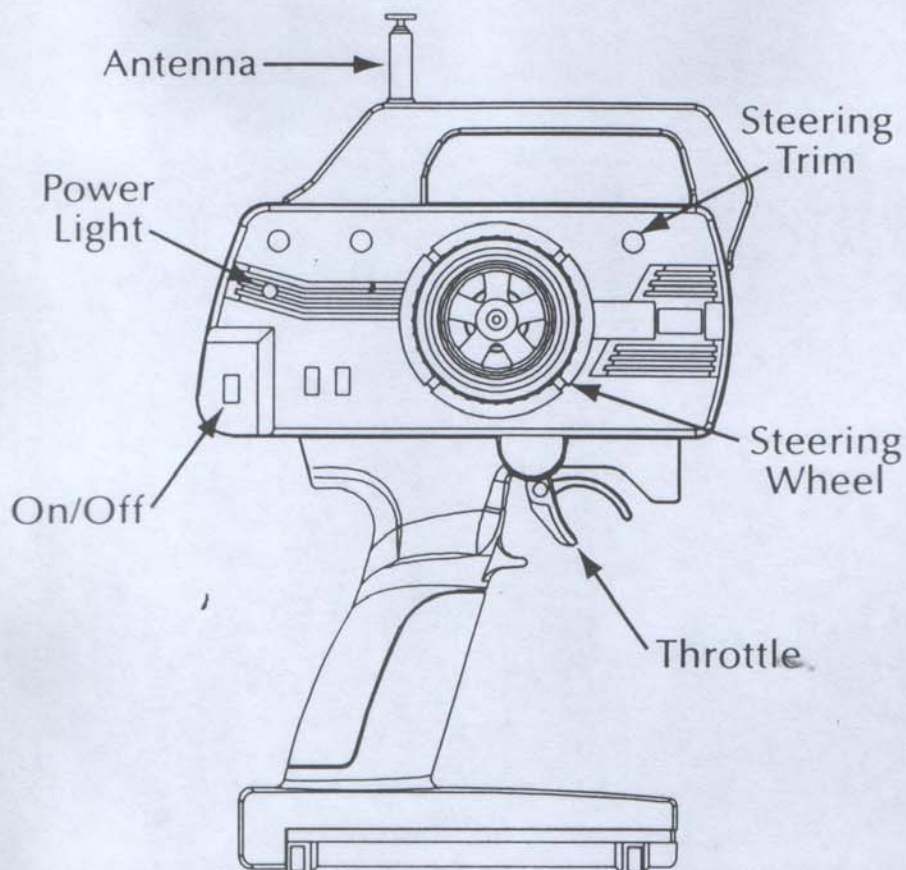

- ❑ 2. Slide off the battery door on the bottom of the transmitter. Install 8 fresh "AA" batteries into the bottom of the transmitter in the configuration molded into the battery holder. Re-install the battery door onto the bottom of the transmitter.
- ❑ 3. Turn the transmitter "ON" using the switch on the front. The red LED light next to the on/off switch should light up. If the LED begins flashing erratically, turn the transmitter off and check to make sure that the batteries are installed properly. **If you see a steadily flashing LED, the batteries are low and need to be replaced.**



- ☐ 1. Turn the power "ON" to the transmitter and then the boat (in that order). Place the canopy on top of the Reef Racer 2 hull and make sure that the hook & loop material attach securely.
- ☐ 2. Standing behind the boat with both the Reef Racer 2 and transmitter "ON", rotate the wheel to the left. The back of the rudder should move towards the left. Move the wheel to the right. The back of the rudder should move towards the right.
- ☐ 3. Squeeze the trigger on the transmitter, the propeller should turn in a counter-clockwise motion.
- ☐ 4. Turn the power "OFF" to your boat and then your transmitter.