

Remote Plus Controller For Wii

Operations Manual

REMOTE PLUS CONTROLLER FOR Wii MUST BE SYNCHRONIZED WITH YOUR Wii CONSOLE BEFORE USE. SEE THE Wii OPERATIONS MANUAL FOR COMPLETE INSTRUCTIONS.

IMPORTANT SAFETY INFORMATION WHEN USING THE Wii SYSTEM

- 1. WEAR THE WRIST STRAP WHEN USING THE REMOTE PLUS CONTROLLER FOR Wii.**
- 2. DO NOT LET GO OF THE REMOTE PLUS CONTROLLER FOR Wii DURING GAME PLAY.**
- 3. ALLOW ADEQUATE ROOM AROUND YOU DURING GAME PLAY.**

Features of Remote Plus Controller For Wii

The Remote Plus Controller For Wii is compatible with both standard Wii games and all Wii MotionPlus games, without having to attach the Wii MotionPlus accessory.

- **Some software may require additional accessories.**
- **If the cursor on the TV screen moves even if the Remote Plus Controller For Wii is not being moved, or moves differently than when the Remote Plus Controller For Wii is moved, the remote may need to be recalibrated due to the following:**
 1. Changing batteries in the Remote Plus Controller For Wii during gameplay.
 2. Moving the Remote Plus Controller For Wii from a cold environment into a warm environment.

To recalibrate the Remote Plus Controller For Wii, place it on a flat horizontal surface with the buttons facing down. **It should be 20" or more from your television and Wii console for correct calibration.** Wait for a few seconds and check the operation.

Also, review the instruction manual for the game you are playing for more information.

NOTE: This procedure must be done during gameplay.

Installing Batteries

The Remote Plus Controller For Wii uses AA batteries

1. Remove battery door.
2. Insert the batteries into the battery chamber. Be sure to insert the minus (-) end first when inserting new batteries, and remove the plus (+) end first when replacing the batteries.
3. Replace the battery cover, thread the wrist strap.

IMPORTANT: If this is the first time you have installed batteries in the Remote Plus Controller For Wii, you must synchronize the remote with the Wii console before using it. See the following, *Synchronizing your Remote Plus Controller For Wii with the Wii console*, for instructions.

Synchronizing your Remote Plus Controller For Wii with the Wii console

This procedure must be followed for each additional Remote Plus Controller For Wii added to your system.

1. Press the Power button on the Wii console to turn it on.
2. Remove the battery cover on the back of the remote. Press and release the SYNC. button inside the cover. The Player LEDs will blink.
3. Open the SD Card Slot cover on the front of the Wii console. Press and release the SYNC. Button on the inside of the compartment.
4. When the Player LED blinking stops, connection is complete. The LED that is illuminated indicates the player number.
5. Close the SD Card Slot cover on the front of the Wii console and replace the battery cover on the Remote Plus Controller For Wii.

Wearing the Remote Plus Controller For Wii Wrist Strap

1. Open the lever on the strap lock and place your hand through the wrist strap.
2. Hold the remote firmly in your hand.
3. Slide the strap lock up so that the strap will not fall off your wrist.

FCC

Regulations for Equipment Use in U.S.A.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.