

Front Man Wireless Guitar Controller for PS2

Thank you for purchasing the Nyko Front Man Wireless guitar controller for PlayStation®2. This device was design to be used with the popular Guitar Hero™ & Guitar Hero 2™ games available for the PlayStation®2 entertainment console. Please read the following instructions carefully to insure proper use and maintenance of this product.

FEATURES

- Long range wireless game play
- Powered by 3 AA batteries
- For use with both Guitar Hero™ and Guitar Hero 2™ game titles
- Long battery life
- Includes adjustable guitar strap

INSERTING BATTERIES

Before you begin using this product you must insert 3 AA batteries into the back of the guitar. Please note that batteries are not included with the device, however we recommend using quality alkaline batteries for best performance and long life.

1. Gently open the battery compartment on the back of the guitar.
2. Insert 3 AA batteries, being careful to follow the orientation shown inside the battery compartment.
3. Close the battery compartment.

CONNECTING YOUR FRONT MAN CONTROLLER

1. While the PS2™ system is powered down; connect the receiver to an empty port on the console. If you are playing a multiplayer game, please connect both receivers at this time
2. Please make sure that the Guitar Hero or Guitar Hero 2™ game is installed into the console
3. Power up the console and press the link button on Front Man guitar controller. The link LED on the guitar as well as the LED located on the receiver should glow solid green to indicate proper link between the guitar and the receiver. If the light continues to flash press down on the black link button on the receiver (pedal), then press the link button on the guitar.

Once the game has booted up on the console, and the Front Man controller is properly linked to its receiver, follow the Guitar Hero or Guitar Hero 2™ instruction manual regarding game play, game modes and game navigation. Enjoy!

TROUBLESHOOTING

- Make sure that 3 new AA batteries are inserted into the guitar, and that the batteries are correctly installed
- The guitar and the receiver must be linked for the controller to respond. Please follow the instructions above for proper establishment of link
- It may be necessary to press the Link buttons on

both the receiver and Front Man Guitar to establish a link. Once you have a solid glowing LED on both sides link has been established

- If you are having problems linking, unplug and replug the receiver into the proper port on the PS2, then follow the link instructions above
- If you are loosing connection to the receiver, your batteries may need to be replaced, or you may be in an area with a high amount of wireless interference. Please check your batteries, and turn off any unnecessary wireless devices that may be causing interference.
- If you continue to have problems, contact a Nyko customer service representative

CARE AND MAINTENANCE

Please review the following guidelines to ensure optimal performance from the Front Man wireless guitar controller. Failure to follow these guidelines may cause damage to the unit not covered by the Nyko warranty.

- Do not change or modification. It is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Do not expose to extreme conditions, including direct sunlight or excessive heat and humidity.
- Protect the Front Man controller from exposure to liquids.
- If cleaning is necessary; use a dry cloth to clean the affected area. Never use chemicals.

- Young children should be supervised when using this device. Please make sure that player have enough space around them to avoid others being struck with the guitar
- Always clean hands properly prior to use. Dirt, oil, and debris can damage your controller over time. Proper maintenance is essential to long product life
- Never use this device in areas where the use of wireless devices is prohibited. Always remove the batteries when not in use for long periods of time. This is also important during transport of the device.

TECHNICAL SUPPORT

We appreciate your support of Nyko products, and endeavor to guarantee your satisfaction with this purchase. If you are experiencing difficulties, please contact us:

Online: www.nyko.com

Email: customersupport@nyko.com

Phone: 1-888-444-6956

Nyko Product Limited Warranty

This Nyko product is warranted to the original purchaser for the normal intended use for a period of ninety (90) days from the date of purchase. If a defect covered under this warranty occurs, Nyko will replace or repair the product or its defective parts, at its option, at no charge. Warranty does not apply to defects resulting from modification or misuse of this product. The product can be returned to the place of purchase with proof of purchase or shipped to: Nyko Technologies, 1990 Westwood Blvd, 3rd Floor, Los Angeles, CA 90025, with freight charges prepaid. Please allow 3-4 weeks for processing.

NYKO®

Register this product online:
Coloque este producto en línea:
Enregistrer ce produit sur Internet:
www.nyko.com

Nyko® is a trademark of Nyko Technologies, Inc.
PlayStation is a trademark of Sony Computer Entertainment Inc.
©2006 Nyko Technologies, Inc. All Rights Reserved.



Front MAN

WIRELESS GUITAR

for/pour/para PlayStation®2



INSTRUCTIONS

Item# 80592