

# User manual

## A. OVERVIEW

The wireless PS3 Controller (2.4GHZ) works exclusively with the PS3 Game System. The wireless PS3 controller 2.4GHZ consists of controller unit and dongle unit the dongle unit be located at PS3 controller USB port.

## B. FEATURES LIST

1. Use for all PS3 games. By using 2.4GHZ wireless technologies. High-speed data transmission to achieve the accurate controls with no delay.

2. Minimum control distance at 6 meters

3. Controller and Key Buttons:

- Dual analog control sticks
- 8-way Direction D-pad.
- Start / select/ zero buttons and four standard fire buttons
- L1/L2, R1/R2 shoulder buttons

4. LED indicators on controller

-Link LED and port LED share four led (under the “zero”). It have two conditions:

1. After being charged up, the four LED will flash slowly (one time every second). Press “zero” button., they flash quickly(five times every second),in this time zero controller and Dongle didn’t connect. The four LED flash slowly (half time every second) afer connecting. Now it indicate that controller and Dongle have connected, this led on Dongle is always bright.

2. Press “zero” button again, choose PS3 channel, the corresponding channel led is bright for a long time. (RED LED 1 Channel, Blue LED 2 Channel; Orange LED 3 Channel; Green LED 4 Channel,...)

-Dong LED indication: it will be always bright after connecting with controller.

-Battery LED (corresponding LED): LED is a alone led. It will show three Condition. When the electric is low, LED flash quickly, when it is charged up, LED is always bright, the electric is full of the LED flash slowly, LED will die out without connect electrify cable.

Electricity of battery indicate: Battery LED will flash five times when press “DOWN” and “Elect” at the same time which indicate it is full of electricity. And LED flash one time,indicate the electricity is not enough.

-Decorative LED (in the Square/Circle/Triangle/X Button) : UP+Select is controlling this LED on/off.

Wireless PS3 Controller is provided with acceleration and GYRO function.

Zero Controller will turn off automatically after 30 seconds if it is not connected with dongle. If Zero Controller isn’t operated over eight minute, it wil sleep automatically.

## C. SPECIFICATION

PS3 Controller:

Operating voltage: 2.4V & 3.0VDC

Operating current: <60Ma (Game working Current 28Ma)

Battery:AA X2 NI-MH 1200Mah Battery

Charge current:120Ma

Charge power: USB 5VDC

Static current<300Ua

Dongle Unit:

Operating voltage:5v

Operating current: <35mA

Central frequency of operation: 2.4GHZ

RF Solution: CC2500-dx

Link range > 6 Meter

## D.ACCESSORIES

USB Cable with DC PLUG (10 feet) & USB Cable for 4 feet.

2 x AA Alkaline Battery

Optional NI-MH Rechargeable Battery Pack.



## E. CARE AND MAINTENANCE

- Do not overcharge.
- Do not expose to extreme conditions, including direct sunlight or excessive heat and humidity.
- Protect from exposure to liquids.
- If cleaning is necessary, use a dry cloth to clean the affected area. Never

use chemicals.

- If this product performs abnormally, immediately discontinue use and contact the Nyko Customer Service Department or the place of purchase.
- Do not open the controller, rechargeable battery pack, as this voids the warranty and can be dangerous.
- Do not change or modification. It is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.