


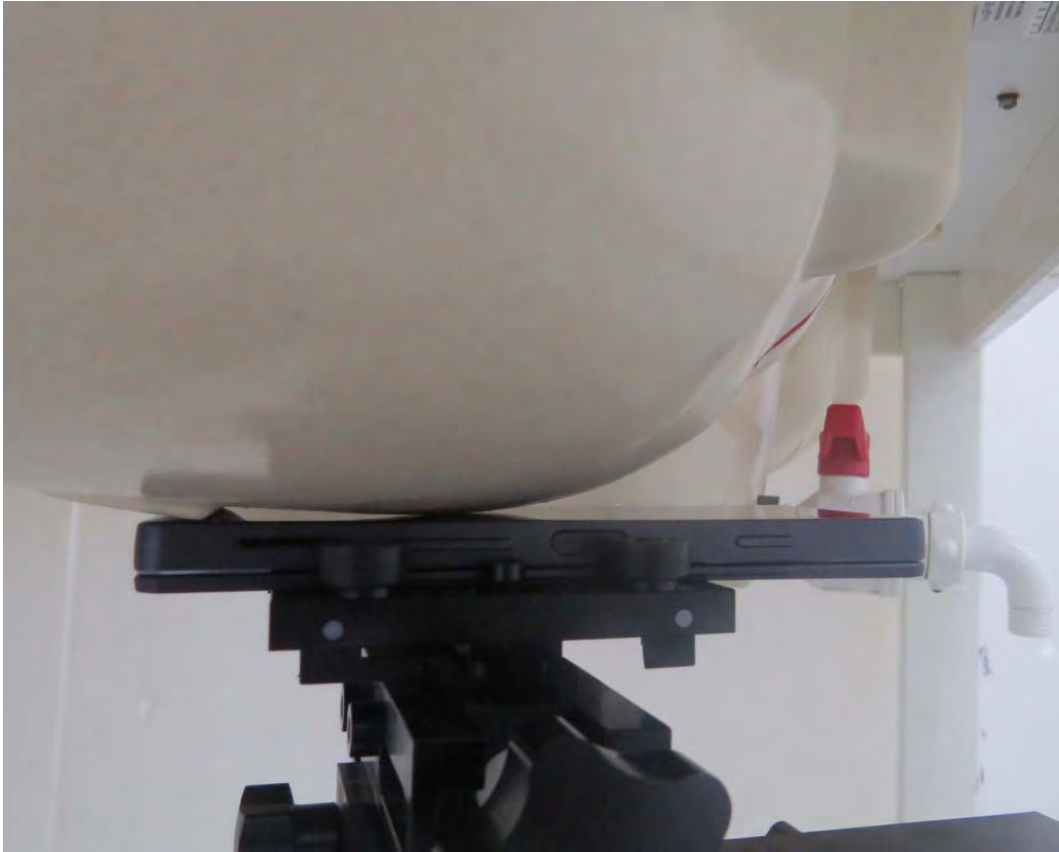

Picture 14: Left Hand Touch Cheek Position



Picture 15: Left Hand Tilt 15 Degree Position



Picture 16: Right Hand Touch Cheek Position



Picture 17: Right Hand Tilt 15 Degree Position




Picture 18: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 19: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 20: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

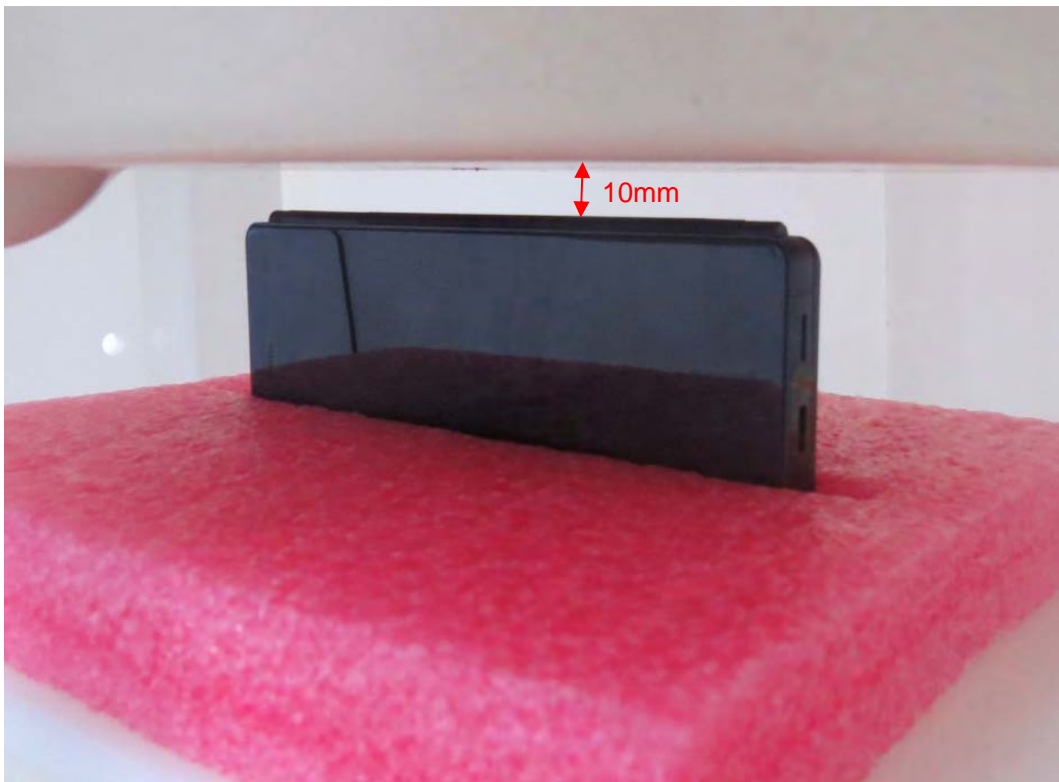


Picture 21: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 22: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 23: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

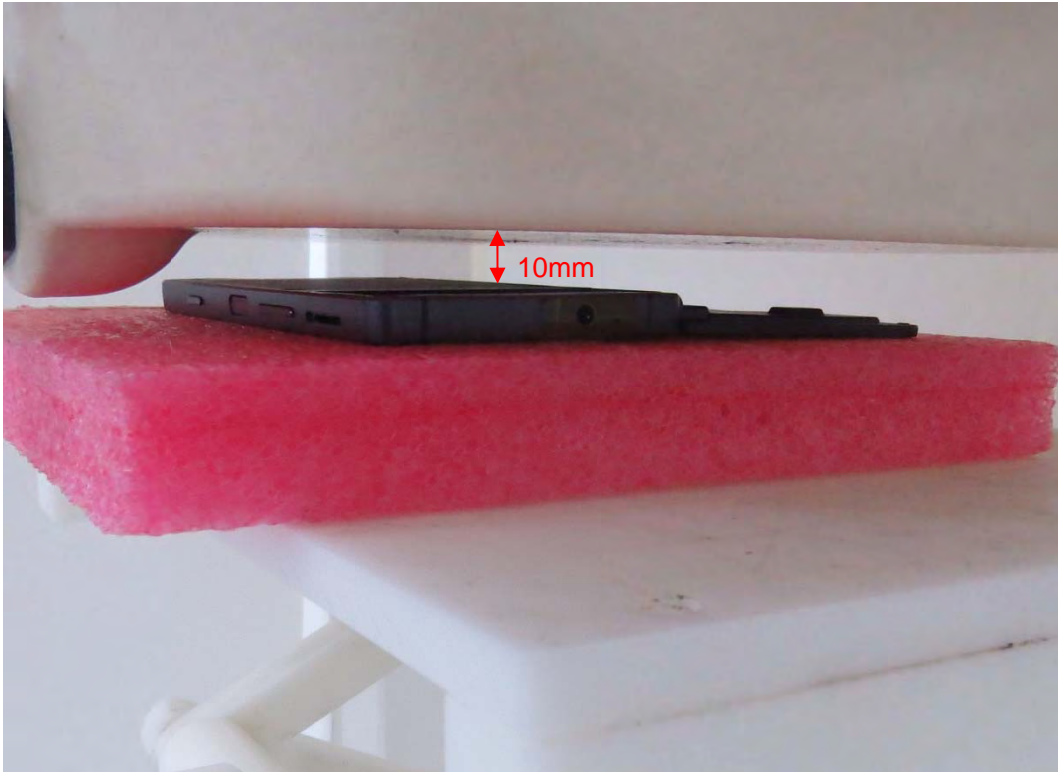

Picture 24: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 25: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 26: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 27: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 28: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 29: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 30: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode




Picture 31: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

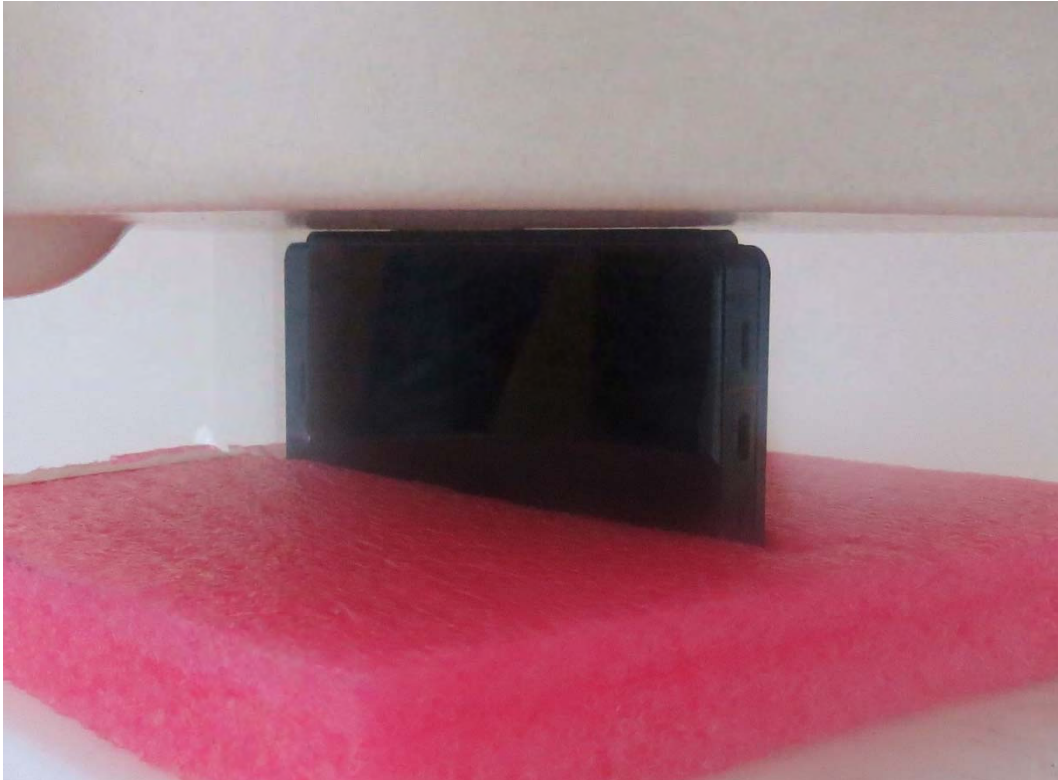


Picture 32: Right Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

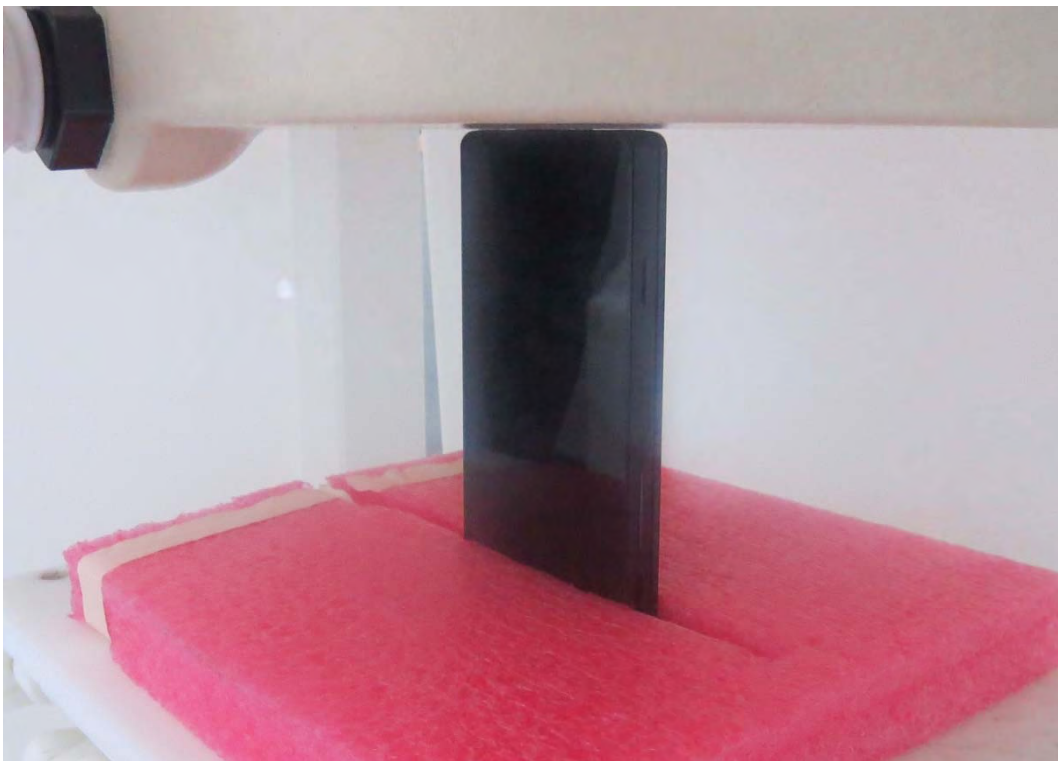

Picture 33: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

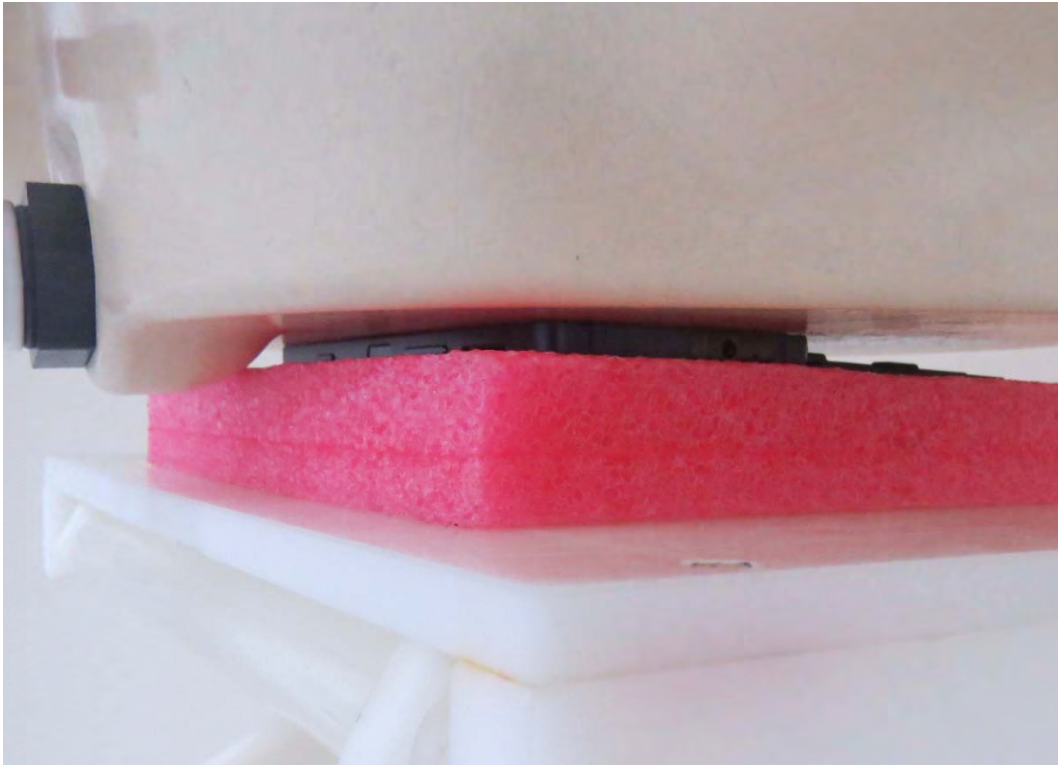

Picture 34: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode

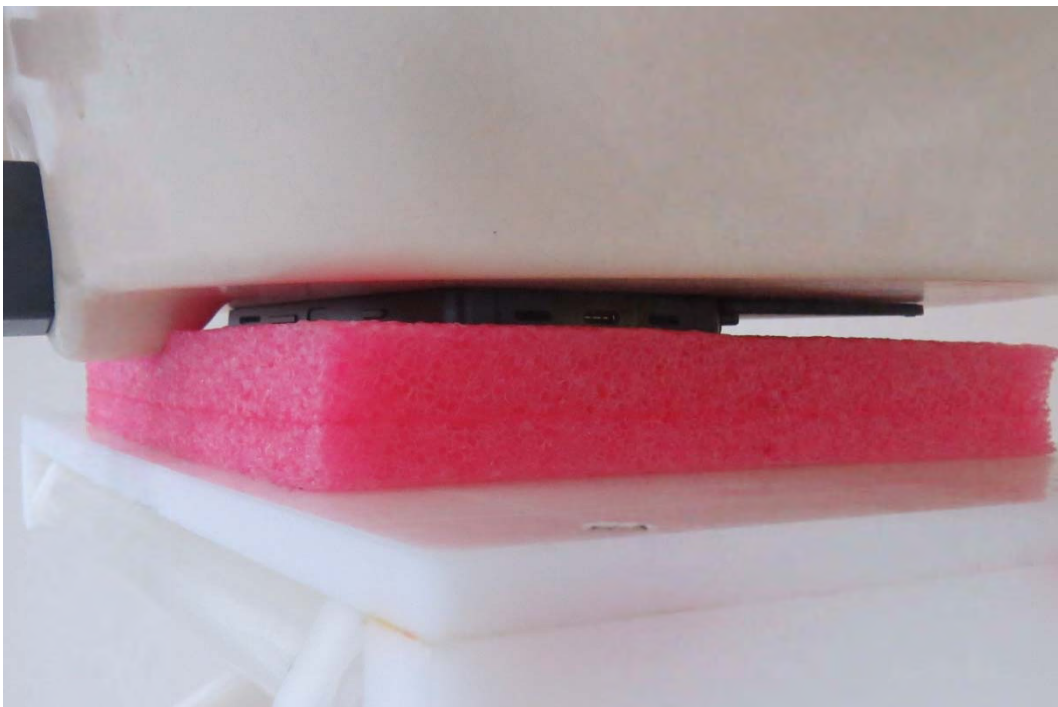

Picture 35: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 36: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 37: Bottom Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode