

Z828

User Manual

About This Manual

Copyright

Copyright © 2015 ZTE CORPORATION

All rights reserved.

Approved Firmware Versions: No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to correct typographic errors, misprints or update specification in this guide without prior notice.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

Other trademarks and trade names are the property of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Version No.: R1.0

Edition Time: March 20, 2015

Contents

Getting Started	9
Getting to Know Your Phone	9
Knowing the Keys	11
Installing the nano-SIM Card and the Battery	11
Installing the microSDHC™ Card	13
Charging the Battery	14
Extending the Battery Life	16
Powering On/Off	16
Setting Up for the First Time	17
Locking/Unlocking the Screen and Keys	17
Using the Touch Screen	18
Getting to Know the Home Screen	19
Personalizing.....	20
Changing the System Language	20
Setting the Date and Time.....	20
Changing Ringtone and Notification Sound	20
Turning On/Off Touch Sound.....	21
Adjusting Volume	21
Applying New Wallpapers	21
Changing Screen Brightness	22
Protecting Your Phone With Screen Locks	22
Protecting Your Phone With Encryption.....	23

Knowing the Basics.....	25
Monitoring the Phone Status	25
Managing Notifications	26
Managing Shortcuts and Widgets	28
Organizing With Folders	29
Rearranging the Primary Icons	30
Entering Text.....	31
Editing Text	33
Opening and Switching Apps.....	34
Connecting to Networks and Devices.....	35
Connecting to Mobile Networks	35
Connecting to Wi-Fi®	37
Using Wi-Fi Direct®	40
Connecting to Bluetooth® Devices	41
Connecting to Your Computer via USB	43
Sharing Your Mobile Data Connection	45
Connecting to Virtual Private Networks.....	48
Phone Calls	50
Placing and Ending Calls	50
Answering or Rejecting Calls.....	51
Working With the Call Log	52
Calling Your Contacts	53
Checking Voicemail.....	53
Using Options During a Call	54
Managing Multi-party Calls	55

 
Adjusting Your Call Settings	56
Contacts.....	62
Checking Contact Details	62
Adding a New Contact	62
Setting Up Your Own Profile.....	63
Importing, Exporting, and Sharing Contacts	63
Working With Favorite Contacts	65
Working With Groups.....	65
Searching for a Contact	67
Editing Contacts.....	68
Accounts.....	71
Adding or Removing Accounts	71
Configuring Account Sync	72
Email	74
Setting Up the First Email Account	74
Checking Your Emails	74
Responding to an Email.....	75
Writing and Sending an Email	76
Adding and Editing Email Accounts	77
Changing General Email Settings	77
Messaging	79
Opening the Messaging Screen	79
Sending a Message	79
Replying to a Message	80
Forwarding a Message	81

 
Changing Messaging Settings	81
Calendar	82
Viewing Your Calendars and Events	82
Creating an Event	83
Editing, Deleting or Sharing an Event	84
Changing Calendar Settings.....	84
Snapdragon Camera.....	85
Capturing a Photo	85
Recording a Video.....	87
Customizing Camera/Camcorder Settings	87
More Apps	90
Clock	90
Backup and Restore.....	91
Calculator	91
Downloads	91
File Manager.....	92
News and Weather.....	92
Sound Recorder	93
Task Manager	93
Google Apps	94
Settings	96
Wireless and Networks.....	96
Device	98
Personal	101
System.....	106

Upgrading the Phone Software.....	107
Troubleshooting.....	108
For Your Safety	112
General Safety.....	112
FCC RF Exposure Information (SAR).....	113
FCC Regulations	115
Hearing Aid Compatibility (HAC) regulations for Mobile Phones.....	116
CTIA Requirements	118
Radio Frequency Interference.....	119
Explosive Environments.....	121

Getting Started

Getting to Know Your Phone

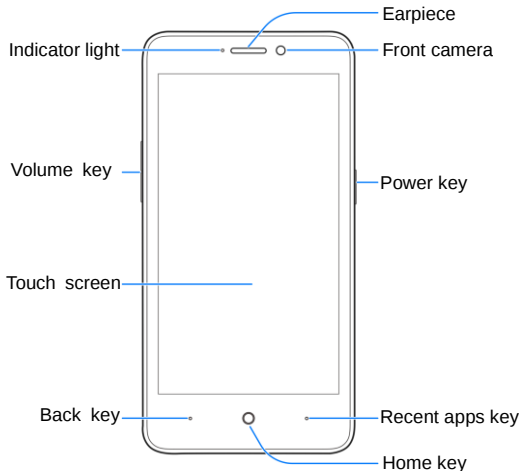

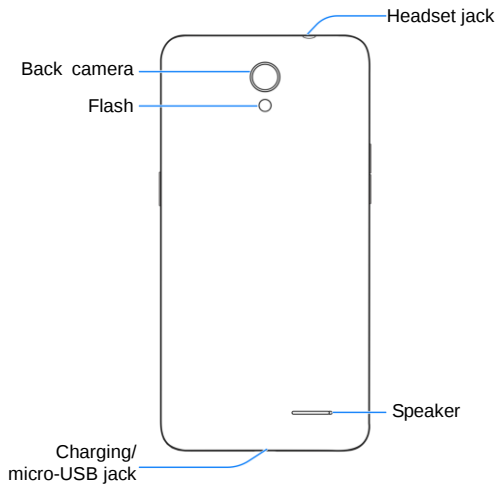


Knowing the Keys

Key	Function
Power key	• Press and hold to turn on or off airplane mode, restart, or to power off. • Press to turn off or on the screen display.
Home key	• Touch to return to the home screen from any application or screen. • Touch and hold to use Google search.
Recent apps key	Touch to see recently used apps.
Back key	Touch to go to the previous screen.
Volume key	Press or hold either end to turn the volume up or down.


Installing the nano-SIM Card and the Battery

Switch off your phone before installing or replacing the battery or the nano-SIM card.

 1. Insert your fingernail into the slot at the bottom left of the back cover and lift it up gently.

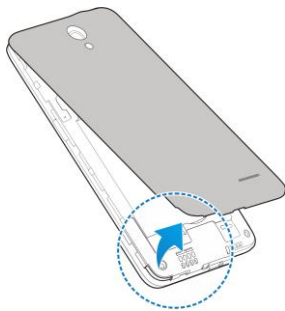

 2. Hold the nano-SIM card with the cut corner oriented as shown and slip them into the card holder.

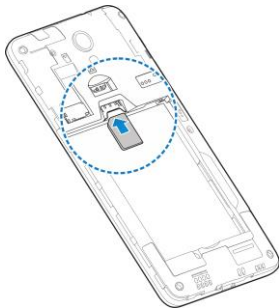




WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

 3. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

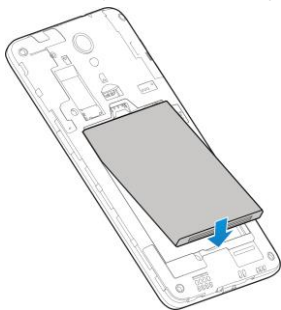


4. Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

Installing the microSDHC™ Card

The microSDHC card can be installed and removed while the phone is turned on. [Unmount the microSDHC card](#) before

removing it.

 1. Remove the back cover.
2. Hold your microSDHC card with the metal contacts facing down and slide it in.

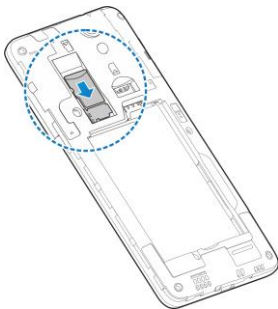

NOTE:

Some applications may require a microSDHC card to store certain data on it and to work properly. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it unnecessarily.

3. Replace the back cover.

Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully

charge the battery as soon as possible.

 
If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level on the lock screen. See [Locking/Unlocking the Screen and Keys](#).



WARNING!

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

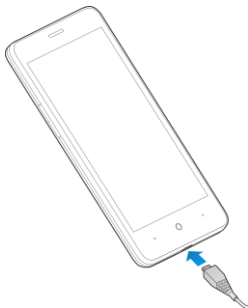

2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or  , appear on the status bar.

3. Disconnect the charger when the battery is fully charged.

**NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Extending the Battery Life

Active applications, screen brightness levels, Bluetooth and Wi-Fi usage and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, Wi-Fi, and Bluetooth off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To power off, press and hold the **Power** key to open the options menu. Touch **Power off** > **OK**.

**NOTE:**

If the phone freezes or takes too long to respond, you can press

and hold the **Power** key for about 10 seconds to power the phone off, and then turn it on again.

Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see [Backup and Reset](#)), you need to do some settings before using it.

Touch the language field to select the language you want to use and then touch **Start**. Then follow the prompts to set up Wi-Fi, owner name, Google services and other options.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power** key.



NOTE:

To save battery power, the phone automatically turns off the screen after some time of inactivity. You will still be able to receive messages and calls while the phone screen is off.

To unlock the screen and keys:

1. Press the **Power** key to turn the screen on.

2. Touch and hold the screen.

- or -

Touch the Camera icon at the bottom right and swipe left to open the Camera app.



NOTE:

If you have set an unlock pattern, PIN or password for your phone (see [Protecting Your Phone With Screen Locks](#)), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select onscreen items such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

- Touch and Hold

To open the available options for an item (for example, a message or link in a web page), touch and hold the item.

- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not

release your finger until you have reached the target position.

- Pinch

In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding shortcuts, folders, widgets, and more.

Extended Home Screens

Your home screen is extendable, providing more space for shortcuts, folders, widgets, and more. Simply swipe left or right on the screen to see the extended panels.

See [Managing Home Screen Icons and Widgets](#) for more information on how to add or remove additional home screen panels.

Personalizing

Changing the System Language

1. Touch the **Home** key >  > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

Setting the Date and Time

1. Touch the **Home** key >  > **Settings** > **Date & time**.
2. Touch **Automatic date & time** and **Automatic time zone** if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

Changing Ringtone and Notification Sound

You can customize the default incoming call ringtone for each micro-SIM card the default notification sound.

1. Touch the **Home** key >  > **Settings** > **Sound & notification**.
2. Touch **Default notification ringtone** or **Phone ringtone**.
3. Scroll through the ringtone list and select the ringtone you want to use.
4. Touch **OK**.



NOTE:

See [Set a Ringtone for a Contact](#) for how to assign a special ringtone to an individual contact.

Turning On/Off Touch Sound

1. Touch the **Home** key >  > **Settings** > **Sound & notification** > **Other sounds**.
2. Touch **Touch sounds**.

Adjusting Volume

1. Touch the **Home** key >  > **Settings** > **Sound & notification**.
2. Drag the sliders below **Media volume**, **Alarm volume** and **Ring volume** to adjust the volume for each type of audio.



NOTE:

You can adjust the media volume when a media application is in use by pressing the **Volume** key. If no media application is active, press the **Volume** key to adjust ringtone volume (or the earpiece volume during a call).

Applying New Wallpapers

You can set the wallpaper for the home screen.

1. Touch the **Home** key.
2. Touch and hold an empty area of the home screen.

3. Touch **WALLPAPERS** to pick an image as the wallpaper.

Changing Screen Brightness

1. Touch the **Home** key >  > **Settings > Display > Brightness level**.
2. Drag the slider to manually adjust the screen brightness.



NOTE:

With the proximity and light sensor, your phone can automatically adjust the screen brightness for available light. Touch **Adaptive brightness** in the **Display** settings screen to turn the feature on or off.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When it is enabled, you need to swipe the screen, look at the front camera, draw a pattern or enter a numeric PIN or a password to unlock the phone's screen and keys.

1. Touch the **Home** key >  > **Settings > Security > Screen lock**.
2. Touch **None, Long press, Pattern, PIN or Password**.
 - ▶ Touch **None** to disable the screen lock.
 - ▶ Touch **Long press** to enable screen lock and allow unlocking with a 'touch and hold' gesture.

- ▶ Touch **Pattern** to draw and redraw your a pattern that you must draw to unlock the screen.
 - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.
3. For Pattern, PIN, or Password lock, select how you want notifications and their contents to show when the phone is locked. Then touch **DONE**.

Protecting Your Phone With Encryption

You can encrypt all the data on your phone: your accounts, application data, music and other media, downloaded information, and so on. If you do, you must draw a pattern or enter a numeric PIN or a password each time you power on your phone.



WARNING!

Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset which erases all your data.

Encryption provides additional protection in case your phone is stolen and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

- Set a lock screen pattern, PIN, or password.
- Charge the battery.
- Keep the phone connected to the charger.

- Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Touch the **Home** key >  > **Settings** > **Security** > **Encrypt phone**.
2. Touch **ENCRYPT PHONE**.

The **ENCRYPT PHONE** button is dimmed if your battery is not charged or your phone is not plugged in.

If you change your mind about encrypting your phone, touch the **Back Key**.



WARNING!

If you interrupt the encryption process, you will lose data.

Read the information about encryption carefully.

3. Draw the lock screen pattern, or enter your lock screen PIN or password and touch **NEXT**.
4. Touch **ENCRYPT PHONE**.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is completed, you're prompted to draw the pattern or enter your PIN or password.

Subsequently you must draw the pattern, enter your PIN or password each time you power on your phone in order to decrypt it.

Knowing the Basics

Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

	GPRS connected		Battery low
	EDGE connected		Battery full
	3G connected		Battery charging
	4G connected		Vibration mode
	Airplane mode		Bluetooth on
	No signal		Bluetooth connected
	Signal strength		Connected to a Wi-Fi network
	Mobile data in use		Wi-Fi in use
	No SIM card installed		GPS on
	Alarm set		

Managing Notifications

Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

	New message		microSDHC card unmounted
	New email		microSDHC card removed
	New Gmail message		Upcoming event
	Missed call		Incoming file via Bluetooth
	Call in progress		New Wi-Fi network detected
	Call on hold		Downloading data
	USB connected		Sending data
	Song is playing		USB tethering is on
	Wired headset connected		Portable Wi-Fi hotspot or Wi-Fi direct is on

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.

- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, just touch it.
- To remove a notification, swipe it left or right.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove all notifications, touch  below all the notifications.
- To manage notifications you have received, touch and hold a notification to identify the application that created it. You can then touch  and select **Block** to hide future notifications from this app, or touch **Priority** to show them in priority mode.



NOTE:

If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

Use Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your phone.

Open the notification panel and then drag the panel downwards to find the following Quick Settings on the screen.

- **Airplane:** Touch to turn on or off the airplane mode.
- **Auto Rotate:** Touch to turn on or off the auto-rotate screen feature.
- **Flashlight:** Touch to turn on or off the flash.
- **Wi-Fi:** Touch to turn on or off Wi-Fi.
- **Bluetooth:** Touch to turn on or off Bluetooth.
- **Data:** Touch to enable or disable data access over the mobile network.
- **Brightness:** Uncheck **Auto** and drag the brightness slider to adjust the screen brightness.



NOTE:

In the Quick Settings screen, touch  at the top to get to the **Settings** menu; touch the battery icon to open the battery settings screen.

Managing Shortcuts and Widgets

Add Shortcuts and Widgets

1. Touch the **Home** key.
2. To add a widget, touch and hold a blank area of the home screen and then touch **WIDGETS**.

To add an application shortcut, touch .

3. Slide left or right to view all available widgets or applications.

4. Touch and hold a widget or an application icon and drag it to a home screen panel.

Move Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.
2. Drag it to the place you need.

Remove Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.
2. Drag it to  to remove it.

Adjust Widget Size

1. Touch and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.



NOTE:

Not all widgets can be resized.

Organizing With Folders

You can create folders on a home screen and put several icons in a folder.

Create a Folder

1. Touch and hold a shortcut on the home screen.
2. Drag the shortcut icon over another and release your finger. A

new folder is created and both shortcuts are added into the folder.

3. If needed, drag more shortcuts and drop them into the folder.

Rename a Folder

1. Touch a folder to open it. The old folder name is displayed below the icons.
2. Touch the folder name and enter a new name.

Add More Icons to a Folder

1. Touch and hold an icon and then drag it onto a folder icon.
2. Release the icon and it will be put into the folder.

Remove Icons From a Folder

1. Touch a folder to open it.
2. Touch and hold the icon you want to remove and then drag it to the home screen.
3. Release the icon and it will be removed from the folder.

Rearranging the Primary Icons

The home screen includes a customizable primary icons area at the bottom visible from all home screen panels. You can keep at most five items in the area. Drag icons or folders in or out of the area to rearrange it.

 


Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can touch the **Back** key to hide the onscreen keyboard.

Google Keyboard

The Google Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

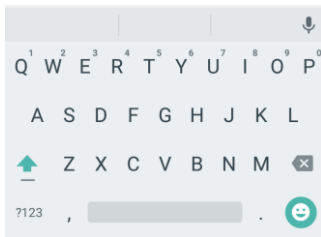

- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or

numbers. For example, to enter È, touch and hold  and the available accented letters and number 3 appear. Then slide to choose è.

- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more.
- Touch  to enter miniature icons, such as expressions, horoscopes, and animals.
- Touch  to use Google voice typing.

Google Voice Typing

Google Voice typing uses the Google voice recognition service to convert speech to text.

1. Touch  to access the voice typing when you are using the Google Keyboard.
2. When you see the microphone image, speak what you want to type.
3. You can continue entering text to keep it or to delete it.

NOTE:

Say "comma," "period," "question mark," "exclamation mark," or

"exclamation point" to enter punctuation.

Input Settings

Choose input settings by touching **Home** key >  > **Settings** > **Language & input** from the home screen.

In the **Keyboard & input methods** section, you can set the default input method and choose the settings for input methods.

Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch the Cut  /  or Copy  /  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch  ,  or **PASTE**.

Opening and Switching Apps

Open an App

1. Touch the **Home** key > .
2. Slide left or right and touch an app to open it.

Switch Between Recently Opened Apps

1. Touch the **Recent apps** key. The apps you've used recently are displayed in a series of tabs. Slide up and down to see all the tabs.
2. Touch a tab to open that app.



NOTE:

You can swipe a tab sideways to remove it from the screen.

Connecting to Networks and Devices

Connecting to Mobile Networks

Select Network Operator

1. Touch the **Home** key >  > **Settings** > **More** > **Cellular networks**.
2. Touch **Network operators** to search for all available networks.
3. Touch a network in the network list to register manually.
You can also touch **Choose automatically** to select preferred network automatically.

Control Mobile Data Use

You can use or disable the mobile data service of the nano-SIM card.

To enable or disable data access:

1. Touch the **Home** key >  > **Settings** > **More** > **Cellular networks**.
2. Touch **Mobile Data** and then touch **Standard Data** switch to enable or disable mobile data use.

To get data services when roaming:

1. Touch the **Home** key >  > **Settings** > **More** > **Cellular**

networks.

2. Touch **International Data Roaming > International Data.**



NOTE:

Data roaming may incur significant roaming charges.

Select Preferred Network Type

Set the preferred type of network for the nano-SIM card.

1. Touch the **Home** key >  > **Settings > More > Cellular networks.**
2. Touch **Preferred network type** and select the network type you would prefer the phone to connect with.

Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch the **Home** key >  > **Settings > More > Cellular networks.**
2. Touch **Access Point Names** > .
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.



NOTE:

To set the APN to default settings, touch  > **Reset to default.**

Connecting to Wi-Fi®

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.



NOTE:

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Get Notified of Open Networks

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch the **Menu Key** > **Advanced**.
4. Slide the **Network notification** switch.

When Wi-Fi is on, you receive notifications in the status bar when your phone detects an open Wi-Fi network. Switch off the option to turn off notifications.

Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **SAVE**.

Connect to a WPS Network

WPS (Wi-Fi Protected Setup) is a feature that makes it easy to add your phone to access points which support WPS.

You can use one of the following two methods to connect your phone to a wireless network using WPS.

Method one: WPS button

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced** > **WPS Push Button**.
4. Press the WPS button on the access point and the access point will recognise your phone and add it to the network.

Method two: PIN number

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced** > **WPS Pin Entry**.
4. The WPS PIN number displays on the screen. Enter the PIN number into the access point's setup page.

After entering the PIN number, your phone automatically finds the access point and configures the connection.



NOTE:

For detailed information about the WPS feature of the access point, please refer to its user documents.

Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch the Wi-Fi network name and then touch **FORGET**.

Adjust Advanced Wi-Fi Settings

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Touch  > **Advanced** to adjust the following settings.

- ▶ **Scanning always available:** Let Google's location service and other apps scan for networks even when Wi-Fi is off.
- ▶ **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
- ▶ **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi on in sleep mode.
- ▶ **Install certificates:** Install certificates needed for connecting to certain Wi-Fi networks.
- ▶ **Wi-Fi Direct:** Use the Wi-Fi Direct feature.
- ▶ **WPS Push Button:** Connect to a WPS network via the push button method.
- ▶ **WPS Pin Entry:** Connect to a WPS network via the phone PIN method.
- ▶ **MAC address:** Check the MAC address.
- ▶ **IP address:** Check the phone's IP address.

Using Wi-Fi Direct®

Wi-Fi Direct allows Wi-Fi devices to share files and data directly by connecting to each other without the need for wireless access points (hotspots).



NOTE:

Activating this feature will disconnect your current Wi-Fi network connection.

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.

2. Touch  > **Advanced** > **Wi-Fi Direct**. Your phone will search for other devices enabled with Wi-Fi Direct connections.
3. Touch a device name below **Peer devices** to connect with it. The other device will receive a connection prompt and need to accept the request. Both devices may need to enter a common PIN.
4. Once connected the device is displayed as “Connected” in the **Wi-Fi Direct** screen.

Connecting to Bluetooth® Devices

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (32.8 feet). The Bluetooth devices must be paired before the communication is performed.

Turn Bluetooth On/Off

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** or **Off** position.

When Bluetooth is on, the  icon appears in the status bar.

Change the Device Name

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** position if Bluetooth is off.

3. Touch  > **Rename this device**.
4. Edit the name and touch **RENAME**.

Pair With Another Bluetooth Device

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** position if Bluetooth is off.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch  > **Refresh** if you want to scan again.

3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **PAIR**. Alternately, enter a Bluetooth passkey and touch **PAIR**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



NOTE:

The Bluetooth passkey may be fixed for certain devices such as headsets and handsfree car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Send Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Bluetooth. The method may

vary by application and data type.

3. Touch a Bluetooth device the phone has paired with or wait for it to search for new devices and touch one of them.

Receive Data via Bluetooth

1. Turn Bluetooth on before trying to receive data via Bluetooth.
2. Flick down the status bar and touch .
3. Touch **ACCEPT** to start receiving the data.

Depending on your storage setting and whether a microSDHC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the phone storage or microSDHC directory. You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDHC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the notification panel and touch  (**Connected**

to/as...).

3. Choose one of the following options:
 - ▶ **Media device (MTP):** Transfer files on Windows® PC or Mac®.
 - ▶ **Camera (PTP):** Transfer photos using camera software.
 - ▶ **Mount SD card:** Let you transfer media files in the SD card on computer.
 - ▶ **Charging:** Charge your phone via USB.

Connect With Windows Media® Player

You can sync music on your phone and the computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music, picture, and video files.

Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Remove the microSDHC Card From Your Phone

If you need to remove the microSDHC card while the phone is on, you should unmount it first.

1. Touch the **Home** key >  > **Settings** > **Storage** >

Unmount SD card > OK.

2. The  icon appears in the status bar and you can now safely remove the microSDHC card from the phone.

Erase microSDHC Card

1. Touch the **Home** key >  > **Settings > Storage.**
2. Scroll down the screen to the **SD card** section and touch **Erase SD card > ERASE SD CARD > ERASE EVERYTHING.**



CAUTION:

The formatting procedure erases all the data on the microSDHC card, after which the files CANNOT be retrieved.

Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.



NOTE:

You cannot transfer files between your phone and your computer via USB while the phone is USB tethered.

1. Connect your phone to your computer with a USB cable.
2. Touch the **Home** key >  > **Settings** > **More** > **Tethering & portable hotspot**.
3. Touch **USB tethering**. A new network connection will be created on your computer.



NOTE:

To stop sharing your data connection, touch **USB tethering** again or disconnect the USB cable.

Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth, you can configure your phone to share its mobile data connection with your computer.

1. Pair your phone with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documents.
3. Touch the **Home** key >  > **Settings** > **More** > **Tethering & portable hotspot**.
4. Touch **Bluetooth tethering**. Your computer is now sharing your phone's data connection.



NOTE:

To stop sharing your data connection, touch **Bluetooth tethering** again.

Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.



NOTE:

When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's Wi-Fi capability to access the Internet. You still remain connected to the Internet via your mobile data network.

1. Touch the **Home** key >  > **Settings > More > Tethering & portable hotspot**.
2. Touch **Portable Wi-Fi hotspot**.
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.



NOTE:

To stop sharing your data connection, touch **Portable Wi-Fi hotspot** again.

Rename or Secure Your Wi-Fi Hotspot

You can change the name of your phone's Wi-Fi network (SSID) and secure your portable Wi-Fi hotspot.

1. Touch the **Home** key >  > **Settings > More > Set up**

Wi-Fi hotspot.

2. Set your name and security options as follows:
 - ▶ **Network name:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
 - ▶ **Security:** Choose a security option, **Open** (not recommended), **WPA PSK** or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA PSK** or **WPA2 PSK**, touch the **Password** field to edit the security password.
3. Touch **SAVE** to save your settings.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

Add a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch **+** and fill in the information provided by your network administrator.

3. Touch **SAVE**.

The VPN is added to the list on the **VPN** screen.

Connect to a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **CONNECT**.

When you are connected, the VPN connected icon appears in the status bar.

Modify a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit profile** and edit the VPN settings you want.
4. Touch **SAVE**.

Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

Placing and Ending Calls

Place a Call by Dialing

1. Touch the **Home** key > .
2. Touch , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.



NOTE:

As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.

3. Touch  below the keypad to dial.

You can also touch the search box at the top of the **Phone** app screen and enter the phone number or contact name you want to call. Touch the matching contact or **Call** [number] to place the call.



NOTE:

To make an international call, touch and hold the 0 key to enter

the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.



NOTE:

To redial the last call you made, just touch the **Home** key >  >  >  and touch  again.

End a Call

During a call, touch  on the screen.

Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in the **Contacts** app. You can answer or reject the call, or reject it with a text message.

Answer a Call

When you receive a phone call, drag  over  to answer the call.



NOTE:

To silence the ringer before answering the call, press the **Volume Key**.

Reject a Call

When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.

 NOTE:

To edit the text response from within the Phone app, touch  in the top search field and select **Settings > General settings > Quick responses**.

Working With the Call Log

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call history, you can touch the **Home** key >  >  (in the top search field) > **Call History**.

Place a Call From the Call History

1. Open the call history.
2. Touch a number and select **CALL BACK**.

 NOTE:

You can touch the **STATISTICS** tab and then touch  to filter the records by call type.

Take Other Actions on a Call History Entry

Open the call history and touch a number.

- Touch **DETAILS** to view more call information. While viewing the call details, you can touch  > **Edit number before call** to edit the number in the dialer before calling it.
- Touch the contact icon in front of the entry to open the contact information tab from the bottom, where you can send a message, call back, edit the contact, add the contact to favorites, or add the number to contacts.



NOTE:

You can touch  > **Clear call log** in the call history screen to delete all history records.

Calling Your Contacts

1. Touch the **Home** key > . Your favourite contacts and frequently called contacts are displayed in the **SPEED DIAL** tab.
2. Touch a contact to place the call, or touch or swipe to the **CONTACTS** tab to view all your contacts with phone numbers and touch  to make a call.

Checking Voicemail

If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Touch the **Home** key >  > .
2. Touch and hold "1" in the dialer. If prompted, enter your

voicemail password.

3. Follow the voice prompts to listen to and manage your voicemail messages.



NOTE:

See [Set Voicemail](#) for how to set your voicemail service. For detailed information, please contact the service provider.

Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to turn on or off the speaker.
- Touch  to mute or unmute your microphone.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Touch  to put the call on hold.
- Touch the **Menu Key > Record** to record phone conversation.
- Touch  to merge the separate calls into a single conference call.



WARNING!

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.



NOTE:

The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Switch Between Current Calls

When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

To respond to an incoming call while you're on a call:

Drag  over  to answer the call. (This puts the first caller on hold and answers the second call.)

To switch between two calls:

Touch the tab at the bottom (displayed as “On hold”) to switch back to the other call.

Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, touch  and

dial the second number. (This puts the first caller on hold.)

3. When you're connected to the second party, touch .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

Adjusting Your Call Settings

Set Contact Display Options

You can set the order of the contacts displayed in the **CONTACTS** tab of the **Phone** app.

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **General settings**.
2. Touch **Sort by** or **Name format** to set the order of the contacts and the format of the contact names.

Set Sound and Vibration

Set the sound and vibration for incoming calls as well as dialpad sounds.

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **General settings**.
2. In the **Sounds and vibrate** section, touch the option you want to configure.
 - ▶ Check **Dialpad tones** to play sounds when you touch the dialpad keys.

- ▶ Check **Also vibrate for calls** to enable vibration for incoming call notification.

Edit Quick Response to Rejected Callers

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **General settings** > **Quick responses**.
2. Touch a text message to edit it.

Set Voicemail

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **Call settings**.
2. Touch **Voicemail** to configure voicemail settings.
 - ▶ Touch **Service** to select the voicemail service provider. Your carrier is the default.
 - ▶ Touch **Setup** > **Voicemail number** to edit the voicemail number.
 - ▶ Touch **Sound** to select the notification sound for new voicemails.
 - ▶ Check **Vibrate** to enable vibration for notification.
3. Touch **Voicemail settings** > **Voicemail number** to edit the voicemail number if necessary.

Use Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.

1. Touch the **Home** key >  >  (in the top search field) >

Settings > Call settings.

2. Touch **Fixed Dialing Numbers** and the following options are available:
 - ▶ **Enable FDN:** Input the PIN2 code to enable the FDN feature.
 - ▶ **Change PIN2:** Change the PIN2 code for FDN access.
 - ▶ **FDN list:** Manage the FDN list.



NOTE:

The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can get your micro-SIM card locked. Contact the service provider for assistance.

Forward Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings.**
2. Touch **Call forwarding.**
3. Touch an available option (**Always forward, When busy, When unanswered, or When unreachable**) to enable it.

Set TTY Mode

Select a TTY mode for your phone to work with a teletypewriter, or turn TTY off.

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings > TTY mode.**

2. Select one of the following options. Consult your teletypewriter manufacturer's manual if necessary.
 - ▶ **TTY Off:** Users who can hear and talk can disable TTY support.
 - ▶ **TTY Full:** Users who cannot talk or hear may use this mode to send and receive text messages through a TTY device.
 - ▶ **TTY HCO:** Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party and respond via text messages.
 - ▶ **TTY VCO:** Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.

Set DTMF Tones

You can set the length of Dual-tone multi-frequency (DTMF) signal tones.

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings > DTMF tones.**
2. Touch **Normal** or **Long**.

Set Speed Dials

You can touch and hold the 1 ~ 9 keys from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

To assign a speed dial key:

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **Call settings** > **Speed dial**.
2. Touch a speed dial key.
3. Enter a phone number or select one from the contact list.
4. Touch **OK**.

Bar Certain Calls

Call barring feature allows you to forbid certain types of calls from your phone.

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **Call settings** > **Call Barring Settings**.
2. Set the restriction of specific types of calls from your phone.

Other Options

1. Touch the **Home** key >  >  (in the top search field) > **Settings** > **Call settings** > **Additional settings**.
2. Touch **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.



NOTE:

Please contact the service provider to check whether the caller ID and call waiting features are available.

Internet Call Settings

To add an Internet calling account:

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings > Phone account settings > SIP accounts.**
2. Touch **ADD ACCOUNT.**
3. Follow the instructions from your Internet calling service provider to configure the settings for your account.
4. Touch **SAVE.**

To configure which calls use Internet calling:

You can configure your phone to place all calls using Internet calling, just calls to Internet calling addresses, or to ask each time you place a call.

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings > Phone account settings.**
2. Touch **Use SIP calling.**
3. Touch the Internet calling option you want.

To configure your phone to receive Internet calls:

By default, your phone is configured to make Internet calls, but not to ensure that you will receive them. However, you can configure your phone to listen for Internet calls made to an Internet calling account you have added to your phone.

1. Touch the **Home** key >  >  (in the top search field) > **Settings > Call settings > Phone account settings.**
2. Check **Receive incoming calls.** Checking this setting will reduce your battery life between charges.

Contacts

You can put contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, touch the **Home** key > . From there, you can touch the tabs on the top of the screen to quickly switch to contact groups or favorite contacts.

Checking Contact Details

1. Touch the **Home** key >  and touch the **ALL CONTACTS** tab to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.



NOTE:

If you have a lot of contacts stored, you'll see a slider on the right side of the screen. Drag the slider to the letter initial you need.

Adding a New Contact

1. Touch the **Home** key >  and touch the **ALL CONTACTS** tab.
2. Touch  to add a new contact.

3. Touch the account field near the top of the screen to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch ✓ to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

1. Touch the **Home** key >  and touch the **ALL CONTACTS** tab.
2. Touch **Set up my profile**.
3. Enter your profile information. Touch **ADD ANOTHER FIELD** to add more information if you want.
4. Touch ✓.

Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to your micro-SIMs or microSDHC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share contacts using Bluetooth, Google Drive, Email, Gmail, or Messaging.

Import Contacts From the micro-SIM Cards

1. Touch the **Home Key** > .
2. Touch  > **Import/export** > **Import from SIM card**.
3. Touch to select the contacts you need and then touch .

Import Contacts From the microSDHC Card

1. Touch the **Home Key** > .
2. Touch  > **Import/export** > **Import from storage**.
3. Select an account in which to save the contacts.
4. Select the vCard file(s) and touch **OK**.

Export Contacts to the micro-SIM Card

1. Touch the **Home Key** > .
2. Touch  > **Import/export** > **Export to SIM card**.
3. Touch to select the contacts you need and then touch .

Export Contacts to the Storages

1. Touch the **Home Key** > .
2. Touch  > **Import/export** > **Export to storage**.
3. The phone will prompt you with the name of the vCard file.
Touch **OK** to create the file on the microSDHC card or the

phone storage.

Working With Favorite Contacts

In the favorite contacts tab, you can find your favorite contacts and frequently contacted contacts.

Add a Contact to Favorites

You can add the contacts you use frequently to **FAVORITES** so that you can find them quickly.

1. Touch the **Home** key >  and touch the **ALL CONTACTS** tab.
2. Touch a contact and then touch  at the top.

Remove a Contact From Favorites

1. Touch the **Home** key >  and touch the **FAVORITES** tab.
2. Touch a favorite contact and then touch  next to the contact name.

Working With Groups

View Your Contact Groups

1. Touch the **Home** key >  and touch the **GROUPS** tab.
2. Scroll through the list to view the preset groups and any

groups you have created.

3. Touch a group to view its members.



NOTE:

Touch the **Menu Key > Send Group message / Send Group email** to send messages or emails to selected group members.

Set Up a New Group

1. Touch the **Home** key >  and touch the **GROUPS** tab.
2. Touch  to create a new group.
3. Touch the drop-down box near the top of the screen, which will be there if you have added accounts to the phone, to choose an account for the group.
4. Enter a group name.
5. Touch **Add member** and select the contacts you wish to be the group members.
6. Touch .
7. Touch the field below **RINGTONE** to select the ringtone for incoming calls from the group members.
8. Touch **OK**.
9. Touch  to save the group.

Delete a Group

1. Touch the **Home** key >  and touch the **GROUPS** tab.

2. Touch a group and then touch  > **Delete**.
3. Touch **OK** to disband the group. The contacts in the group will not be deleted.

Edit a Group

1. Touch the **Home Key** >  and touch the **GROUPS** tab.
2. Touch a group and then touch the **Menu Key** > **Edit**.
3. Touch the group name to edit it, or touch the field below **MEMBER** or **RINGTONE** to add more members or change the ringtone.



NOTE:

To remove group members, touch a group in the **GROUPS** tab and touch the **Menu Key** > **Multi-Select** to choose members. Then touch  > **OK**.

Searching for a Contact

1. Touch the **Home** key > .
2. Touch  at the top of the screen.
3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

Editing Contacts

Edit Contact Details

1. Touch the **Home** key > .
2. Touch a contact you need to edit and then touch .
3. Edit the contact and touch .

Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Touch the **Home** key > .
2. Touch a contact you want to set a ringtone for and then touch  >  > **Set ringtone**.
3. Select a ringtone you like and touch **OK**.

Delete Contacts

1. Touch the **Home** key > .
2. Touch  > **Delete**.
3. Touch to select the contacts you want to remove and then touch .
4. Touch **OK** to confirm.

Join Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

1. Touch the **Home** key > .
2. Touch a contact entry to display the contact's details and then touch .
3. Touch  > **Join**.
4. Touch the contact whose information you want to join with the first entry and then touch .

The information from the second contact is added to the first, and the second contact is no longer displayed in the **ALL CONTACTS** list.

You can repeat these steps to join another contact to the main contact.

Separate Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Touch the **Home** key > .
2. Touch a contact entry you have merged and want to separate.

3. Touch .
4. Touch  > **Separate**.
5. Touch **OK** to confirm.

Accounts

Adding or Removing Accounts

You can add multiple Google Accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts depending on the apps installed on your phone.

Add an Account

1. Touch the **Home** key >  > **Settings > Accounts > Add account**.
2. Touch the type of account you want to add.
3. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **Accounts** list.

Remove an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. Touch the **Home** key >  > **Settings > Accounts**.
2. Touch the account category in the list and then touch the

account.

3. Touch  > **Remove account** > **REMOVE ACCOUNT**.

Configuring Account Sync

Configure Auto Sync Setting

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch  and check or uncheck **Auto-sync data**.
 - ▶ When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
 - ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Sync Manually

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch the account category and then the account you want to sync.
3. Touch  > **Sync now**.

Change an Account's Sync Settings

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch the account category and then the account. The

Sync screen appears, showing a list of information the account can sync.

3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.

Email

Touch **Email** in the home screen to receive and send emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Touch **NEXT** to let the phone retrieve the network parameters automatically.



NOTE:

You can also enter these details manually by touching **MANUAL SETUP** or when automatic setup fails.

3. Follow the on-screen instructions to finish the setup.

Your phone will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by dragging down on

the message list.

To check earlier emails for your IMAP or POP3 accounts, swipe upwards to the bottom of the message list and touch **Load more**.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Reply to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.
2. Do the following as you need.

- ▶ To reply to the sender, touch .
- ▶ To reply to the sender and all recipients of the original email, touch  > **Reply all**.
- ▶ To forward the email to someone else, touch  > **Forward**.

3. Edit your message and touch .

Mark an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, touch .

- While in a message list (for instance, the inbox), touch the sender images before the messages and then touch .

Delete an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch .
- While in a message list (for instance, the inbox), touch the sender images in front of the messages and then touch .

Writing and Sending an Email

1. Open your email Inbox and touch .



NOTE:

If you have more than one email account added on the phone, touch the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma. You can also touch  to select recipients from your contacts.
3. Enter the email subject and compose the email text.
4. Touch  to add audio files, images, videos and other types of files as attachments.
5. Touch  to send the message.

Adding and Editing Email Accounts

Add an Email Account

After setting up your first email account (see [*Setting Up the First Email Account*](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch the **Menu Key > Settings > ADD ACCOUNT**.
3. Follow the prompts to set up the account as you did with the first one.

Edit an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, your email signature, and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the **Inbox** screen.
2. Touch the **Menu Key > Settings** and touch the account whose settings you want to change.
3. Make the changes you want and touch the **Back Key** when you finish.

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open **Email** to get the **Inbox** screen.
2. Touch the **Menu Key > Settings > General**.
3. Make the changes and touch the **Back Key** when you finish.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Touch  in the home screen.

The **Messaging** screen opens where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

Sending a Message

1. On the **Messaging** screen, touch  at the bottom.
2. Add recipients by one of the following ways.
 - ▶ Touch the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - ▶ Select recipients from your contacts or call log by

touching .

3. Touch the **Type message** field and enter the content of your message.
4. If you want to send a multimedia message, touch  > **Add subject** to add a message subject or touch the paper clip icon  to attach a file or a slideshow to the message.
5. Touch .

 NOTE:

You can also include email addresses as recipients for multimedia messages.

 NOTE:

Do not add a message subject or any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Replying to a Message

Messages you receive are appended to existing threads for the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.

3. Touch  .

Forwarding a Message

1. On the **Messaging** screen, touch the thread that has the message you want to forward.
2. Touch the message.
3. Touch **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Touch  .

Changing Messaging Settings

Touch  > **Settings** in the **Messaging** screen to change messaging settings.

Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch the **Home** key >  > **Calendar**.

Viewing Your Calendars and Events

Select Visible Calendars

1. Open the **Calendar** app.
2. Touch  > **Calendars to display**.
3. In the new screen, touch the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

Change Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, touch the time period shown at the

top left and select the view you prefer.

You can also change to Day view from Month view by touching any day block.

- In Month view, swipe vertically to see previous months and future months.
- In Week or Day view, swipe horizontally to see previous weeks/days and future weeks/days.
- When you are viewing past or future days, weeks, or months, touch  at the top to quickly switch to today.

View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

Creating an Event

1. In any Calendar view, touch .
- You can also touch a spot in Day or Week view twice to add an event to that time spot.
2. If you have more than one calendar account, touch the current account above the **Event name** box to choose one.
3. Enter the event details and touch **DONE**.

Editing, Deleting or Sharing an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see [View Event Details](#) in this chapter).
3. Do one of the following as you need.

To...	do...
Edit the event,	touch  at the top of the screen. Touch DONE to save your changes.
Delete the event,	touch  at the top of the screen and then touch OK .
Share the event,	touch  and choose how to share.

Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and touch  > **Settings**.

Snapdragon Camera

You can use your phone to take photos and record videos. Photos and videos are stored on the phone's microSDHC card or in the phone's internal storage.

Capturing a Photo

1. Touch the **Home** key >  > **Snapdragon Camera**.
2. Aim the camera at the subject and make any necessary adjustment.



Number	Function
1	Switch between the front and back cameras.
2	Switch between simple mode and expert mode. In expert mode, you will have more options to configure, including gradienter, exposure, ISO, and white balance. Only available for the back camera.
3	Change the flash setting, only available for the back camera.
4	Select color effect, only available for the back camera.
5	Change the camera modes including normal, auto, HDR, panorama, beautify, smile, photo clear, group, and straighten. Or configure camera settings. Some modes are only available for the back camera.
6	Capture a video.
7	Capture a picture.
8	View pictures and videos you have taken.



WARNING!

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.



NOTE:

You can spread or pinch on the screen or press the **Volume Key** to zoom in or out before taking pictures.

3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the center of the image.
4. Lightly touch .

Recording a Video

1. Touch **Camera** in the home screen.
2. Aim the camera at the subject. You can touch any area on the screen that you want the camcorder to focus on before and during recording.



NOTE:

You can spread or pinch on the screen or press the **Volume Key** to zoom in or out before and during recording.

3. Touch  to start recording.
4. Touch  to stop recording.



NOTE:

While the recording is in progress, you can touch  to save the frame as a separate photo.

Customizing Camera/Camcorder Settings

Before recording a video, you can touch  >  to open the following camera and camcorder setting options.



NOTE:

Not all options are available for the front camera or the back camera.

- **Camera options** 
 - ▶ **Picture size:** Set the image size for your photo.
 - ▶ **Grid:** Show or hide the composition line.
 - ▶ **Self-timer:** Set a time delay before the camera takes a picture automatically after you touch the shutter icon, or turn off this feature.
 - ▶ **Interval:** Take a series of pictures at the interval you set or turn off this feature.
 - ▶ **Mirror:** Mirror the pictures you take with the front camera.
 - ▶ **Face detection:** Automatically find people's faces in the pictures.
 - ▶ **Touching capture:** Touch the screen to capture a picture with the back camera.
- **Camcorder options** 
 - ▶ **Video quality:** Set the quality for your video.
 - ▶ **Time lapse:** Set the time interval between each frame when you shot time lapse videos with the back camera.
 - ▶ **Silence camcorder:** Enable this option if you want to capture silent video clips.
 - ▶ **HFR:** Capture silent slow-motion videos.
- **Other options** 
 - ▶ **Shutter tone:** Turn on or off the shutter sound for photo taking and video recording.
 - ▶ **Geo-tagging:** Select whether to store the GPS location in

your captured photos and videos.

- ▶ **Storage location:** Change the storage location for captured photos and videos.
- ▶ **Restore defaults:** Restore default camera settings.

More Apps

Clock

Touch the **Home** key >  > **Clock**. The Clock app allows you to check local time and time in other cities in the world, set alarms, and use timers.

Set a New Alarm

1. Touch the  tab in the **Clock** app.
2. Touch an existing alarm to configure it, or touch  at the bottom of the screen to create a new alarm.
3. Set up the alarm options, such as time, repeat, and alarm sound.

NOTE:

To enable or disable existing alarms directly, just slide the switches on the right side.

Check World Time

Touch the  tab in the **Clock** app to check local time for cities around the world.

Touch  at the bottom to add a new city or country.

Use the Stopwatch and Countdown

Touch the  or  tab in the **Clock** app to use the countdown timer or the stopwatch.

Stopwatch allows you to record lap times, while countdown timer allows you to set a time and count down to zero.

Backup and Restore

Touch **Backup** in the home screen. You can back up your user data, such as contacts and messages, and installed applications to the memory card regularly. If the data get lost, restore it from the memory card.

Touch  > **Help** to view detailed guide.

Calculator

Touch the **Home** key >  > **Calculator** to use the phone's convenient built-in calculator for some basic as well as advanced mathematical equations.

 **NOTE:**

Slide left or right to switch between different panels.

Downloads

The **Downloads** app keeps a record of the files you have downloaded using apps such as **Browser** or **Email**.

Touch the **Home** key >  > **Downloads** to check the record.

- Touch a file to open it with the appropriate applications.
- Touch and hold a file to delete or share it.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone storage and the microSDHC card.

Touch the **Home** key >  > **File Manager**. You can find the file you need by category.

- Touch folders and files to access stored items.
- Touch and hold an item to access option icons such as Copy, Move, Share, or Delete.
- To copy or move an item, navigate to a new location and touch **PASTE**.
- Touch  to create a new folder in the current directory.

News and Weather

News & Weather offers weather forecasts and news stories about common topics. You can also customize the news topics that are displayed.

Touch **News & Weather** in the home screen. Swipe left or right to view the weather forecasts and news headlines under different news topics.

Touch the **Menu Key** to refresh news and forecast data, or to change the settings.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Record a Voice Memo

1. Touch the **Home** key >  > **Sound Recorder** in the home screen.
2. Touch  to start recording.
You can touch  to pause and  to continue during the recording.
3. Touch  to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, touch **Discard** to delete it.

Play a Voice Memo

To play a memo you just recorded:

Touch  at the bottom of the screen.

Task Manager

Touch the **Home Key** > **Task Manager** to view or stop

applications.

- Touch a task in the **Tasks** tab to check the details of the application or force it to stop.
- Touch the **Apps** tab to manage all the apps on your phone.
- Touch the **Resources** tab to view the real-time use of the system resources (CPU, RAM and storages).

Google Apps

Open the Google apps to use Google services. Some apps are put in the **Google** folder on the home screen.



NOTE:

Some contents or Google services may not be available in your region.

- **Google:** Use Google search or get information when you need it with Google Now.
- **Chrome:** Use the Chrome app to browse the Internet and get your bookmarks, browsing history, and more synced with your Google account.
- **Gmail:** Use the Gmail service to send and receive emails.
- **Google+:** Socialize with friends on the Google+ online community.
- **Maps:** Find your place and find your way in the world.
- **Play Music:** Play music on the phone and on your Google account.

- **Play Movies & TV:** Purchase, download and watch the latest and your favorite movies and TV shows.
- **Play Books:** Buy and read the electronic version of new and classic books.
- **Play Newsstand:** Purchase and read newspapers and magazines.
- **Play Games:** Buy and play games from the Google Play Store.
- **Drive:** Store files on the Google servers.
- **YouTube:** Watch video clips from YouTube.com, or upload your own and share with the world.
- **Photos:** Manage photos on the phone and your Google account.
- **Hangouts:** Chat with Google+ friends or send text or multimedia messages.
- **Play Store:** Buy and download apps, games, and other content from the Google Play Store.
- **Voice Search:** Search for information with your voice.

Settings

Touch the **Home** key >  > **Settings**. The **Settings** app contains most of the tools for customizing and configuring your device.

Wireless and Networks

Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. See [Connecting to Wi-Fi](#).

Bluetooth

Turn Bluetooth on or off and configure your Bluetooth connections. See [Connecting to Bluetooth Devices](#).

Data Usage

Touch the switches to turn on or off mobile data and data limit. You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.



NOTE:

The data usage is measured by your phone. Your carrier's data

usage accounting may differ.

Airplane Mode

In the **Settings** app, touch **More > Airplane mode**. All the phone's radios that transmit voice or data are turned off.

Default SMS App

In the **Settings** app, touch **More > Default SMS app** to choose the preferred application for sending and receiving SMS.

Tethering and Portable Hotspot

In the **Settings** app, touch **More > Tethering & portable hotspot** to share your phone's mobile data connection with PCs or other devices via USB, Bluetooth or Wi-Fi. See [Sharing Your Mobile Data Connection](#).

VPN

In the **Settings** app, touch **More > VPN** to set up and connect to virtual private networks. See [Connecting to Virtual Private Networks](#).

Cellular Networks

In the **Settings** app, touch **More > Cellular networks** to control mobile data use, select mobile network and set access point names. See [Connecting to Mobile Networks](#).

Device

Display

- **Brightness level:** Set the brightness of the display.
- **Adaptive brightness:** Automatically adjust screen brightness.
- **Wallpaper:** Select a background image for the Home Screen.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, photos or animations will be displayed as a screensaver.
- **Font size:** Set the font size of the text on the screen.
- **When device is rotated:** Select whether the screen contents should rotate when the phone is rotated.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.
- **Cast screen:** Connect with TVs, projectors or other devices that support wireless display and project your phone's content wirelessly to that device. You need to turn on Wi-Fi first. For detailed introduction, please refer to the device manual.

Sound & notification

Adjust different types of volume (see [Adjusting Volume](#)), toggle

sound and mute (see [Switching to Silent or Vibration Mode](#)), set up ringtone and notification sound (see [Changing Ringtone and Notification Sound](#)), and select system sounds or control notification display.

Storage

The **Storage** settings menu lets you manage the phone storage and provides options for your microSDHC card.

Save location

This menu allows you to choose the default location for new data, such as files downloaded, photos captured, and voice recorded.

1. Touch the **Home** key >  > **Settings > Storage > Save location**.
2. Touch **Phone** to store items in the phone's memory.
- or -

If a microSDHC card is present, touch **SD card** to store data on the card.

Internal storage

You can install apps into the internal storage. When you connect your phone to your computer, only the **Internal SD card** is accessible from your computer.

To view the internal storage:

Touch the **Home** key >  **Settings > Storage** and scroll to the **Internal storage** section.

Phone storage

The phone storage is part of the internal storage where you can store your files. You can view this storage space and format (erase) this storage.

When you connect your phone to your computer, this storage is accessible and you can copy files between them.

To view the phone storage space:

Touch the **Home** key >  **Settings > Storage** and scroll to the **Phone storage** section.

To erase the phone storage:

1. Touch the **Home** key >  **Settings > Storage** and scroll to the **Phone storage** section.
2. Touch **Erase phone storage > ERASE PHONE STORAGE > ERASE EVERYTHING.**



NOTE:

The formatting procedure erases all the data in the phone storage, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the storage.

SD card

The external SD card storage options let you view the microSDHC card's size and available space, unmount the card for safe removal from the phone, and format (erase) the card. For details, see [Remove the microSDHC Card From Your Phone](#) and [Erase microSDHC Card](#).

Battery

Check how much power remains for the battery and what has been using the battery.

Apps

See apps installed on your phone and manage them.

Touch an app in the **DOWNLOADED, ON SD CARD, RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the phone storage.



NOTE:

Not all applications can be moved or uninstalled.

Connect to PC

Select your USB connection type between your phone and PC. See [Connecting to Your Computer via USB](#).

Personal

Location

Activate location services to determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services turned on on your phone.

1. Touch the **Home** key >  > **Settings** > **Location**.

2. Slide the **Location** switch at the top to turn location services on or off.
3. When location is enabled, touch **Mode** to select location sources you want to use.
 - ▶ **High accuracy:** Get accurate location using both GPS and Wi-Fi as well as mobile networks.
 - ▶ **Battery saving:** Use only Wi-Fi and mobile networks to get your approximate location. This will drain less power from your battery than using GPS.
 - ▶ **Device only:** Use GPS to pinpoint your location.

Security

- **Screen lock:** Disable the screen lock or enable it with swipe, face unlock, pattern, PIN, or password. See [Protecting Your Phone With Screen Locks](#).
- **Owner info:** Set the text that you may display on the lock screen.
- **Lockscreen shortcuts:** Tap an icon on the left or right to reassign a lock screen shortcut.
- **Smart Lock:** Keep the phone unlocked when connected to trusted devices, in trusted places, or unlocked by trusted faces.



NOTE:

You need to sign in to your Google account on the phone to use the **Smart Lock** feature.

- **Encrypt phone:** Encrypt your data on the phone to protect

your privacy. See [*Protecting Your Phone With Encryption*](#).

- **Set up SIM card lock:** Touch a micro-SIM card and you can manage the following settings.
 - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the micro-SIM card.
 - ▶ **Change SIM PIN:** Change the PIN used to access the micro-SIM card.



NOTE:

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your micro-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the micro-SIM card.

- **SMS message limit:** Display an alert dialog to prevent applications from sending SMS messages too frequently. The default limit is 30 messages in 15 minutes.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or display a warning before you install applications that may cause harm.
- **Storage type:** Check the credential storage type.

- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.
- **Trust agents:** View or deactivate trust agents.
- **Apps with usage access:** Turn on or off some apps' access to your phone usage information.

Accounts

Manage your accounts and synchronization. Touch **Add account** to sign in to or create accounts on your phone.

Touch an account type to see that type of accounts you have added and adjust the accounts settings.

Language and Input

- **Language:** Select a language and region for your system.
- **Spell checker:** Use Android Spell Checker to check for spelling errors when entering text.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **Keyboard & input methods:** Configure text input settings. See [*Input Settings*](#).
- **Voice input:** Select and configure voice input services.
- **Text-to-speech output:**

- ▶ **Preferred engine:** Select the speech synthesis engine you want to use or change its settings.
- ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
- ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- ▶ **Default language status:** Check whether the text-to-speech output feature supports the current system language.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

Backup & Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Set the Google account that the data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory default settings. You can also erase the data on the phone storage and the microSDHC card during the process.

System

Date & Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

Accessibility

Configure accessibility plug-ins and services on your phone, such as using **Color inversion** or **Large text** for users with sight problems.

Printing

You can manage Google Cloud Print service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

About Phone

View important phone information and legal information. You can also upgrade your phone system from update packages copied to the storage card.

Upgrading the Phone Software

There are several ways to upgrade your phone software:

- Use the online upgrade tool for mobile terminal products.
- Use the one-press upgrade package offered by your mobile service provider.
- Use the upgrade package on your microSDHC card.



NOTE:

Visit the ZTE official handset service support website (<http://www.ztedevice.com/support>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.

Problem	Possible causes	Possible solution
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 0°C or higher than 45°C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to ensure that all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.

Problem	Possible causes	Possible solution
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
micro-SIM card error	micro-SIM card malfunction or damage.	Take the micro-SIM card to your service provider for testing.
	micro-SIM card inserted improperly.	Insert the micro-SIM card properly.
	Debris on the micro-SIM card contacts.	Use a soft, dry cloth to clean the micro-SIM card contacts.
Unable to connect to the network	micro-SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Cannot answer incoming calls	You have activated the Call barring feature.	Disable this feature. See Bar Certain Calls .
Cannot make outgoing calls	You have activated the Call barring feature.	Disable this feature. See Bar Certain Calls .

Problem	Possible causes	Possible solution
	You have activated the Fixed dial numbers feature.	Disable this feature. See <i>Use Fixed Dialing Numbers</i> .
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the micro-SIM card's PUK code, use the PUK code to unlock the micro-SIM card.
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
		Uninstall the software that may cause the problem.
		Upgrade the phone software.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. Never text while driving.		Don't use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Avoid contact with liquids. Keep your phone dry.
	Turn off when asked to in hospitals and medical facilities.		Don't take your phone apart.

	Turn off when told to in aircrafts and airports.		Only use approved accessories.
	Turn off when near explosive materials or liquids.		Don't rely on your phone for emergency communications.

FCC RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions

accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-Z828.

For this device, the highest reported SAR value for usage against the head is 1.04 W/kg, for usage near the body is 1.19 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Hearing Aid Compatibility (HAC) regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated

have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M3/T3 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

CTIA Requirements

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.

- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may

experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Turn off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.