



Picture 12: Left Hand Touch Cheek Position
For Single Screen Mode



Picture 13: Left Hand Tilt 15 Degree Position
For Single Screen Mode



Picture 14: Right Hand Touch Cheek Position
For Single Screen Mode



Picture 15: Right Hand Tilt 15 Degree Position
For Single Screen Mode



Picture 16: Left Hand Touch Cheek Position
For Double Screen Mode



Picture 17: Left Hand Tilt 15 Degree Position
For Double Screen Mode



Picture 18: Right Hand Touch Cheek Position
For Double Screen Mode




Picture 19: Right Hand Tilt 15 Degree Position
For Double Screen Mode




Picture 20: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 21: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

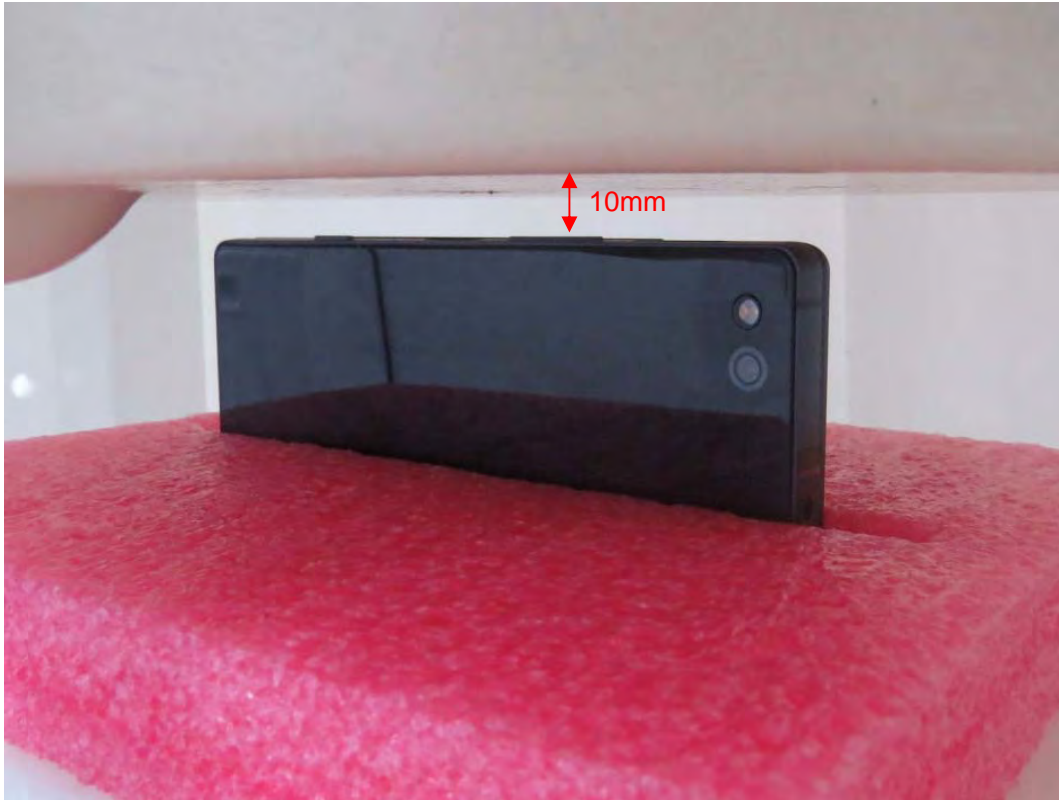

Picture 22: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

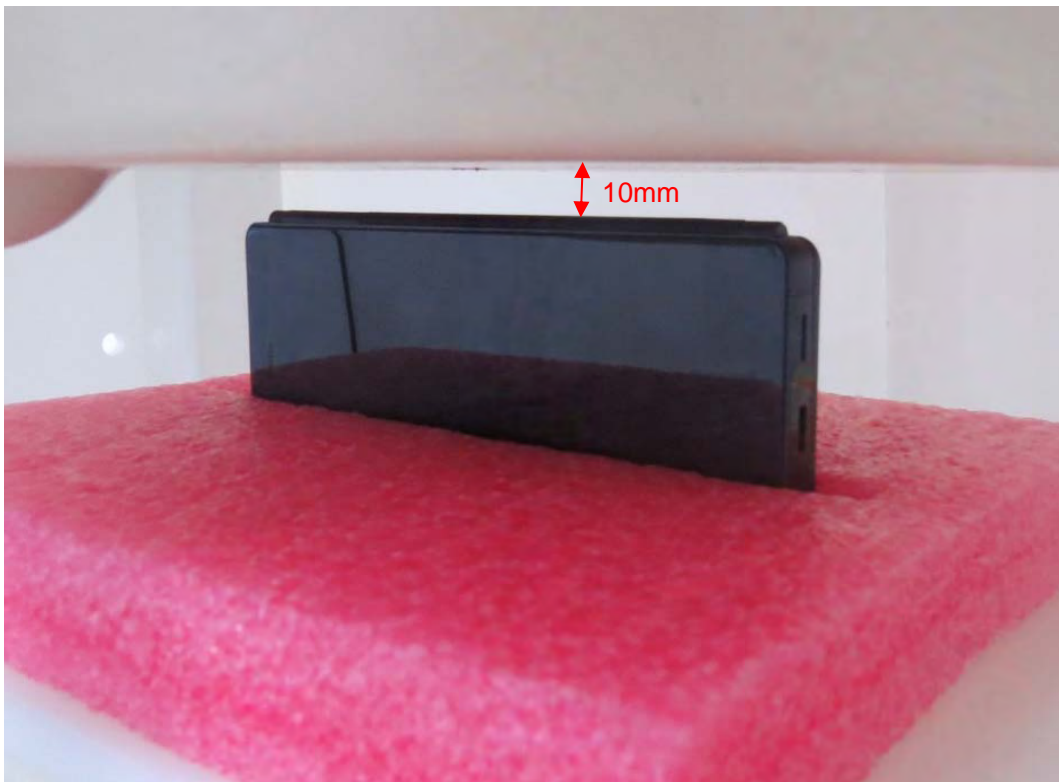


Picture 23: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 24: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 25: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

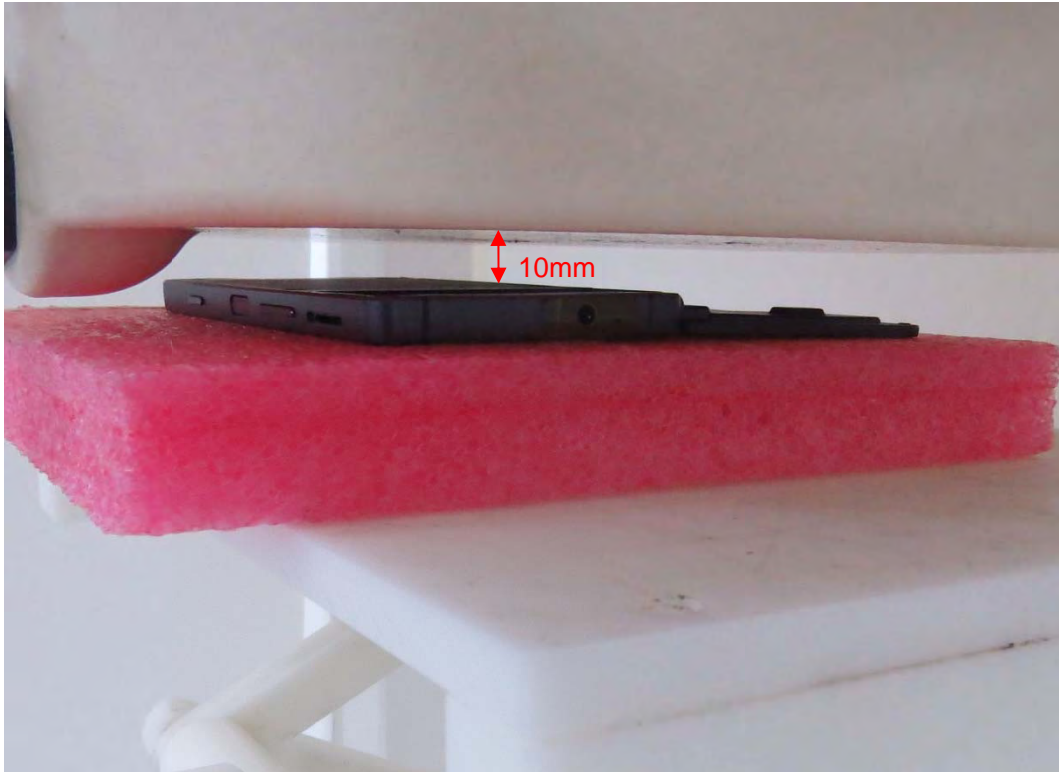

Picture 26: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 27: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 28: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 29: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 30: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 31: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 32: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode




Picture 33: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

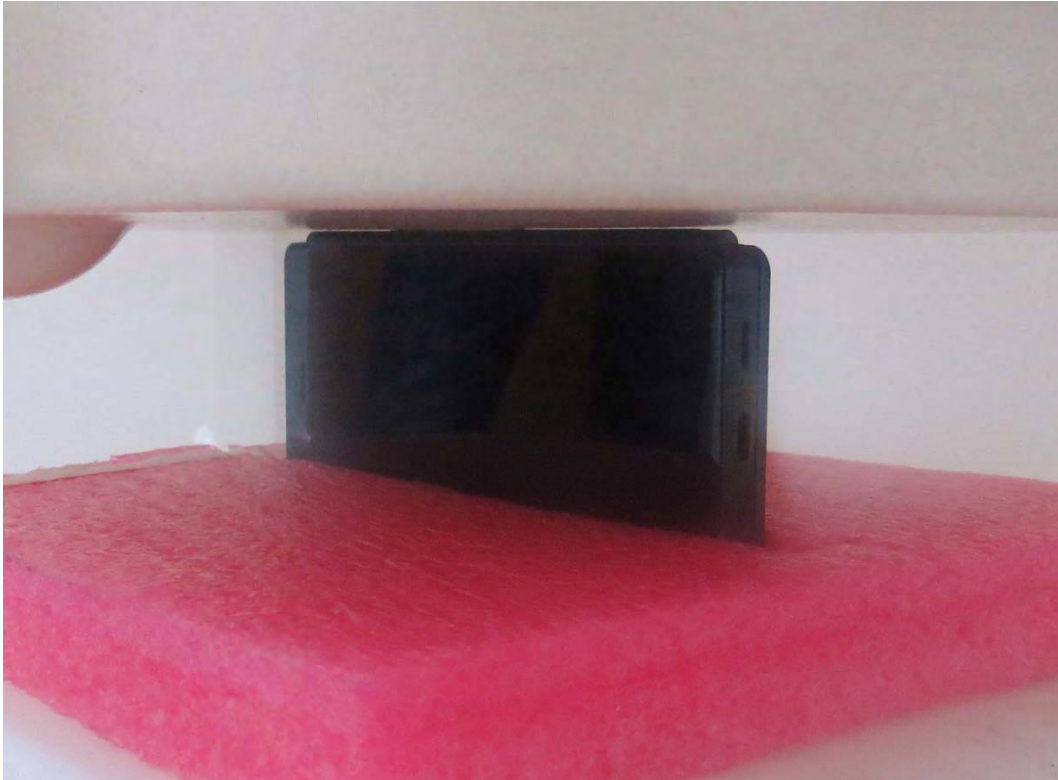


Picture 34: Right Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

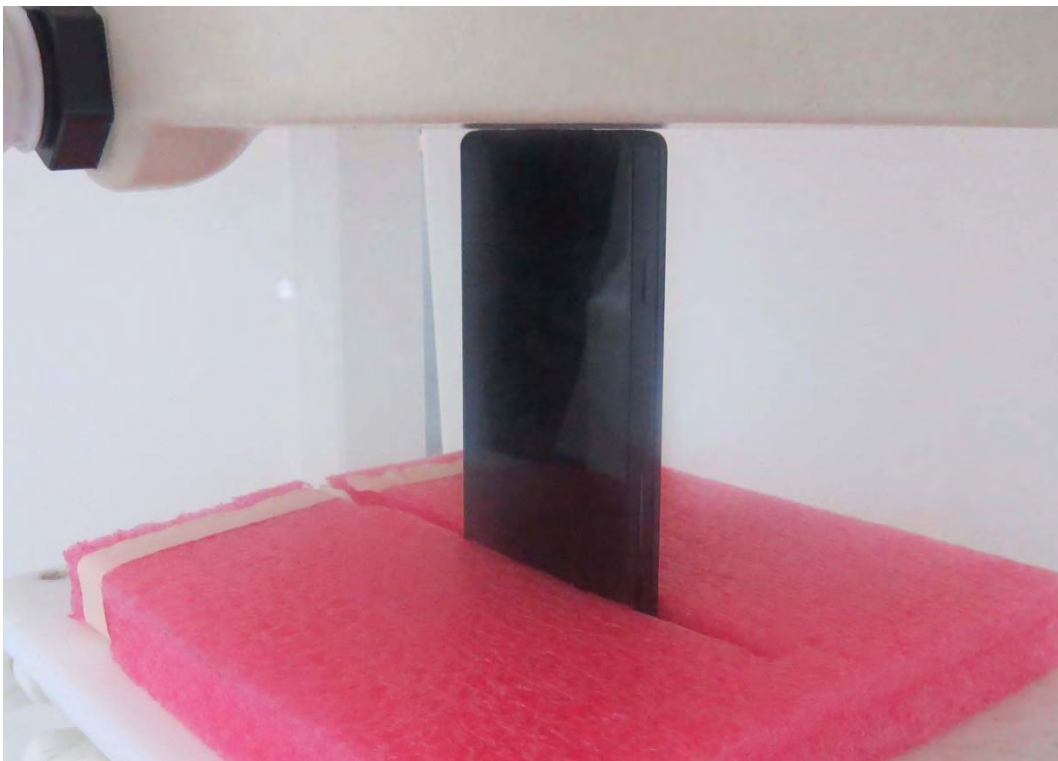

Picture 35: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

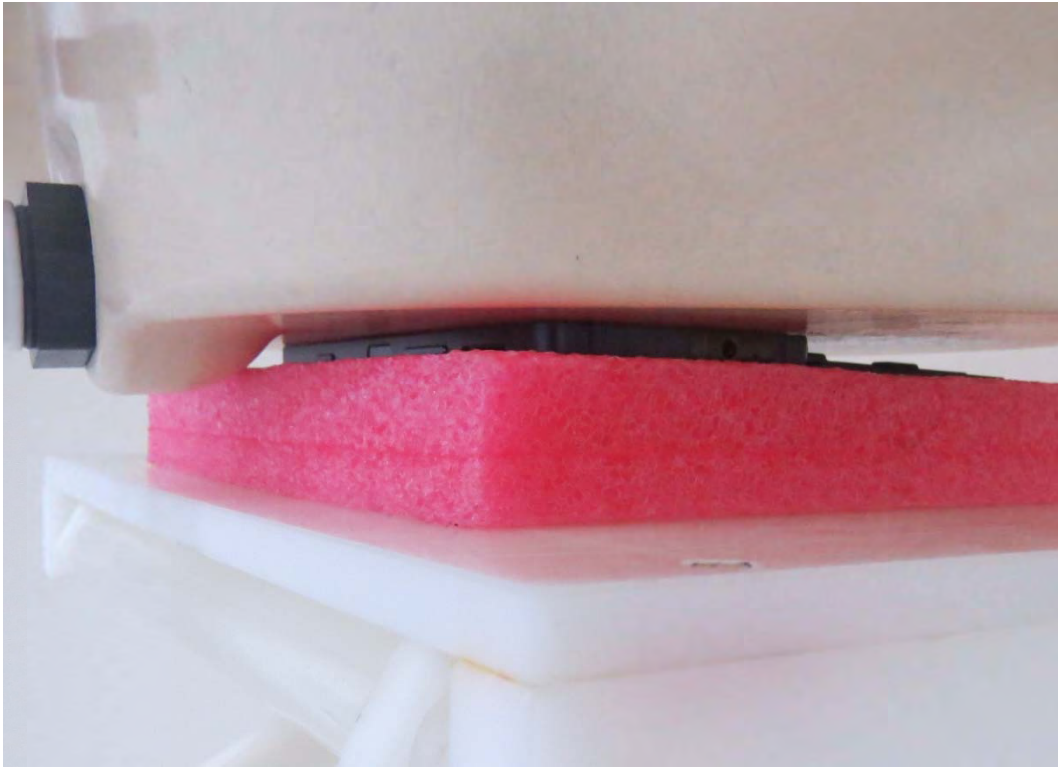

Picture 36: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode

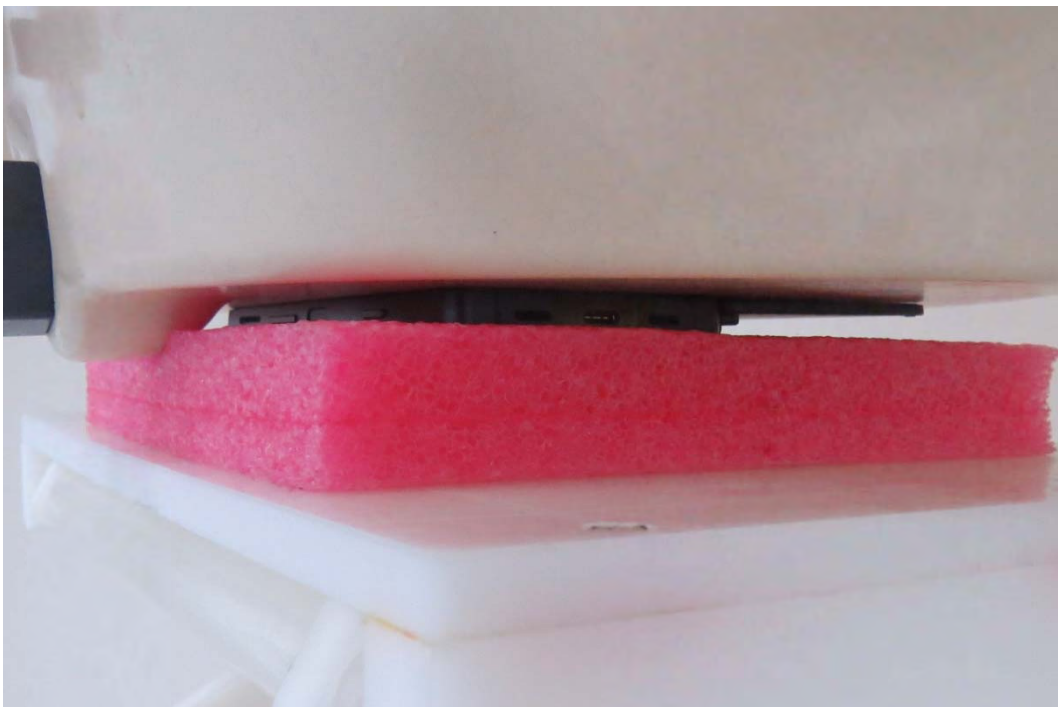

Picture 37: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 38: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 39: Bottom Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode