






Three Field of View (FOV) options are supported when shooting in 1920x1080 60i, 1920x1080 30p and 1920x1080 25p: Wide (140°), Medium (120°) and Narrow (90°).

 
[4] Photo Format

	 JPEG							
	 RAW <p>The PHANTOM 2 VISION+ camera shoots in JPEG and RAW file formats simultaneously when this option is selected. See the following table for detailed specifications.</p> <table border="1"> <tr> <td>JPEG photo size</td> <td>4384X3288</td> <td>4384X2922</td> <td>4384X2466</td> </tr> <tr> <td>RAW photo size</td> <td>4384X3288</td> <td>4384X2920</td> <td>4384X2464</td> </tr> </table>	JPEG photo size	4384X3288	4384X2922	4384X2466	RAW photo size	4384X3288	4384X2920
JPEG photo size	4384X3288	4384X2922	4384X2466					
RAW photo size	4384X3288	4384X2920	4384X2464					




RAW format supports to be manipulated in Photoshop, including Photoshop CS, Photoshop Elements 3, Photoshop Elements 10 and Photoshop Lightroom.


[5] Selectable ISO

	AUTO
	100
	200
	400


[6] White Balance

	AWB (auto white balance)
	Sunny
	Cloudy
	Incandescent lamp

 
[7] Exposure Metering

	Center
	Average
	Spot


[8] Exposure Compensation

	-2.0 (EV)	2.0 (EV)
	-1.7 (EV)	1.7 (EV)
	-1.3 (EV)	1.3 (EV)
	-1.0 (EV)	1.0 (EV)
	-0.7 (EV)	0.7 (EV)
	-0.3 (EV)	0.3 (EV)
	0 (EV)	

 [9] Sharpness

	Standard
	Hard
	Soft

 [10] Anti-flicker

	Auto
	50Hz
	60Hz

[11] Restore Default Settings

Restores all camera default settings. Camera reboot is needed to allow restoration to take effect.


[12] Format Micro-SD Card

Format the Micro-SD card. All data stored in the Micro-SD card will be lost after formatting. Remember to backup before formatting.

4 Album Page

DJI VISION App has SD CARD album and Mobile Device album. The captures and videos in SD CARD album store in Micro-SD card and those in Mobile Device album store in the storage devices of mobile device. The captures and videos in SD CARD album can be synchronized to Mobile Device album.


In DJI VISION App, tap  to enter into SD CARD album and tap  to enter into Mobile Device album.

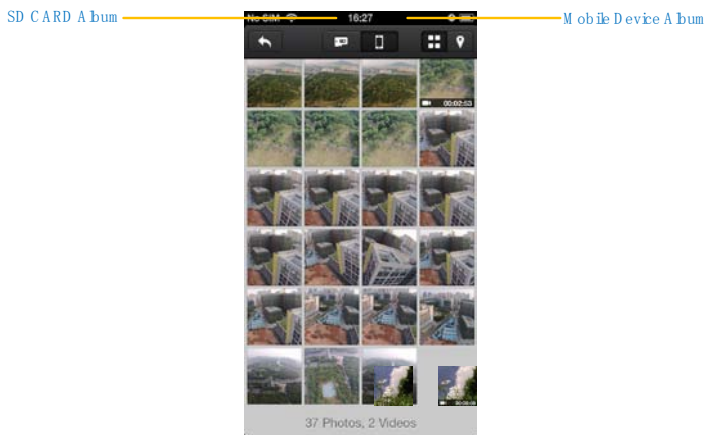


SD CARD album is accessible when the mobile device is well connected to the Wi-Fi of PHANTOM 2 VISION+.


SD CARD Album


The pictures stored in the camera is presented to you in the thumbnail fashion. Tap the corresponding thumbnail to view the picture that you wish to see.

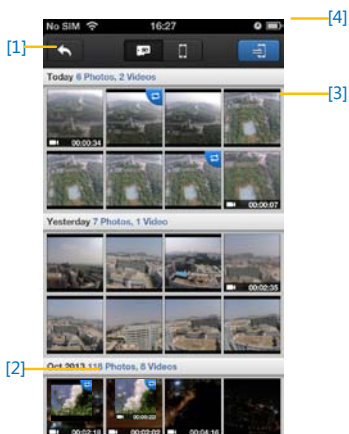




[1] Photos and Videos are listed and grouped by date.


[2] All photos and videos that have already been synced to your mobile device are identified with the  icon.

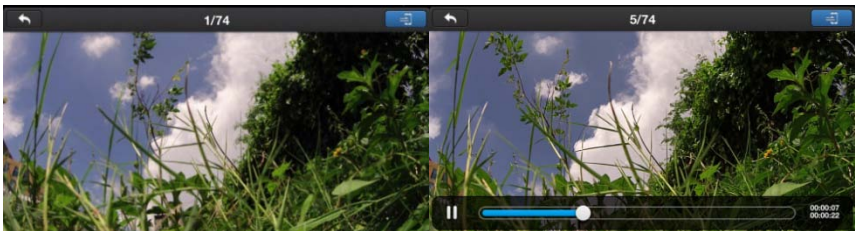[3] Tap any thumbnail for single view mode. Tap a Photo thumbnail that hasn't been synchronized to the mobile device to view the photo. Swipe left or right to view the previous or next photo item. Tap on a video thumbnail to play it and view the video's length. A progress bar will also appear at the bottom of the screen. Tap  to enter single synchronization mode to synchronize a single photo or video, or to synchronize and play a video at the same time.




[4] Tap the button  to enter multiple synchronization mode (as shown in the following diagram). Tap thumbnails to select photos or videos to synchronize to your mobile device (The thumbnails identified by the check mark are successfully selected). Or you can select one or more groups to be synchronized by checking the box before the group, and then Tap  to start synchronizing. During the synchronization process, users can tap  to cancel the synchronization. Photos and videos that have been synchronized to the mobile device will remain.

 Some mobile devices does not support the synchronization of 1080i60 video files.

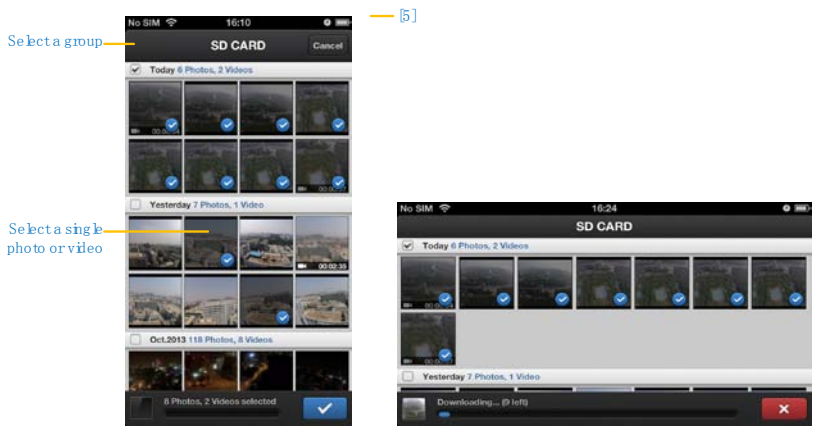

[5] Tap "Cancel" or "Finished" to exit the multiple synchronization mode and return to the SD CARD page.

Mobile Device Album

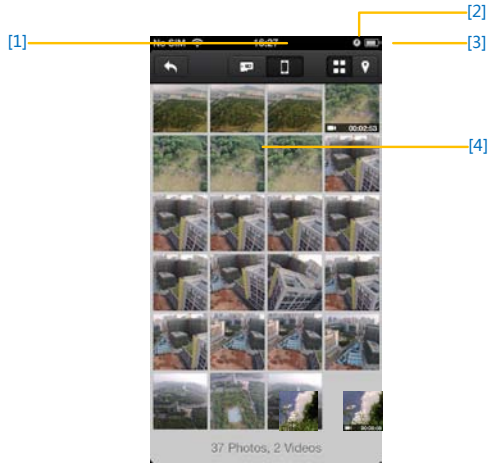

[1] You can browse all photos and videos in the album which have been synchronized to the mobile device, view a selected photo or play a selected video.

[2] Photos and videos are listed in thumbnail style and sorted by capture time.

[3] Pictures and videos are sorted by captured/recorded Geo-tagged locations.




Internet access is required for downloading the map.




Geo-tagged locations

[4] Tap any thumbnail for single view; you can slide left or right to view the previous or next photo. Tap a video thumbnail to play a single video.

[5]

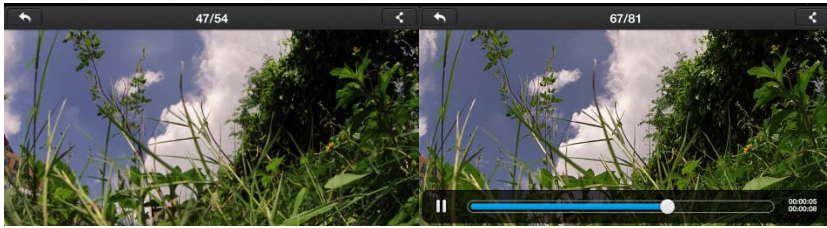

[5]

[5] Tap  to share your photos and videos to social network sites.



Access to the Internet is required to share your photos and videos.




SHARING

Share Your Glorious Moment with Your Friends

5 News Page


View the latest DJI news. (Internet access is required.)

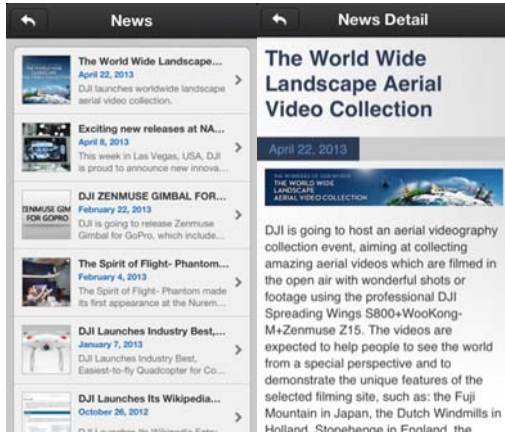

News List


News Details

6 Settings Page

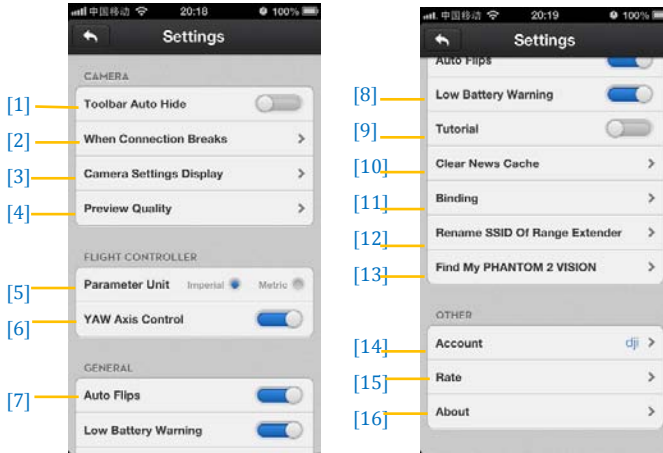

[1] Toolbar Auto Hide


Slide the switch from left to right to enable this function. The toolbar will auto hide on the camera page.

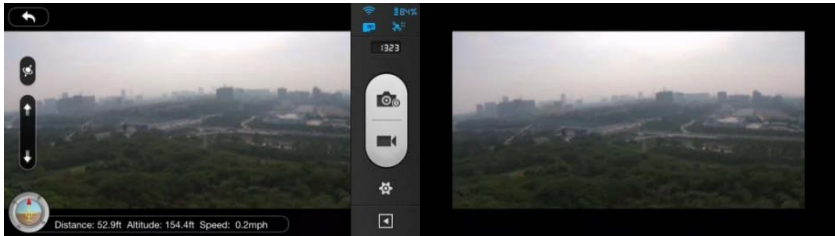

Toolbar Auto Hide Disabled

Toolbar Auto Hide Enabled

[2] When Connection Lost

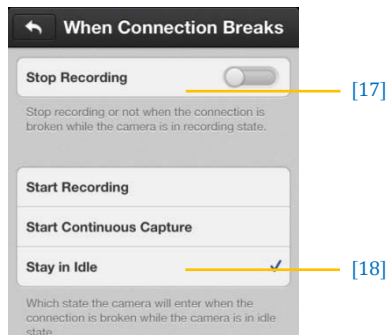

[17] Stop Recording:

Enabled: Stop recording when the Wi-Fi connection between the mobile device and the camera breaks while the camera is recording.


Disabled:Keep recording when the Wi-Fi connection between the mobile device and the camera breaks while the camera is recording.

[18] Select the state the camera will enter in the event of a Wi-Fi Connection break between the mobile device and the camera. Use this function to ensure you continue to capture the scenes you don't want to miss during a flight.

[3] Camera Settings Display

For iOS users, an enabled item will display in the camera settings toolbar, while a disabled item will be hidden.

For Android users, there is no this item.

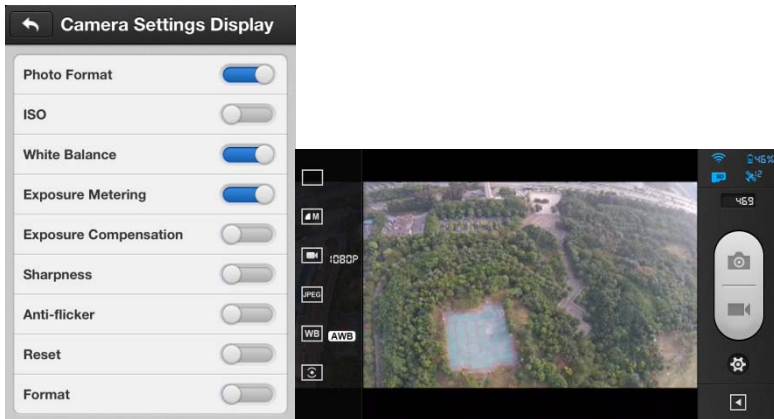

[4] Preview Quality



High: 640x480@30fps

Medium: 640x480@15fps

Medium: 320x240@30fps

Low: 320x240@15fps (Recommended when there is a lot of interference.)

[5] Parameter Unit

Select imperial or metric units of measurement.

[6] YAW Axial Control

Perform the YAW axial rotate when this function is enabled.

[7] Auto Flips

The user interface of DJI VISION App will flip if the mobile device's auto-flip is enabled.

[8] Battery Low Warning

If enabled, an alarm will sound when the battery level is too low.



We recommended you to adjust the mobile device volume to the highest level.

[9] Tutorial

Usage tips will be displayed.

[10] Clear News Cache

Tap to flush the news cache.

[11] Binding

In the event the camera and range extender bind is lost or one of them requires repair or replacement, camera and range extender binding should be performed via the DJI VISION App. Refer to the [<How to Perform Camera & Range Extender Binding>](#) for details.

[12] Rename SSID of Range Extender

Tap to rename the SSID of range extender.

[13] Find My PHANTOM 2 VISION+



Satellite Mode



Standard Mode

[14] Account

Tap to see user's account information.

[15] Rate

Tap to rate the DJI VISION App. Internet access is required.



Android App doesn't have Rate item.

[16] About

Tap to see the current version of the DJI VISION App and also for contact information.

Assistant Software

For better use of PHANTOM 2 VISION+, PHANTOM 2 VISION+ Assistant Software and PHANTOM RC Assistant Software are involved. Both of them can run on Windows or Mac OS X system.

1 Installing Driver and PHANTOM 2 VISION+ Assistant Software

Installing and running on Windows

1. Download driver installer and Assistant Software installer in **EXE** format from the download page of PHANTOM 2 VISION+ on the DJI website.
2. Connect the PHANTOM 2 VISION+ to a PC via a Micro-USB cable.
3. Run the driver installer and follow the prompts to finish installation.
4. Next, run the Assistant Software installer and follow the prompts to finish installation.
5. Double click the PHANTOM 2 VISION+ icon on your Windows desktop to launch the software.




The installer in EXE format only supports Windows operating systems (Win XP, Win7, Win8 (32 or 64 bit)).

Installing and running on Mac OS X


1. Download the Assistant Software installer in **DMG** format from the download page of PHANTOM 2 VISION+ on the DJI website.
2. Run the installer and follow the prompts to finish installation.



3. **When launching for the first time** if use Launchpad to run the PHANTOM 2 VISION+ Assistant Software, Launchpad won't allow access because the software has not been reviewed by Mac App Store.

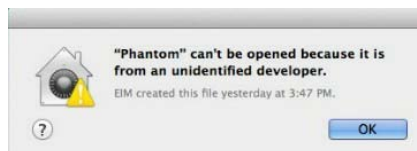

4. Locate the PHANTOM 2 VISION+ icon in the Finder, press the Control key and then click the icon (or right-click the icon using a mouse). Choose Open from the shortcut menu, click Open in the prompt dialog box and then software will launch.
5. After the first successful launch, direct launching of the software can be achieved by double-clicking the PHANTOM 2 VISION+ icon in the Finder or using Launchpad.

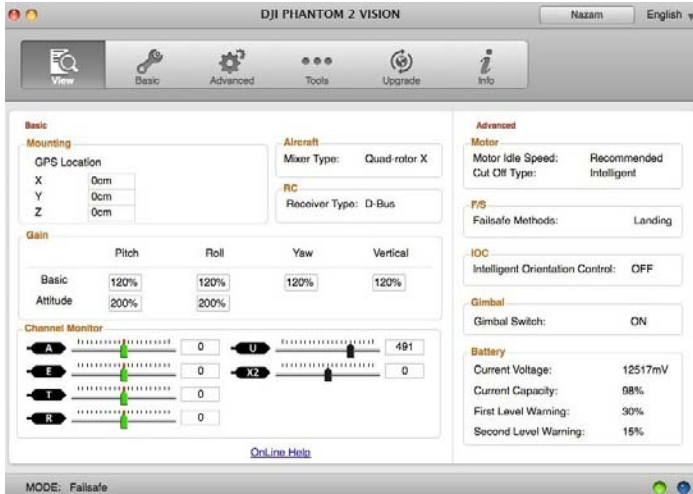




Installer in DMG format supports only Mac OS X 10.6 or above.




Usage of PHANTOM 2 VISION+ Assistant Software on Mac OS X and Windows are exactly the same. The Assistant Software pages appear in other places of this manual are on the Windows for example.

2 Using the Assistant Software

2.1 Using the PHANTOM 2 VISION+ Assistant Software

1. Startup the PC, power on the PHANTOM 2 VISION+, then connect the PHANTOM 2 VISION+ to the PC with a Micro-USB cable. DO NOT disconnect until configuration is finished.
2. Run the PHANTOM 2 VISION+ Assistant Software and wait for the PHANTOM 2 VISION+ to connect to the Assistant Software. Observe the indicators  on the bottom of the screen. When connected successfully, the connection indicator is  and communication indicator is blinking .
3. Choose [Basic] or [Advanced] configuration pages.
4. View and check the current configuration in the [View] page.

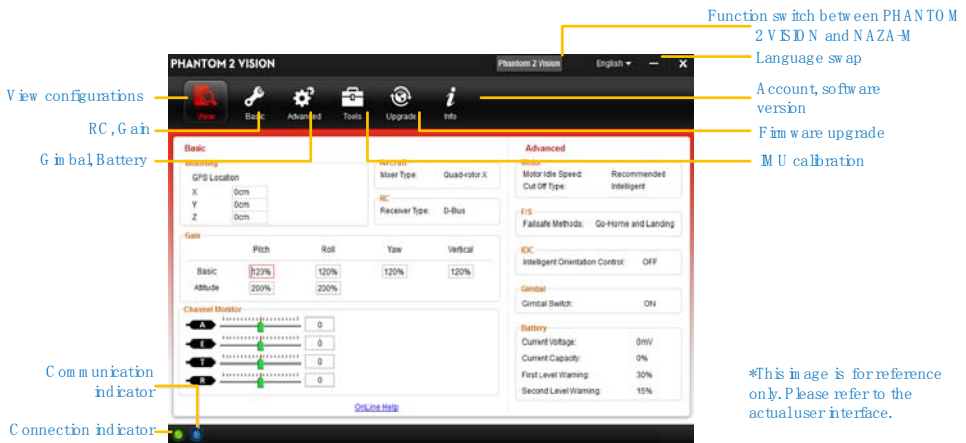

(1) Users should not enable the Naza-M function before finishing the "Advanced Flight Maneuvers" procedure, in accordance with the "Phantom Pilot Training Guide". If the Naza-M function is enabled, users can switch the control mode to either the ATTI. Mode, GPS Mode or Manual Mode, and access the advanced settings (e.g. IOC). In addition, the LED located on the rear frame arms will display the flight status according to the Naza-M's indicator, instead of the PHANTOM 2 VISION+'s indicator. Do not enable the Naza-M function unless you are an experienced user or guided by a professional.

(2) You can change to the PHANTOM 2 VISION+ function by tapping the same button if the Naza-M function is enabled. This operation will disable the Naza-M function and enable the PHANTOM 2 VISION+ function. All parameters will be returned to factory settings.

Firmware upgrade of the PHANTOM 2 VISION+

1. Click the [Upgrade] icon to check the current firmware version and whether the installed firmware is

the latest version. If not, click the relative links to upgrade.

2. Be sure to wait until the Assistant Software shows “finished”. Click OK and power cycle the PHANTOM 2 VISION+ after 5 seconds. Once completed, the firmware is up to date.

Loader	Hardware ID	Firmware	Upgrade
Main Controller	100044207	1.05	No updates
GPS	6.1.1.2	6.0.1.3	No updates
Receiver 5.8G	15.9.0.2 01M0036860	1.0.1.3	Latest version 1.9.1.3
P330CB	26.9.0.0 02F0013818	1.0.1.16	No updates
Battery	1.0.0.0 000000636	1.6.0.0	No updates

Firmware upgradable items

Current firmware version

Upgrade link

*This image is for reference only. Please refer to the actual user interface.

- (1) An internet connection is required to upgrade the PHANTOM 2 VISION+’s firmware.
- (2) DO NOT power off until the upgrade is finished.
- (3) If the firmware upgrade failed, the main controller will enter a waiting for firmware upgrade status automatically. If this happens, repeat the above procedures.




Firmware upgradable items: (1)Main Controller (2)GPS (3)5.8GReceiver (4)P330CB (Main Board) (5)Battery (6)Gimbal IMU

2.2 PHANTOM RC Assistant Software Usage

Please refer to the PHANTOM 2 VISION+ Assistant Software to install PHANTOM RC Assistant Software, and then follow the procedures to finish the configuration of the remote controller.

1. Turn off the remote controller and find the Micro-USB port on the back of it. (If there is no one, users should open the rear cover to find the Micro-USB port on the board inner the remote controller.)
2. Start up the PC, power on the remote controller, and then Connect the remote controller to the PC with a Micro-USB cable. DO NOT disconnect until the configuration is finished.
3. Run the PHANTOM RC Assistant Software and wait for the remote controller to connect to the Assistant Software. Observe the indicators on the bottom left of the screen. When connected successfully, the connection indicator is and communication indicator is blinking .
4. Finish configuration in the [Main] page.
5. Finish upgrade in the [Info] page if necessary.

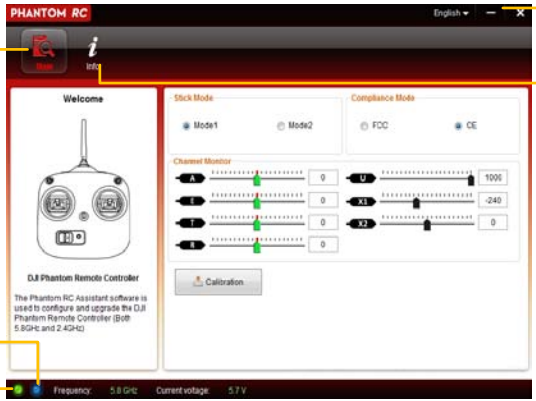

Main page

Language sw ap

Fim w are upgrade
A count, softw are
version

Com m unication indicator

Connectin indicator

*This image is for
reference only. Please
refer to the actual
user interface.

Appendix

1 LED Flight Indicator Status

Normal status	LEDFlight Indicators
Power On Self-Test	
Warming Up	
Ready to Fly	
Ready to Fly (non-GPS)	
Warning and Error	LEDFlight Indicators
Remote Controller Signal Lost	
Low Battery Level Warning	
Critical Battery Capacity Warning	
Not Stationary or Sensor Bias is too big	
Error*	
Compass Needs Calibration	

*You can figure out the error by connecting the PHANTOM 2 VISION+ to the PHANTOM 2 VISION+'s Assistant Software.

2 Specifications

Aircraft	
Supported Battery	DJI 5200mAh Li-Po Battery
PHANTOM 2 VISION+ Weight	1240g
Hovering Accuracy (Ready to Fly)	Vertical: 0.8m;Horizontal: 2.5m
Max Yaw Angular Velocity	200°/s
Max Pitch Angle	35°
Max Ascent / Descent Speed	6m/s
Max Flight Speed	15m/s (Not Recommended)
Wheelbase	350mm
Remote Controller	
Operating Frequency	5.728 GHz - 5.85 GHz
Communication Distance (open area)	CE Compliance: 300m; FCC Compliance: 500m
Receiver Sensitivity (1%PER)	-93dBm
Transmitting Power(EIRP)	CE Compliance: 25mW; FCC Compliance: 125mW
Working Current/Voltage	80 mA@6V
Battery	4 AA Batteries
Gimbal	
Working Current	Static : 750mA
	Dynamic : 900mA
Control Accuracy	±0.03°
Controllable Range	Pitch : -90°~+15°
Maximum Angular Speed	Pitch : 90°/s
Camera	
Operating EnvironmentTemperature	0°C-40°C
Resolution	14 Megapixels
FOV	140° / 120° / 90°
Sensor Size	1/2.3"
Range Extender	
Operating Frequency	2412MHz -2462MHz
Communication Distance (open area)	500m
Transmitting Power	19dBm
Power Consumption	2W

3 Troubleshooting (FAQ)

3.1 How to solve large margin(s) mid-point error?

If the Remote Controller stick(s) mid-point margin of error is too big, the motors will fail to start when you execute the Combination Stick Commands (CSC) and the aircraft will not takeoff. Below are possible situations where the Remote Controller's stick(s) mid-point margins of error could be too big:

(1) One of the Remote Controller's stick position (except the throttle stick) is not centered when powering on the PHANTOM 2 VISION+.

Solution: Place all Remote Controller sticks at their mid-point positions and then power cycle the PHANTOM 2 VISION+ to re-record the mid-point. If the problem persists, this can be caused by scenario (2).

(2) The Remote Controller sticks have been trimmed which leads to a large deviation of the mid-point position.

Solution: Use the Assistant Software to perform a Remote Controller calibration. To do so, carry out the following procedures.

- (a) Connect to the Assistant Software, tap Basic-> RC-> Command Sticks Calibration, and push all Remote Controller sticks through their complete travel range to see if any stick cannot reach its outer most position.
- (b) Power cycle the PHANTOM 2 VISION+. Note that a power cycle is required.
- (c) Redo the Remote Controller calibration according to the Assistant Software.

If the above solutions do not solve your issue, please send your Remote Controller to DJI Customer service for repair.

3.2 How to restore a video file if power is turned off during a recording session?

Solution: Keep or place the Micro-SD card back into the camera. Power cycle the camera and wait about 30 seconds for the video file to be restored.

3.3 Failure to acquire the SSID.

Solution: Double check whether both the camera and Range Extender are powered on and the power switch of the camera is switched to "WIFI ON."

3.4 What to do if PHANTOM 2 VISION+ is out of sight and the Wi-Fi connection is lost?

Solution: Turn off the Remote Controller to trigger the Failsafe mode and the aircraft will start to fly back, descend, and land at the Home point automatically. Please make sure there are no obstacles within the go home route and you are familiar with the regaining control procedure.

3.5 Wi-Fi connection fails all the time.

Solution: Double check the current Wi-Fi connection status of the mobile device. The mobile device may be

connecting to other Wi-Fi networks after a connection breaks with the PHANTOM 2 VISION+.

3.6 Files fail to synchronize.

Solution: Videofiles that are too large (file sizes close to 4GB) cannot be synchronized to the mobile device. Some mobile devices also fail to support synchronization of the 1080i60 video files.

3.7 iOS Albums fail to synchronize.

Solution: Reset the settings of your mobile device as illustrated below. Enable the Settings ->Private->Photos->DJI VISION. Otherwise the Albums will fail to synchronize with your mobile device.



3.8 Failure to share.

Solution: Please make sure the mobile device has access to the Internet.

3.9 Some mobile Android devices have a problem connecting to the PHANTOM 2 VISION+ Wi-Fi Extender.

Solution: Some mobile Android devices do not allow for both a Wi-Fi connection and a mobile data connection at the same time. When trying to connect to the PHANTOM 2 VISION+ Wi-Fi network, most devices will check whether an Internet connection has a certain Wi-Fi setting enabled, e.g. Auto network switch or Test for Internet connection. If no Internet connection is found because the PHANTOM 2 VISION+ creates a non-routable connection it will drop the PHANTOM 2 VISION+ Wi-Fi network connection and scan for the next available connection. Example: For the Samsung Note 3, carry out the following procedures to solve this issue. Tap Settings -> Wi-Fi, and then tap the "Menu" button. Select "Advanced" then uncheck the "Auto network switch". You might see a warning that indicates the Internet connection is unstable but just ignore this message.

3.10 Usage tips for the App used on multiple mobile devices.

During flight, if you use the App on multiple mobile devices, please turn off the App on the first mobile device, and then turn on the App on the second one to ensure the App can work normally on the second mobile device.

3.11 How to land the aircraft smoothly in a better way?

First pull the throttle stick position down to lower than 5%, then execute the CSC command to stop the motors.

3.12 Why the discharge times of a new battery not at zero?

A battery aging test is performed prior to delivery which affects the discharge time of the new battery. This is why the discharge time of a new battery is not zero. The battery is okay to use.