

This manual contains important safety precautions and information of correct use. Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.


Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart
- Operation keys do not respond properly.
- The device shows  on the lower right corner.

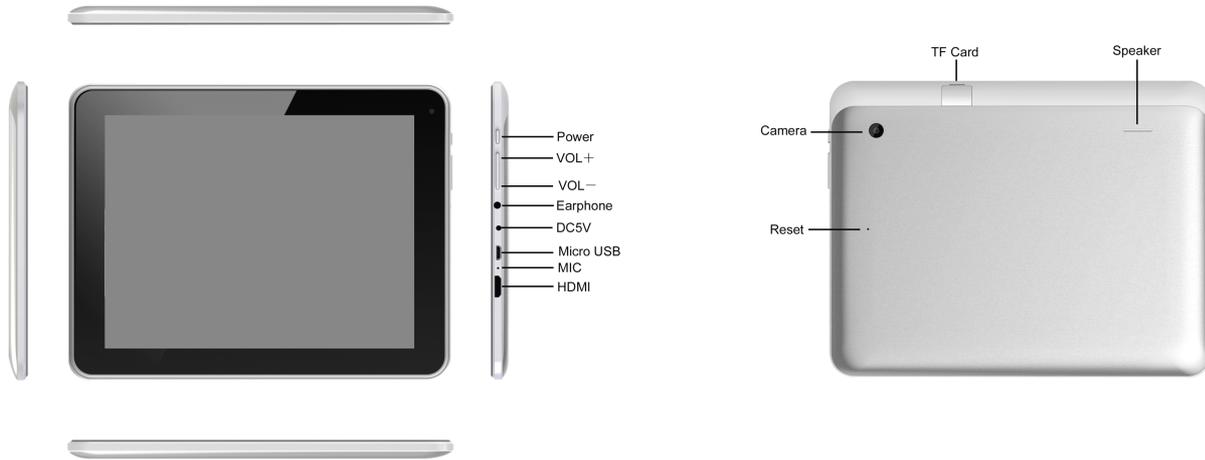

Important Notice

- If the device is freezing or stuck, press the reset button(a small hole) or long press power button for 7 seconds.
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

Caution:

- For charging, be sure to use the power adapter (DC5V) that is provided in the package, otherwise, the device may be not work.
- The device is equipped with high performance processor. It may heat in case of using long or while charging.

1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.

Short press power button to turn on/off the screen (Standby mode, refer to 3. below)

2. Desktop


After turning on the device, desktop displays with shortcut icons and arrow icon at the right side



3. Standby mode(Screen off)/Unlock the screen


Short press the power button to turn on/off the screen (Standby mode on/off)

After standby mode , slide the lock icon in order to unlock the screen.

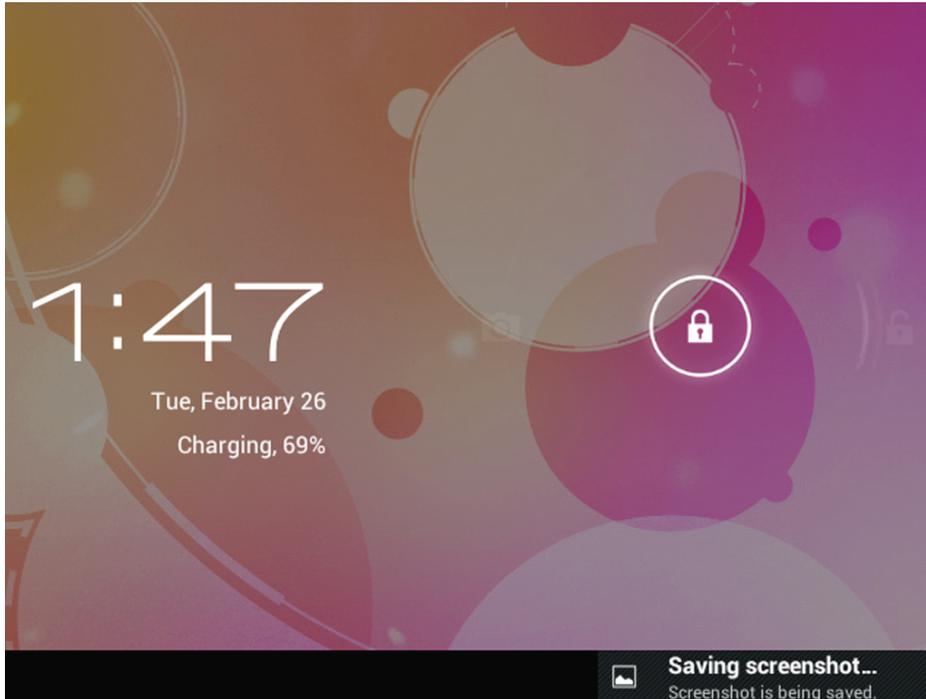

4. Wallpaper Settings

On the desktop, long press desktop and select one of categories the wallpaper, then choose one picture as wallpaper

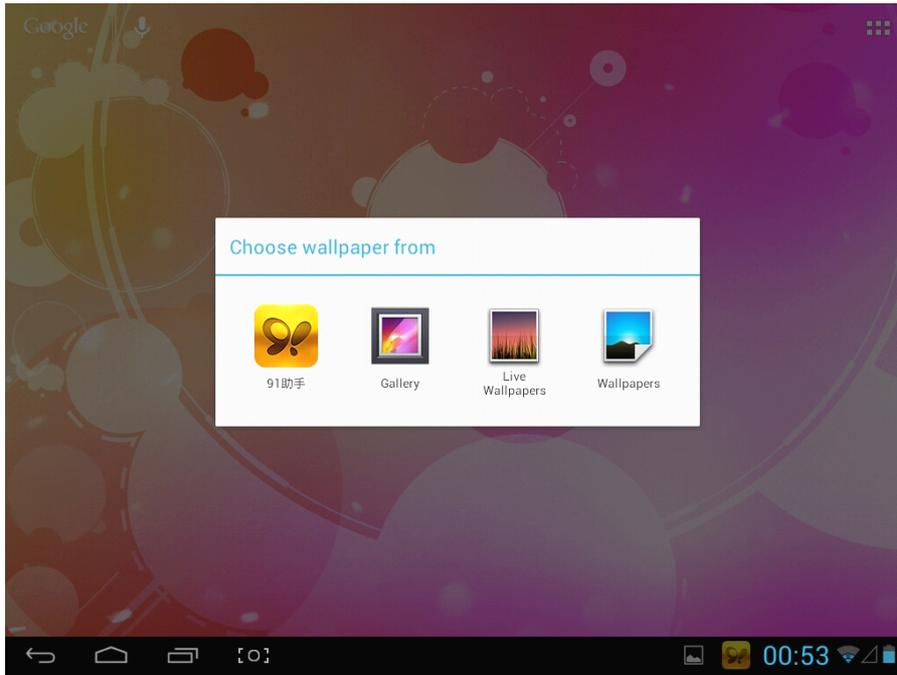


5. Desktop Shortcuts Icon Settings:

Press the menu button on the desktop enter into Apps, then Long press your desired APK icon and put it on the desktop.



6. Widgets:

Press widgets and press your liked icon to put it on the desktop

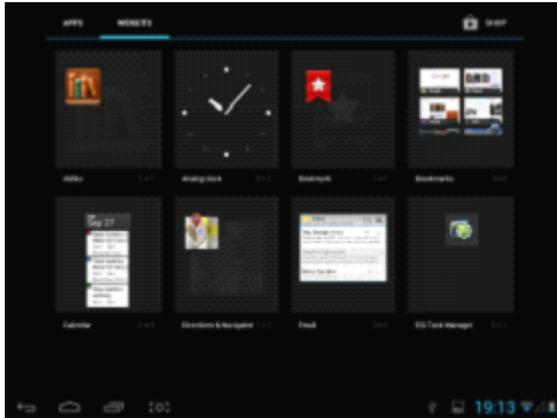

7. System Settings:


Press menu icon on the desktop to go into app, then select setting, then you can set each setting you liked




- ◆ **Wifi:** slide on/off button to connect or disconnect
Slide Wi-Fi to on, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.




- ◆ **Data Usage:** Display the device data usage

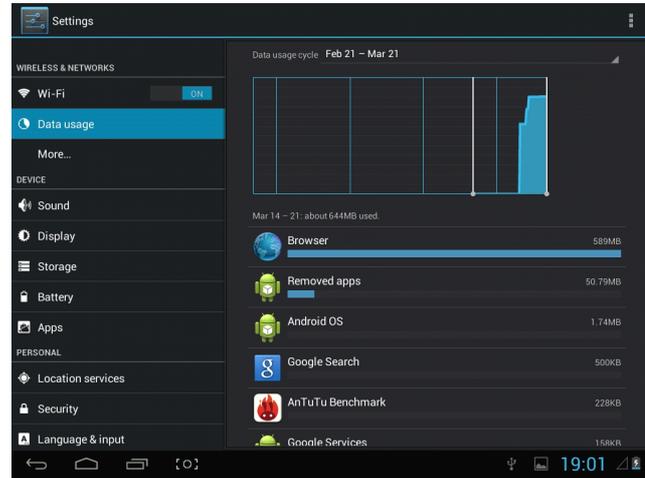


- ◆ More: you can set whether need airplane mode or not, VPN, mobile networks and 3G support list

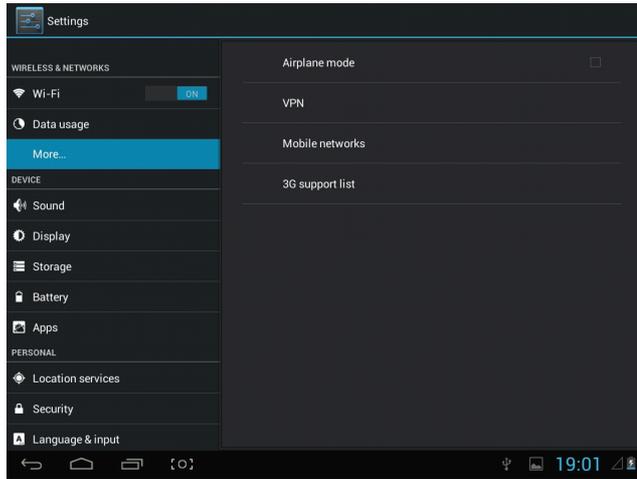


- ◆ Sound: set Volumes, vibrate when ringing, default notification, Touch sounds, screen lock sound, vibrate on touch

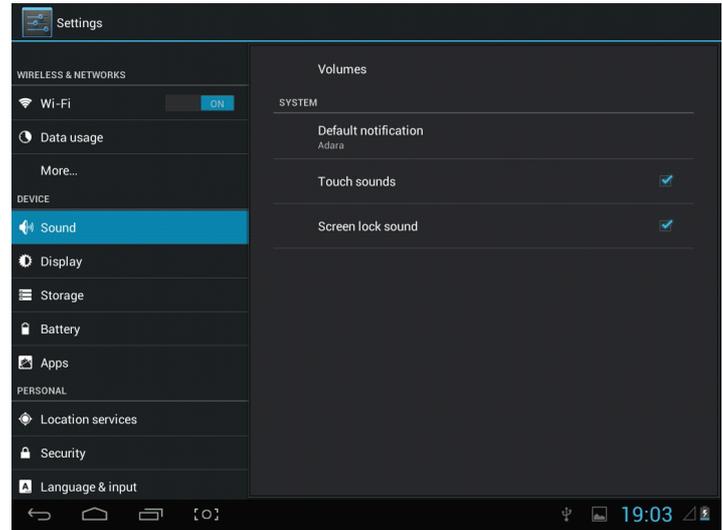


- ◆ Display: you can set Brightness, wallpaper, sleep time, font size and TV out (HDMI & output screen size)

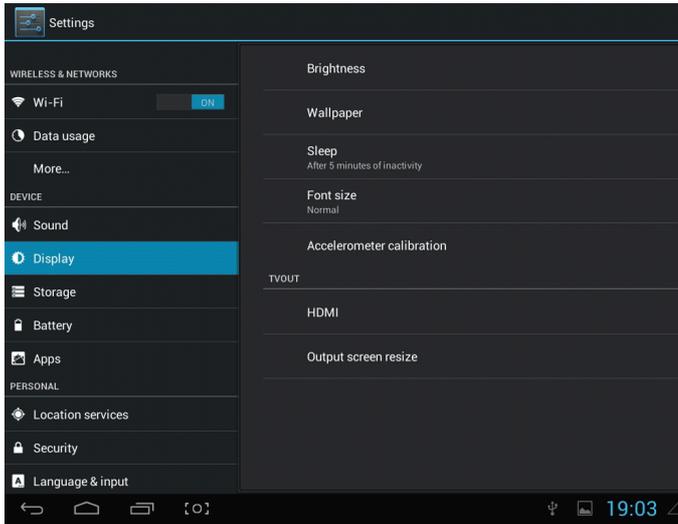

- ◆ Storage: you can check used storage and available storage

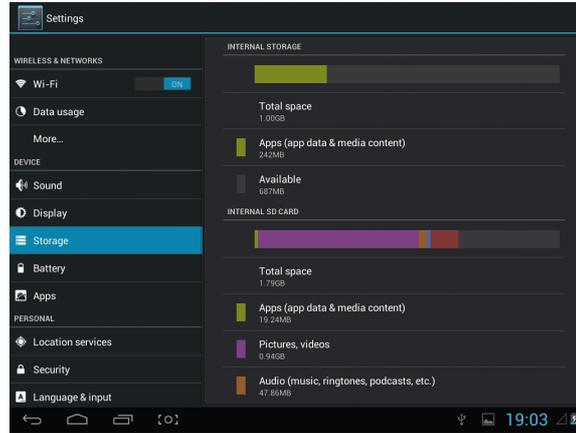

◆ Battery: Shows the battery usage status

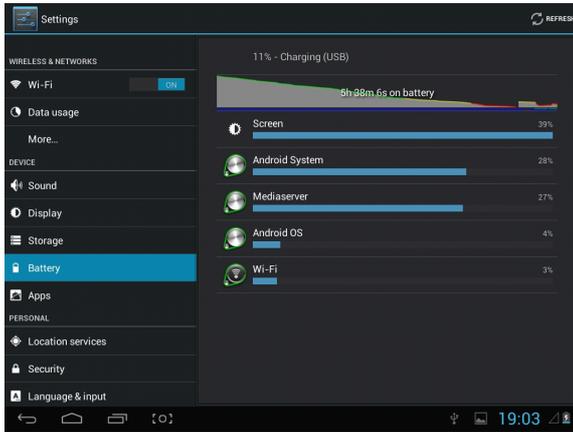


Manage downloaded or running applications.
View and control currently running services.



◆ App: All installed application are listing.




Press Uninstall to uninstall the selected application.

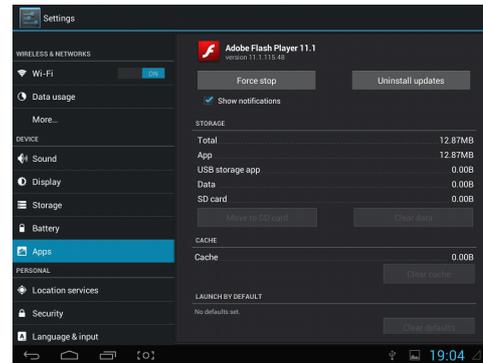

◆ Location services: Google's location service, location & google search

Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

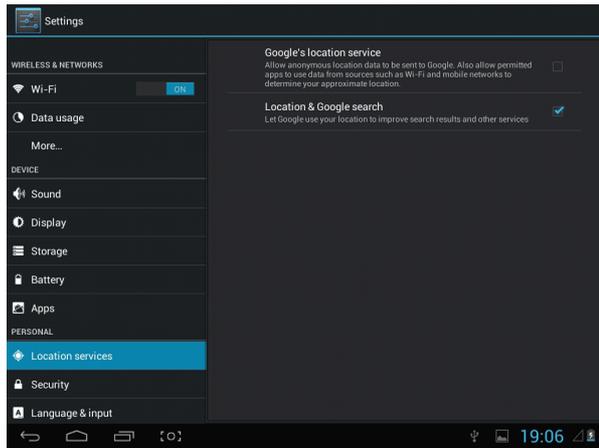

◆ Security

screen lock: None, slide, face unlock, pattern, pin, password

Owner info


Make password visible

Device administrators

Unknown sources: allow installation of apps from unknown sources




Trusted credentials: display trusted CA certificates

Install from SD card – Install certificates from SD card.

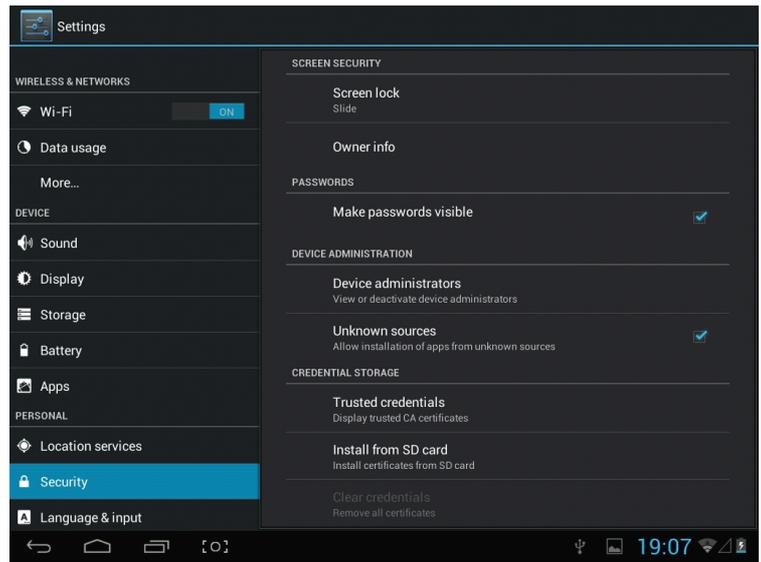


- ◆ Language & input: choose language you like and input
Keyboard & input method – Change keyboard & keyboard settings.


Default input is English Android keyboard (AOSP)

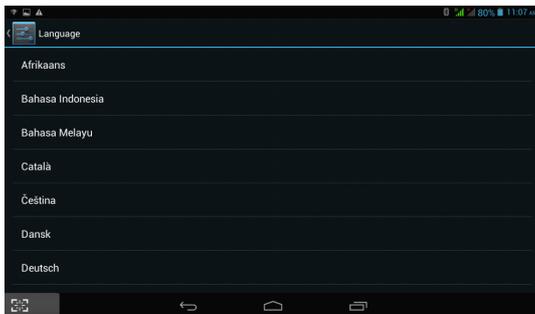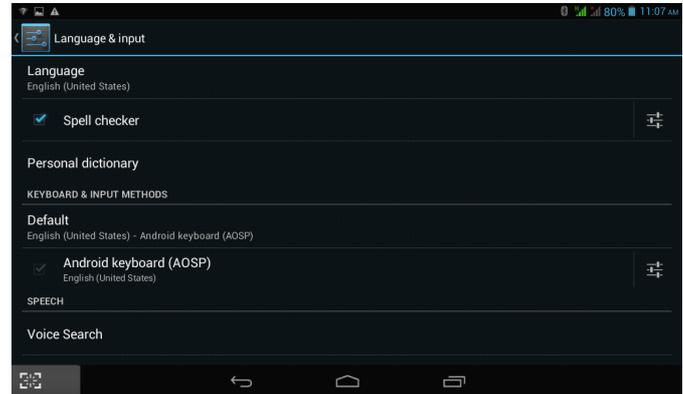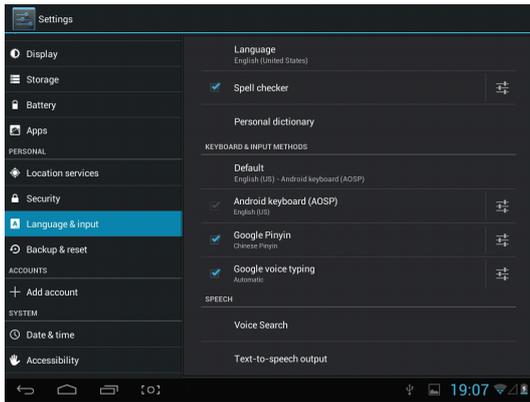


- ◆ Backup & reset : backup data and factory data reset

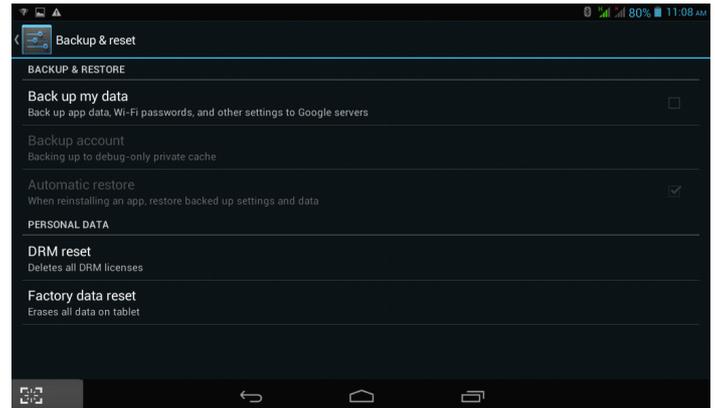


- ◆ Add Account: Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

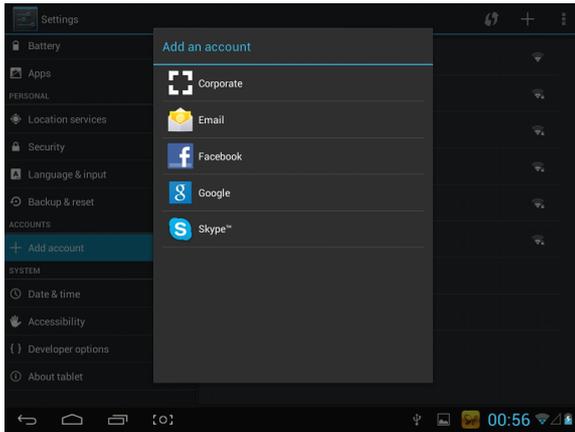

- ◆ Date & time: You can set date and time

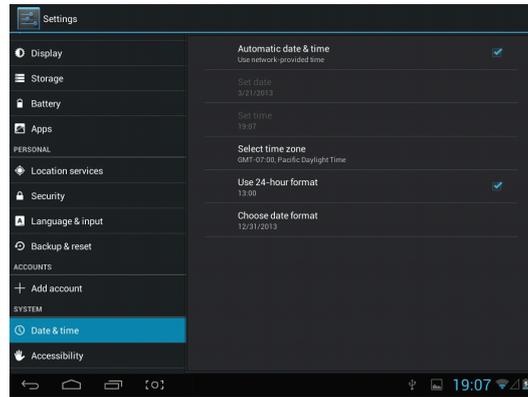


- ◆ Accessibility: Large text, auto-rotate screen, speak password, text-to-speech output, touch & hold delay, enhance web accessibility, enable quick boot, system performance

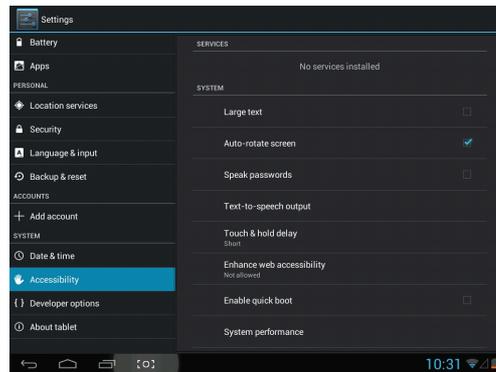


◆ Developer options

Set options for application development

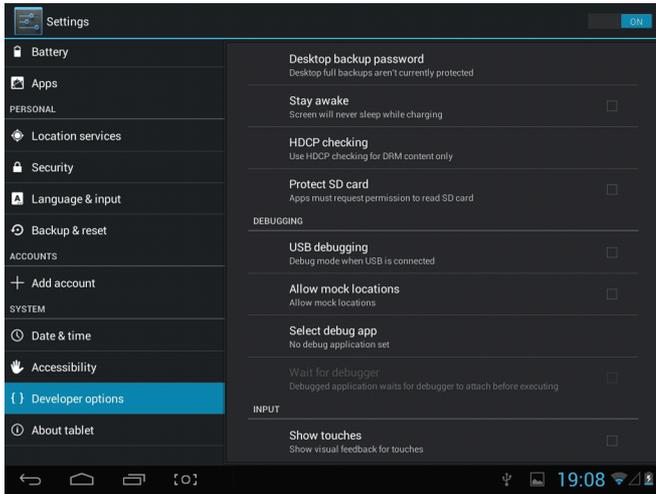



◆ About tablet: status, legal information, model No., Android

Version.,kernel version and build number .etc

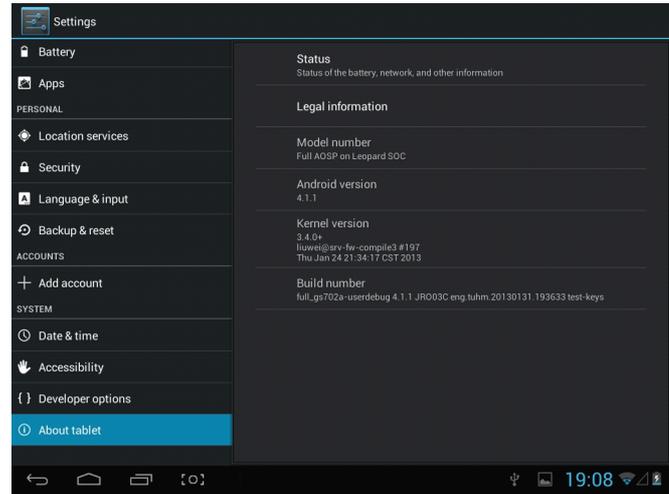

How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC, The device will entry USB storage interface

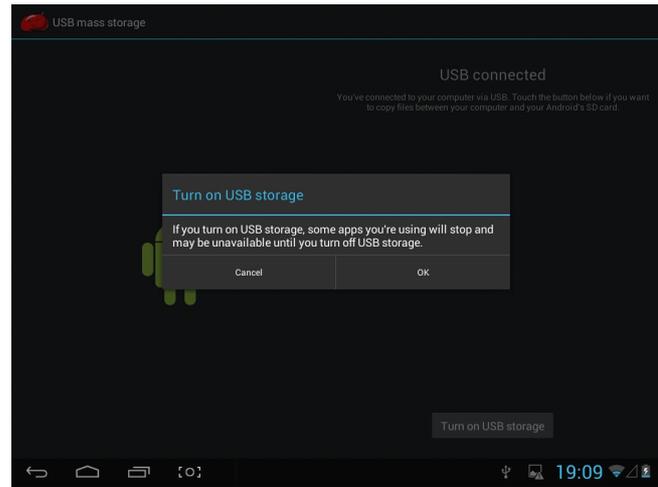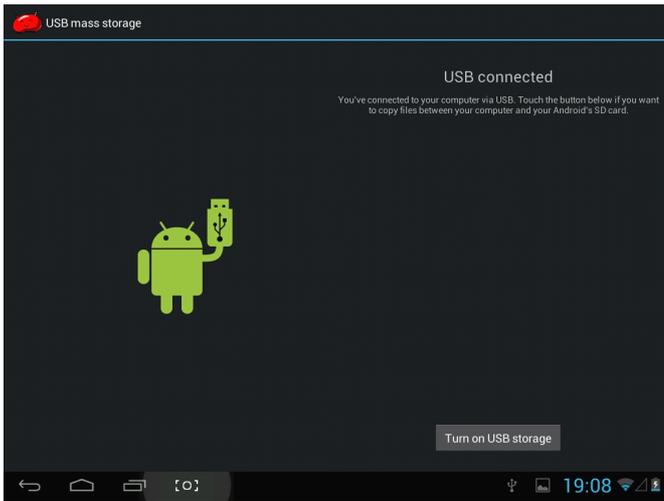

select “Turn on USB storage”. Pop-up a window and Press “OK” The device is recognized at Explorer of the computer. Now you can use it as an external storage.

How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “play store” and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

1. with your computer, search applications file(.apk)that you want to install into the device
2. download the file(.apk) on the computer
3. Connect the device with your computer.
4. Copy the apk files from computer to the device:
See above [How to connect/disconnect the device with/from the computer.
5. open “File explorer” and choose the apk file that was copied into the device, then install it & follow the instruction on the screen

Note:

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.

Specifications:

System	Operation System	Google Android 4.1.3 Jerry Bean+Linux3.4
	Language	Multi-Language
	CPU	Action ATM7029 Quad-Core, ARM Cortex A9 family CPU@1.2GHz
	GPU	Customized Vivante GC1000 multi-core, OpenGL ES2.0, OpenVG1.1
	Memory	RAM 1GB DDR3
	Nand Flash	8GB
	Storage Extend	4GB-32GB micro SD/TF Support
	Display Screen	8inch TN LCD G+G
		1024*768 Pixels
	Touch Panel	Multi-touch Capacitive TP
	I/O interface	1*DC 5V Power port
		1*Micro USB
		1*Micro SD/TF Card slot (Up to 32GB)
		1*3.5mm stereo earphone jack
		1*HDMI (1080P) Port
Speaker	built-in speaker 8Ω/1W	
MIC	built-in MIC	
Camera	Front 0.3M pixels/ Rear 2M pixels	
G-Sensor	All gravity induction	
WIFI	802.11 b/g/n	

Function	3G	support external USB 3G Dongle, EVDO/WCDMA	
	HTML5	support	
Format	Audio player format	MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,APE,3GP,WAV	
	Video Player format	Mpeg1, Mpeg2, Mpeg4 SP/ASP GMC, XVID, H.263, H.264 BP/MP/HP, WMV7/8, WMV9/VC1 BP/MP/AP, VP6/8, AVS, JPEG/MJPEG up to 1080P 60fps	
	Picture format	JPG, JPEG, GIF, BMP, PNG	
	3D Ebook format	TXT, EPUB, PDF,WORD,EXCEL, POWERPOINTS	
Internet	Browser	Opera, Sky Fire, Dolphin	
	online entertainment	Support Online video, online TV, online Movie, Online Music, Online Radio.	
	Office software	WORD, EXCEL, POWERPOINT, PDF, TXT	
	Games	3D Game can be supported by internal	
	Extend	There are more than 200 thousands kind of free software in google market	
Others	Power Adapter:	Input:AC100-240V.50-60HZ, Output:DC5V/2A	
	Battery:	3.7V 4500mAh polymer battery	
	Color	Black/Silver	
	Gift box	23.5cm*18.5cm*6.5cm	
	Accessories		power adapter with UL certificate
			USB cable
		USB OTG	

		user manual
		Neutral box

FCC Warning Statement

FCC Cause

any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.