


Setup Power

Connect Power Adapter

Plug the included AC adapter into the standard AC power outlet to power the KARAOKE MACHINE. Connect small end to DC INPUT jack of main unit.

After adapter connection, Press the POWER button to turn on / off the Karaoke Machine.

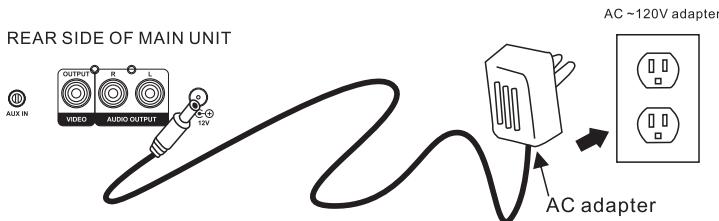


Connect Ext. Device & Sound From Main Unit Speaker

AUX IN (LINE In / AUDIO In)

To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable.

1. Connect a 3.5 mm Auxiliary Cable to the AUX IN jack in the back of unit and to the Audio Output or Phones on the audio device you wish to play.
2. Rotate the FUNCTION selector of Karaoke Machine to AUX-IN/MP3 position.
3. Turn on both units.
4. After the connection, the external device will sound from speakers of your unit.

Please note:- If not use the this function, please unplug it.

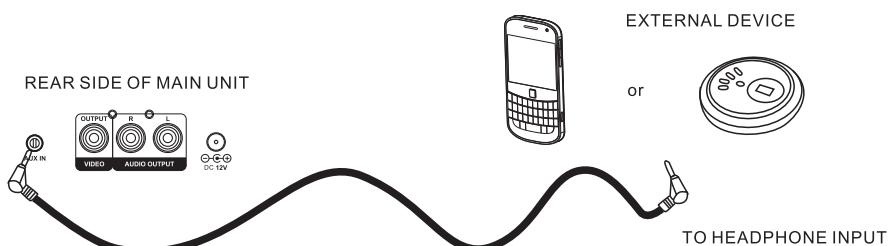

Loading a Disc

1. Connect power (follow SETUP POWER page) .
2. Pull the CD DOOR OPEN AREA to open the CD DOOR.
3. Place a CD+G or CD into the CD compartment.
4. Close the CD DOOR.. Press the POWER button to turn on unit.
5. Rotate FUNCTION selector to CDG (DISC) position.

Playing a Disc

1. Follow the instructions for Loading a Disc.
2. Press the PLAY/ PAUSE button to play the loaded disc.
3. Rotate the MASTER VOLUME dial to select the sound level.
4. To temporarily stop playing, press the PLAY/PAUSE button once.
To resume play, press the PLAY /PAUSE button one more.
5. Press **►►1** / **◀◀** buttons to skip between next or previous tracks.
6. Hold the **►►1** / **◀◀** buttons to fast search through the track.
Please note:- The fast-forward / fast-rewind functions will not work for CDG discs.
7. Connect the VIDEO OUT jack to TV, the lyrics text will show on TV(CD+G disc only).
8. Press the STOP button to stop playing.

Repeat Function

1. Follow the instructions for Loading a Disc and Playing a Disc.
2. Press the REPEAT button once to **►1** . The unit will play the current track repeatedly.
3. Press the REPEAT button twice to **►A** . The unit will play the entire disc repeatedly.
4. To cancel the repeat function: press the REPEAT button repeatedly to **►X** or press the STOP button twice to stop.



Programming a Disc up to 20 tracks

1. When disc playing, press the STOP button to stop mode.
2. Press the PROGRAM button and the program (PROG SET) indicator will light.
3. Press the **►►1** / **◀◀** buttons to select the track from the loaded disc you wish to play first.
4. Press the PROGRAM button to confirm.
5. Repeat steps 3 and 4 to program to play in a specified order.
6. Press the PLAY button to start the program playing.
7. Press the STOP button twice to cancel a program.

Connecting Bluetooth to Your Smartphone / Tablet

1. Press the POWER button to turn on unit, rotate the FUNCTION selector of Karaoke Machine to  (BLUETOOTH mode) position to connect your external Bluetooth device .When in Bluetooth mode, the screen shows : "Bluetooth (No Connection)".
2. On your Smartphone / Tablet, turn on Bluetooth and enable device scanning.
3. When unit shows GQ743 on the Bluetooth scan, select it to connect it to your device.
 - A. If they are paired, the screen will show: "Bluetooth (Connected)" and you will hear a "DiDiDi" sound.
 - B. If they are not paired, the screen will show : "Bluetooth (No Connection)".

Notes: If cannot connect, press PAIRING button to reconnect again.
4. When both devices are successfully connected, now you are ready to play music wirelessly from your device.
5. Press the PLAY button of external Bluetooth device to start music playback.
6. Press the NEXT / PREV of Karaoke Machine or external Bluetooth device to switch between music tracks.

Connecting to a Television / DVD/ Ext.Device

Composite Video Output



Require an RCA video cable.

1. Plug the included RCA audio/video cable into the VIDEO OUT and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing CDG discs, the Karaoke Machine will output written lyrics to the connected television

RCA Audio Output

Requires an RCA audio cable.


1. Plug the included RCA audio/video cable into the AUDIO OUT and a RCA audio input on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing the disc, the Karaoke Machine will output audio to the connected television or stereo system. Use the external device to control the output sound level.

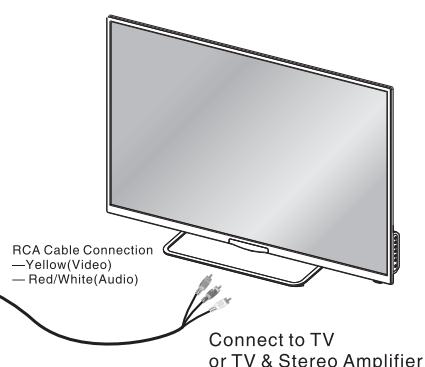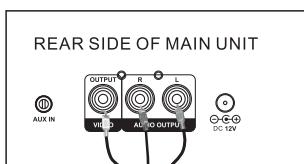

Using Microphone

Requires a microphone (included) .

1. Plug the microphone (see below figure) into the MIC 1 INPUT or MIC 2 INPUT.
2. Slide the ON /OFF switch of MICROPHONE,
3. Use the MIC VOLUME dial of Karaoke Machine to adjust the volume of audio sound from the microphone.

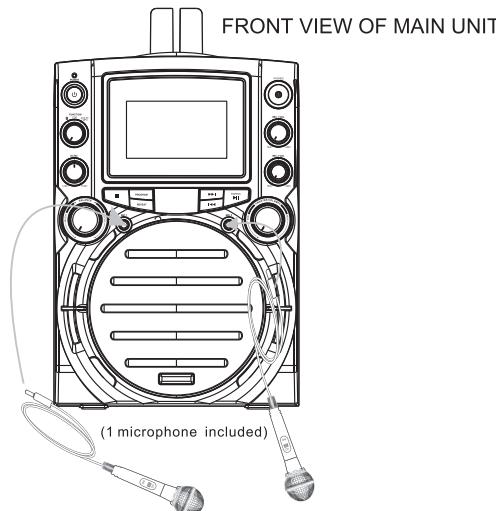

Using ECHO/ BALANCE

ECHO

Adjust the ECHO dial of Karaoke Machine to enhance your voice for a concert hall effect.


BALANCE

Rotate the BALANCE dial of Karaoke Machine to hear the music and vocals or to hear the music only.

Notes: To use the BALANCE dial, a CD+G disc must be used. Otherwise it will operate as a standard BALANCE control.

Connect the Headphone or Earphone

Connect low impedance 3.5mm (max. 32 ohm) stereo headphone / earphone (not include)to PHONES jack of Karaoke Machine. The speaker is automatically disconnected when the headphone / earphone plug in.

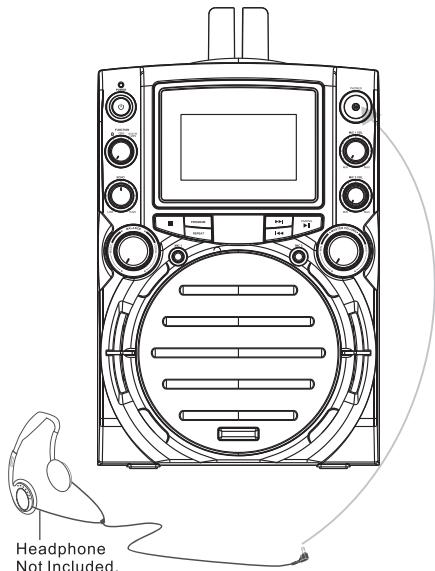

Specification

AC Power Adapter Connect DC Jack	Use included adapter AC~ Input 120 / 60 Hz , DC Output 12V, 1500 mA
Bluetooth	For Music Share V2.1
CD Player	Support CDs and CDG disc 4.75 / 3.25 inch
Master Power Output	5W x 1 RMS
Loud Speakers Spec	4 Inch, 10 Watt , 8 Ohm



Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

Troubleshooting

Symptom	Possible Cause	Solution
GENERAL		
No sound	Power cord disconnected or loose.	Check the connection or the power cord.
	Function mode in wrong position.	Using the FUNCTION knob (at the front panel), select the proper function as required.
KARAOKE		
Feedback is heard when singing	Microphone is too close to the unit or MIC volume is too high.	Move Microphone away from the unit or decrease MIC Volume.
Words do not appear on TV screen	Using non-CD+G disc.	Use a CD+G disc.
	Video cable connected improperly to TV.	Check connection.
	Source is not selected on TV.	Change source to match the location of Karaoke connection to TV(i.e VIDEO1, CHANNEL1 etc.).
	Disc dent or scratches	Wipe disc with cloth or use another disc.
Microphone has no sound	Microphone not turned on.	Turn on the microphone.
	Microphone volume turned all the way down.	Turn the Microphone volume up.
	Microphone connection loose.	Insert the Microphone plug totally to the MIC jack.
COMPACT DISC PLAYS		
CD skips while playing	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
CD player will not play	Disc format not compatible.	Only reads CD or CD+G.
Bluetooth		
No pairing	In the wrong mode	Set the Function knob to Bluetooth mode.
No music	Unit set in AUX IN mode, or no connection	Set the Function knob to Bluetooth mode, make sure the Bluetooth is connected
Music too low	Volume setting too low on your smart device	Turn the volume up on your smart device and the unit volume,too

KARAOKE USA

1185 Gooden Crossing, Largo,

Florida, 33778, USA

www.KaraokeUSA.com

1-800-568-2000 ▪ 727-209-1313