 




iDance®

XD25 Instruction Manual

PARTY BOX

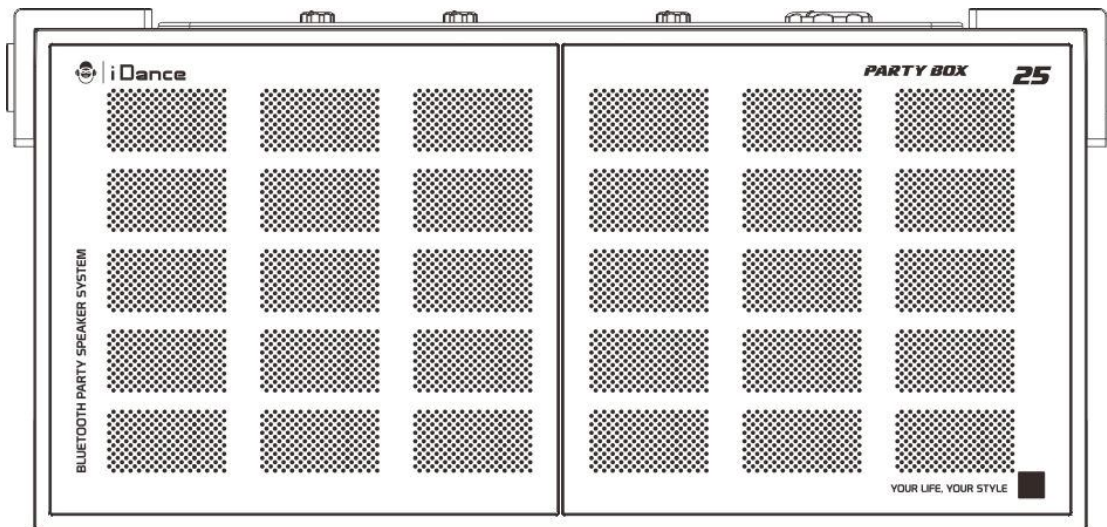

 
Thank you for purchasing iDance Audio System

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATION THIS UNIT AND
RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

WHAT'S IN THE BOX

Contents


1. iDanceXD25

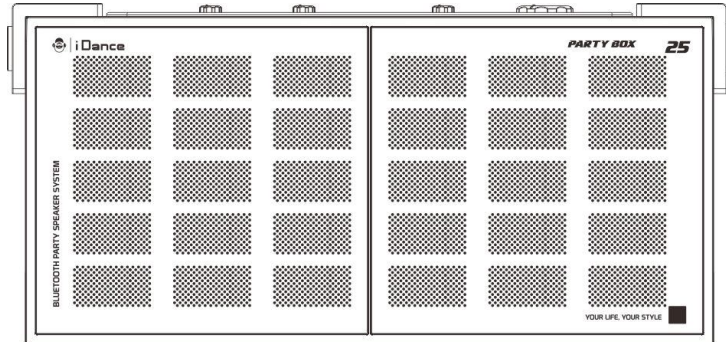

2. AC-DC Power Adapter



 3. Instruction Manual

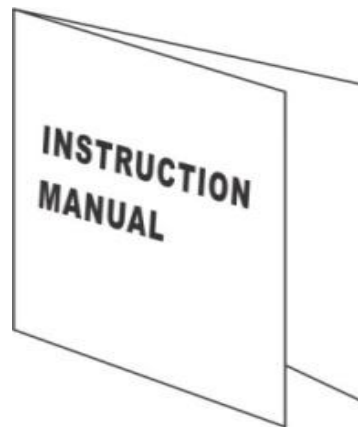


OVERVIEW

The iDanceXD25 is a Wireless all-in-one DJ Party box System with an integrated mixer, which accepts microphone, guitar, line-in audio, and stereo Bluetooth wireless audio up to 10 meters. Only a few simple steps to pair your device!!


The XD25 is perfect for DJ, house / pool / yard party, or for karaoke applications. Take your sound with you on the go!!

Thank you, and congratulations on your choice of iDance's XD25!

 WARNING

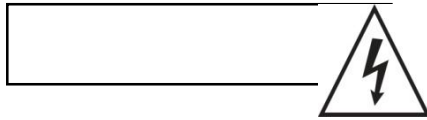

 The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.

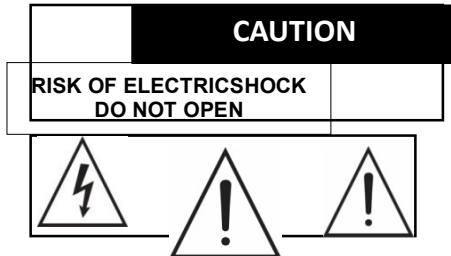

The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons

Class II equipment symbol



This symbol indicates that the unit has a double system.

- **NOTES:** Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.
- **NOTES:** This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTES : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be

used in portable exposure condition without restriction.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions. Heed all warnings.
3. Follow all instructions.
4. Do not use this apparatus near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings.
7. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety of the polarized or the grounded-type plug. A polarized plug has two blades with one wider than the other. A grounded type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Portable Cart Warning
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.
15. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
17. The MAINS plugs used as the disconnect device, which shall remain readily



operable.

FEATURES


- Bluetooth wireless stereo audio streaming
- Support A2DP Profiles for most smart phones / laptops
- AuxOut output (3.5 mm Stereo Mini Jack)
- Audio Out output (RCA Jack)
- Aux In output (3.5 mm Stereo Mini Jack)
- Microphone input jack(6.3mm Jack)
- Front panel with Disco light effect
- USB port for mobile battery charging
- Power Adapter (Included) for main power operation

CONTENTS


WHAT'S IN THE BOX	1
OVERVIEW	1
WARNING	2
IMPORTANT SAFETY INSTRUCTIONS	3
FEATURES	4
CONTENTS	4
CONTROL LOCATION 1.1	5
CONTROL LOCATION 1.2	6
GENERAL OPERATIONS	7
TROUBLESHOOTING	8
SPECIFICATIONS	8

CONTROL LOCATION 1.1

 
TOP VIEW

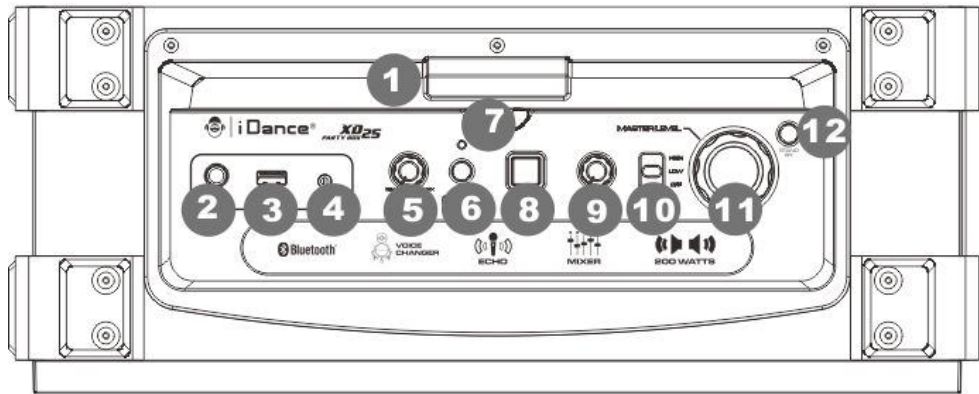

FRONT VIEW

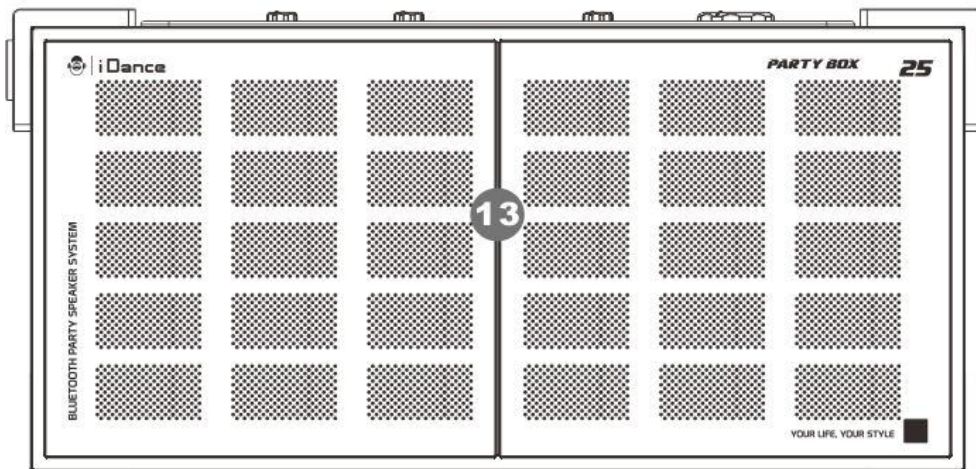 

SIDE VIEW

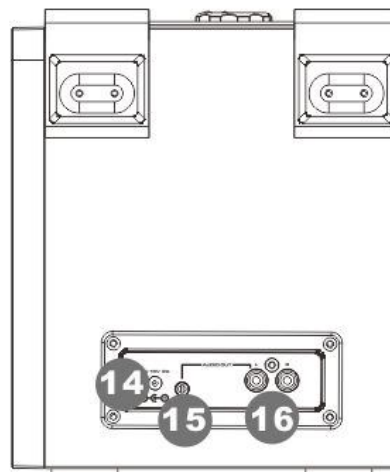 

CONTROL LOCATION 1.2

1. **DEVICE CRADLE**
Place your tablet or smartphone there.
2. **MIC INPUT (1/4" Jack)**
6.3mm jack for connecting microphone.
3. **USB Port (USB CHARGER)**
Connect a CHARGER output to external device battery charging 5V1000mA. (Don't connect to computer / other adapter USB output port).
4. **AUX IN (Line Input / Audio Input) Input Jack**
Connect a music device (MP3 player etc.) to this socket with a 3.5mm mini jack audio cable to play through **XD25**.
5. **ECHO Button**
Turn to adjust the echo sound effect when microphone connected.
6. **BLUETOOTH Button**
Hold to reconnect Bluetooth pairing connection.
Press the button to play / pause the music.
7. **BLUETOOTH Indicator**
The indicator will light when bluetooth pairing successful. The indicator will be flash when bluetooth start pairing now.
8. **LED ACTIVATE Button**
Press the button to turn on / off panel disco light show.
9. **MIC LEVEL Button**
Turn this knob to adjust the microphone volume sound level.
10. **VOICE CHANGER Switch**
Change your microphone voice into beast (LOW) or kid (HIGH) by select this switch. Resume to normal speak by select this switch to OFF.
11. **MASTER LEVEL (VOLUME)Knob**
Rotate to increase or decrease the master volume sound level.
12. **STANDBY Button**
Press to turn ON the **XD25** or put the **XD25** into standby mode.
13. **LED Light Show Panel**
Show LED disco light show.
14. **DC IN Jack**
Please only connect the included power adapter to avoid any damage to **XD25**.
15. **AUDIO Out (Line Output / Aux Output) RCA Jack**
Use RCA cable to connect external PA system to this master output for bigger sound. The sound output level controlled by **XD25** volume control .
16. **AUX Out (Line Output / Audio Output) 3.5MM Jack**
Use 3.5mm Aux cable to connect external PA system to this master output for bigger sound. The sound output level controlled by **XD25** volume control

GENERAL OPERATIONS

 
Power Adapter Connection

Connect small end of adapter to main unit and plug the supplied adapter into standard AC wall socket.

Press the **STANDBY** button to turn on power. Press again turn unit to standby.



SIDE VIEW OF MAIN UNIT

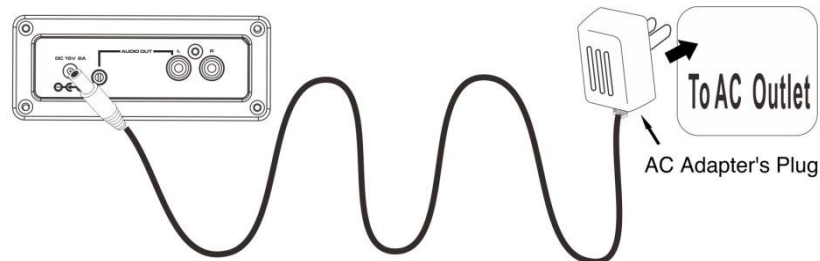


Notes:

- If the adapter does not fit properly, turn it over and again. Do not force AC plug.
- Remove the power adapter when the unit not operation or unused for long periods of the time.

Connecting Bluetooth to your Smartphone | Tablet

 1. Press the **STANDY** button to turn on unit, hold the **BLUETOOTH** button to connect your external Bluetooth device.
2. On your smartphone / Tablet, turn on Bluetooth and enable device scanning.
3. When **XD25** shows on the Bluetooth scan, select it to connect it to your device.
4. When both devices are successfully connected, you are ready to play music wirelessly from your device.
5. Press the **PLAY** button of external Bluetooth device to start music playback.
6. Press the **NEXT/ PREV** of **XD25** or external Bluetooth device to switch between music tracks.
7. Hold the **BLUETOOTH** button to reconnect other Bluetooth device.

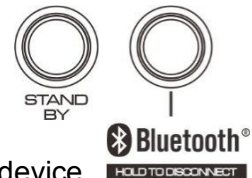

Power Management Function:

Unit will automatically go to standby mode after 15 minutes without sound output or operation. To resume operation, simply press the **STAND BY** button to turn on unit.



TROUBLESHOOTING

If you have followed the instructions and are having difficulty operating the unit, locate the

PROBLEM in the left column below. Check the corresponding POSSIBLE CAUSE AND SOLUTION column to locate and fix the problem.

PROBLEM	POSSIBLE CAUSE AND SOLUTION
Noise on speaker output when microphone is connected and turn on XD25	Make sure your microphone or microphone cable is in good condition, grounded and shielded. Internal gain of voice processing could cause vibration from poor ground noise.
Bluetooth cannot connect to XD25	<ul style="list-style-type: none"> ■ Make sure no other device from your friend or family is connected to XD25. When XD25 Bluetooth is connected, press BLUETOOTH button would stay ON. So make sure XD25 indicating Bluetooth is ready to connect. Also make sure your smartphone / tablet is located close to XD25 less than 2 meters when pairing. ■ Hold the BLUETOOTH button to reconnect again.
Intermittent Bluetooth music streaming	<p>The wireless Bluetooth distance of XD25 is about 7-10 meter in open area. Below conditions could block you Bluetooth signal and please ensure you would get rid of those:</p> <ul style="list-style-type: none"> ■ Metal protection on case for your phone/tablet ■ Metal or wall is blocking in between your phone/tablet and XD25 ■ Another Bluetooth device is working close to XD25
No sound on selected source	<ul style="list-style-type: none"> ■ Ensure that the XD25 is powered ON ■ Check the master volume on the XD25 ■ Check the volume level on paired Bluetooth device ■ Remove the power adapter / connection cable and reconnect again.

SPECIFICATIONS

AC ADAPTER	AC Input :AC~ 100-240V 50/60Hz DC Output = 15V , 2000mA
USB Output	DC Output = 5V, 1A
SOUND SOURCE INPUT	Bluetooth, Aux in, Microphone
Total Harmonic Distortion	Below 10%
Signal to Noise Ratio	Over 41dB
Master Power Output	13W X 2RMS
Speaker	4 Inch 8 Ohm 20W

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.