 
 


Introduction

 
INDICATOR

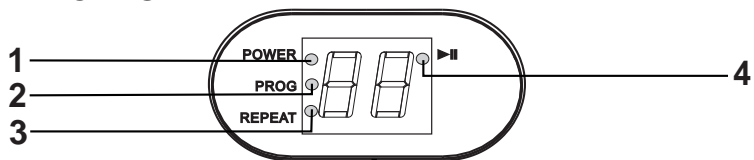

FRONT VIEW

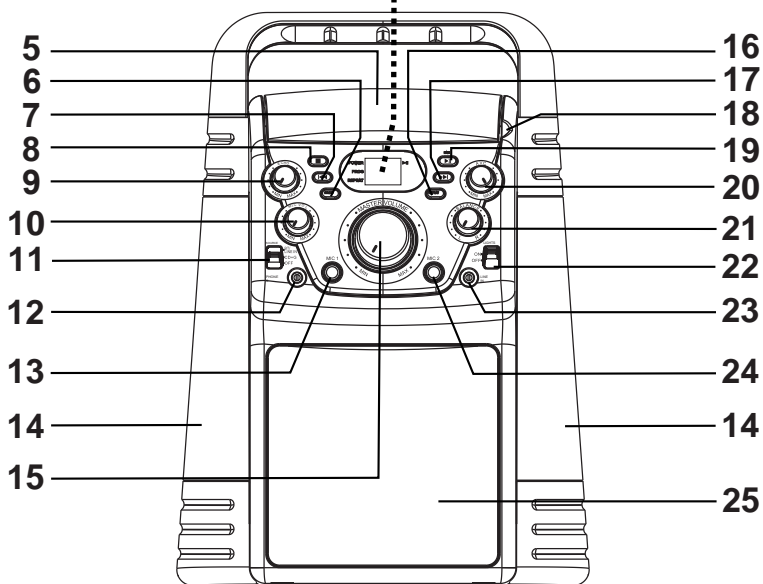


REAR VIEW

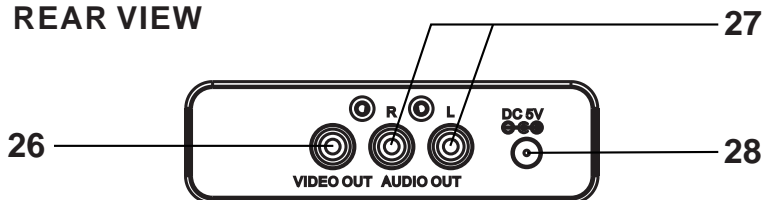

Location Controls

1. **POWER Indicator** : Will be light when unit turn on.
2. **PROG (Program) Indicator** : PROG (Program) Indicator will be light / flash when program mode
3. **REPEAT Indicator**: Will be flash / light when REPEAT function turn on.
4. **PLAY / PAUSE Indicator** :Will be light / flash when disc playing.
5. **CD Door** : Open the door to install disc
6. **PROG (Program) Button** : Press to program a loader disc to play tracks in specified order.
7. **SKIP/SEARCH(Back)**: Press to skip previous tracks on loader disc. Press and hold to fast-rewind the current track on a loader disc.
8. **STOP Button** : Press to stop a disc playing
9. **ECHO Dial**: Rotate to adjust echo sound effect.
10. **MIC VOLUME Dial** : Rotate to adjust the volume from the MIC inputs.
11. **SOURCE** : Slide to select BT/ LINE IN , CD+G , OFF mode.
12. **PHONES Jack**: Connect to external headphone or earphone.
13. **MIC Inputs** : Mic 1 input jack
14. **WATER LIGHT** : When music sounding, the water lights will bounce up light.
15. **MASTER VOLUME Dial**: Rotate to adjust the main volume sound level.
16. **REPEAT Button**: Press repeatedly to set the current track or entire disc to repeat.
17. **SKIP/SEARCH(Forward)**: Press to skip next tracks on loader disc. Press and hold to fast-forward the current track on a loader disc.
18. **CD Door Open Area**: Use the location area to open the CD door.
19. **PLAY / PAUSE / PAIR Button**:
Press to play or pause a current track.
In Bluetooth mode, Press and hold to connect another BT device.
20. **AVC Dial**: Rotate to adjust the automatic voice control.
21. **BALANCE Dial**: Rotate the dial to select vocals or music only.
22. **WATER DANCING Selector**: Select the water dancing function on /off.
23. **LINE-IN (Aux in / Audio in)** : Connect to external device audio output.
24. **MIC Input** : Mic 2 input jack.
25. **SPEAKER** : Unit speaker location.
26. **VIDEO OUT Jack**: Connect to TV video input.
27. **AUDIO OUT (Line out / Aux out) Jack**: Connect to external device audio input.
28. **DC INPUT Jack**: Connect power adapter.



 
Placing Mobile Device



Install

Remove

   Install or remove the detachable cradle into the rear of main unit.

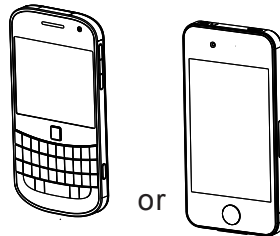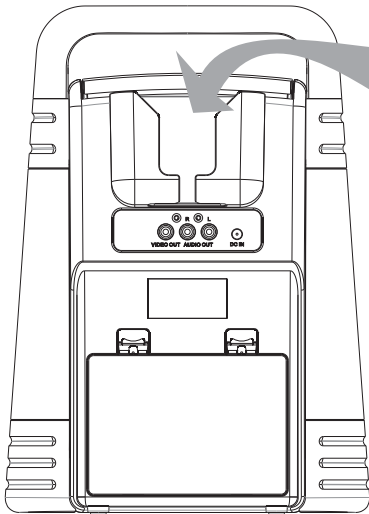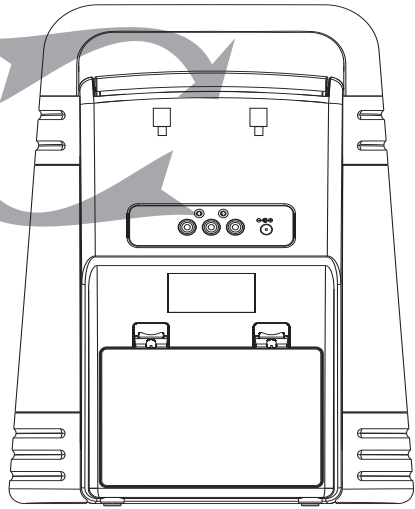


Placing the device vertical into the cradle

Setup Power

Connect Power Adapter

 Plug the included AC adapter into the standard AC power outlet to power the **KARAOKE MACHINE**. Connect small end to **DC INPUT** jack of main unit. After adapter connection, Slide the **SOURCE** selector to turn on unit and slide to off position to turn off.

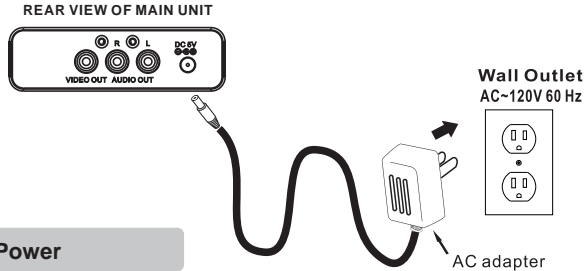


Connect Battery Power

Remove the battery compartment cover on the back of the unit by carefully pushing the two lugs down. The battery cover can then be lifted away. Fit the correct batteries (not included), referring to the polarity markings. Finally, replace the cover.

- For battery operation, unplug the adapter first.
- Batteries shall not be exposed to excessive heat such as sunshine, fire
- Be sure that the batteries are installed polarity correctly.
- Do not mix old and new batteries.
- Only same or equivalent type batteries as recommend are to be used.
- If not to be used for an extended period of time, remove the batteries.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery

 Battery :
USE SIX SIZE "C" or
UM-2 1.5V BATTERIES

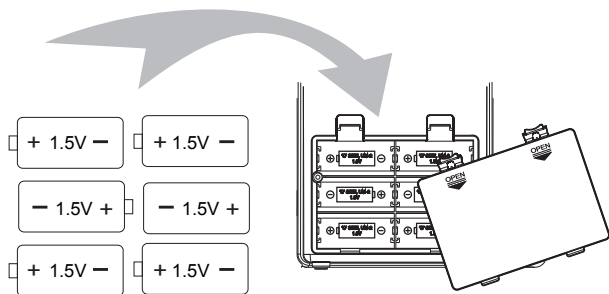

REAR VIEW OF MAIN UNIT

Using CD+G, CDs

Loading a Disc

1. Connect power (follow **SETUP POWER** page) .
2. Pull the **CD DOOR OPEN AREA** to open the **CD DOOR**.
3. Place a **CD+G** or **CD** into the **CD** compartment.
4. Close the **CD DOOR**.
5. Slide **SOURCE** selector to CD+G position.

Playing a Disc

1. Follow the instructions for **Loading a Disc**.
2. Press the **PLAY/PAUSE** button to begin playing the loaded disc. The **PLAY/PAUSE** indicator will light.
3. Rotate the **MASTER VOLUME** dial to select the sound level.
4. To temporarily stop playing, press the **PLAY/PAUSE** button once (**PLAY/PAUSE** indicator flash). To resume play, press the **PLAY/PAUSE** button one more.
5. Press **SKIP / SEARCH** buttons to skip between next or previous tracks.
6. Hold the **SKIP / SEARCH** buttons to fast search through the track.
Please note:- The fast-forward and fast-rewind functions will not work for CDG discs.
7. Connect the **VIDEOOUT** jack to TV, the lyrics text will show on TV.
8. Press the **STOP** button to stop playing.

Repeat Function

1. Follow the instructions for **Loading a Disc and Playing a Disc**.
2. Press the **REPEAT** button once and **REPEAT** indicator flash. The unit will play the current track repeatedly.
3. Press the **REPEAT** button twice and **REPEAT** indicator light. The unit will play the entire disc repeatedly.
4. To cancel the repeat function: press the **REPEAT** button repeatedly to off the **REPEAT** indicator or press the **STOP** button twice to stop.

Programming a Disc

1. When disc playing, press the **STOP** button to stop mode.
2. Press the **PROG** button and the program indicator will flash.
3. Press the **SKIP / SEARCH** buttons to select the track from the loaded disc you wish to play first.
4. Press the **PROG** button to confirm.
5. Repeat steps 3 and 4 to program up to 20 tracks to play in a specified order.
6. Press the **PLAY** button to start the program playing.
7. Press the **STOP** button twice to cancel a program.