




BEAUTY AND THE BEAST

SLIM/FLAT CD-G KARAOKE

ITEM. KO3-08121-FR

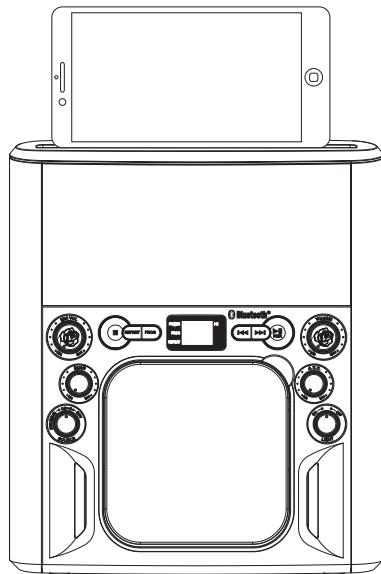

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH THE WIDE BLADE OF THE PLUG TO THE WIDE SLOT, AND THEN FULLY INSERT.
- **WARNING: To reduce the risk of fire or electric shock,** do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries. Only charge NiMH batteries.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should not be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIC: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR**

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plug, and the point where it exits from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, or if the power supply or plug is damaged, if liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help .

This device complies with part 15 of the fcc rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Inserted batteries should not be exposed to excessive heat such as that from sunshine or fire.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- The marking information is located at the rear or back of apparatus.
Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.

Feature / Included

Features


- CD player: Plays CD+G, CD, CD-R/RW Discs
- Flashing Lights **On The Top and The Handle**
- Bluetooth wireless stereo audio streaming
- Support A2DP Profiles for most smart phones / laptops
- Microphone Volume Controls
- Echo Control
- AVC (Auto Voice Control) Control
- Red LED display
- Microphone Jacks, 6.3mm x2
- Composite video output
- RCA audio output
- Line in jack 3.5mm (Aux input / Audio input)
- Built-in speakers
- Power: Requires AC power adapter or Batteries 6 x UM2

Included


- **Slim/Flat CDG Karaoke**
- Microphones
- RCA audio/video cable
- AC power adapter
- User Manual
- Bonus CD



Microphone

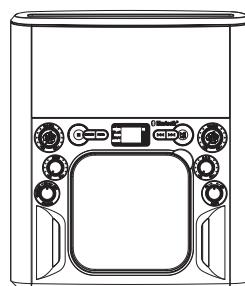

Slim/Flat CDG Karaoke

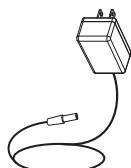


AC Power Adapter



User's Manual



RCA Audio/Video Cable


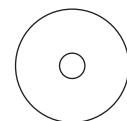


Bonus CD


Contents

Warnings and Precautions	1
Important Safety Information	2
Feature / Included	3
- Features	
- Included	
Contents	4
Location Controls	5,6
Display Indicator Message	7
Setup Power	8
- Connect Power Adapter	
- Battery Operation	
Connect Ext. Device & Sound From Main Unit Speaker	8
- LINE IN (AUX In / AUDIO In)	
Using CD+G , CDs	7,8
- Loading a Disc	
- Playing a Disc	
- Repeat Function	
- Programming a Disc up to 20 tracks	
Connecting Bluetooth to Your Smartphone / Tablet	10
Connecting to a Television / DVD / Ext. Device	11
- Composite Video Output	
- RCA Audio Output	
Using Microphones	11
Using AVC and ECHO / BALANCE	12
- AVC	
- ECHO	
- BALANCE	
Using Light Effect	12
Specification	12

Location Controls

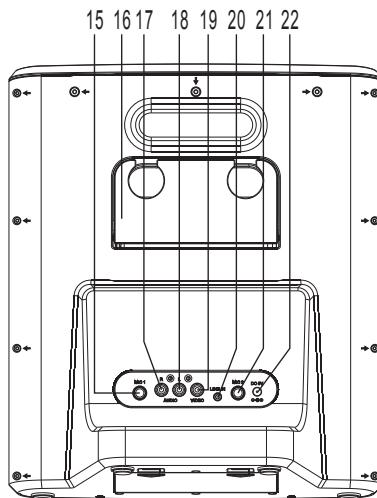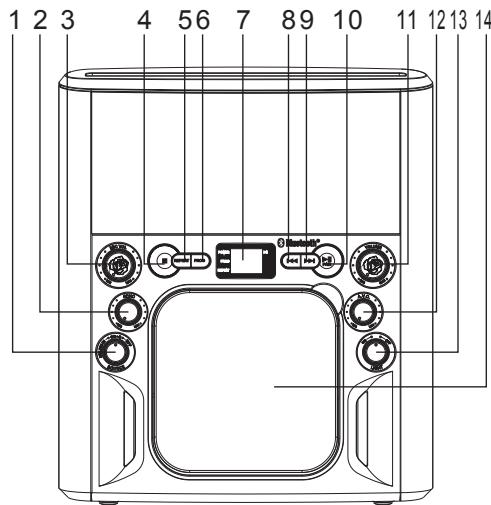

Location Controls

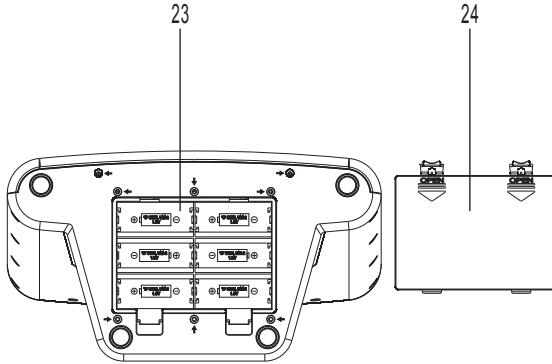


1. **SOURCE:** Rotate to select BT/Line in, CD+G, OFF mode
2. **ECHO Dial:** Rotate to adjust echo sound effect.
3. **MIC VOLUME Dial:** Rotate to adjust the volume from the MIC input.
4. **STOP Button:** Press to stop a disc playing.
5. **REPEAT Button:** Press repeatedly to set the current track or entire disc to repeat.
6. **PROGRAM Button:** Press to program a loader disc to play tracks in specified order.
7. **DISPLAY:** Show disc tracks number and current operation.
8. **SKIP/SEARCH(Back):** Press to skip previous tracks on loader disc. Press and hold to fast-rewind the current track on a loader disc.
9. **SKIP/SEARCH(Forward):** Press to skip next tracks on loader disc. Press and hold to fast-forward the current track on a loader disc.
10. **PLAY / PAUSE / PAIR Button:**
 - In CD mode, press to play or pause a loader disc.
 - In BT mode, press to connect another BT device.
11. **MASTER VOLUME Dial:** Rotate to adjust the main volume sound level.
12. **A.V.C Dial:** Turn to adjust the Voice control.
13. **LIGHT Switch:** Rotate this switch to turn on / off Disco Lights.
14. **CD DOOR:** Open the door to install disc.
15. **MIC1 INPUT Jack:** Connect a microphone into MIC1 jack.
16. **MIC HOLDER:** Place the microphones into the holder.
17. **AUDIO OUT R (Line out / Aux out) Jack:** Connect to external device audio input R.
18. **AUDIO OUT L (Line out / Aux out) Jack:** Connect to external device audio input L.

Location Controls

19. **VIDEO OUT Jack:** Connect to TV video input.
20. **LINE IN (Aux in / Audio in):** Connect to external device audio output.
21. **MIC2 INPUT Jack:** Connect a microphone into MIC2 jack.
22. **DC INPUT Jack:** Connect power adapter for AC power.
23. **BATTERY COMPARTMENT:** Insert six size "C" or UM-2 batteries for DC power.
24. **BATTERY COMPARTMENT COVER**

Display Indicator Message


- **POWER Indicator:** Will be light when unit turn on.
- **PROG (Program) Indicator:** Will be light / flash when program mode turn on.
- **REPEAT Indicator:** Will be flash / light when REPEAT function turn on.
- **PLAY / PAUSE Indicator:** Will be light / flash when disc playing.

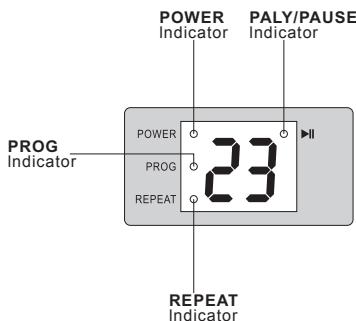

Setup Power

Connect Power Adapter

Plug the included AC adapter into the standard AC power outlet to power the **SLIM/FLAT CDG KARAOKE**. Connect small end to **DC INPUT** jack of main unit. After adapter connection, rotate the **SOURCE** selector to **CD+G** mode or **Line in/BT** mode position to turn on the unit."

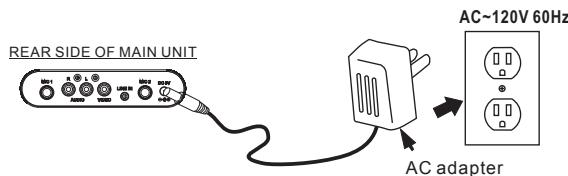

Battery Operation

Before installing batteries (not included), ensure that the unit is disconnected from the mains supply.

Remove the battery compartment cover on the back of the unit by carefully pushing the two lugs left. The battery cover can then be lifted away. Fit the 1.5V (UM2) x 6 pcs batteries (not included), referring to the polarity markings. Finally, replace the cover

For battery operation, remove the adapter from the wall outlet and unplug from the unit.

Warning!

1. *Danger of explosion if batteries are incorrectly replaced.*
2. *Replace batteries with the same equivalent type only.*

Connect Ext. Device & Sound From Main Unit Speaker


LINE IN (AUX In/ AUDIO In)

To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable (not included).

1. Connect a 3.5mm Auxiliary Cable to the **LINE IN** jack at the rear side of unit and to the Audio Output or Phones on the audio device you wish to play.
2. Rotate the **SOURCE** selector of the Unit to **LINE IN / BT** position and the **SLIM/FLAT CDG KARAOKE** display will show AU.
3. Make sure your external music player is turned on.

4. Start music playback on your external music player.
5. Adjust **VOLUME** dial to control the sound level of music playback from the speakers on the unit.

Please note:-If not use this function, please unplug it to the main unit.

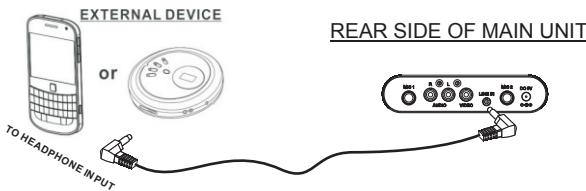

Using CD+G, CDs

Loading a Disc

1. Power on by rotate the **SOURCE** Selector to CD+G position.
2. Pull out the **CD DOOR** by **DOOR OPEN AREA**.
3. Load a disc into the compartment with the printed side facing you.
4. Gently close the **CD DOOR**. The **CDG PLAYER** begins to read the disc. The **Display** will display the total number of tracks.
5. Press **PLAY/PAUSE** button to play disc. (If no disc is loaded, "No" will be displayed).

Playing a Disc

1. Follow the instructions for [Loading a Disc](#).
2. Press the **PLAY/PAUSE** button to begin playing the loaded disc. The **PLAY/PAUSE** indicator will light.
3. Rotate the **VOLUME** dial to select the sound level.
4. To temporarily stop playing, press the **PLAY/PAUSE** button once (**PAUSE** indicator will light and flash). To resume play, press the **PLAY/PAUSE** button one more.
5. Press **SKIP/SEARCH** buttons to skip between next or previous tracks.
6. Hold the **SKIP/SEARCH** buttons to fast search through the track.

Please note:-The fast-forward / fast-rewind functions will not work for CDG discs.

7. Connect the **VIDEO OUT** jack to TV, the lyrics text will show on TV.
8. Press the **STOP** button to stop playing.

Repeat Function

1. Follow the instructions for [Loading a Disc](#) and [Playing a Disc](#).
2. When disc installed, press the **REPEAT** button once and the **REPEAT** indicator flash. The unit will play the current track repeatedly.

3. When disc installed, press the **REPEAT** button twice and **REPEAT** indicator will be light. The unit will play the entire disc repeatedly.
4. To cancel the repeat function: press the **REPEAT** button repeatedly the **REPEAT** indicator light off or press the **STOP** button twice to stop.

Programming a Disc up to 20 tracks

1. When disc playing, press the **STOP** button to stop mode.
2. Press the **PROGRAM** button and the **PROG** indicator will light.
3. Press the **SKIP / SEARCH** buttons to forward or back to select a desired track number.
4. Press the **PROGRAM** button to confirm.
5. Repeat steps 3 and 4 to program to play in a specified order.
6. Press the **PLAY/PAUSE** button to start the program playing.
7. Press the **STOP** button twice to cancel a program.

Connecting Bluetooth to Your Smartphone / Tablet

1. Rotate the **SOURCE** selector to **BT/LINE IN** position to connect your external Bluetooth device and the display will show **bt** and flash.
2. Set the Bluetooth function of your external device to ON and begin searching for devices.
Note: The effective distance between your external device and this apparatus is 10 meters (30 feet).
3. Once “**JT1067**” appears on the paired device list of your external device, select it.
*Notes: If cannot connect, press **PAIR** button to reconnect again.*
4. If you are asked for a password, enter “0000”
5. When both devices are successfully connected an audible chime will sound and the display will show **bt** and stop flash, now you are ready to play music wirelessly from your device.
6. Press the **PLAY** button of external Bluetooth device to start music playback.
7. Press the **NEXT / PREV** of the unit or external Bluetooth device to switch between music tracks.
*Note: After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or your find it is unable to connect, repeat the above steps or press & hold the **PAIR** button again.*

Connecting to a Television / DVD / Ext. Device

Composite Video output


Require an **RCA** video cable.

1. Plug the included **RCA** audio/video cable into the **VIDEO OUT** and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing **CDG** discs, the **SLIM/FLAT CDG KARAOKE** will output written lyrics to the connected television.

RCA Audio Output

Requires an **RCA** audio cable.


1. Plug the included **RCA** audio/video cable into the **AUDIO OUT** and a **RCA** audio input on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing the disc, the **SLIM/FLAT CDG KARAOKE** will output audio to the connected television or stereo system. Use the external device to control the output sound level.

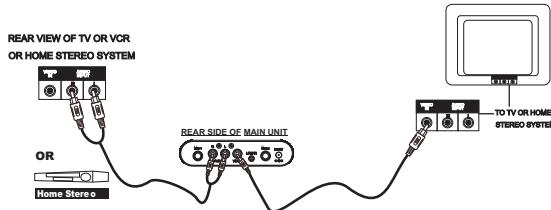

Using Microphones

Requires a microphone (included)

1. Plug the microphone (see below figure) into the **MIC 1 INPUT** or **MIC 2 INPUT**.
2. Slide the **ON /OFF** switch of **MICROPHONE**,
3. Use the **MIC VOLUME** dial of **SLIM/FLAT CDG KARAOKE** to adjust the volume of audio sound from the microphone.

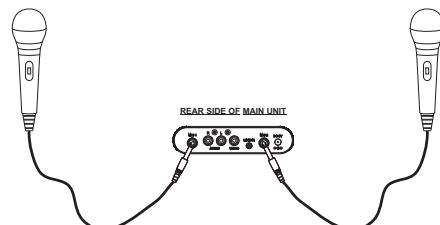

Using AVC / ECHO / BALANCE

AVC

Automatic Voice Control can be activated by rotating the AVC control. The higher this control is set to, the more the vocals on the multiplex recording will be muted when the singer starts to sing through the microphone. When the singer stops singing, the recorded vocals on the multiplex recording will resume to normal.

ECHO

Adjust the **ECHO** dial of **SLIM/FLAT CDG KARAOKE** to enhance your voice for a concert hall effect.

BALANCE

Rotate the **BALANCE** dial of **SLIM/FLAT CDG KARAOKE** to hear the music and vocals or to hear the music only.

Notes: To use the **BALANCE** dial, a CD+G disc must be used. Otherwise it will operate as a standard **BALANCE** control.

Using Light Effect

When the **LIGHT** switch setting to **ON** position. The light effects turn on and the side of **SLIM/FLAT CDG KARAOKE** will be light on.

Specification

AC Power Adapter Connect DC Jack	Use included adapter AC~ Input 100-240 50/60 Hz , DC Output 5V, 1200mA
	6 x "C" Batteries (Batteries not included)
CD Player	Support CDs and CDG disc 4.75 / 3.25 inch
Bluetooth	Version 4.2 + EDR
Audio Power Output	2 x 1.8W (RMS).. 10%THD.
Loud Speakers Spec	3 Inch, 3 Watt , 4 Ohm



Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.