 


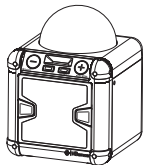


iDance®

PARTY CUBE BC5

Bluetooth karaoke system with built-in light show



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Portable Cart Warning 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
17. The MAINS plug is used as the disconnect device, which shall remain readily operable.

COMPLIANCE WITH FCC REGULATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

this device may not cause harmful interference, and

this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

 
WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


FEATURES

- Supports Bluetooth v2.1+EDR
- Supports profile A2DP (Advanced Audio Distribution Profile)
- Supports automatic device pairing
- Wireless range: 33 feet
- 3.5mm Aux input
- Audio output for external amplifier
- ON/OFF Disco Light switch
- Built-in speaker
- 5 W RMS Power Output

Front Features & Controls

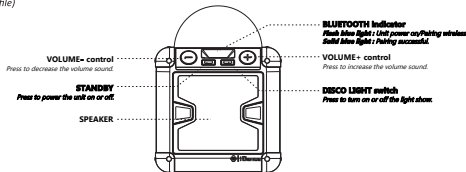

Rear Input & Controls

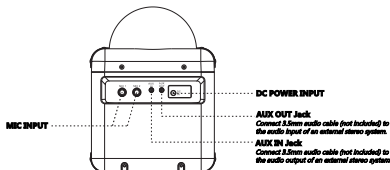 


General operation

This unit operates from a power adaptor (not included) with a rated output of DC 5V / 1.5A and up.

Power Connection

 1. Firmly and securely insert the DC plug of the adaptor to the DC IN jack on the rear of the unit.
2. Plug the adaptor's AC plugs into an AC outlet.
3. Power on the unit by press the STANDBY button on the front of the unit, Bluetooth indicator will light up and blink.

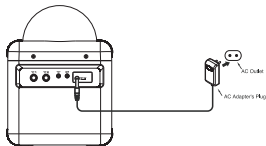

When the unit is not in operation for long periods of the time, please remove the power adaptor from the wall outlet and unplug from the main unit.

Bluetooth operation

Pairing a Bluetooth Device for the First Time

1. Power on the unit by press the STANDBY button, bluetooth indicator is flash light and ready to paired (link) with your Bluetooth device.
Make sure no audio cable is connected to AUX IN Jack. When pairing, remain within 3 feet of the unit.
2. Using the native controls on your Bluetooth device, select the "BC5" in your Bluetooth settings to pair. If your device requests a password, enter the default password "0000".
Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
3. When successfully paired and connected, a remind sound will issue from the unit and the Bluetooth indicator will remain lit.
After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

 
1. After pairing to a Bluetooth device, use the native controls on the connected Bluetooth Device to select a track.
2. Play, pause or skip a selected track using the native controls on the connected Bluetooth Device.
3. Audio played through the connected Bluetooth Device will now be heard through the speakers.
4. Adjust the VOLUME control to obtain the desired volume level.
5. Press STANDBY button again to turn off the unit.

Auxiliary operation

AUX IN Connection

You can play other music sources (iPod, MP3 or other digital audio players) through the speakers of this unit by connecting the AUX IN jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio input cable (not included) into the AUX IN jack on the rear of the unit, and plug the other end of the cable into the audio output on the external music player or other source.
Make sure your external music player is turn ON.
2. Press the STANDBY button to turn on the unit, Bluetooth indicator will light blink and heard a chime sound.
3. Start playing the device you plugged into AUX IN input.
4. Press to adjust the volume up or down to obtain the desired volume level.
5. Press the STANDBY button to turn off the unit.
Remember to shut down the external player power. ST



Party Lighting

Press the LIGHT button to turn on the light show, disco ball lighting with dual Play mode included STROBE, spinning light patterns onto walls and ceilings.
Press again LIGHT button to turn off the light show.


Specification

Power Source:	DC 5V 1.5A
Bluetooth:	V2.1+EDR
Support profile:	A2DP
Audio power output:	5W (RMS) 10% THD
Speaker:	2 Ohms. 3" inch.
Dimensions:	23 cm(H) x 16.8 cm(W) x 16.8 cm(D)
Weight:	1.2 Kg.

LINE OUT Connection


Please follow the steps below to connect audio signal from the unit to your home audio system.

 1. Locate the multi-colored RCA cable (not included).
2. Connect audio cable's 3.5mm plug to the LINE OUT jack of the rear side of your unit.
3. Connect the other ends of the audio's cable white and red plugs to the external home audio system's audio input white and red jacks.



MICROPHONE Connection

 1. Plug the microphone into the MIC1 or MIC2 jacks on the rear of your unit. Their output is mixed with playback from Bluetooth, AUX input.
2. On the microphone, there is an ON/OFF switch. Ensure that you set the switch to ON position during the usage.
3. You can start to sing-along with the music playback.



Trouble Shooting

- No Sound
 - Wall outlet is not functioning.
 - Plug another device into the same outlet to confirm the outlet is working.
 - Volume set too low.
 - Press the volume+ button to increase the sound level.
 - The unit does not to operation of any button.
 - Under the influence of electrostatic phenomenon, the product may malfunction and require user to reset the unit.
 - Slide the POWER switch to turn off 10 seconds to reset the unit.
 - No sound when playing audio via Bluetooth
 - Your Bluetooth device has been paired properly.
 - Pairing your Bluetooth device according to the "Pairing a Bluetooth Device for the First Time" section.
 - The unit placement out of range.
 - Relocate the unit within Bluetooth operating range (30 feet).
 - The volume control of your Bluetooth device is set at too low.
 - Increase the volume of your Bluetooth device.
 - The volume control of the unit is set at too low.
 - Increase the volume of the unit to press to your wish..
 - No sound in AUX mode
 - Volume at minimum.
 - Adjust the volume knob.
 - External device not connected properly.
 - Clear contacts pins and connect again.
 - No sound in Microphone mode
 - Microphone is off.
 - Switch Microphone to the ON position.
 - Microphone is not connected to the Mic jack securely.
 - Securely connect the microphone to the Mic jack.