

# Operating and Installation Instructions Speed Oven



To prevent accidents and machine damage, read these instructions **before** installation or use.

## **Contents**

IMPORTANT SAFETY INSTRUCTIONS	5
Guide to the Speed Oven	16
Control panel  Mode selector  Display.  Symbols in the display.  Rotary selector.	18 18 18
Sensor buttons	20
Features  Model numbers  Data plate  Items included.	22 22 22
Standard and optional accessories	23
Wire rack with non-tip safety notches.  Speed Oven controls  Safety features.  System lock for the oven.  Safety cut-out.	25 25 25 25
Cooling fan PerfectClean treated surfaces	
Before using for the first time	27 27
Settings	29
System lock ⊕	34
Timer Setting the timer	36
Guide to the modes	38 39

## **Contents**

Microwave power	41
How it works	41
Microwave power levels	41
Selecting cookware	
Containers suitable for microwave use	
Unsuitable containers for microwave use	
Testing dishes for their suitability	
Placing the dish in the Speed Oven	
Lid	46
Energy saving tips	<b>1</b> 2
Lifetgy saving ups	40
Solo modes	49
Quick Guide	49
Cooling fan	49
Changing the temperature	50
Temperature indicator	50
Turning a cooking program On / Off automatically	51
Setting the duration	52
Setting a cooking duration and finish time	52
At the end of the cooking duration	53
Changing the cooking duration	54
Deleting a cooking duration	54
Deleting a finish time	55
Missesses (Oala)	F.C.
Microwave (Solo) ≅	
Quick Guide	
Cooling fan	
Changing the microwave power	
Changing the cooking duration	
Turning a cooking program On / Off automatically	
Deleting a finish time	
Deleting a linish time	50
Combi Modes	59
Quick Guide	
Cooling fan	
Changing the cooking duration	
Changing the microwave power	
Changing the temperature	
Turning a cooking program On / Off automatically	
Minuto	60

## **Contents**

Popcorn	63
Bake	64
Roast	66
Broil	68
<b>Microwave: Defrosting/Reheating/Cooking.</b> Tables for defrosting, reheating and cooking food using Microwave (Solo) ≅	
Table for defrosting food Table for reheating food Table for cooking food	. 75
Defrosting without Microwave power	. 77
Canning	78
Gentle Bake	81
Frozen food	82
Cleaning and care. Unsuitable cleaning agents Tips Normal soiling Stubborn soiling Lowering the Browning / Broiling element	. 83 84 84 . 85
Frequently asked questions	87
Technical Service	92
Caring for the environment	93
Electrical connection	94
Installation diagrams  Appliance and cut-out dimensions  Installation into a tall cabinet  Undercounter installation  Installation in a tall cabinet in combination with an oven  Front dimensions	95 95 96 97 98
Installation	99

When using the appliance, follow basic safety precautions, including the following:

Read all instructions before installation and use of the oven to prevent accidents and machine damage.

This appliance complies with current safety requirements. Improper use of the appliance can lead to personal injury and material damage.

Read all instructions before installing or using the oven for the first time. Only use the appliance for its intended purpose.

Keep these operating instructions in a safe place and pass them on to any future user.

#### Use

- This appliance is intended for residential use only. Use only as described in these operating instructions.
- This appliance is not intended for outdoor use.
- ► The oven is intended for domestic use only: cooking, baking, roasting, broiling, canning, defrosting and reheating of food. Only use this appliance for its intended purpose.
- ▶ Risk of fire! Do not use the speed oven to store or dry items which could ignite easily.
- If such items were dried in the Speed Oven, the moisture in the item would evaporate causing it to dry out and even self-ignite.
- Persons who lack physical, sensory or mental abilities, or experience with the appliance should not use it without supervision or instruction by a responsible person.

#### Children

- Children should not be left alone or unattended in an area where an oven is in use. Never allow children to operate, sit or stand on any part of the oven. **Caution:** Do not store items of interest to children in cabinets above an oven. Children climbing on the oven to reach these items could be injured.
- Burn Hazard Do not allow children to use the oven.
- As with any appliance, close supervision is necessary when used by children.
- ▶ Danger of suffocation! Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.
- Danger of burns. The oven gets hot at the oven door glass, the vapor vent, the handle and the operating controls. Do not allow children to touch or play in, on or near the oven.

## **Technical safety**

- This appliance must be installed and connected in compliance with the installation instructions.
- ▶ Installation, repair and maintenance work should be performed by a Miele authorized service technician in accordance with national and local safety regulations and the provided installation instructions. Contact Miele's Technical Service Department for examination, repair or adjustment. Repairs and other work by unauthorized persons could be dangerous and may void the warranty.
- ▶ Before installing the oven, check for externally visible damage. Do not operate a damaged appliance.
- ► Operating a damaged appliance can result in microwave leakage and present a hazard to the user. Do not use the appliance if:
- the door is warped,
- the door hinges are loose,

- holes or cracks are visible in the housing, the door, the door seal or the oven interior walls.
- To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. This appliance must be grounded. Connect only to properly grounded outlet. See "Electrical connection GROUNDING INSTRUCTIONS". It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.
- ▶ Before installation, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt.
- ▶ Before installation or service, disconnect the power supply to the work area by
- removing the fuse,
- "tripping" the circuit breaker, or
- unplugging the unit. Pull the plug not the cord.
- Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating). Do not use an extension cord to connect this appliance to electricity.
- ► The oven is not to be operated until it has been properly installed within cabinetry.
- ▶ Danger of electric shock! Under no circumstances open the outer casing of the appliance.
- This appliance must not be used in a non-stationary location (e.g. on a ship).
- Do not repair or replace any part of the appliance unless specifically recommended in the operating instructions. All other servicing should be referred to a qualified technician.

- Defective components should be replaced by Miele original spare parts only. Only with these parts can the manufacturer guarantee the safety of the appliance.
- ▶ In order for the oven to function correctly, it requires an adequate supply of cool air. Ensure that the air flow is not impaired (e.g. insulation in the cabinetry). Also be sure that the cool air supply is not heated by other sources nearby.
- If the oven is installed behind a cabinet door, do not close the door while the oven is in operation. Heat and moisture can build up behind the closed door and cause damage to the oven, cabinetry and flooring. Do not close the door until the oven has completely cooled down.

#### Proper use

⚠ Danger of burns!

The Speed Oven becomes hot when in use.

Depending on the mode selected, you could burn yourself on the heating elements, oven interior, cooked food or oven accessories. Wear pot holders when placing food in or removing food, or when making adjustments in the hot Speed Oven.

- Caution: Heating elements may be hot even though they are not glowing. Interior surfaces of an oven become hot enough to cause burns. External parts of the oven such as the door glass, vents, and the control panel can become hot. During and after use, do not touch, or let clothing or other flammable materials come into contact with heating elements or interior surfaces of the oven until they have had sufficient time to cool.
- ▶ Do not let food sit in the oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness.

- It is important that the heat is allowed to spread evenly throughout the food being cooked.
- This can be achieved by stirring and/or turning the food, and observing a sufficiently long standing time, which should be added to the time needed for cooking, reheating or defrosting.
- ▶ Use only dry, heat-resistant potholders. Moist or damp potholders used on hot surfaces may result in steam burns. Do not let potholders come in contact with oil or grease. Do not substitute dish towels or other bulky items for potholders. Do not let potholders touch hot heating elements.
- Loose fitting or hanging garments present a fire hazard. Wear proper apparel while operating the appliance.
- ▶ Do not heat unopened containers of food in the oven, pressure may cause the containers to burst and result in injury.
- ▶ To prevent burns, always place oven racks at their desired height while the oven is cool. If the rack must be moved while the oven is hot, do not let pot holders touch hot heating elements.
- ▶ Open the door carefully to allow hot air or steam to escape before placing or removing food.
- To prevent burns, allow the heating elements to cool before cleaning by hand.
- Do not leave the oven door open unnecessarily as someone may trip over it or be injured by it.
- Never leave the appliance unattended when cooking with oil or fat. They can ignite if overheated. Do not use the oven for frying. Do not use water on grease fires. Turn off the Speed Oven immediately and suffocate the flames by keeping the door closed.
- Never store flammable liquids and materials in, above or under an oven, or near cooking surfaces.

- To avoid fueling any flames, do not open the Speed Oven door if smoke occurs inside the appliance. Interrupt the process by turning the appliance off and disconnecting it from the power. Do not open the door until the smoke has dissipated.
- Do not use the oven to heat the room. The high temperatures radiated could cause objects near the oven to catch fire.
- Please be aware that durations when using microwave power are often considerably shorter when cooking, reheating and defrosting than when using modes without microwave power. Excessively long cooking times can lead to food drying out and burning or could even cause it to catch fire.

Be sure you keep to recommended broiling times when using the Broil mode. Do not use Microwave  $\approx$  for dehydrating items such as flowers, herbs, bread or rolls. Never use modes with Broil for prebaked products such as bread or bread rolls, or for drying flowers or herbs. Use Convection Bake  $\checkmark$  for these items and monitor the process carefully.

- ▶ Use caution when using alcohol in your recipes. Alcohol evaporates at high temperatures but may, in rare circumstances, combust on the hot heating elements.
- Dishes with hollow knobs or handles are not suitable for use with microwave modes. Moisture which has gathered in the hollow recesses can cause pressure to build up and the item can explode.
- ▶ Fire hazard! Using Microwave ≅ or Microwave combination modes with plastic dishes which are not microwave safe can cause them to melt and damage the appliance.

Do not use any containers or cutlery made from or containing metal, aluminum foil, lead, crystal glassware, temperature-sensitive plastics, wooden utensils or cutlery, metal clips or plastic or paper covered wire ties. Do not use plastic containers with the foil lid only partially removed (see "Containers suitable for microwave use").

For modes without microwave power: Plastic containers which are not suitable for use in an oven can melt at high temperatures and can even damage the oven or catch fire.

Only use containers which are declared by the manufacturer as being suitable for use in an oven. Follow the manufacturer's instructions on use.

▶ Do not leave the microwave oven unattended when reheating or cooking food in disposable containers made of plastic, paper or other inflammable materials.

Before using single-use containers, make sure they are suitable for use in microwave ovens (See "Containers suitable for microwave use - Plastics").

Do not reheat food in the oven in heat-retaining bags which are intended for use in normal ovens.

These heat-retaining bags usually contain a thin layer of aluminum foil which reflects microwaves. This reflected energy can, in turn, cause the outer paper covering to become hot and ignite.

► The Speed Oven can be damaged when using Microwave ≅ or Microwave Combination programs if it is empty or incorrectly loaded.

For this reason please do not use modes with microwave power to pre-heat cookware or to dry herbs.

Instead use Convection Bake for these procedures.

When using residual heat to keep food in the oven warm, the high humidity and amount of condensation in the Speed Oven can cause corrosion. The control panel, the countertop or the cabinetry can also suffer damage.

Always cover food when using Microwave . Once food is cooked through, use a lower power for continued cooking to reduce the amount of steam produced from the food. When using residual heat do not turn the Speed Oven off. Instead set the temperature to the lowest setting and leave the oven on the selected mode. The fan will then remain on automatically and dissipate the moisture.

- It is recommended to cover all cooked food that is left in the oven to be kept warm. This will prevent moisture from condensing on the interior of the oven.
- A build-up of heat can cause damage to the coating on the floor of the oven.

When using Convection Bake 👃 do not line the floor of the Speed Oven with anything, e.g. aluminum foil or oven liners. Universal trays and glass trays should not be placed directly on the oven floor.


- The door can support a maximum weight of 17.5 lbs (8 kg). Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven cavity. The oven could get damaged.
- When heating food and drinks, remember that the heat is created in the food itself, and that the container will normally be cooler. The dish is only warmed by the heat of the food. The temperature of the container is not an indication of the temperature of the food or liquid in it.

Check the food for the desired temperature after removing it. **This is particularly important when preparing food for babies.** Shake or stir baby milk and food thoroughly after heating, and try it for temperature to ensure that it will not scald the baby.

- ► The Speed Oven is not suitable for cleaning or disinfecting items. Items can get extremely hot and there is a danger of burning when the item is removed from the appliance.
- ▶ Do not cook or reheat food or liquids in sealed containers, jars or bottles. With baby bottles, the screw top and nipple must be removed.

Otherwise pressure will build up which can cause the bottle or container to explode. Risk of injury.

The boiling wand ensures that the liquid heats up evenly with bubbles forming at the right time.

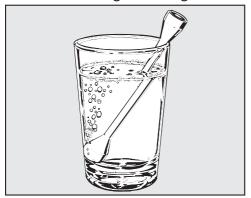

When reheating liquids, always place the boiling wand supplied into the cup or glass. When boiling and in particular when reheating liquids, milk, sauces etc, using microwave power without the boiling wand, the boiling point of the liquid may be reached without the production of typical bubbles. The liquid does not boil evenly throughout. This so-called "superheating" can cause a sudden build up of bubbles when the container is removed from the oven or shaken. This can lead to the liquid boiling over suddenly and explosively. Danger of scalding and burning! The formation of bubbles can be so strong that the pressure forces the oven door open, with a danger of injury and damage. The user could be injured and the appliance damaged.

Ensure you use only the boiling wand supplied with your appliance.

- ► Eggs can be cooked without their shells using microwave power only if the yolk membrane has been punctured several times first. The pressure could otherwise cause the egg yolk to explode.
- ► Eggs in their shells will explode if cooked with microwave power, even after taking them out of the oven.

They can only be cooked in their shells using microwave heat in a specially designed egg-boiling device available from specialist shops. Hard-boiled eggs must not be reheated in the microwave oven either as they too will explode.

- Food with a thick skin or peel, such as tomatoes, sausage, potatoes and eggplant, should be pierced or cut in several places to allow steam to escape and prevent the food from bursting.
- To check food temperature, first interrupt the cooking process. Only use a thermometer specifically approved for food use to measure the temperature of the food. Do not use a thermometers containing mercury or liquid as these are not suitable for use with very high temperatures and break very easily
- ▶ Do not use the oven to heat up heating pads filled with grains, gel, etc.

These pads can ignite even after they have been removed from the Speed Oven.

- ► This oven must only be used for cooking food. Fumes, vapors or heat given off by glues, plastics or flammable liquids and materials could be hazardous. Do not use it as a dryer, kiln, dehumidifier, etc.
- Do not cover or block any vent openings.
- Do not let metal objects (aluminum foil, pans) come in contact with the heating element.
- Make certain that the power cords of small appliances do not come in contact with or get caught in the oven door.

### Cleaning and care

- ▶ Do not use a steam cleaner to clean this oven.
  Steam could penetrate electrical components and cause a short circuit.
- Only clean parts listed in these Operating and Installation Instructions.
- Scratches on the door glass can cause the glass to break. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.


- To avoid corrosion on the stainless steel surfaces of the Speed Oven, remove any splashes on the interior walls of the oven from food or liquids containing salt.
- ▶ Do not use oven cleaners. Commercial oven cleaners or oven liners of any kind should not be used in or around any part of the oven.

#### **Accessories**

Use only genuine original Miele spare parts. If spare parts or accessories from other manufacturers are used, the warranty may become void.


SAVE THESE INSTRUCTIONS AND REVIEW THEM PERIODICALLY

## **Guide to the Speed Oven**

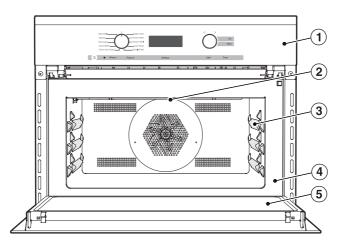

- 1 Control panel
- 2 Upper heating element
- ③ 3 Shelf levels for the glass tray and rack
- 4 Front frame with data plate
- 5 Door

## **Control panel**

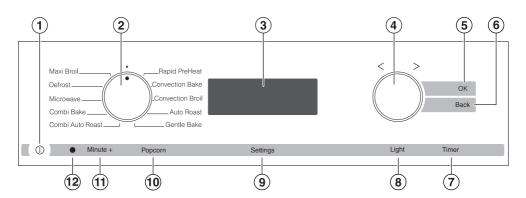

① On / Off ① button
Turns the oven on or off

② Optical interface (for service technician use only)

- ② Mode selector To select oven modes
- ③ Display Displays the time of day and settings
- 4 Rotary selector < > To select values
- ⑤ OK sensor button Confirms settings and instructions
- 6 "Back" sensor button
  To go back one step at a time
- 7 "Timer" sensor button To set the timer
- ® "Light" sensor button For turning the oven interior lighting on and off
- 9 "Settings" sensor button To access Modes
- "Popcorn" sensor buttonTo start the Popcorn function
- ① "Minute +" sensor button
  To start the Minute + function

## **Control panel**

#### Mode selector

For selecting oven modes.

It can be turned clockwise or counterclockwise.

#### Oven modes

Maxi Broil

**\*** Defrost

Microwave

Substitution Combi Bake

Rapid PreHeat

Convection Bake

Convection Broil

Auto Roast

Gentle Bake

### **Display**

The display shows the time of day or your settings (depending on model).



#### Symbols in the display

Depending on the position of the mode selector  $\bigcirc$  and/or which button is pressed, the following symbols will appear:

Symb	Symbol / Function		
$\triangle$	Timer	Any	
<b>₽</b> ■↑	Temperature indicator		
<b>₽</b> ≡	Temperature		
<b>*</b>	Microwave power level		
نان	Duration		
. نام	Finish time		
Start	Start Microwave		
<b>'</b> =	Settings P		
4	Time of day	•	
<del>-</del>	System lock		

A function can only be set or changed if the mode selector is in the correct position.

### **Rotary selector**

Use the rotary selector < > to set temperatures, microwave powers and durations.

Turning it clockwise will increase the values, and turning it counter-clockwise will decrease them.

It can also be used to highlight a mode by moving the  $\triangle$  in the display.

It can be turned clockwise or counterclockwise.

## **Control panel**

#### **Sensor buttons**

The sensor buttons react to touch. Each touch is confirmed with an audible tone. The tone can be turned on or off by selecting the status  $5 \, 0$  in the settings  $P \, 3$  (see "Settings").

Sensor button	Function	Notes
OK	For accessing functions and saving settings	When functions are marked with a ▲ they can be accessed by selecting OK. As long as the triangle ▲ is flashing you can change the selected function.  Press OK to save the change.
Back	To go back a step	
Timer	For setting the kitchen timer	If the time of day is visible, you can enter a timer duration at any time, e.g. when boiling eggs on the cooktop.
		If the time of day display is turned off, the Timer sensor will not react until the oven is turned on.
Light	For turning the oven interior lighting on and off	If the time of day display is turned on, the oven interior lighting can be turned on and off by touching the Light sensor, for example when cleaning the oven.
		If the time of day display is turned off, the Light sensor will not react until the oven is turned on.
		The oven interior lighting turns off after 15 seconds during a cooking process or remains constantly turned on, depending on the setting selected.

## **Control panel**

Sensor button	Function	Notes
Settings	To access Functions	If the time of day is visible in the display and the mode selector is in the • position, the symbols for settings '≡, time of day ⊕, and system lock ⊕ will appear when the Settings sensor is touched.
		If the time of day display is turned off, the Settings sensor will not react until the oven is turned on.
		During the cooking process by selecting the appropriate sensor button you can adjust the temperature ♣, cooking duration ♣, finish time ♣ and in Combi modes you can set the microwave power level ᠍.
Popcorn	Popcorn function	The microwave mode starts with power level and a duration of 3 minutes (see "Popcorn").
		The mode selector must be pointing to •.
Minute +	Minute + function	The microwave mode starts at the maximum power level and a duration of 1 minute (see "Minute +"). Touching the sensor repeatedly increases the cooking time.
		The mode selector must be pointing to •.

#### **Features**

#### Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

#### **Data plate**

The data plate located on the front frame of the oven is visible when the door is open.

Printed on the data plate are the model number, serial number and the connection data (voltage/frequency/ maximum rated load) of the oven.

Have this information available when contacting Miele Technical Service.

#### Items included

The oven is supplied with:

- the operating and installation instructions for using the Speed Oven,
- screws for securing your appliance into the cabinetry, and
- various accessories.

# Standard and optional accessories

This Speed Oven is supplied with a glass tray and rack.

All accessories and cleaning and care products in these instructions are designed to be used with Miele ovens.

They can be ordered from the Mieleusa.com website or Miele.

When ordering, please have ready the model number of your oven and of the desired accessories.

#### Glass Tray



The glass tray is suitable for use with all operating modes.

**Always** use the glass tray when using Microwave (Solo) ≅.

Do not place items weighing more than 17.5 kg (8 kg) on it.

Do not place the hot glass tray on a cold surface, such as a tiled or granite countertop. The glass tray could get damaged. Use a suitable heat-resistant mat or pot rest.

#### Wire rack with non-tip safety notches



The rack is designed to be compatible with microwaves and so can be used with Combi modes which use microwave power. However it is not suitable for use with the Microwave (Solo) mode.

Danger of burns! The rack gets hot when used with Combi modes which use the microwave function.
Use pot holders when placing food in a hot oven and when taking it out.


Do not place the rack directly on the floor of the oven and do not use it with Microwave (Solo) 🔊. This could cause arcing which could damage the oven.

Do not place items weighing more than 17.5 lbs (8 kg) on the rack.


The rack has non-tip safety notches which prevent it being pulled completely out when it only needs to be pulled out partially.

When pushing the rack back in, always ensure that the safety notches are at the **back** of the oven.

#### **Features**

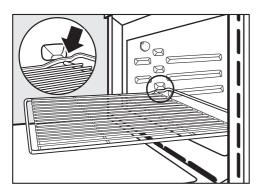

■ To remove the rack, lift it upwards slightly at the front when the safety notches connect with the sides of the oven.

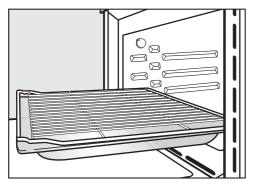

■ We recommend using the rack together with the glass tray when cooking items on the rack which might drip.

#### **Boiling wand**



The boiling wand helps liquids heat evenly.

■ When reheating liquids, place the boiling wand into the cup or glass.

#### Round Baking Form HBF27-1

Microwave modes will damage the Round Baking Form.

Do not use the round baking form when using Microwave (Solo) ≅ or Combi modes.



This circular form is suitable for cooking fresh or frozen pizzas, flat cakes, tarts and baked goods.

Place the round baking form on the rack.

The surface has been treated with PerfectClean enamel.

#### Miele Oven Cleaner

Miele oven cleaner is suitable for removing stubborn soiling. It is not necessary to preheat the oven before use.

#### **Speed Oven controls**

The oven controls enable you to use the various cooking modes to bake, roast, broil and reheat.

It also allows you to access:

- the time of day display,
- a kitchen timer,
- a timer to automatically turn cooking programs on and off,
- settings that can be customized.

### Safety features

### System lock 🔂 for the oven

The system lock prevents the oven from being used unintentionally (see "System lock  $\frac{1}{10}$ ").

The system lock will remain activated even after a power failure.

#### Safety cut-out

A mode without Microwave can be started without specifying a cooking time. To prevent continuous use and avoid the risk of fire, the Speed Oven will turn itself off automatically after a time between 1 hour and 12 hours depending on the function and temperature chosen.

If a **Combi mode** is followed in quick succession by another mode using microwave power, the magnetron (which produces the microwaves) cannot be turned on again until approx. 10 seconds have elapsed. Therefore wait a short time before starting the second process.

#### **Features**

#### Cooling fan

The cooling fan comes on automatically when a cooking program is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after a cooking process to prevent moisture building up in the oven, on the control panel or on the surrounding cabinetry. It will turn itself off automatically after a while.

#### PerfectClean treated surfaces

The revolutionary PerfectClean enamel is a smooth, non-stick surface that cleans easily with a sponge.

Food and soiling from baking and roasting can be easily removed from these surfaces.

Do not use ceramic knives as these will scratch the PerfectClean surface.

Follow the instructions in the "Cleaning and Care" section of this manual so the anti-stick and easy cleaning properties are retained.

The oven compartment and the rack have a PerfectClean finish.

## Before using for the first time

#### Before using for the first time

The oven must not be operated until it has been properly installed within cabinetry.

The time of day can only be changed when the mode selector is in the • position.

Set the time of day.

# Setting the time of day for the first time

The time of day is shown in 12 hour clock format.

After connection the oven to the electrical supply 12:00 will appear in the display and a ▲ will flash under ④:



- Use the rotary selector to enter the time of day.
- Confirm with OK.

The time of day is now saved.

To change the time of day to a 24-hour format by setting 24h in the settings menu P 4 (see "Settings").

During a power failure, the time of day will be saved for approx. 200 hours. If the power returns within this period of time the current time of day is displayed again. If the power is out for an extended period of time the time of day will need to be reset.

The time is day is turned off by default (see "Settings - *P I*").

The display will appear dark when the oven is turned off. The time of day continues to run unseen in the background.

## Before using for the first time

#### Heating the oven

New ovens may have a slight odor during their first use. Heating up the oven for at least one hour with nothing in it will eliminate the odor.

Ensure that the kitchen is well ventilated while the appliance is being heated up for the first time. Close doors to other rooms to prevent the smell spreading throughout the house.

- Remove any protective wrapping and sticky labels from the oven.
- Take all accessories out of the oven and clean them (see "Cleaning and care").
- Before heating the oven up, wipe the interior with a damp cloth to remove any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking.
- Turn on the oven.
- Select Convection Bake .

The default temperature appears in the display and a ▲ flashes under ::



- Use the rotary selector to set the maximum temperature possible.
- Confirm with OK.

The oven heating will turn on.

Heat up the oven for at least an hour.

After at least an hour:

■ Turn the mode selector to •.

#### After heating up for the first time

① Danger of burns! Allow the oven to cool before cleaning.

- Select "Light" to turn on the oven light.
- Clean the oven interior with warm water and liquid dish soap, applied with a soft sponge or microfiber cloth.
- Dry all surfaces with a soft cloth.
- Turn the lighting and the oven off.

Leave the oven door open until the oven interior is completely dry.

#### Changing the time of day

The time of day can only be changed when the oven is turned on and the mode selector is at the • position.

- Select "Settings".
- Confirm with OK.

The **A** symbol will flash under ①.

- Use the rotary selector to enter the time of day.
- Confirm with OK.

The time of day is now saved.

During a power failure, the time of day will be saved for approx. 200 hours. When the power returns within this period of time the current time is displayed again.

After an extended power failure, the time of day will need to be reset.

## **Settings**

# Changing factory default settings

The appliance is supplied with a number of default settings (see the "Settings overview" chart).

A setting can be changed by altering its status.

The settings can only be changed when the oven is turned on and the mode selector is at the • position.

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under Settings.



Confirm with OK.

#### PI appears:



- If you would like to change another setting, use the rotary selector to select the appropriate number.
- Confirm with OK.



The setting is selected and the current status appears, e.g. 5 0.

To change the status:

- Use the rotary selector to select the desired status.
- Confirm with OK.

The status is saved and the setting appears again.

- If you would like to change additional settings, repeat the process.
- If you do not wish to change the setting shown and would like to move to another setting select Back.
- If you have completed changing settings, select Settings.

The settings will remain in memory even in the event of a power failure.

## **Settings overview**

Setting	Status	
P   Time of day display	5 0*	The time of day display is <b>turned off</b> .  The display is dark when the oven is turned off. The time of day continues to run unseen in the background.
		If you have selected status 5 0, the oven must be turned on before it can be used. This also applies for the Timer and Light.
		The oven also switches off automatically if no settings are selected within a certain period of time (approx. 30 minutes).
	51	The time of day display is <b>turned on</b> and is visible in the display.
P 2	50	The buzzer is <b>Off</b> .
Buzzer volume	5 / to 5 30*	The buzzer is <b>On</b> .  The volume can be changed. The corresponding buzzer will be heard when a status is selected.
P 3	50	The keypad tone is <b>turned off.</b>
Keypad tone	5 I*	The keypad tone is <b>turned on.</b>
PЧ	24h	The time of day is shown in a <b>24-hour format</b> .
Clock format	12h*	The time of day is shown in the <b>12-hour format.</b> If you change the clock after 1 pm (13:00) from a 12-hour clock to a 24-hour clock, you will need to update the hours for the time of day accordingly.
P 5	°E	The temperature is displayed in <b>Celsius</b> .
Temperature unit	°F*	The temperature is displayed in <b>Fahrenheit</b> .

<sup>\*</sup> Factory default

## **Settings**

Setting	Status	
P & Display brightness	5 / to 5 7, 5 4*	Different levels of brightness can be selected for the display.  5 /: Minimum brightness 5 7: Maximum brightness
P7 Lighting	5 0*	The oven interior lighting is <b>on for 15 seconds</b> and then turns off automatically.
	51	The oven interior lighting is permanently turned on.
P 8	5 0*	Keep warm is <b>deactivated</b> .
Keep Warm	51	Keep warm is <b>activated</b> .
		Keep warm is activated when the Microwave (Solo) function  is selected with power level or higher and a cooking time of at least 5 minutes. If the food is not removed from the oven at the end of the program, the Keep Warm function will start automatically after approx. 2 minutes. The food will be kept warm for approx. 15 minutes using power level <i>L</i> 0. The Keep Warm function turns itself off if the door is opened.
P 9 Minute +		The microwave starts by default with the maximum power level and a cooking duration of 1 minute.
		The microwave power level can be changed to Lū, -,, or The cooking duration can also be changed. The maximum possible cooking duration depends on the microwave power selected.  Lū and-: Max. 10 minutes to HI: Max. 5 minutes

<sup>\*</sup> Factory default

Setting	Status	
P IO Popcorn		The microwave starts by default with microwave power level and a cooking duration of 3 minutes.
		This setting meets the requirements for most microwave popcorn manufacturers. The cooking duration can be changed and set for a max. of 4 minutes. The microwave power level cannot be changed.
ନ ∥ Calibrate	0 * -3 to 3	The temperature can be modified, so that it is slightly higher or lower than shown.
temperature		The higher the level, the higher the cooking temperature.
P 12	208U	The Speed Oven is connected to a 208 V power supply.
Electrical Version	220U	The Speed Oven is connected to a 220 V power supply.
Version	2400	The Speed Oven is connected to a 240 V power supply.
P 13 Demo Mode	S 0*	Select 5 0 and press OK for approx. 4 seconds.  When appears in the display the demo mode is deactivated.
	51	Select 5 I and press OK for approx. 4 seconds. When RE5_ appears in the display the demo mode is active.
		The Speed Oven can be operated, but the oven heating and the microwave modes do not work. For personal use you do not need this setting.

<sup>\*</sup> Factory default

## System lock ⊕

The system lock ⊕ prevents the oven from being used unintentionally.

The system lock is set of off by default. This can be changed by setting the status 5:

- -50 = Off
- -51 = On

The status of the system lock can only be altered when the oven is turned on and the mode selector is at •.

#### To activate the system lock

- Select "Settings".
- Use the rotary selector to move the until it appears under .



Confirm with OK.

The currently set Status 5 0 appears:



■ Use the rotary selector to set Status 5 *l*.



- Confirm with OK.
- Select "Settings".

The current time of day appears.

■ Turn the oven off.

The system lock is On.

When the appliance is turned on again, the  $\bigcirc$  symbol will appear in the display to remind you that the system lock has been activated.

The system lock will remain activated even after a power failure.

# Deactivating the system lock for a cooking process

■ Turn on the oven.

The ⊕ and ▲ symbols will appear along with the current time of day:



■ Press and hold OK until ⊕ goes out.

The oven can now be used.

#### Deactivating the system lock

- Turn on the oven.
- Press and hold OK until ⊕ goes out.
- Select "Settings".
- Confirm with OK.

The currently set status 5 l appears.

- Use the rotary selector to set Status 5 0.
- Confirm with OK.
- Select "Settings".

The system lock is Off.

The ⊕ symbol disappears.

#### **Timer**

The timer can be used to time any activity in the kitchen, e.g. boiling eggs.

The timer can also be used at the same time as a cooking program if a start and finish time have been set, e.g. a reminder to stir the dish or add seasoning.

A maximum time of 99 minutes and 55 seconds can be set for the timer.

#### Setting the timer

Example: Boiling eggs and setting the timer for 6 minutes and 20 seconds

■ Select "Timer".

If you have selected the "PI - 50" setting for the time of day display, you will need to turn the oven on before you can set a kitchen timer time.

00:00 will appear in the display with Aflashing under the Timer symbol:



Use the rotary selector to set the kitchen timer time desired.



Confirm with OK.

The timer settings are saved and will count down in seconds.



The Timer symbol indicates that the timer has been set.

#### At the end of the timer

- the Timer symbol flashes,
- the time starts counting upwards,
- a buzzer will sound if turned on (see "Settings - P 2").
- Select "Settings".

The buzzer will turn off and the symbols in the display will go out.

#### Resetting the timer

■ Select "Timer".

The time previously set appears.

- Use the rotary selector to change the kitchen timer time.
- Confirm with OK.

The changed time is saved and will count down in seconds.

### Canceling the timer

- Select "Timer".
- Use the rotary selector to reduce the kitchen timer time to 00:00.
- Confirm with OK.

The timer has been canceled.

# **Guide to the modes**

The oven has a wide range of modes for preparing a variety of foods.

## **Solo Modes**

Oven modes	Default temperature	Temperature range
Broil ***	_	-
For grilling meats and browning. The entire Browning/Broiling element will glow red to produce the required heat. Provides great browning and searing results. The temperature cannot be altered in this mode.		
Defrost *	_	_
For gently defrosting of frozen food. The fan is used to gently circulate the air inside the oven cavity.		
Rapid PreHeat (1)	320°F	200-450°F
This mode allows the oven to be heated to the desired temperature quickly. Once the desired temperature has been reached the oven mode must be selected.	(160°C)	(100-250°C)
Convection Bake 👃	325°F	75–475°F
Use this mode for baking and roasting on several levels at the same time. You can cook at lower temperatures than with the Surround mode because the fan distributes the heat evenly throughout the cavity for a consistent baking temperature.	(160°C)	(25-275°C)
Convection Broil	375°F	200-500°F
This mode distributes hot air from the Browning/Broiling element over the food using the fan. This allows for a lower temperature to be used then when using Broil ***. Ideal for broiling thicker cuts of meat (e.g. chicken, roulades).	(200°C)	(100-250°C)

# **Guide to the modes**

Oven modes	Default	Temperature
	temperature	range
Auto Roast 🖸	320°F	200-450°F
For a premium result, the meat is seared at a high temperature keeping meat tender and juicy.	(160°C)	(100-230°C)
Gentle Bake  A combination of different heating elements ensures	375°F (190°C)	200-475°F (100-250°C)
excellent baked good, gratins and lasagna.		

# Microwave (Solo) $\overline{\approx}$

Oven modes	Default power level	Power level range
Microwave <b>≋</b>	HI	LO-HI
This mode is used to rapidly defrost, reheat and cook food.		

## **Guide to the modes**

### **Combination Modes**

During Combination modes the heating element and the magnetron turn on and off alternating one after the other. The heating element browns the food and the magnetron helps it cook quickly. The maximum power level is H.

Oven modes	Default temperature	Temperature range
Combi Bake 🕵	320°F (160°C)	85-425°F (30-220°C)
For rapid heating and cooking of food, while browning at the same time. Microwaves will speed up your cooking process without sacrificing the quality of food.	( ** ** **)	(**************************************
When baking do not set the microwave power level higher than <i>LD</i> .		
For roasting at high temperatures and slow cooking at low temperatures. The Microwaves will speed up your cooking process without sacrificing the quality of food. During the searing phase the oven heats up to 450°F (230°C) to seal the meat. Once this temperature has been reached, the oven temperature automatically drops back down to the pre-set cooking temperature for continued roasting.	320°F (160°C)	212-395°F (100-200°C)
The maximum adjustable microwave power level is #I.		

#### How it works

The Speed Oven contains a high-frequency tube called a magnetron. It converts electrical energy into microwaves. The microwaves are then distributed evenly throughout the metal sides of the oven interior to reach the food from all sides

In order for microwaves to reach the food, they must be able to penetrate the cooking container being used. Microwaves can penetrate porcelain, glass, cardboard and plastics, but not metal. Do not, therefore, use dishes made of metal, or which contain metal, for example in the form of gold or silver trim. The metal reflects the microwaves and this could cause sparking. The microwaves cannot be absorbed.

Microwaves pass through a suitable container and find their way directly into the food. All food contains moisture molecules which, when subjected to microwave energy, start to oscillate 2.5 billion times a second. The friction caused by this vibration creates heat, which first starts developing around the outside of the food and then slowly penetrates towards the center. The moisture, fat and sugar content of food will affect the speed at which it is cooked


#### **Advantages**

- Food can generally be cooked with little liquid or oil.
- Defrosting, heating and cooking is faster than using a conventional oven.
- Nutrients, such as vitamins and minerals, are generally retained.
- The color, texture and taste of food are not impaired.


Microwaves stop being produced when the program is interrupted or the door is open. While in operation the closed, sealed foor prevents microwaves from escaping the appliance.

## Microwave power levels


The following power levels can be selected:

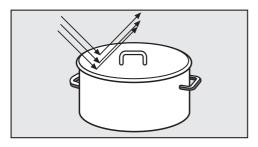

Microwaves are reflected by metal.

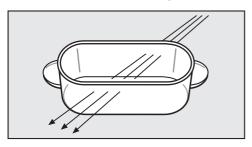

They pass through glass, porcelain, plastic and cardboard.

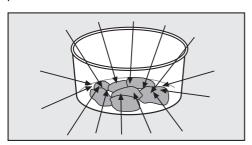

They are absorbed by food.

Non-microwave safe dishes can suffer damage or cause damage to the oven when using the the Microwave (Solo) ≅ and Combination modes with Microwave. Risk of Fire!

The material and shape of containers used affect cooking results and times. Circular and oval containers work best. The food will heat more evenly than in a square container.

# Containers suitable for microwave use

#### Glassware

Heat-resistant glass or ceramic glass are ideal for use with microwave power.

Exception: Do not use crystal glass as it contains lead which can crack or shatter in a microwave.

#### **Porcelain**

Porcelain is a suitable material.

Exception: Do not use porcelain with gold or silver edging or items with hollow knobs or handles, as insufficient ventilation may cause a build-up of pressure.

#### **Earthenware**

Decorated earthenware is only suitable if the decoration is beneath an all-over glaze.

Danger of burning! Wear pot holders when removing earthenware dishes from the Speed Oven.

#### **Plastics**

Plastic containers and plastic disposable containers may only be used with Microwave (Solo) ≅ if they have been declared as suitable for microwave use by the manufacturer. To protect the environment, it is best to avoid using single-use containers.

Do not leave the Speed Oven unattended when reheating or cooking food in disposable containers made of plastic, paper or other flammable materials.

Plastic cookware must be heatresistance up to at least 230°F (110°C). Otherwise the cookware will deform and the possibly come in contact with the food.

- Plastic microwave containers

Readily available from retail stores.

Styrofoam containers

Disposable containers, such as trays made from styrofoam, can only be used for very short, timed warming and reheating of food.

Plastic cooking bags

Plastic cooking bags can be used for cooking and reheating food.
They should be pierced beforehand so that steam can escape. This prevents a build-up of steam and reduces the rish of the bag bursting.

There are also cooking bags that do not need to be pierced. Following the instructions listed on the packaging.

Roasting bags

Follow the manufacturer's instructions.

Fire hazard!

Do not use metal clips, plastic clips containing metal parts, or paper ties containing wire. There is a danger that they will ignite when heated.

Melamine

Plastic tableware made from melamine is not suitable for use in this oven. Melamine absorbs microwave energy and becomes very hot. Before purchasing plasticware be sure that is is microwave-safe.

# Unsuitable containers for microwave use

Dishes with hollow knobs or handles are not suitable for use with microwave modes. Moisture which has gathered in the hollow recesses can cause pressure to build up and the item can explode.

#### Metal

Metal reflects microwaves and obstructs the cooking process.

Do not use metal containers, aluminum, foil, metal cutlery and china with metallic decoration such as gold rims or cobalt blue with Microwave combination modes.

Do not use containers where the foil lid has not been completely removed as small pieces of foil can cause sparking.

#### **Exceptions:**

The rack **supplied** with the Speed Oven is suitable for cooking with Microwave and Combination modes. Do not place the rack on the floor of the oven.

- Metal bakeware can be used with Microwave combination modes.
- Ready-meals in aluminum foil trays can be defrosted and reheated using microwave power as long as the lid is removed.

When using foil trays there is a risk of arcing or sparks occurring in the oven. For this reason, place the foil tray on the glass tray and not on the rack.

The foil tray must be at least 3/4" (2 cm) away from the oven walls. It must not touch them.

However, as food is only heated from the top, it is better to remove the food from the aluminum foil container and transfer it to a dish suitable for use in a microwave oven. The heat distribution will be more even.

#### - Aluminum foil pieces

For even defrosting and to avoid overcooking unevenly shaped cuts of meat, poultry or fish, small pieces of aluminum foil may be used to mask thin pieces for the last few minutes of the program.

Make sure that the aluminum foil is at least 3/4" (2 cm) from the oven walls at all times. It must not touch the walls.

Metal meat skewers or clamps

These should only be used if they are very small in comparison to the size of the cut of meat.

#### Glazes and colors

Some glazes and colors contain metal and are therefore unsuitable for microwave modes.

#### Wood

Wooden dishes are not suitable.

Moisture contained in the wood
evaporates when exposed to
microwave energy, causing the wood to
dry and crack.

# Testing dishes for their suitability


If in doubt as to whether glass, earthenware or porcelain plates or dishes are suitable for use with microwave energy, a simple test can be performed:

- Insert the glass tray on shelf level 1 and place the empty item you wish to test on the glass tray. Fill a suitable glass with water and also place this on the glass tray.
- Close the door.
- Select Microwave (≈).
- Set the highest microwave power level (HI) and a cooking duration of 30 seconds.
- Confirm with OK and start the program.

If a cracking noise is heard accompanied by sparks during the test, turn the appliance off immediately. Any cookware which causes this reaction is unsuitable for use with microwave power. If in doubt, contact the cookware manufacturer.

This test cannot be used to check whether items with hollow knobs or handles are suitable for use with microwave power.

# Placing the dish in the Speed Oven

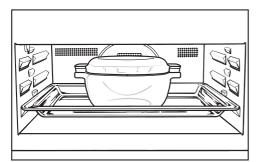


- Insert the glass tray on shelf level 1.
- The dish containing the food should always be placed in the middle of the glass tray.

Placing the food directly on the floor of the oven would give unsatisfactory and uneven results as the microwaves would not be able to reach the food from below.

#### Lid

The lid offers the following advantages:

- Prevents too much steam escaping, especially when cooking foods which need longer to cook, such as potatoes.
- Speeds up the cooking process.
- Prevents food from drying out.
- Helps keep the oven interior clean.

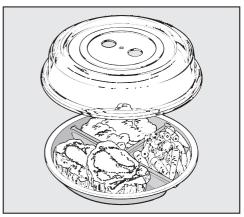

■ When using Microwave (Solo) ≅, always cover the food with a lid or cover made of microwave safe glass or plastic.

These covers are available at retail stores.

Alternatively, use plastic wrap recommended for use in a microwave oven (pierce as instructed by the manufacturer). Heat can cause normal plastic wrap to distort and fuse with the food.

↑ The cover can only withstand temperatures up to 230°F (110°C). Higher temperatures (e.g. those used for Broil and Convection Bake) can cause the plastic to distort and fuse with the food. The cover should only be used with Microwave (Solo) ≅.

The cover should not form a seal with the container. If the cover is used with a container which only has a narrow diameter, there might not be enough room for condensation to escape through the holes in the top. The cover could get too hot and could start to melt.

- Do not use the cover if:
- cooking breaded food,
- cooking food which requires a crisp finish.
- cooking food with a Combi mode.

Otherwise pressure can build up, causing the container to explode, posing a severe risk of injury.

Do not cook or reheat food or liquids in sealed containers, jars or bottles. Otherwise pressure will build up which can cause the bottle or container to explode. Risk of injury.

## **Energy saving tips**

- Remove any accessories from the oven that you do not require for cooking.
- If possible, do not open the door during a program. If the door is opened during a program that is not using microwave power, the heat in the oven automatically turns off. The fans continue to run. As soon as the door is closed again, the program will continue.
- If a temperature range is given, it is best to select the lower temperature and check the food after the shortest cooking time given.
- Convection Broil can be used for a wide variety of foods. Lower temperatures can be used than with other Broil modes which use the maximum temperature setting.

- The factory default setting "P I 5 0" for the time of day display will consume the least amount of energy.
- With the factory default setting "P 7 5 0" the oven interior lighting turns off automatically after 15 seconds. It can be turned on again at any time by touching .
- When cooking with temperatures above 285°F (140°C) and cooking durations longer than 30 minutes, turn the temperature selector down approx. 5 minutes before the end of cooking. The oven heating elements will turn off and the residual heat will finish cooking the food.
- The oven turns off automatically if a button is not pressed to save power.
   The amount of time before the oven turns off depends on the selected settings, e.g. oven mode, temperature, cooking duration, etc.

#### **Quick Guide**

- Turn on the oven.
- Place the food in the oven.
- Using the mode selector select the required oven mode.

The default temperature is displayed:



The oven heating, lighting and cooling fan will turn on

■ Use the rotary selector to change the temperature if necessary.

The current temperature and temperature indicator light ♣↑ appear after a short time.



You will see the temperature rising in the display. A buzzer will sound when the oven temperature is reached if this option is selected (see "Settings - P 2").

After the cooking process:

- Turn the mode selector to •.
- Take the food out of the oven.
- Turn the oven off.

## Cooling fan

After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently the cooling fan will turn off automatically.

### Solo modes

## Changing the temperature

Example: You have selected Convection Bake and 350°F (175°C) and you can see the temperature rising in this display.



You would like to reduce the set temperature to 310°F (155 °C).

■ Use the rotary selector to reduce the temperature.

The ▲ symbol will flash under 

and the temperature is altered in 5°F (5°C) increments.



The altered target temperature is saved. The actual temperature is displayed.

Select "Settings" to toggle between displaying the actual temperature and the set temperature.

#### **Temperature indicator**

The temperature indicator light ♣ turns on whenever the oven heating is turned on.

Once the set temperature has been reached:

- a buzzer will sound if turned on (see "Settings - P 2"),
- the temperature indicator light ♣↑ will go out, and
- the oven heating will turn off.

The temperature regulator ensures that the oven heating and temperature indicator light turn back on when the oven temperature falls below the level set.

## **Rapid PreHeat**

With Rapid PreHeat the preheating phase can be shortened.

Do not use Rapid PreHeat [] when baking pizzas or delicate mixtures. The tops of these items will brown too quickly.

- Select Rapid PreHeat 👫.
- Select a temperature.
- Select the desired oven mode when the temperature indicator light I<sup>↑</sup> goes out for the first time.
- Place the food in the oven.

# Turning a cooking program On / Off automatically

You can set a cooking program to turn on or off automatically. First the mode and cooking temperature must be selected.

The maximum duration that can be set for a cooking program is 12 hours.

It It is recommended to use the automatic On/Off feature when roasting. Do not delay the start of the program for too long when baking. Cake mixtures and doughs will dry out, and the leavening agents will lose their effectiveness.

## Solo modes

#### Setting the duration

Example: Baking a cake for 1 hour 5 minutes

- Place the food in the oven.
- Select the required oven mode and temperature.

The oven heating, lighting and cooling fan will turn on.

■ Select "Settings".



- If necessary, use the rotary selector to move the ▲ symbol until it appears under ♣.
- Confirm with OK.

00:00 h will appear in the display along with a  $\triangle$  flashing under  $\rightleftharpoons$ .



- Use the rotary selector to select the cooking duration (*II: II*5).
- Confirm with OK.

The cooking duration is saved and then counts down in minutes, with the last minute counting down in seconds.

The  $\rightleftharpoons$  symbol indicates that a cooking duration has been set.

# Setting a cooking duration and finish time

Example: The current time is 11:15, you would like a dish with a cooking duration of 90 minutes to be ready at 1:30.

- Place the food in the oven.
- Select the required oven mode and temperature.

The oven heating, lighting and cooling fan will turn on.

#### Set the cooking duration:

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ♣.
- Confirm with OK.

00:00 h will appear in the display along with a  $\triangle$  flashing under  $\rightleftharpoons$ .

- Use the rotary selector to select the cooking duration (□l:∃□).
- Confirm with OK.

The cooking duration  $\oplus$  is saved and then counts down in minutes:



#### Set the finish time:

■ Use the rotary selector to move the
 ▲ until it appears under

-:- - appears:



■ Confirm with OK.

*I2:45* will appear in the display (current time of day + cooking duration = II:15 + I:30).



- Use the rotary selector to enter the finish time (1:30).
- Confirm with OK

The finish time disinow saved.



The oven heating, lighting and cooling fan will turn off.

As soon as the start time (1:30 pm - 1:30 = 12:00) has been reached, the oven heating, lighting and cooling fan will turn on.

#### At the end of the cooking duration

- 0:00 appears in the display,
- خنځ flashes,
- the oven heating and lighting will turn off,
- the cooling fan will continue to run, and
- a buzzer will sound if turned on (see "Settings - P 2").
- Turn the mode selector to •.
- Take the food out of the oven.
- Turn the oven off.

If the dish is not cooked to your liking, you can extend the cooking duration by entering a new duration.

## Solo modes

#### Changing the cooking duration

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ♣.

The cooking time remaining appears in the display.

- Confirm with OK.
- Use the rotary selector to adjust the cooking duration.
- Confirm with OK.

The changed cooking duration is now saved.

#### Deleting a cooking duration

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ♣.
- Confirm with OK.

The  $\triangle$  symbol will flash under -.

- Use the rotary selector to select the cooking duration (00:00).
- Confirm with OK.

The cooking duration and finish time are deleted.

■ Select "Settings".

The current temperature will appear. The oven heating remains turned on.

To complete the cooking program:

- Turn the mode selector to •.
- Take the food out of the oven
- Turn the oven off.

If you turn the mode selector to • or turn the oven off, the settings for the cooking duration and the finish time will be deleted.

### Deleting a finish time

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under 🔼.
- Confirm with OK.

The ▲ symbol will flash under 🖔.

- Use the rotary selector to enter the finish time (1:30).
- Confirm with OK.

The finish time is now deleted.

# Microwave (Solo) | ≈ |



#### **Quick Guide**

- Turn on the oven.
- Place the food in the oven
- Turn the mode selector to Microwave (Solo) (≋).

The recommended power level H will appear in the display with \_ flashing under (≥):



The following power levels can be selected: LO, -, --, ---, HI.

- Turn the mode selector to set the microwave power level, if necessary.
- Confirm with OK.

00:00 min will appear in the display with

📤 flashing under 🔑:



■ Use the rotary selector to select the cooking duration (e.g. 01:30 minutes).

The maximum duration that can be set depends on the power level selected.

Confirm with OK.

01:30 min appears in the display with flashing under Start:



Confirm with OK.

The magnetron, lighting and cooling fan will come on and the cooking program will start

#### At the end of the cooking duration

- 0:00 appears in the display.
- جَنَّۃ flashes,
- the cooling fan will continue to run,
- a buzzer will sound if turned on (see "Settings - P 2").
- Turn the mode selector to •.
- Take the food out of the oven.
- Turn the oven off

If the dish is not cooked to your liking, you can extend the cooking duration by entering a new duration.



### Cooling fan

After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

The cooling fan will turn off after a set time.

## Changing the microwave power

- Select "Settings".
- If necessary, use the rotary selector to move the \_ symbol until it appears under ≥.

The microwave power level will appear.

Confirm with OK.

The  $\triangle$  symbol will flash under  $\boxtimes$ .

- Use the rotary selector to adjust the power level.
- Confirm with OK.
- Select "Settings".

The adjusted power level is now saved and will appear in the display.

To track the cooking duration in the display:

- Select "Settings".
- If necessary, use the rotary selector to move the \_ symbol until it appears under 🕁.
- Select "Settings".

The cooking duration remaining will appear in the display.

## Changing the cooking duration

The duration can be seen counting down in the display.

- Use the rotary selector to adjust the cooking duration.
- Confirm with OK.

The adjusted cooking duration will appear in the display. The 
symbol will flash under Start:

■ Confirm with OK

The program will restart using the new duration



## Turning a cooking program On / Off automatically

You can set a cooking program to turn on or off automatically. First the mode and cooking duration must be selected.

#### Setting a finish time

In addition to setting a start time, you can set a finish time.

- Set the microwave power level and cooking duration.
- After selecting the cooking duration select "Settings".
- If necessary, use the rotary selector to move the \_ symbol until it appears under 2.

-:- - appears:



Confirm with OK.

The finish time will appear in the display (current time of day + duration).

- If necessary, set the finish time using the rotary selector.
- Confirm with OK.

The finish time dississ now saved.

The program will begin at the set start time.

#### Deleting a finish time

- Select "Settings".
- If necessary, use the rotary selector to move the \_ symbol until it appears under 🖰.
- Confirm with OK.

The ▲ symbol will flash under 🖔.

- Turn the rotary selector counterclockwise until - -:- - appears in the display.
- Confirm with OK.
- Select "Settings".

The duration will appear with flashing under Start.

Confirm with OK.

The finish time is now deleted.

The program will start using the duration set.

#### **Quick Guide**

Microwave Combi modes use microwave power with another cooking mode (e.g. Convection Bake, Auto Roast). This combination enables shorter cooking durations.

- Turn on the oven.
- Place the food in the oven.
- Using the mode selector select the required oven function.

The oven lighting does not turn on.

Power level *HI* appears, and ▲ flashes under ≅:



The following power levels can be selected: I if and III

- Turn the mode selector to set the microwave power level, if necessary.
- Confirm with OK.

The recommended temperature appears in the display and ▲ flashes under ♣:



If necessary, adjust the temperature within the given range using the rotary selector. 00:00 min will appear in the display with

▲ flashing under ₺:



A maximum duration of 2:00 hours can be set.

- Use the rotary selector to set the cooking duration (e.g. 01:45 h).
- Confirm with OK.

Ol:45 h appears in the display with A flashing under Start:



■ Confirm with OK.

The cooking program will start. The oven heating and cooling fan will turn on.

You will see the temperature rising in the display. A buzzer will sound when the oven temperature is reached if this option is set (see "Settings - P ≥").

The remaining time appears in the display.

### **Combi Modes**

#### At the end of the cooking duration

- 0:00 appears in the display,
- خنَّ flashes,
- the oven heating turns off automatically,
- the cooling fan will continue to run,
- a buzzer will sound if turned on (see "Settings - P 2").
- Turn the mode selector to •.
- Take the food out of the oven.
- Turn the oven off.

If the dish is not cooked to your liking, you can extend the cooking duration by entering a new duration.

## **Cooling fan**

After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently the cooling fan will turn off automatically.

## Changing the cooking duration

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ¿.

The cooking time remaining appears in the display.

■ Confirm with OK.

The  $\triangle$  symbol will flash under  $\stackrel{\cdot}{\cup}$ .

- Use the rotary selector to adjust the cooking duration.
- Confirm with OK.
- Select "Settings".

The adjusted cooking duration will appear in the display. The ▲ symbol will flash under Start:

Confirm with OK.

The program will restart using the new duration.

# Changing the microwave power

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ※.

The microwave power level will appear.

Confirm with OK.

The ▲ symbol will flash under 

.

- Use the rotary selector to adjust the power level.
- Confirm with OK.
- Select "Settings".

The adjusted power level is now saved and will appear in the display.

To track the cooking duration in the display:

- Select "Settings".
- If necessary, use the rotary selector to move the ▲ symbol until it appears under ♣ .
- Select "Settings".

The cooking duration remaining will appear in the display.

## Changing the temperature

 Use the rotary selector to change the temperature if necessary (see "Modes without microwave -Changing the temperature").

# Turning a cooking program On / Off automatically

### Minute +

With the Minute + function the microwave starts with a set microwave power level and cooking time, e.g. heating liquids.

The default power level is *HI* with a cooking time of 1 minute.

**Tip:** You can alter the power level and the duration. The maximum duration will depend on the microwave power level selected (see "Settings – P  $\mathcal{G}$ ").

This mode can only be used when no other cooking programs are in use and the mode selector is in the • position.

■ Select "Minute +", and the cooking process will start.

Touching it repeatedly will increase the cooking time.

The time remaining appears in the display.

You can cancel the program at any time by selecting ①.

## At the end of the program

- a buzzer will sound if turned on (see "Settings - P 2").
- the oven will turn itself off automatically.

With the Popcorn function, the microwave starts with a set microwave power level and cooking duration.

The microwave power level is preset at ---- and the duration at 3 minutes. This is suitable for most brands of microwave popcorn.

**Tip:** The duration can be changed up to a maximum of 4 minutes. The microwave power level cannot be changed (see "Settings – *P III*").

This mode can only be used when no other cooking programs are in use and the mode selector is in the • position.

■ Touch "Popcorn" to start the program.

The time remaining appears in the display.

You can cancel the program at any time by selecting ①.

Do not leave the oven unattended during this program and follow the manufacturers instructions.

## At the end of the program

- a buzzer will sound if turned on (see "Settings - P 2").
- the oven will turn itself off automatically.

#### **Bake**

Eating food which has been cooked correctly is important for good health.

Only bake cakes, pizza, french fries, etc. until they are golden brown. Do not overcook them.

#### Oven modes

#### Convection Bake 👃

Recommended for cookies, quick batters, choux pastry, phyllo, and strudel.

#### Combi Bake <sup>≋</sup>₃

Recommended for baked goods that require a longer baking time, such as yeast-based doughs, enriched doughs, and kneaded doughs.

The baking time is shortened.

During baking the microwave power level must not exceed level ---.

#### **Bakeware**

The bakeware used depends on the oven mode chosen and how the food is prepared.

- Convection Bake 
   Bakeware made of any heat-resistant material is suitable. Light-colored, thin, non-reflective metal baking pans can be used, but results may not be as good as with dark non-reflective bakeware
- Combi Bake ≅₅
   Only use oven-safe dishware suitable for microwave use (see "Suitable containers for microwave use"), such as oven-safe glass or ceramic dishes as these allow microwaves through them

Metal containers reflect microwaves so food will only cook from above. Cooking durations would therefore be longer and metal tins could also cause sparking. Place the dish on the glass tray such that it cannot touch the oven walls. If the dish being used causes sparking, do not use it for combination cooking programs again.

## Parchment paper

Place french fries, croquettes and similar types of food on paper.

## Temperature #

As a general rule, select the lower temperature given in the chart.

Choosing a baking temperature higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

## **Baking duration** ①

Check if the food is cooked at the end of the shortest duration quoted. To check if a cake is ready insert a wooden skewer or toothpick into the center, it should come out clean.

## Shelf levels 3

Convection Bake

Cakes in bakeware: Level 1 from the bottom

Flat baked goods (e.g. cookies): Level 2 from the bottom When cooking on 2 levels at one time:

Levels 1+3 from the bottom or levels 2+3

- Combi Bake <sup>≋</sup>ୟ

Insert the glass tray on shelf level 1 and place the bakeware on it.

## **Tips**

- Setting the cooking duration. When baking, the oven should not be set to start after an extended period of time. Otherwise the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.
- Place cakes in rectangular bakeware on the rack with the longer side across the width of the oven for optimum heat distribution and even results.

#### Roast

Always follow USDA guidelines on food safety.

#### Oven modes

## Convection Bake 🙏, Auto Roast 🚭

For roasting meat, fish and poultry dishes in which a browned finish is desired.

## Combi Bake <sup>≊</sup>♣, Combi Auto Roast <sup>ଛ</sup>⊕

The program duration is shorter with these modes.

Set the microwave to the following levels for the entire cooking duration.

- For meat and fish: max. level HI.
- For poultry: level LQ.

This combination program is **not** suitable for cooking roast beef or tenderloins. The center would be too well cooked before the exterior is browned.

#### Cookware

Please take into account the material of your bakeware in your choice of oven mode:

Convection Bake / Convection Roast
 / Auto Roast :
 Oven dishes, ovenproof ceramic dishes and glass dishes.

Make sure that the pot and lid have heat-resistant handles.

- Combi Bake 🗐 / Combi Auto Roast 🖘:

Dishes must be suitable for use in a microwave oven and must not have metal lids (see "Containers suitable for microwave use").

#### Roasting in a closed pan

- Season the meat and place it in the roasting dish. Dot with butter or brush with oil if necessary. For large lean cuts of meat 4.5-6.5 lbs (2-3 kg) and fatty poultry, add about 1/2 cup (1/8 l) of water to the dish.
- When using a roasting bag, follow the manufacturer's instructions.

#### Roasting on the rack

Add a little fat or oil to very lean meat or place a few strips of bacon on the top.

Do not add too much liquid during cooking as this will hinder the browning process.

## Temperature #

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

## Shelf levels 3

- Convection Bake ♣ / Auto Roast☐:Rack with meat on it on shelf level 1
- Combi Bake (₹೩) /
  Combi Auto Roast (₹೨):
  Rack or glass tray with meat on it on shelf level 1

## **Tips**

- Resting time: At the end of the program, take the roast out of the oven, cover with aluminum foil and let stand for about 10 minutes. This helps retain the juices when the meat is sliced.
- The larger the cut of meat to be roasted, the lower the temperature should be. The roasting process will take a little longer, but the meat will be cooked evenly and the outside will become crisp.
- Use a roast probe for accurate cooking temperatures and best results.

### **Broil**

① Danger of burns!

Broil with the oven door closed. If you broil with the door open the hot air will escape from the oven before it has been cooled by the cooling fan.

The controls will get hot.

#### Oven modes

### Maxi Broil \*\*\*

For broiling thin cuts of meat and browning.

The entire Browning / Broiling element will get hot and glow red.

#### Convection Broil

Use this function for thick pieces of meat, London broil.

The Browning / Broiling element and the fan turn on alternately.

## **Cooking accessories**

- Broiling on the wire oven rack.
- Brush the rack with oil, and place the food on it. It is best to broil food of a similar thickness at the same time so that the broiling duration for each item does not vary too greatly.

## Temperature |

- Maxi Broil The temperature cannot be changed.
- Convection Broil As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through. Thin cuts can generally be broiled at 425°F (220°C), thicker cuts at 355-400°F (180–200°C).

## **Preheating**

Always preheat the oven for about 5 minutes with the door closed before Broiling.

Do not set a microwave power level during pre-heating.

## Shelf levels 3

- Broil Use shelf level 2 or 3 depending on the thickness of the food.
- Convection Broil Use shelf level 1 or 2 depending on the thickness of the food.

## **Testing doneness**

Always follow USDA guidelines for safe food temperatures.

## Preparing food for broiling

Rinse the meat under cold water and pat dry. Do not season the meat with salt before broiling, this will draw out the juices.

Brush the meat with oil, if necessary. Do not use other types of fat as they can easily burn and cause smoke.

Clean fish as usual. To enhance the flavor, salt or lemon can be added.

#### **Broil**

■ Preheat the Browning / Broiling element for approx. 5 minutes with the door closed.

Do not set a microwave power level during pre-heating.

- Place the food on the wire rack.
- Select the required oven mode and the temperature (only with Convection Broil ③).

Danger of burns!
When the oven is hot use pot holders to insert, remove or turn the food, or when adjusting the oven shelves, etc.

- Place the food on the appropriate shelf level (see the Broiling chart).
- Close the door.

# Microwave: Defrosting/Reheating/Cooking

Always follow USDA guidelines on food safety.

	Oven modes	<b>≋</b> / <b></b> ₽	Suitable for:		
Defrost	<b>≋</b>	LO	Very delicate foods such as cream, butter, filled sponge cakes, cheese		
		LO	all other foods		
Reheat	≋		Food for infants and children		
			All types of food; frozen meals that do		
			not need browning		
		HI	Drinks		
Cooking	≋		Casseroles; puddings; frozen foods that		
		Heating-up	do not need browning		
		Continued cooking			
		LO			
		Simmering			
	Select a Microwave Combi mode if you want to shorten cooking durations and have a crisp finish to the dish.				
	<b>≋</b> ⊕	<i>НІ</i> + 320-355°F	Sear using a high temperature to start with, then continue cooking with a		
		(160–180 °C)	lower temperature.		
	≅₄	<i>HI</i> + 300-340°F (150–170 °C)	Ready-meals which need to be browned, e.g. gratins		

Microwave/Microwave power level / 
 © Combi Auto Roast / 
 © Combi Bake / 
 Temperature

The duration required depends largely on the nature of the food, the amount and its initial temperature. Food that has been refrigerated, for example, takes longer to reheat than food at room temperature. Please refer to the relevant charts.

# Microwave: Defrosting/Reheating/Cooking

# Before defrosting, reheating and cooking

- Place food (frozen or unfrozen) in a dish that is suitable for microwave use, and cover it.
- Place the dish in the middle of the glass tray on shelf level 1.

#### With Microwave Combi modes

 Use only microwave-safe and heatresistant cookware.

A lid is not usually required.

Never use a lid with Combi Auto Roast ≅☐ as the food will not brown.

■ Place the glass tray on shelf level 2.

Place pre-made meals in aluminum containers directly on the glass tray.

# During the defrosting, reheating and cooking process

■ Turn or stir the food several times. Stir the food from the outside towards the middle, as food heats more quickly from the outside.

# After defrosting, reheating and cooking

Compensating times are resting periods in which the temperature is uniformly distributed in the food.

Allow the food to stand at room temperature for a few minutes to enable the heat to spread evenly throughout the food.

① Danger of burns!

After reheating food, especially food for babies and small children, stir the food or shake the container and check that the temperature does not pose any danger. Double check after it has been left to stand.

Danger of burns!

Be careful when removing dishes from the appliance. Although heat is not normally produced in the container itself by the microwaves (apart from stoneware), heat transfer from the food to the container may be considerable, making the container itself hot.

Use pot holders when removing dishes.

- Always ensure that food is sufficiently cooked or reheated.
- Always follow proper food safety guidelines.

# Microwave: Defrosting/Reheating/Cooking

### Tips on reheating

Danger of burns! Food for infants and children must not be too hot.
Only heat food for infants
30-60 seconds at microwave power level --.

Otherwise pressure can build up, causing the container to explode, posing a severe risk of injury.

Do not cook or reheat food or liquids in sealed containers, jars or bottles.

Otherwise pressure will build up which can cause the bottle or container to explode. Risk of injury.

The boiling wand ensures that the liquid heats up evenly with bubbles forming at the right time.

When reheating liquids place the boiling wand supplied into the cup or glass.

## Eggs may burst.

Never reheat hard boiled eggs using Microwave (Solo) ≅, even without the shell. The eggs can explode.

## **Cooking tips**

Food with a thick skin or peel, such as tomatoes, sausage, potatoes and egg plant can burst when heated. Pierce or score the skin of these foods several times to allow steam to escape.

Eggs heated in their shell can burst, even after removed from the oven.
Eggs can only be cooked in their shells using Microwave (Solo) 🗟 in a specially designed egg-boiling device available from speciality stores.

When heating shelled eggs, the yolk may still burst after cooking.

Prick the yolk several times before cooking to avoid this.

When to use	Notes
Defrosting large quantities of food at once, e.g. 4.5 lbs (2 kg) fish	The glass tray can be used on shelf level 1 for defrosting food.
Reheating food	Always cover food when reheating it, except when reheating fried food or food with breading.
Cooking vegetables	Add a little water to vegetables which have been kept stored. Vegetable cooking times depend on the texture of the vegetable. Fresh vegetables contain more water than vegetables which have been stored and usually cook more quickly.
Cooking frozen meals	Deep frozen meals can be defrosted and then reheated or cooked in one process. Follow the instructions on the package.

# Tables for defrosting, reheating and cooking food using Microwave (Solo) $\boxed{\approx}$

The following notes apply to all tables:

Always follow USDA guidelines on food safety.

- Take note of the recommended microwave power levels, durations and standing times. These take the consistency, the quantity and the initial temperature of the food into account.
- In general you are recommended to select the middle duration.
- Place the food on the glass tray and use shelf level 1.

### Table for defrosting food

	Quantity	<b>*</b>	<u> </u>	$\square$
			[min]	[min] <sup>1)</sup>
Dairy products				
Cream	1 cup (250 ml)	LO	13–17	10–15
Butter	1/2 lb (250 g)	LO	8–10	5–10
Cheese slices	1/2 lb (250 g)	LO	6–8	10–15
Milk	2 cups (500 ml)	LO	14–16	10–15
Quark	1/2 lb (250 g)	LO	10–12	10–15
Baked Goods				
Pound Cake (1 slice)	approx. 1/4 lb	LO	1–2	5–10
Pound Cake	approx. 3/4 lb	LO	4–6	5–10
Fruit Cake (3 slices)	approx. 3/4 lb	LO	6–8	10–15
Butter Cake (3 slices)	approx. 3/4 lb	LO	5–7	5–10
Cream Cake (1 slice)	approx. 1/4 lb	LO	1:30	5–10
Cream Cake (3 slices)	approx. 3/4 lb	LO	4-4:30	5–10
Yeast rolls, puff pastries (4 pieces)		LO	6–8	5–10
Fruit				
Strawberries, raspberries	1/2 lb (250 g)	LO	7–8	5–10
Currants	1/2 lb (250 g)	LO	8–9	5–10
Plums	1 lb (500 g)	LO	12–16	5–10
Meat				
Ground Meat	1 lb (500 g)	LO	16–18	5–10
Chicken	2 lbs	LO	34–36	5–10
Vegetables				
Peas	1/2 lb (250 g)	LO	8–12	5–10
Asparagus	1/2 lb (250 g)	LO	8–12	10–15
Beans	1 lb (500 g)	LO	13–18	10–15
Red cabbage	1 lb (500 g)	LO	15–20	10–15
Spinach	3/4 lb (300 g)	LO	12–14	10–15

<sup>&</sup>lt;sup>1)</sup> Allow food to stand at room temperature. During this resting time, the temperature will distribute throughout the food more evenly.

### Table for reheating food

	Quantity	<b>*</b>	4	$\mathbb{Z}$
			[min:sec]	[min] <sup>1)</sup>
Drinks <sup>2)</sup>				
Coffee (Drink temperature 140-150°F/60–65°C)	1 Drink (2/3 cup/200 ml)	НІ	00:50–1:10	_
Milk (Drink temperature 140-150°F/60-65°C)	1 Drink (2/3 cup/200 ml)	Н	1:00–1:50 <sup>3)</sup>	_
Boiling water	1 Bowl (1/2 cup/125 ml)	Н	1:00–1:50	_
Baby bottle (milk)	approx. 3/4 cup		00:50–1:00	1
Mulled wine (Drinking temperature 140-150°F/60-65°C)	1 Glass (3/4 cup/200 ml)	НІ	00:50–1:10	_
Food <sup>3)</sup>				
Baby Food (room temperature)	1 Jar (1/2 lb/200 g)		00:30–1:00	1
Cutlets, fried	1/2 lb (200 g)		3:00–5:00	2
Fish fillet, fried	1/2 lb (200 g)		3:00-4:00	2
Roast meat in gravy	1/2 lb (200 g)		3:00–5:00	1
Side dishes	1/2 lb (250 g)		3:00–5:00	1
Vegetables	1/2 lb (250 g)		4:00–5:00	1
Gravy	1 cup (250 ml)		4:00–5:00	1
Soup / Casserole	1 cup (250 ml)		4:00–5:00	1
Soup / Casserole	2 cups (500 ml)		7:00–8:00	1

<sup>&</sup>lt;sup>1)</sup> Allow food to stand at room temperature. During this resting time, the temperature will distribute throughout the food more evenly.

<sup>&</sup>lt;sup>2)</sup> Place the boiling wand supplied into the cup or glass.

<sup>&</sup>lt;sup>3)</sup> The times listed are for food with a starting temperature of approx. 40°F (5°C). For dishes that are not commonly stored in the refrigerztor, it is assumed that the room temperature is about 70°F (20°C).

### Table for cooking food

	Quantity	Level () [min]	+	Level () [min]	[min] 1)
Meat					
Meatballs in sauce (3/4 lb/400 g		10–12		_	2–3
meat)					
Stew (1.5 lbs/750g meat)		16	+	15	2–3
Poultry	1	1			,
Chicken in sauce	approx. 1 3/4 lb (800 g)	4	+	12	2–3
Chicken Curry	approx. 2 lbs (900 g)	5	+	12	2–3
Chicken Risotto	approx. 3 1/2 lbs (1.6 kg)	10	+	15	3–5
Fish					
Fillet in sauce	approx. 2 lbs (900 g)	8–10		_	2–3
Fish Curry	approx. 3 1/4 lbs (1.5 kg)	5	+	12	3–5
Fresh vegetables					
Carrots	3/4 lb (300 g)	2	+	6	2
Cauliflower florets	1 lb (500 g)	6	+	10	2
Peas	approx. 1 lb (450 g)	5	+	10	2
Peppers, cut into strips	1 lb (500 g)	5	+	10	2
Kohlrabi, batons	1 lb (500 g)	3	+	8	2
Brussels Sprouts	3/4 lb (300 g)	3	+	9	2
Asparagus	1 lb (500 g)	5	+	8	2
Broccoli, florets	3/4 lb (300 g)	4	+	4	2
Leeks	1 lb (500 g)	5	+	8	2
Green Beans	1 lb (500 g)	4	+	12	2
Frozen Vegetables					
Peas, Mixed Vegetables	approx. 1 lb (450 g)	5	+	11	2
Spinach	approx. 1 lb (450 g)	5	+	7	2
Brussels Sprouts	3/4 lb (300 g)	4	+	6	2
Broccoli	3/4 lb (300 g)	3	+	6	2
Leeks	approx. 1 lb (450 g)	4	+	8	2
Desserts					-
Quark Soufflé (1 lb/500 g quark)		10–12		_	_
Fruit Compote (2 cups/500 ml fruit juice or 1 lb/500 g fruit)		6–8		-	-

① Cooking / 🛭 Resting Time

<sup>&</sup>lt;sup>1)</sup> Allow food to stand at room temperature. During this resting time, the temperature will distribute throughout the food more evenly.

### **Defrosting without Microwave power**

To gently defrost food use the Defrost \*\* mode.

When this mode is selected, the fan turns on and circulates the air around the oven cavity.

Danger of salmonella poisoning!
Observe proper hygiene rules when defrosting poultry.
Do not use the defrosting liquid.

#### **Tips**

- Place the food to be defrosted on the glass tray or in a suitable dish.
- Small pieces of poultry can be placed on an upside down dish in the glass tray. This way they will not be lying in defrosting liquid.
- Use shelf level 1 or 2 depending on the thickness of the food.

#### **Defrosting durations**

The duration needed for defrosting depends on the type and weight of the frozen food.

Frozen food	Weight [lb / g]	Time [min]
Chicken	800	90–120
Meat	500	60–90
	1,000	90–120
Sausage	500	30–50
Fish	1,000	60–90
Strawberries	300	30–40
Butter Cake	500	20–30
Bread	500	30–50

## **Canning**

Always follow the USDA canning guidelines.

### **Canning Containers**

Danger of injury!

Do not use the appliance to heat up or can food in sealed jars or containers.

Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.

### Convection Bake 👃

For canning large quantities of fruit and vegetables [max. 5 jars, 1/2 pint (1/2 l) each].

- Only use jars designed for canning:
- Canning jars, or
- Jars with twist-off lids.


### Microwave **≋**

For canning small quantities of fruit and vegetables.

Only use special jars for canning.

Sparking can be cause by metal brackets on jars!

Close the jars with clear adhesive tape or with clips suitable for microwave use. Never use metal clips or jars with screw-on lids.

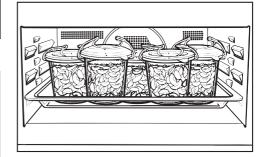

■ Prepare the jars in the usual way. Fill the jars up to 3/4" (2 cm) below the rim.

## **Convection Bake**

<b>5 Jars</b> 1/2 pint (1/2 liter) <sup>1)</sup>	Temperature	Time from simmering point <sup>2)</sup> [min]	Continued warming duration [min]
Fruit / Cucumbers	300-340°F (150-170°C) until simmering. Allow to stand in the turned off oven afterwards.	None	25–30
Asparagus, Carrots	300-340°F (150-170°C) until simmering. Then	60–90	25–30
Peas, Beans	continue cooking at 212°F (100°C).	90–120	25–30

## Microwave **≅**

<b>5 Jars</b> 1/2 pint (1/2 liter) <sup>1)</sup>	Microwave power level	Time until simmering point <sup>2)</sup> [min]	Time from simmering point <sup>2)</sup> [min]
Fruit / Cucumbers	to stand in the turned off oven afterwards.	3–15 depending on number of jars	-
Asparagus, Carrots	until simmering. Then continue cooking at level	3–15 depending on	approx. 15
Peas, Beans	<del></del> .	number of jars	approx. 25

<sup>1)</sup> Glass tray on shelf level 1

<sup>&</sup>lt;sup>2)</sup> Simmering = Consistent bubbling

## **Canning**

### After canning

Danger of burns!
Use pot holders when removing the jars from the oven.

- Take the jars out of the oven.
- Cover the jars with a towel and leave to set for approx. 24 hours.
- Remove any clips or the adhesive tape.
- Make sure all jars are closed properly when storing them.

The Gentle Bake mode is ideal for casseroles and gratins which require a crisp top.

### Frozen food

### **Tips**

### Cakes, pizza, baguettes

- Bake on parchment paper placed on the wire oven rack.
- Use the lowest temperature recommended by the manufacturer.

## French fries, croquettes and similar items

- Place these frozen foods on the glass tray.
   Place parchment paper underneath.
- Use the lowest temperature recommended by the manufacturer.
- Turn several times during cooking.

### **Preparation**

Eating food which has been cooked correctly is important for good health.

- Select the oven mode and temperatures recommended by the manufacturer.
- Preheat the oven.
- Place the food in the preheated oven on the recommended shelf level.
- Check the food at the end of the shortest time recommended on the packaging.

⚠ Danger of burns!

Make sure the heating elements are turned off and allowed to cool completely.

Danger of injury! The steam from a steam cleaner could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean this appliance.

All surfaces can discolor or be damaged if unsuitable cleaning agents are used. The front of the oven, in particular, will be damaged by oven cleaners and descalers. All surfaces are susceptible to scratches. Scratches on glass surfaces could cause a breakage. Remove any cleaning agent residues immediately.

Stubborn soiling may damage the oven.

Once the oven has cooled clean the oven, the inside of the door and the door seal. Waiting too long to clean the oven will make if much more difficult to clean.

Check the door and door seal for any sign of damage. If any damage is seen, the oven should not be used again. Contact Miele.

### Unsuitable cleaning agents

To better maintain your appliance avoid the following:

- cleaners containing soda, ammonia, thinners, or chlorides,
- cleaners containing descaling agents or lime removers,
- abrasive cleaning agents e.g. powder or cream cleansers, pumice stones,
- solvent-based cleaners,
- stainless steel cleaners,
- dishwasher soap (powder),
- glass cleaning agents,
- ceramic cooktop cleaner,
- hard, abrasive brushes or sponges,
   e.g. pot scourers, brushes or
   sponges which have been previously
   used with abrasive cleaning agents,
- eraser sponges,
- metal scrapers,
- steel wool or scouring pads,
- stainless steel spiral pads,
- spot cleaners,
- oven cleaners\*.
- \* These can, however, be used to remove very heavy soiling from PerfectClean treated surfaces.

Soiling not removed immediately can become difficult to remove.

Continued use without cleaning will make the oven much harder to clean.

Remove any soiling immediately.

Only the glass tray and the boiling wand are dishwasher-safe.

### **Tips**

- Soiling caused by spilt juices and cake mixtures is best removed while the oven is still warm. Use caution and make sure the oven is not too hot - Danger of burns.
- The Browning/Broiling element can be lowered for easier cleaning.
- To neutralize odors in the oven, put a container of water with some lemon juice in the oven and heat for a few minutes.

### **Normal soiling**

Moisture inside the oven can cause damage.

Wipe out the oven with a damp cloth so no excess moisture enters the interior of the appliance through the openings.

- Remove normal soiling immediately using a clean sponge with warm water and liquid dish soap applied with a clean, damp microfiber cloth.
- After cleaning, ensure that any detergent residue is removed with clean water.
  This is particularly important when cleaning surfaces treated with PerfectClean enamel as detergent residue can impair the non-stick properties.
- After cleaning, dry the surfaces with a soft cloth.

### Stubborn soiling

Fruit juices and roasting juices may cause permanent discoloration to the surfaces of the oven. This will not affect the performance of the oven. Do not use force to remove stains. Clean only as described in this manual.

- Moisten stubborn soiling with a solution of warm water and liquid dish soap, leave for a few minutes to take effect.
- If necessary, the rough side of a dish sponge can be used to remove the soiling.
- After cleaning, rinse thoroughly with clean water, and dry with a soft cloth.

Stubborn soiling on PerfectClean surfaces can be cleaned using Miele Oven Cleaner. It must only be applied to cold surfaces in accordance with the instructions on the packaging.


Non-Miele oven spray must only be used in a cold oven and for no longer than 10 minutes.

- If necessary, the rough side of a dish sponge can be used to remove the soiling.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and dry with a soft cloth.

# Lowering the Browning / Broiling element


If the oven interior is very dirty the Browning/Broiling element can be lowered. It is recommended to clean the oven interior with a damp sponge regularly.

♠ Danger of burns!
Make sure the heating elements are turned off and allowed to cool completely.

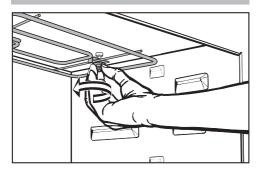

Uncrew the nut and lower the Browning/Broiling element.

Use caution not to damage the Browning / Broiling element.
Do not use force to lower the Browning / Broiling element.

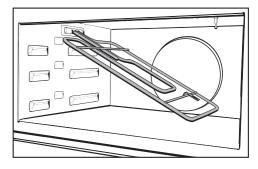

- Carefully lower the Browning / Broiling element.
- Clean the oven interior with a damp cloth or sponge.
- After cleaning, raise the Browning/ Broiling element gently back up again. Refit the nut and tighten to secure the element back in position.

The following faults can be corrected without contacting the Miele Service Department. If in doubt, please contact Miele.

Danger of injury!Repairs should only be carried out by a qualified and trained professional in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage.

Problem	Possible cause and remedy
This display is dark.	The time of day display is deactivated, so when the appliance is turned off, the time of day display is turned off.  ■ As soon as the oven is turned on, the time of day will appear. If you want it to be displayed continuously, the setting to turn the time of day display back on must be changed (see "Settings – P I").
	There is no power to the appliance.  Check if the circuit breaker has tripped.
A program will not start.	If running a program with Microwave, the door is open.  Check if the door is closed properly.
	If running a program with Microwave, a microwave power level or cooking time have not been set.  ■ Be sure to set the power level and cooking time.
	If running a Combi mode, all necessary setting have not been set.  ■ Be sure to set the microwave power level, temperature and cooking time.


Problem	Possible cause and remedy
An oven mode has been selected and the time of day and the $\bigoplus$ symbol still appear in the display.	The system lock ⊕ is On.  ■ Turn off the system lock (see "System lock ⊕").
The oven does not heat up.	Demo mode has been activated. <i>ΠΕ5</i> _ appears in the display.  The oven can be operated but does not heat up.  ■ Deactivate Demo mode (see "Settings – <i>P I3</i> ").
An oven mode has been selected but the oven is not working.	There has been a power failure which has caused the current cooking process to stop.  ■ Turn the mode selector to the • position and turn the oven off. Start the cooking process again.
l2:00 will appear in the display with ▲ flashing under ⊕:	The power supply was interrupted for longer than 200 hours.  ■ Reset the time of day (see "Before using for the first time").
0:00 appears unexpectedly in this display and the  symbol flashes at the same time. The buzzer may also be sounding.	The oven has been operating for an unusually long period of time, this has activated the "Safety cut-out feature".  Turn the mode selector to •. The oven is now ready to use again immediately.
F XX appears in the display.	A fault has occurred that you cannot resolve.  Contact Miele Technical Service.
If the door is opened while using Microwave (Solo) ≅, the oven stops making a noise.	This is not a fault. If Microwave (Solo) ≅ is being used, the cooling fan will turn off when the door is opened.
A noise is heard after the cooking process is complete.	The cooling fan has turned on. It will turn off automatically after a short time.

Problem	Possible cause and remedy
An strange sound is heard when the oven is operating in microwave mode.	Metal was used in the oven during a program with microwave.  ■ Check if there are sparks caused by using metal dishes (see "Suitable containers for microwave use").
	When using a program with microwave the dish was covered with alumimum foil.  If necessary, remove the cover.
	The wire oven rack was used during a program with microwave.  ■ Always use the glass tray for programs with microwave.
The oven has turned itself off.	The oven turns off automatically if a button is not pressed after a certain amount of time or after a cooking program has ended to save power.  Turn the oven back on.
Baked goods are not cooked properly after following the times	A different temperature than that given in the recipe was used.  Select the temperature required for the recipe.
given in the chart.	The ingredient quantities are different from those given in the recipe.  Double check the recipe. The addition of more liquid or more eggs will make a wetter mixture which will take longer to cook.
The browning is uneven.	The wrong temperature or shelf level was selected.  ■ There will always be a slight unevenness. If the unevenness is great, check whether the correct temperature and shelf level were selected.
	The cookware used was not right for the program chosen. Bright, shiny pans are not very suitable.  These reflect heat, which means that the heat does not penetrate to the food effectively, resulting in uneven or poor browning.  Dark, matte pans are best for baking.

Problem	Possible cause and remedy
The food is not sufficiently heated or is not cooked at the end of a set duration when using Microwave (Solo)	Check that the program was restarted after interrupting a cooking process using microwave power.  Restart the program to ensure the food is heated or cooked properly.
	When cooking for heating with microwave, the time set was too short.  Check that the correct time is selected for the microwave power level. The lower the microwave power level the longer the cooking time.
The food has cooled down too quickly after being reheated or cooked in microwave mode.	Due to the microwave properties, the heat is generated first at the edges of the food and is then transferred to the center of the food. If the food is heated with a high microwave power level the food may be hot on the outside but not heated through to the center.  When cooking foods with different sizes, such as with menu cooking, a lower microwave power level for a longer period of time is most suitable.
The oven lighting turns off after a short time.	The oven is facotry set to turn off automatically after 15 seconds. This setting can be changed (see "Settings").

#### **Problem**

## The oven lighting does not turn on.

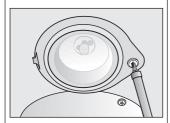

### Possible cause and remedy

The halogen bulb needs to be replaced.



Make sure the heating elements are turned off and allowed to cool completely.

The light cover consists of two seperate parts, a glass cover and mounting. If it falls it can be damaged.

When removing the cover hold it firmly so that it does not fall. Place a towel on the oven floor and open door to avoid damage.

- Disconnect the appliance from the power supply.
- Remove the screw to the lamp cover using a T20 Torx screwdriver, and take off the cover.
- Do not touch the halogen blub with bare fingers.
   Observe the manufacturers instructions.
   Remove the halogen bulb.
- Replace it with a new halogen bulb (Osram 66725 AM/A, 230 V, 25 W, G9). It must be thermally stable up to 575°F (300°C).
- Replace the glass piece in the mounting, and refit the lamp cover. Make sure that the lug on the mounting is correctly located in the notch in the roof of the oven, then screw the mounting back into place.
- Reconnect the oven to the electrical supply.

### **Technical Service**

### After sales service

In the event of a fault which you cannot easily correct yourself, please contact:

- your Miele dealer, or
- the Miele Technical Service Department.

See back cover for contact details.

Please quote the model and serial number of your appliance when contacting Miele.

This information is given on the data plate, visible on the front frame of the oven, with the door fully open.

### Warranty

For further information, please refer to your warranty booklet.

## **Caring for the environment**

# Disposal of the packing material

The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!

### Disposal of your old appliance

Do not dispose of this appliance with your household waste.

Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Before discarding an old appliance ensure that it presents no danger to children while being stored for disposal. Unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards.

### **Electrical connection**

## **CAUTION:**

Before servicing, disconnect the power supply by either removing the fuse, shutting off the power main or manually "tripping" the circuit breaker.

Installation, repair and maintenance work must be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and may void the warranty.

Before connecting the appliance to the power supply, make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent machine damage. Consult an electrician if in doubt.

Only operate the appliance after it has been installed into cabinetry.

The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

WARNING: THIS APPLIANCE MUST BE GROUNDED

Installer: Please leave these instructions with the consumer.


The voltage can be adjusted (see "Settings - P 13").

SAVE THESE INSTRUCTIONS FOR THE ELECTRICAL INSPECTOR'S USE.

### **Appliance and cut-out dimensions**

Miele ovens can be installed flush or proud. Discuss your installation requirements with your architect, designer and installer.

#### Installation into a tall cabinet

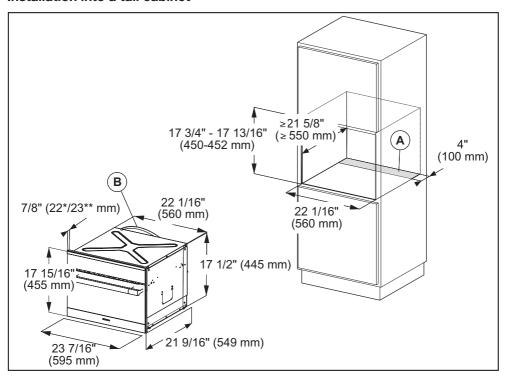


- A Cut-out (4" x 22" / 100 mm x 560 mm) in the bottom of the cabinet for power cord and ventilation
- B Power cord with plug
- Oven with glass front
- \*\* Oven with metal front

Front design may vary depending on model. For the more current specifications please visit the Miele website.

#### Undercounter installation


If installed underneath a cooktop, the installation instructions for the cooktop must also be taken into account.

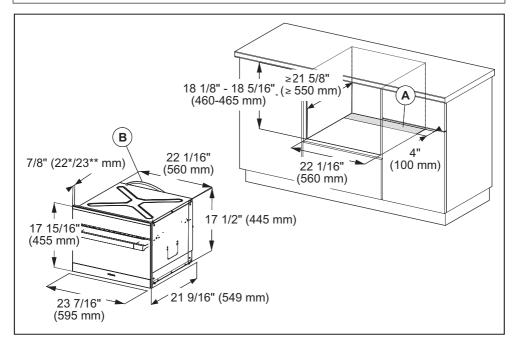

- A Cut-out (4" x 22" / 100 mm x 560 mm) in the bottom of the cabinet for power cord and ventilation
- B Power cord with plug
- Oven with glass front
- \*\* Oven with metal front

Front design may vary depending on model. For the more current specifications please visit the Miele website.


#### Installation in a tall cabinet in combination with an oven

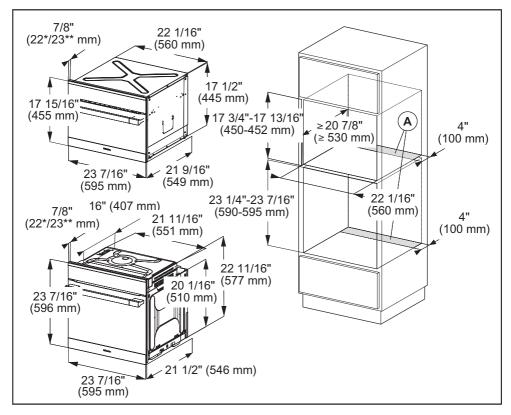

- (A) Cut-out (4" x 22" / 100 mm x 560 mm) in the bottom of the cabinet for power cord and ventilation
- \* Oven with glass front
- \*\* Oven with metal front

Front design may vary depending on model. For the more current specifications please visit the Miele website.


### **Front dimensions**

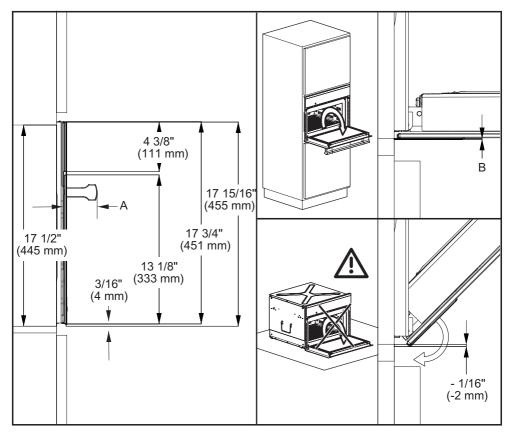

**A** H61xx: 2 5/16" (59 mm) H62xx: 1 5/8" (42 mm)

**B** Speed Oven with glass front: 1/16" (2.2 mm) Speed Oven with metal front: 1/16 (1.2 mm) The oven must not be operated until it has been properly installed within cabinetry.

- If there are side handles, please remove them.
- Connect the power cord to the electrical supply.
- Push the oven into the cabinetry up to the oven trim and align it.

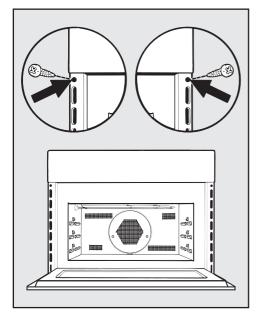

Open the door and use the screws supplied to secure the oven to the side walls of the cabinetry through the holes in the oven trim.

Please have the model and serial number of your appliance available before contacting Technical Service.



### U.S.A. Miele, Inc.

### **National Headquarters**

9 Independence Way Princeton, NJ 08540 Phone: 800-843-7231 609-419-9898

Fax: 609-419-4298 www.mieleusa.com

## Technical Service & Support Nationwide

Phone: 800-999-1360 Fax: 888-586-8056

TechnicalService@mieleusa.com



### Canada Miele Limited

### **Headquarters and Showroom**

161 Four Valley Drive Vaughan, ON L4K 4V8 Phone: 800-643-5381 Fax: 905-532-2290

www.miele.ca

professional@miele.ca (commercial enquiries)

### **MieleCare National Service**


Phone: 800-565-6435

905-532-2272

Fax: 905-532-2292 customercare@miele.ca (general and technical enquries)



H6100BM; H6200BM

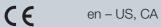

M.-Nr. 09 786 880 / 01