
## SEBURY

# Series Manual

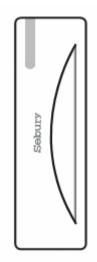

## **Specifications**

## 1. Characteristics

Frequency: 125 kHz Modulation: Bi-phase

DC Supply Voltage: Low voltage input 12 ±10% Vdc unregulated

Current Consumption: 100mA @ quiescent maximum

5Amp 12Vdc Door Relay: Alarm output load: 150mA pull current

## 2. Wiring Connections

Electric lock External bell

External Push Switch Magnetic Contacts

Alarm

## 3. Programming memory:

Non volatile Eeprom memory

Operating Temperature: 0°C to 60°C (32°F to 140°F)

Keypad Housing: Metal

Dimensions: 121mm x 46mm x 24mm

Weight: 500g

#### NOTE

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL

## Intramural Interface Circuit

- Alarm output interface (See Figure 1)
  Electric lock interface (See Figure 2)

## Mounting

- 1. Attach the rear plate to a single or double gang electrical box or secure to the wall firmly with at least three flat head screws.
- 2. When wiring has been completed, attach the front cover to the rear plate.


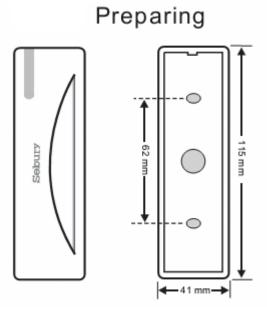


Figure 1

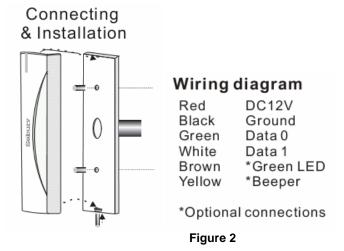

#### Model & characteristics

Model	Card Type	Reading Distance	Output Type	Size
LR110-EM	EM	5~10 cm	Wiegand 26/RS485	46W×120H×25D
LR110-MF	Mifare	3~8 cm	Wiegand 26/RS485	46W×120H×25D
LR110-HID	HID	5~10 cm	Wiegand 26/RS485	46W×120H×25D
LR110-FID	Mifare&HID	3~8 cm	Wiegand 26/RS485	46W×120H×25D
LR110-EF	EM&Mifare	3~10 cm	Wiegand 26/RS485	46W×120H×25D

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna provided is a unique antenna. By installation of unauthorized antenna to this equipment. Such unauthorized installation could void the user's authority to opearte the equipment.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.