

Access Controller

User's Manual






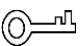

Foreword

General

This manual introduces the installation and basic operations of the access controller (hereinafter referred to as the "device").

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	May 2021

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related jurisdictions. For detailed information, refer to the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.

- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces the proper way of using the device, and danger and property damage preventions. Before using the device, read this manual carefully. Follow the instructions and keep this manual properly for future reference.

Operating Requirements

- Do not place the device in a place exposed to sunlight or near the heat source.
- Keep the device away from dampness, dust, or soot.
- Keep the device on a stable place to prevent it from falling.
- Do not drop or splash liquid onto the device, and make sure that there is no object filled with liquid on the device to prevent liquid from flowing into it.
- Put the device in a well-ventilated place, and do not block the ventilation of it.
- Use the device within the rated range of power input and output.
- Do not disassemble the device.
- Transport, use, and store the device under the allowed humidity and temperature conditions.

Electrical Safety

- Use locally recommended power cord in the limit of rated specifications.
- Use the standard power adapter. We will assume no responsibility for any problems caused by nonstandard power adapter.
- Use power supply that meets ES1 but does not exceed PS2 limits defined in IEC 62368-1. For specific power supply requirements, refer to device labels.
- Connect the Device (I-type structure) to the power socket with protective earthing.
- The coupler is the disconnecting apparatus. Keep it at the angle for easy operation.

Table of Contents

Foreword	I
Important Safeguards and Warnings	III
1 Product Overview	1
Introduction	1
Features	1
Dimensions	2
Application	1
2 Device Operation	2
1.1	
1.2 Configuration Process	2
1.3 Keypad Function	2
1.4 Initializing the Device	2
2.1 Standby Interface	3
2.2 Logging in to the Main Menu	4
2.3 Unlocking Methods	5
2.5 2.6.1 Card	5
2.6 2.6.2 Fingerprint	5
2.6.3 User Password	5
2.6.4 Administrator Password	5
2.7 User Management	6
2.7.1 Adding a New User	6
2.7.2 User/Admin List	7
2.7.3 Administrator Password	8
2.8 Access Control Management	9
2.8.1 Unlocking Mode	9
2.9 2.8.2 Lock Holding Time	10
Communication	10
2.9.1 IP Configuration	10
2.9.2 Wi-Fi	11
2.10 2.9.3 Wiegand	12
2.9.4 Serial Port	12
2.9.5 Mode Settings	13
System	14
2.11 2.10.1 Time	14
2.10.2 Volume	14
2.10.3 Restoring to Default Settings	15
2.10.4 Restarting the Device	15
2.12 USB	16
2.11.1 USB Export	16
2.11.2 USB Import	16
2.11.3 USB Update	17
2.11.4 Export Records	17
2.11.5 One-click Operation	18
Device Information	18

3	Web Operations	19
	Initialization	19
	Login.....	21
	Resetting the Password	21
	Door Parameter.....	23
	Alarm Linkage	25
	3.5.1 Setting Alarm Linkage.....	25
3.1	3.5.2 Alarm Log.....	27
3.2	Time Section	27
3.3	3.6.1 Configuring Time Section	28
3.4	3.6.2 Configuring Holiday Group	28
3.5	3.6.3 Configuring Holiday Plan	29
3.6	Data Capacity.....	30
	Volume Setting.....	30
	Network Setting.....	31
3.7	3.9.1 TCP/IP	31
3.8	3.9.2 Port	32
3.9	3.9.3 Register.....	33
	3.9.4 P2P	33
	Date Setting	34
3.10	Safety Management	35
3.11	3.11.1 IP Authority.....	35
	3.11.2 Systems	38
3.12	User Management	42
	3.12.1 User	42
3.13	3.12.2 ONVIF User	44
3.14	Maintenance.....	46
	Configuration Management	46
	3.14.1 Exporting Configuration File	46
3.15	3.14.2 Importing Configuration File	47
3.16	3.14.3 Default.....	47
3.17	Upgrade	47
3.18	Version Information	48
	Online User	48
3.19	System Log	49
	3.18.1 System Logs	49
4.1	3.18.2 Admin Log.....	50
4.2	3.18.3 Unlock Records	50
	Exit	50
4	SmartPSS AC Configuration	51
	Login.....	51
	Adding Devices	51
	4.2.1 One by One	51
	4.2.2 In Batches.....	53
	User Management	54
	4.3.1 Setting Card Type	54
	4.3.2 Adding User	55

Assigning Permissions	58
Fingerprint Registration Instructions	60
Cybersecurity Recommendations	63

4.4

Appendix 1

Appendix 2

1 Product Overview

Introduction

1.1

Fitted with a powerful processor and a deep-learning algorithm, the device can identify fingerprints instantly and accurately. Besides fingerprint, the device also supports unlocking the door by a card or password. It can work with a management software to more functions for various needs.



Only certain models support the fingerprint function.

Features

1.2

- LCD display.
- PC + ABS/acrylic panel that is suitable for outdoor use.
- Adapts to different situations with the ability to switch between card reader and controller modes; as a card reader, the device can work with multiple types of controllers and protect your data.
- Supports unlocking the door remotely on SmartPSS AC, or by cards, passwords, fingerprints, or their combinations.
- Supports multiple alarm types, such as duress, intrusion and tamper.
- Supports various types of users, including guest, patrol, blocklist, VIP, normal users, and other users.
- You can log in to the web interface with a PC or smartphone.
- Supports door bell.
- Works with SmartPSS AC and ICC.

Dimensions

1.3


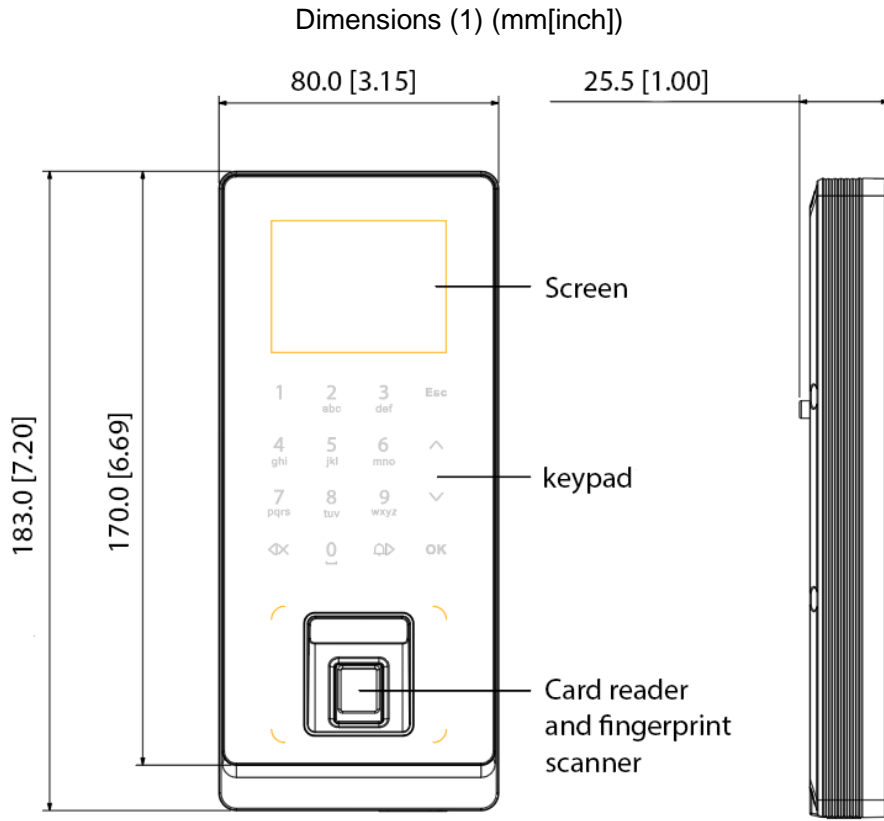


Figure 1-2

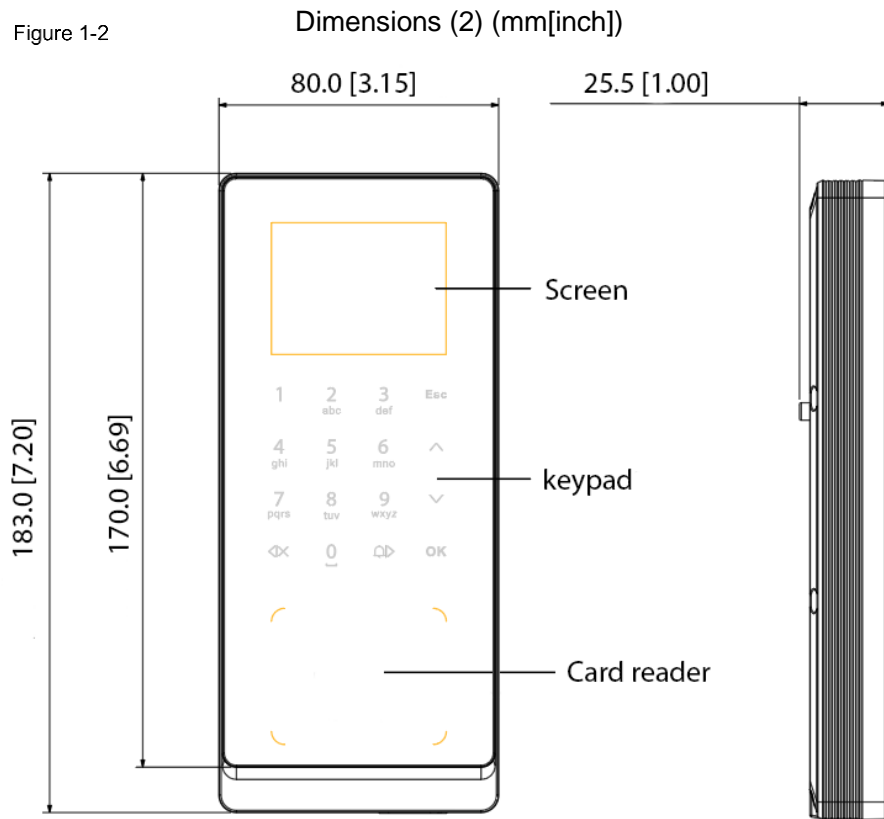


Application

The device is applicable to office buildings, schools, industrial zones, apartment complexes, factories, public stadiums, business centers, and more. To introduce the network diagram, this section uses a device with the fingerprint function working as a controller.

Network diagram


1.4

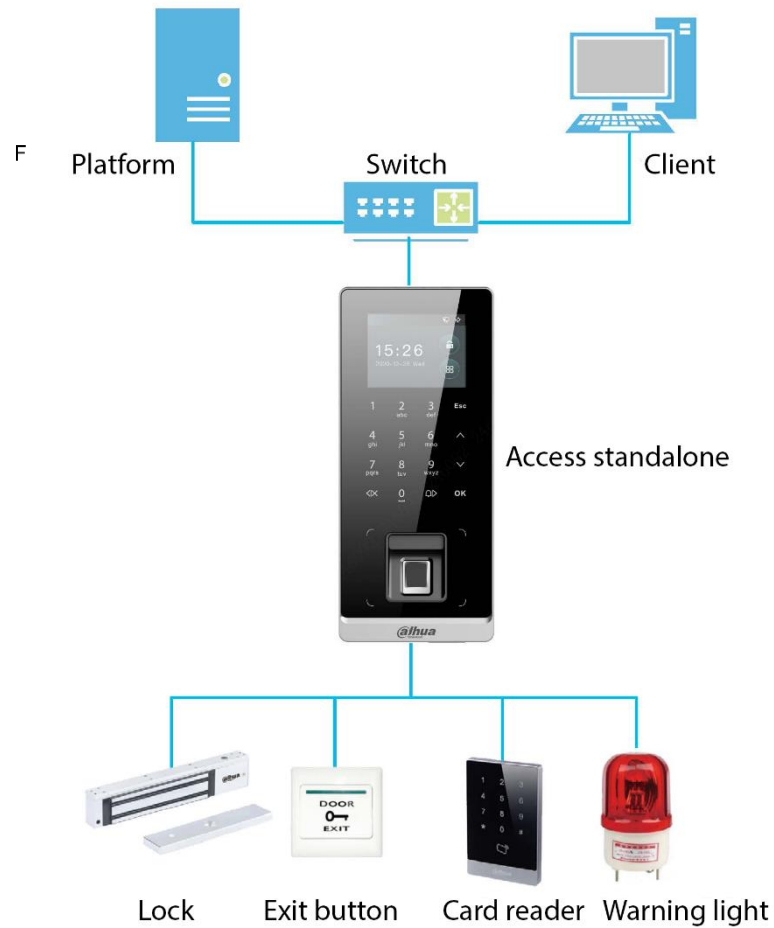

2 Device Operation

Configuration Process

The device can be used for access control purpose after you finish the following process.

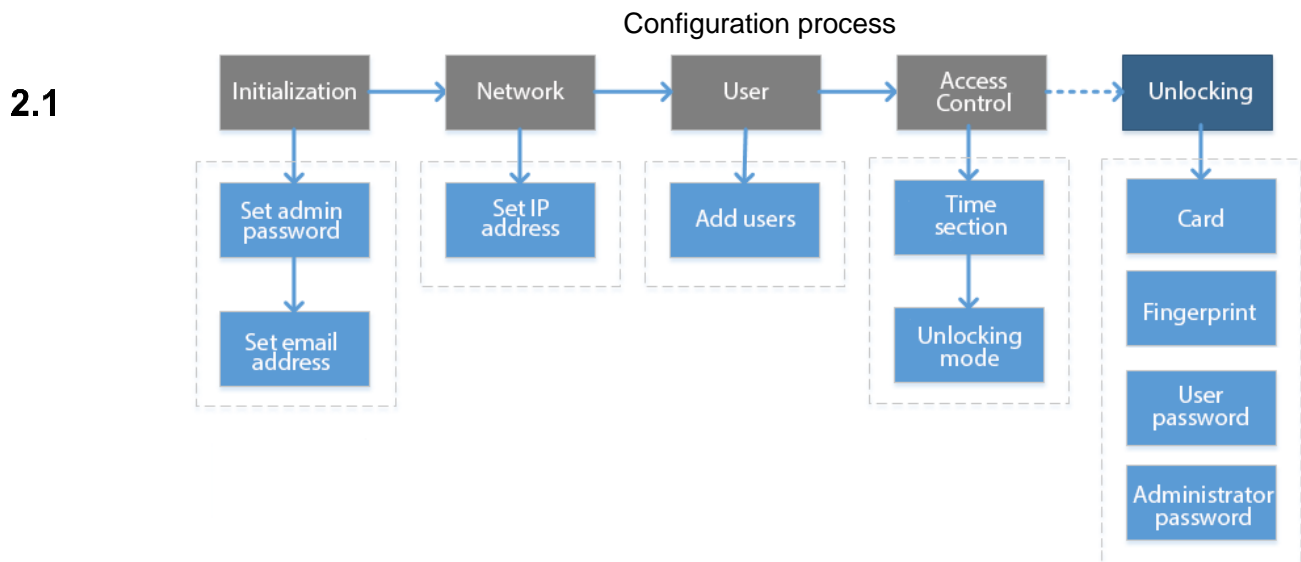

2.2 Keypad Function

Table 2-1 Function description

Item	Description
Number or letter	Used to enter information or password.
Λ	Navigate the interface.
v	Navigate the interface.
Esc	Cancel an operation or go back to the previous interface.
OK	Go to the selected interface or confirm your change.
	Go to the administrator login interface.
	Backspace or navigate the interface.
	Ring the bell (only on the standby interface), navigate the interface, or change the input method.

2.3

Initializing the Device

For first-time use or after resetting the device to default settings, you need to set a password and email address for the admin account, and the time zone of the device for first-time use. Use the admin account to log in to the main menu of the device, make configurations on the device, log in to the web interface or for adding it to SmartPSS AC.

Initialize the device

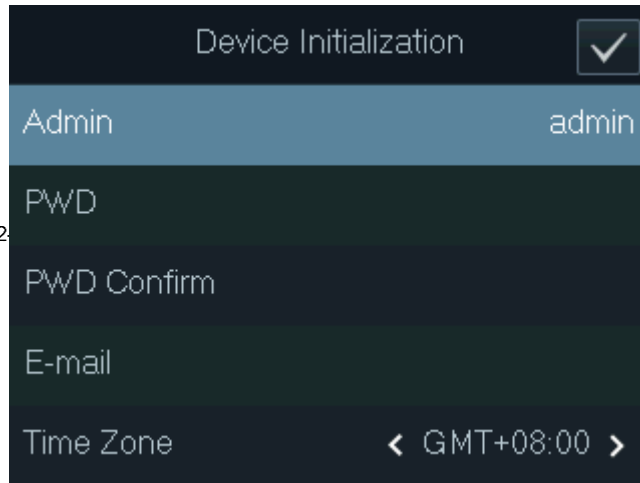


Figure 2



- The administrator password can be reset through the e-mail address you entered if you forget it.
- The password should consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special characters (excluding ' " ; : &, space and non-printing characters). Enter the password again to confirm the password. Set a password of high security level according to the password strength prompt.

2.4 Standby Interface

You can directly unlock the door on the standby interface with your card, password, or fingerprint. See the following table for other information of the standby interface.



- The device will go back to the standby interface if there are no operations done in 30 seconds.
- The device will turn off the screen if it stays on the standby interface for 30 seconds.
- The following interface is for reference only.

Standby interface

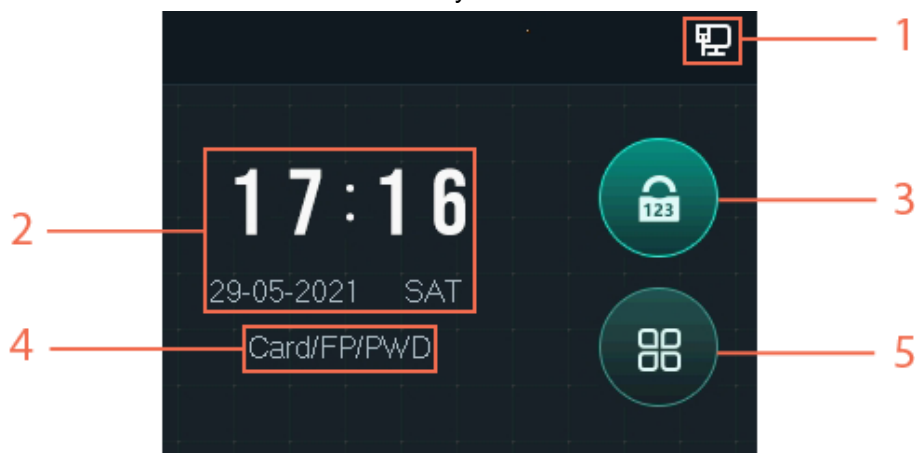


Table 2-2 Standby interface description

No.	Item	Description
1	Status	Displays the status of Wi-Fi, wired network (if any), and USB flash drive.
2	Date & Time	Time and date.
3	Unlock the door with password	Enter the user ID and password, or the administrator password (see "2.6.4 Administrator Password" for details) to unlock the door.
4	Unlocking methods	Displays the unlocking methods you configured.
5	Main menu	Tap the icon, and then you can enter the main menu. Only the administrator and admin users can log in to the main menu of the device. See "2.5 Logging in to the Main Menu".

Logging in to the Main Menu

2.5


Log in to the main menu to configure parameters of the device.

You can add users of different levels, change the unlocking mode, and more.



Only the administrator and admin users can log in to the main menu. See Table 2-2 for details.

Step 1

On the standby interface, tap .




Step 2

Verification methods varies with the type of device.

Select a login method.

- Log in as an admin user using a card, fingerprint, or password.
- Log in as the administrator: Tap **admin**, and then enter the password you set during initialization.

Log in as an administrator

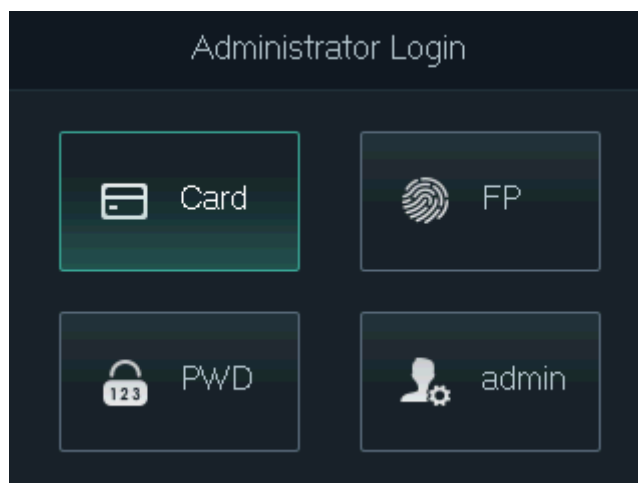

Unlocking Methods

2.6.1 Card

Swipe your card on the card-reading area to unlock the door.


2.6

2.6.2 Fingerprint

Press your registered fingerprint on the fingerprint scanner to unlock the door.

2.6.3 User Password

Enter the user ID and password of a user to unlock the door.

Select  on the standby interface.

Select **PWD**, and then tap OK.


Step 1

Enter the user ID and password of a user.

Step 2



Step 3

- To enter the user ID, you need to select the input box of user ID and tap OK.
- You can directly enter the password on the keypad.
- Tap  to change the input method.


Step 4

Select **OK**, and then tap OK.

The system will prompt that the door is unlocked.

2.6.4 Administrator Password


If you enable and set up the administrator password, you can use it to unlock the door. Except when the device is set to the normally open or closed status, you will not be restricted by user ID, unlocking methods, time section, holiday plan, and anti-passback. The device can only support one administrator password.

Step 1 

Step 2 To use the administrator password, you need to enable the function and set it up. See "2.7.3

Step 3 Administrator Password".

Step 4

Select  on the standby interface.

Select **Admin PWD**, and then tap OK.

Enter the administrator password.


Select **OK**, and then tap OK.

The door is unlocked.

User Management

You can add new users, view the user list, admin list, and modify the super password on the User interface.

2.7.7.1 Adding a New User

Select  on the standby interface, and then tap OK.

Log in as the administrator, and then select **User Management > New User**.



This section uses a device with the fingerprint function. Differences on the interfaces might be found on the actual interfaces.

Step 1
Step 2


Add a new user

New User(1/2)		New User(2/2)	
User ID	1	Permission	User >
Name		Period	255-Default
FP	0	Holiday Plan	255-Default
Card	0	Valid Date	2037-12-31
PWD		User Type	General >

Step 3

Configure the parameters.

Table 2-3 Parameter description

Parameter	Description
No.	Each user ID is unique. It can be 18 characters of numbers, letters, or their combination. For example employee ID number.
Name	You can enter names with at least 10 Chinese characters or 32 characters (including numbers, symbols, and letters).
Fingerprint	<p>Each user can add up to 3 fingerprints. Follow the on-screen instructions and voice prompt to add a fingerprint.</p> <p>You can enable the Duress FP function under each fingerprint. After the duress alarm function is enabled, you can trigger an alarm by using the duress fingerprint to unlock the door. See the user's manual for details.</p>  <ul style="list-style-type: none"> We do not recommend setting the first fingerprint as the duress fingerprint. Only certain models support the fingerprint function.
Card	<p>You can register five cards for each user. On the card registration interface, swipe your card, and then the card information will be read by the device.</p> <p>You can enable the duress card function on the card registration interface. After the duress alarm function is enabled, you can trigger an alarm by using the duress card to unlock the door.</p>
PWD	The door unlocking password. The maximum length of the ID digits is 8.

Parameter	Description
User level	You can select a user level for the new user. There are two options: User: Users only have door unlock authority. Administrators can configure parameters of the device and unlock the door.
Period	A user can only unlock the door within the defined period. For how to set up a period, see the user's manual. The default value is 255, meaning the user can unlock the door at any time.
Holiday Plan	A user can only unlock the door within the defined period. For how to set up a holiday plan, see the user's manual. The default value is 255, meaning the user can unlock the door at any time.
Valid Date	You can set a period during which the unlocking information of the user is valid.
User level	<p>General: General users can unlock the door normally.</p> <p>Blacklist: When users in the blacklist unlock the door, service personnel will get a prompt.</p> <ul style="list-style-type: none"> • • <p>Guest: Guests are allowed to unlock the door within a defined period or for certain amount of times. After the defined period or they run out of unlocking times, they cannot unlock the door.</p> <p>Patrol: Paroling users can have their attendance tracked, but they have no unlocking permissions.</p> <ul style="list-style-type: none"> • <p>VIP: When VIP unlock the door, service personnel will get a prompt.</p> <ul style="list-style-type: none"> • • <p>Others: When they unlock the door, the door will stay unlocked for 5 more seconds.</p> <ul style="list-style-type: none"> • <p>Custom User 1/2: Same as General.</p>

Step 4 After you have configured all the parameters, tap Esc.


Step 5 The system prompts ask you to save the settings or not.
Tap OK to save the settings.

2.7.2 User/Admin List

You can view and search for all the normal users and admin users, and edit their information.

On the main menu, select **User > User List/Admin List**.

User list

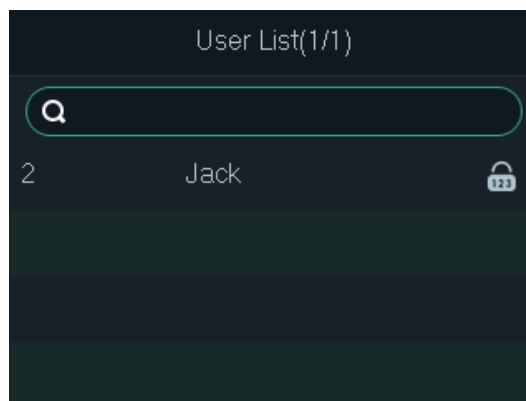

Admin list

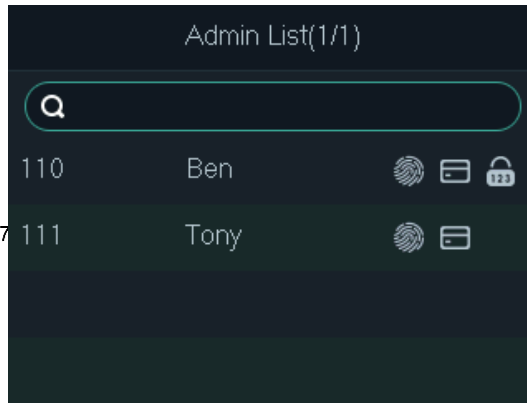


Figure 2-7

- **Unlocking method**

If any of the following icons is displayed, it means that the user has set up the corresponding unlocking method.



: Fingerprint.



◇ : Card.




◇ : Password.

◇

Editing User Information

- Step 1 Select the user you want to edit, and then tap OK.
- Step 2 Edit the information as needed.
- Step 3 Tap Esc.
- Step 4 The system will ask you to save the settings or not.
Tap OK.

Searching for User

Select , and then enter the user ID, swipe a card, or press a finger print to search for the user you want.

Deleting User

Select the user you want, tap OK, and then select  to delete the user.

Step 1

2.7.3 Administrator Password


The device can only set up one administrator password. You can use it to unlock the door without having to enter a user ID.

On the main menu, select **User > Administrator PWD**.

Enter the administrator password, and then tap OK.
Administrator password

Step 2

Figure 2-8

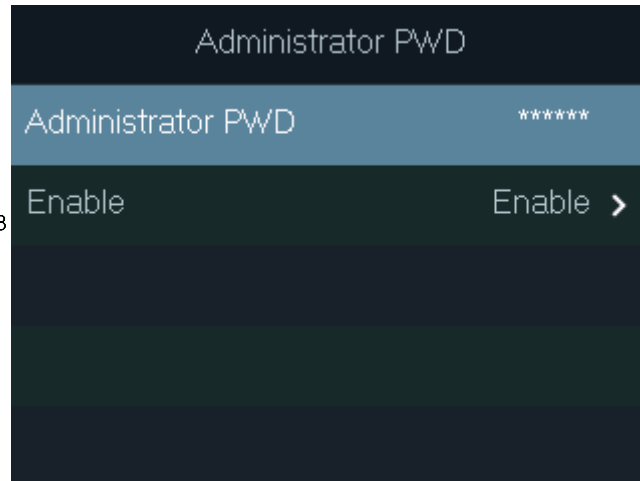


Select **Enable**, and then tap OK to enable the function.

Step 6 Access Control Management

2.8

Configure the unlocking mode and how long the lock will be unlocked each time.
On the main menu, select **Access**.

Figure 2-9
Access control management

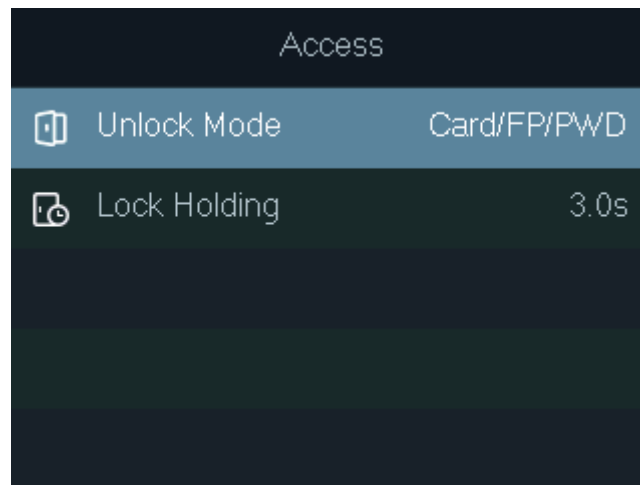

2.8.1 Unlocking Mode

Step 1

Configure the unlocking combination as needed. The unlocking methods vary with the type of Step 2 device.

Use card, fingerprint, password, or any of their combinations to unlock the door.

On the main menu, select **Access > Unlock Mode**, and then tap OK.



The unlocking methods vary with the type of device.


Tap OK to configure the combination of unlocking methods.

- **And:** For example, you need to verify both your card and fingerprint to unlock the door.

- **Or:** For example, you only need to verify your card or fingerprint to unlock the door.

Element (Multiple Choice)

Figure 2-10

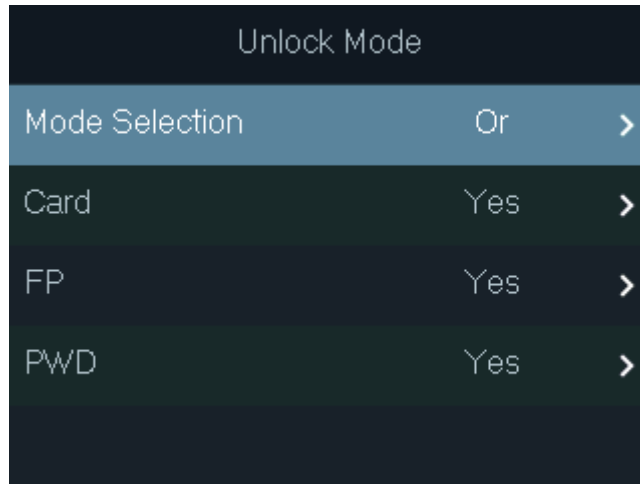

Tap Esc.

The system will ask you to save the settings or not.

Tap OK.

Step 3

2.8.2 Lock Holding Time

The door will be unlocked during the defined duration, and will be locked after the duration.


On the main menu, select **Access > Lock Holding**.

Tap OK, and then enter the value you need.

Step 1

Step 2



Tap  to change the input method.

2.9

Communication

Configure the network, serial port and Wiegand port parameters to properly connect the device to the network or other devices.

2.9.1 IP Configuration

Step 1

Step 2

Set up an IP address for the device to connect it to the network. Then you can log in to the web interface of the device to make configurations, and add it to SmartPSS AC.

On the main menu, select **Comm > IP Address**.

Select and tap OK to configure parameters.

Set up network parameters

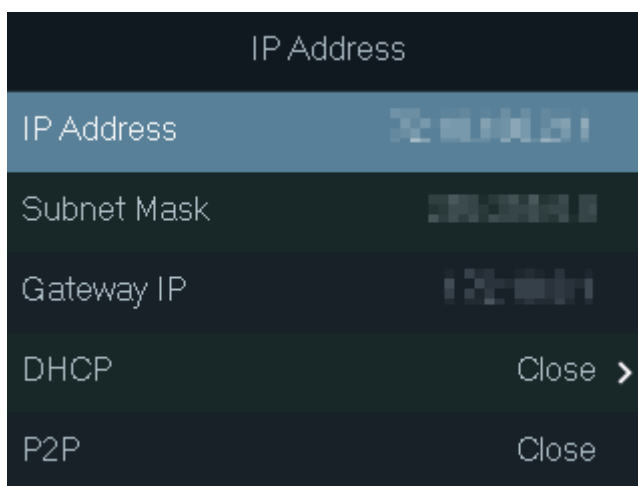


Figure 2-11

Table 2-4 Parameter description

Parameter	Description
IP address, subnet mask and gateway	The IP address, subnet mask, and gateway IP address should be on the same network segment. After configuration, tap <input checked="" type="checkbox"/> to save the configurations.
DHCP	It stands for Dynamic Host Configuration Protocol. When it is enabled, the device will automatically obtain an IP address. IP address, subnet mask, and gateway cannot be configured.
P2P	When it is enabled, you can directly manage the device without a dynamic domain, relay server, or port mapping.

2.9.2 Wi-Fi


Connect the device to a wireless network.

Step 1

Only certain models support Wi-Fi.

On the main menu, select **Comm > Wi-Fi**, and then tap OK.

Wi-Fi

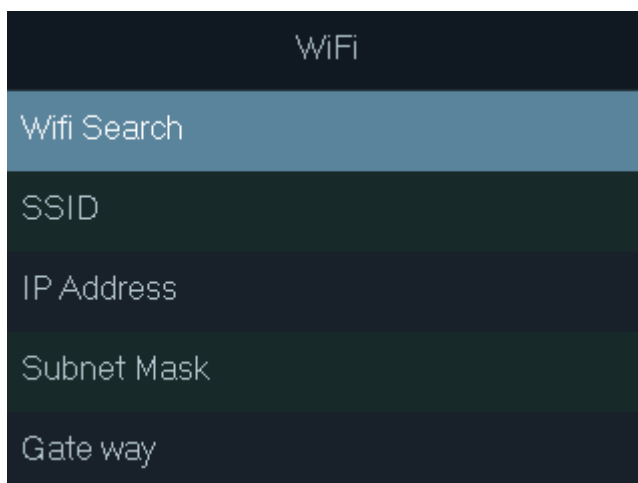


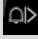
Step 2
Step 3

Select **Wifi Search**, and then tap OK.

Select **WiFi**, and then tap OK to enable the wifi function.

The device will search for and display available wireless networks.



Tap  or  to go to the previous or next page.

Select a wireless network, tap OK, and enter the password.

The device will go back to the previous interface, and the information of the wireless network you connected to is displayed.

2.9.3 Wiegand

Step 4

Select Wiegand input or output as needed.

On the main menu, select **Comm > Wiegand**, and then tap OK.

- Select **Wiegand Input** when you need to connect a card reader to the device.
- Select **Wiegand Output** when the device works as a card reader, and you need to connect it to another access controller.

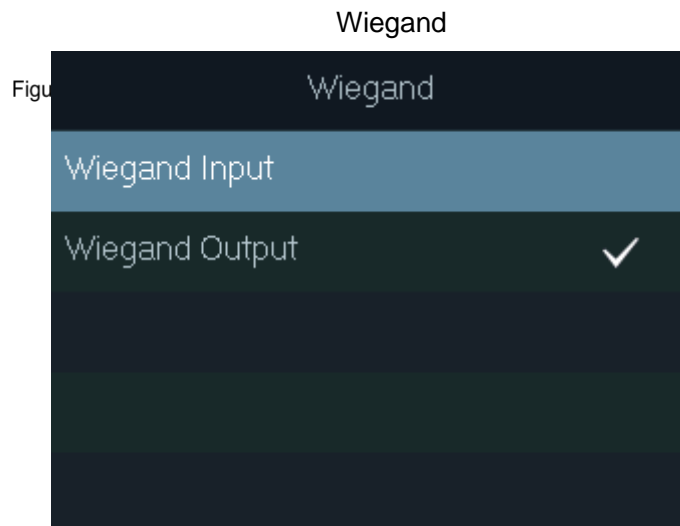


Table 2-5 Wiegand parameters description

Parameter	Description
Wiegand output type	Determines whether the device can reads a card number or the digits of a card number. Wiegand26: Reads three bytes or six digits. Wiegand34: Reads four bytes or eight digits. Wiegand66: Reads eight bytes or sixteen digits.
Pulse Width	Enter the value as needed.
Pulse Interval	
Output Data Type	UserID: Outputs the ID of the user who swipes a card. Card No.: Outputs the card number that is used.


2.9.4 Serial Port

Select a type as needed.

On the main menu, select **Comm > Serial Port**, and then tap OK.

Serial port settings

Figure 2-

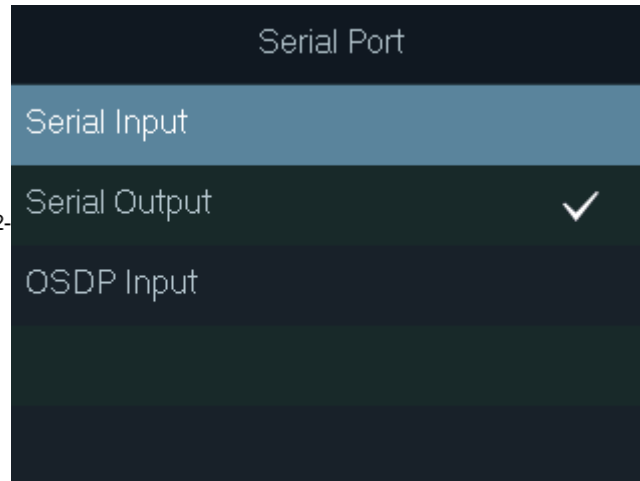


- Select **Serial Input** when the device connects to a card reader. The card reader will send the card number to the device or SmartPSS AC.
- Select **Serial Output** when the device works as a card reader. The device will the card number to the controller, which will determine whether to unlock the door.
 - **UserID:** Outputs the ID of the user who swipes a card.
 - **Card No.:** Outputs the card number that is used.
- ◇ ● Select **OSDP Input** when the device connects to a card reader through OSDP protocol. The card reader will send the card number to the device or SmartPSS AC.

2.9.5 Mode Settings

Set the device to work as a controller or card reader.

On the main menu, select **Comm > Mode Setting**.

Serial port settings

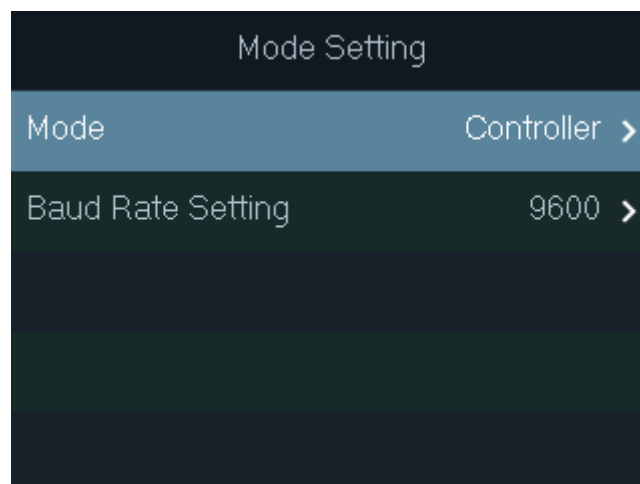

◇

◇

- Mode
 - **Controller:** The device works as an access standalone. You can use different unlocking methods to unlock the door. You can also connect it to a card reader, and then the card reader can send the information to the device or SmartPSS AC.
 - **Card Reader:** The device works as a card reader, and it can be connected to a controller or another access standalone.



If set to card reader, you cannot configure the serial port.

- Baud rate setting

Tap OK to select 9600 or 115200. Select the one suitable for the controller or card reader you need to connect the device to.



The device can only communicate with another device when their baud rates are the same.

System

2.10.1 Time

Configure time-related parameters, such as date, time, and date format.

On the main menu, select **System > Time**, and then tap OK.

Select a parameter, and then tap OK.

Step 1

Step 2

Time settings

Figure

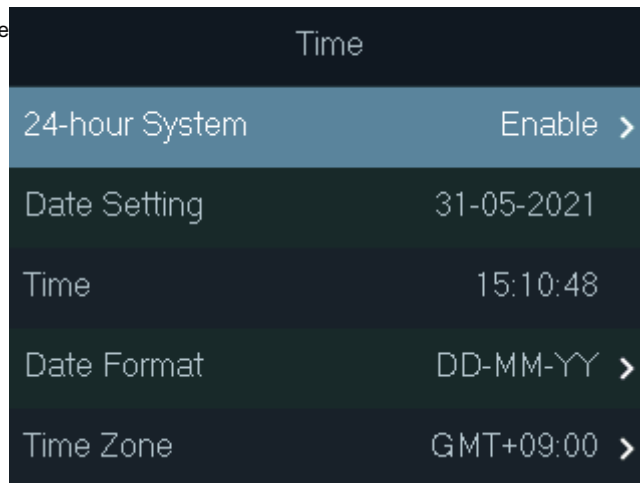


Table 2-6 Parameter description

Parameter	Description
24-hour System	Enable 24-hour format as needed.
Date Setting	Set up the date.
Time	Set up the time.
Date Format	Select a date format as needed.
Time Zone	Select a time zone as needed.

Step 1

Step 2

2.10.2 Volume


Adjust the volume of the voice prompt as needed.

On the main menu, select **System > Volume**, and then tap OK.

Tap the up or down arrows to adjust the volume.

Adjust the volume

Figure 2-

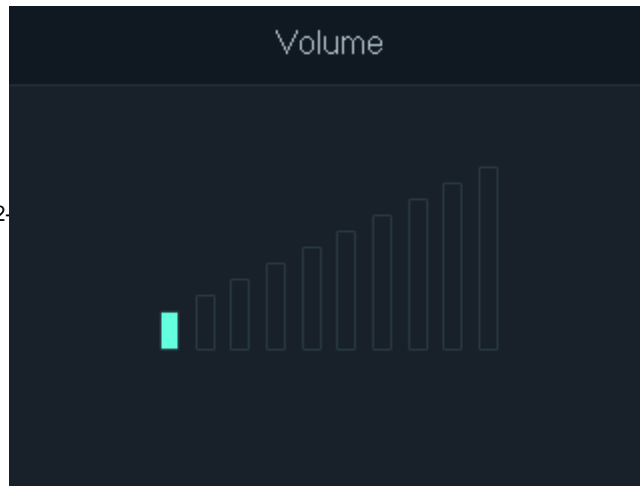

2.10.3 Restoring to Default Settings



Data will be lost if you restore the device to default settings.

Select whether you want to keep the user information and logs after restore the device to default settings.

Step 1

On the main menu, select **System > Restore Factory**, and then tap OK.


Step 2

Select an option, and then tap OK.

- **Default:** All configurations will be restored to default settings, and all data will be lost, including users, device information, and logs.
- **Default (Save user&log):** All configurations will be restored to default settings, and all data will be lost, except users and logs.

Figure 2-18

Restoring to Default Settings

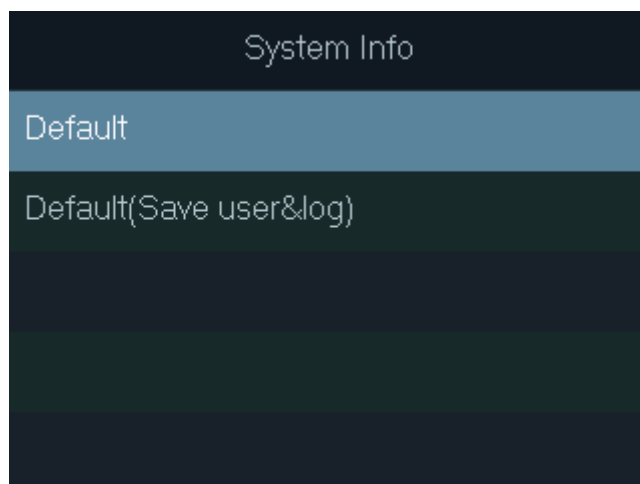

2.10.4 Restarting the Device

On the main menu, select **System > Reboot**, and then tap OK to restart the device.

USB



2.11

- Make sure that a USB flash drive is inserted to the device before exporting user information or updating. Do not pull out the USB flash drive or perform any operation of the device during the process. Otherwise, it will fail.
- Export information from another device to a USB flash drive, and then import it to this device.

You can use a USB flash drive to update the device, or export or import user information,

2.11.1 USB Export

You can export data from the device to a USB flash drive. The exported data is encrypted and cannot be edited.

On the main menu, select **USB > USB Export**, and then tap OK.


Select the type of data you want to export, and then tap OK.

Export data to the USB flash drive

Step 1

Step 2

Figure 2-19

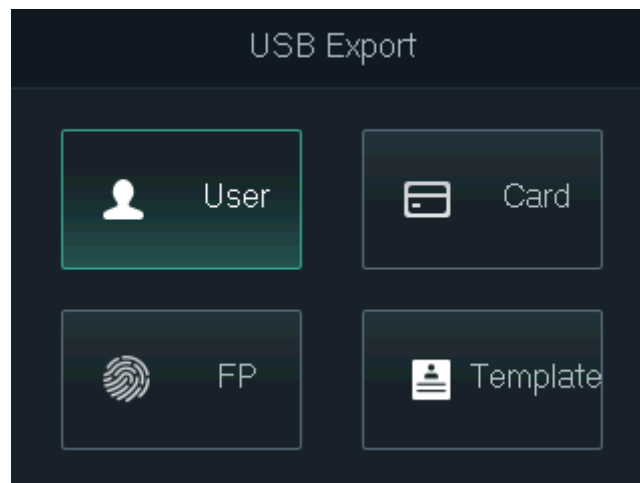

Step 3

Tap OK.

The selected data is exported to the USB flash drive.

Step 1

Step 2

2.11.2 USB Import


Export the data from one device, and then import it to another device.

On the main menu, select **USB > USB Import**, and then tap OK.

Select the type of data you want to import, and then tap OK.

Import data from the USB flash drive

Figure 2-20

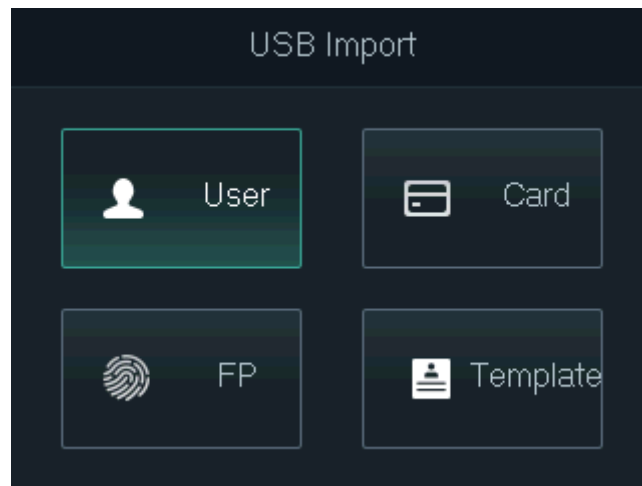

Tap OK.
The selected data is imported to the device.

Step 3

2.11.3 USB Update

You can use a USB flash drive to update the device.

Rename the update file to "update.bin", put it in the root directory of the USB flash drive, and then insert the USB flash drive to the device.

Step 1

On the main menu, select **USB > USB Update**, and then tap OK.

Step 2

"Confirm to Update" is displayed.



Step 3

Tap Esc to cancel the update.

Tap OK.

The device will restart when update is completed.

2.11.4 Export Records

Step 1


Step 2

You can export unlocking records to a USB flash drive.

On the main menu, select **USB > Export Records**, and then tap OK.

Set up a time frame.

Export unlocking records

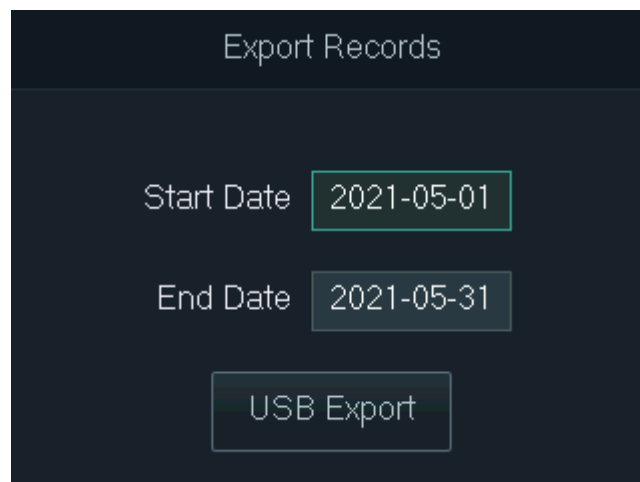

Select **USB Export**, and then tap OK.
The unlocking records are exported to the USB flash drive.

2.11.5 One-click Operation

Step 3 You can use one-click operation to import or export user information, including cards and fingerprints.

One-tap, select **USB > One-click Operation**, and then tap OK.


- **Import**: Import user information, including cards and fingerprints.
 - **Export**: Export user information, including cards and fingerprints.
- Tap OK.

Step 1

One-click operation

Step 2

Figure 2-5

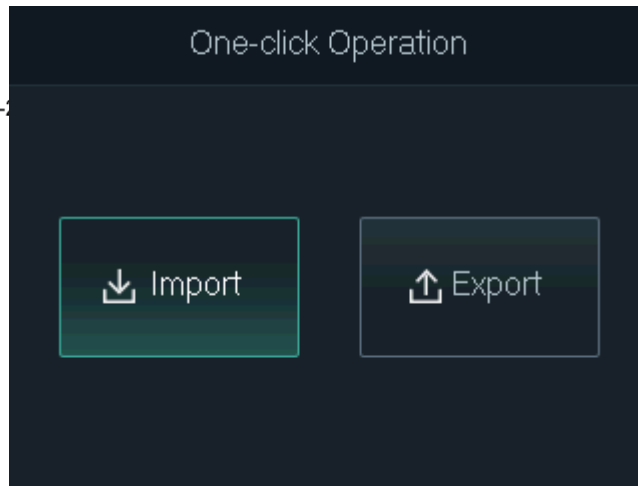

2.12

Device Information

On the main menu, select **Info**, and then tap OK. You can view data capacity and system information of the device.

- **Data Capacity**: Displays the number of normal users, admin users, cards, fingerprints, unlocking records, and alarm records that have been stored, and their respective capacity.
- **Device Version**: Displays software and hardware information of the device.

3 Web Operations

On the web interface of the device, you can configure its parameters, restart it regularly, and update its software. When the device is in the same network as your smartphone, you can also log in to the web interface of the device on your smartphone.



Only certain parameters can be configured on the web interface if you log in to it using your smartphone.

Initialization

You need to set a password and an email address before logging in to the web for the first time.

3.1

Go to the IP address (192.168.1.108 by default) of the device in the browser.



Step 1

- Use browser newer than IE 8, otherwise you might not log in to the web.
- Make sure that the computer used to log in to the web is in the same LAN with the device.

Initialization

Figure 3-1

Boot Wizard

1 Device Initialization 2 Auto Check

Username admin

New Password

Low Medium High

Confirm Password

Password shall be at least 8 digits, and shall at least include two types, including number, letter and common character

Bind Email

(It will be used to reset password. Please fill in or complete it timely)

Next

Step 2

Enter the new password, confirm password, enable **Bind Email**, enter an email address, and then click **Next**.




- The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &). Set a password of high security level according to the password strength prompt.
- For security, keep the password properly after initialization and change the password regularly.

- When you need to reset the administrator password by scanning the QR code, you need the linked email address to receive the security code.

Click **Next**.

Auto check

Step 3

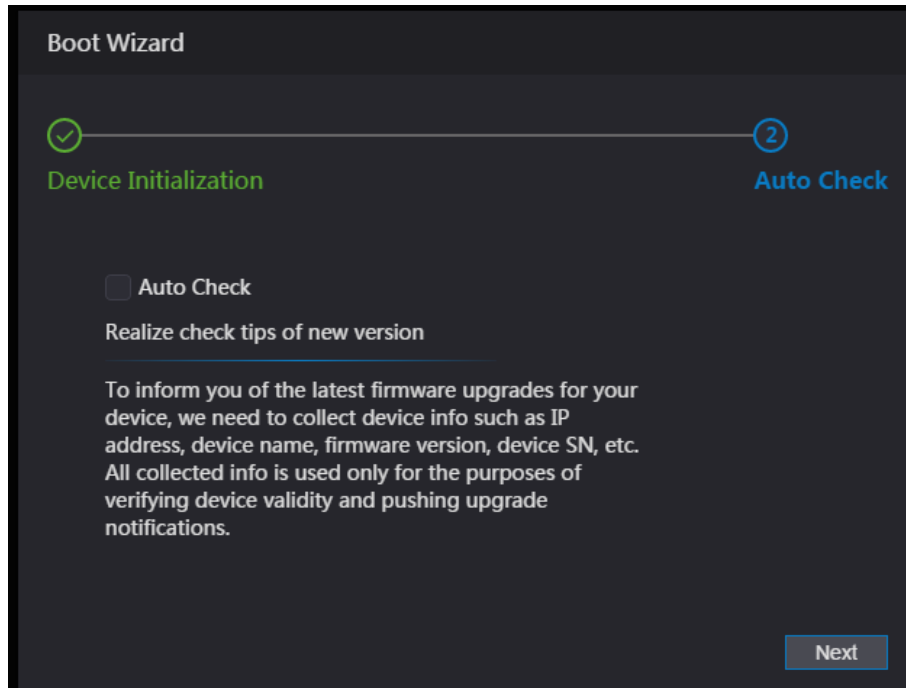

You can decide whether to select **Auto Check** or not.

Step 4



It is recommended that **Auto Check** be selected to get the latest program in time.


Step 5

Click **Next**.

Figure 3-3

Finished configuration

Step 6

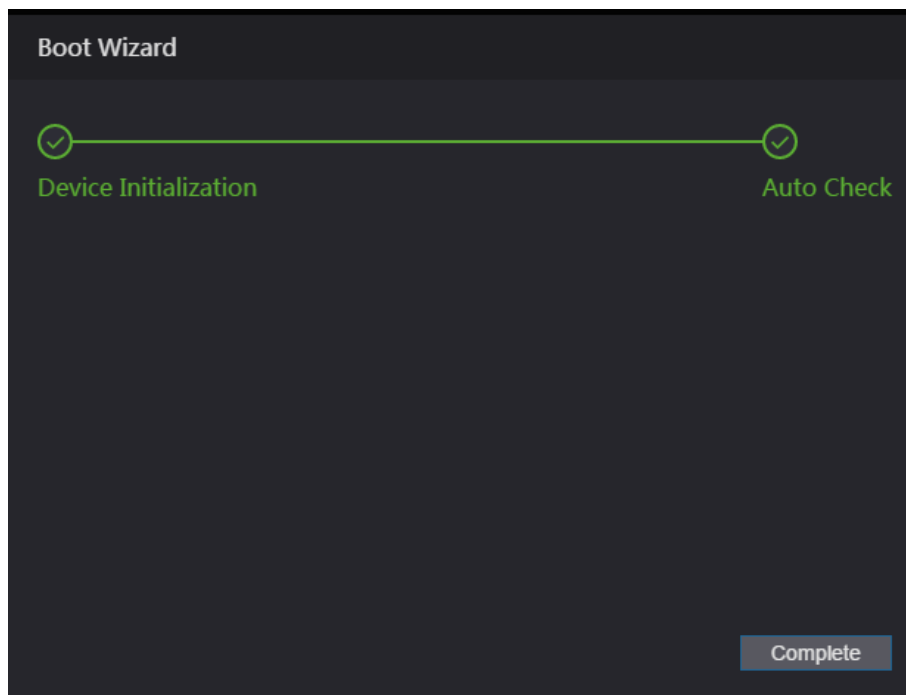

Click **Complete**, and the initialization is completed.

Login

Open IE web browser, enter the IP address of the device in the address bar, and press **Enter**.



3.2

Step 1

- Use browser newer than IE 8, otherwise you might not log in to the web.
- Make sure that the computer used to log in to the web is in the same LAN with the device.
- The default IP address is 192.168.1.108.

Login

WEB SERVICE

Username:

Password:

Forget Password?

Login

Step 2

Enter the user name and password.



Step 3

- The default administrator name is admin, and the password is the one you set during initialization. Change the administrator password regularly and keep it well.
- If you forget the administrator login password, you can click **Forget Password?** to reset it. See "3.3 Resetting the Password".

3.3

Click **Login**.


Step 1

Resetting the Password

When resetting the password of the admin account, your email address will be needed.

Click **Forgot password?** on the login interface.

Tips

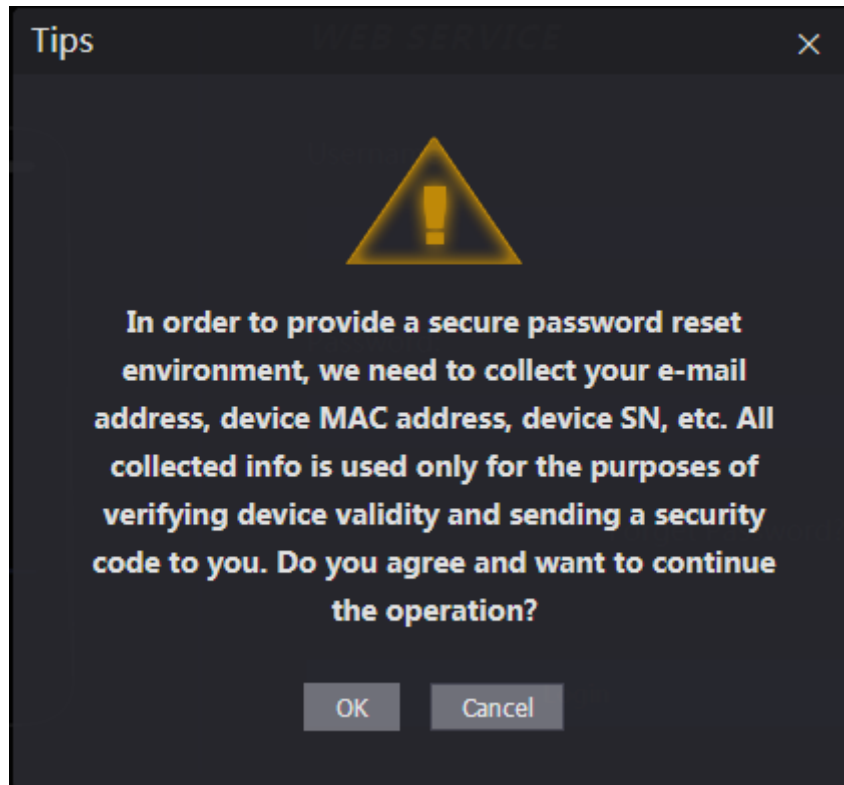

Read the tips.

Click **OK**.

Step 2

Step 3

Reset Password

Figure 3-6



Step 4

Scan the QR code on the interface, and you will get the security code.



- At most two security codes will be generated by scanning the same QR code. If security codes become invalid, to get more security codes, refresh the QR code.
- You need to send the content you get after you scanned the QR code to the designated email address, and then you will get the security code.

- Please use the security code within 24 hours after you receive it. Otherwise, it will become invalid.
- If wrong security codes are entered for consecutive five times, the administrator will be frozen for five minutes.

Enter the security code you have received.

Click **Next**.

Reset and confirm the new password.



The password should consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &).

Click **OK**, and the reset is completed.

Step 5

Step 6

Step 7

Door Parameter

Step 8

3.4

Configure the access control parameters.

Log in to the web interface.

Select **Door Parameter**.

Step 1

Step 2

Door parameters


Step 3

Configure Opening Method.


- Time section

1) Click .

Time section parameter

- 2) Configure the time and opening method for a time section. You can configure up to four time sections for each day.
- 3) (Optional) Select **Apply to the whole week** to copy the configuration to other days.
- 4) Click **OK**
 - Multi-person
- 1) Click , and then click **Add**.

Multi-person parameter

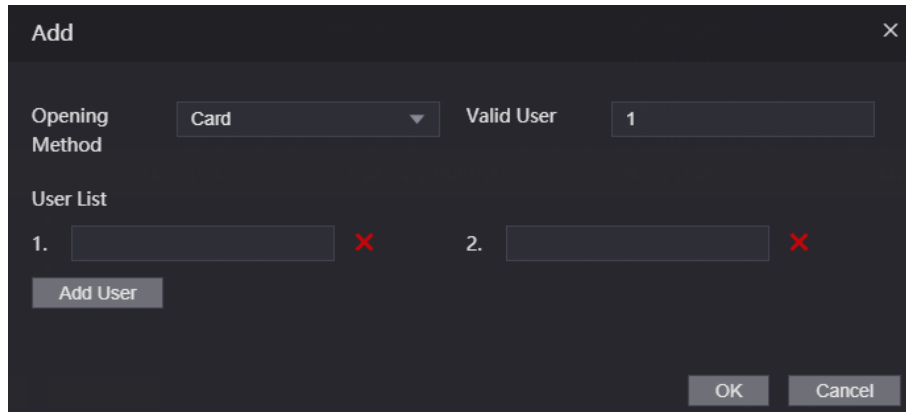


- 2) Select an opening method, and enter a number for valid user.
- 3) In the **User List** section, enter the ID of the users as needed. For user ID, see "2.7.1 Adding a New User".



- VIP, patrol, and blacklist users cannot be added.
 - All the users in different groups must all verify their identities in the group order to unlock the door.
 - Unlock mode
- 1) Select the unlock method(s) in **Element (Multiple Choice)**.

Figure 3-10

Unlock mode parameters

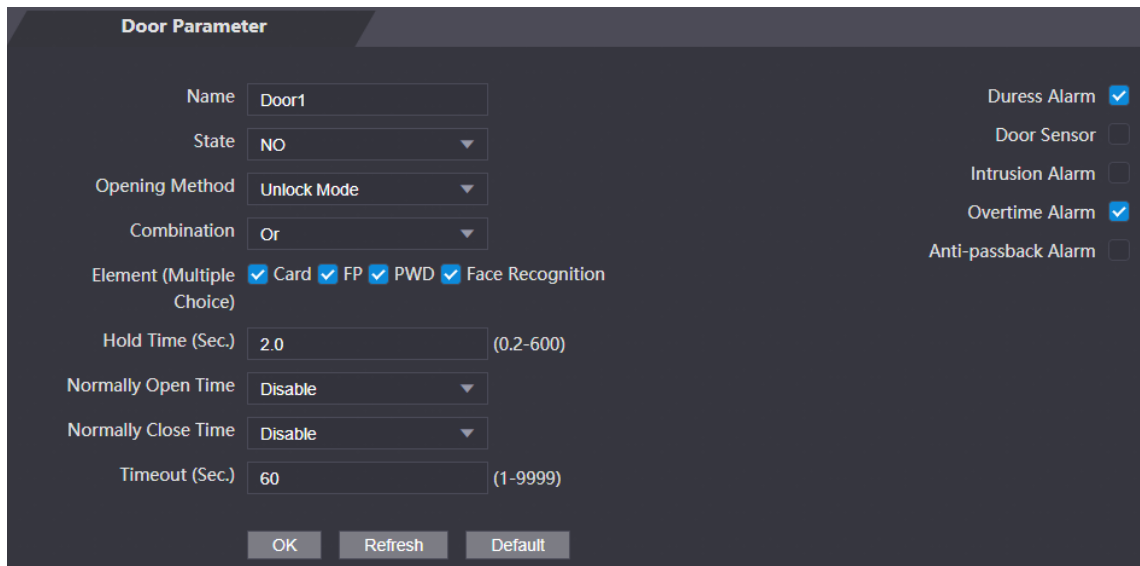

Step 4

- 2) Select **Or** or **And**. **Or** means you must use all the defined methods to open the door; **And** means you can open the door with any of the defined methods.
- 3) Select the unlock methods for **Element (Multiple Choice)**.
Configure other parameters.

Table 3-1 Parameter description

Parameter	Description
Name	Enter a name for the door that this device controls.
State	Select NC for normally closed, or NO for normally open. If either is selected, the defined opening method will not be effective.
Opening Method	See Step 3 above.
Hold Time (Sec.)	Unlock duration. If expired, the door will be locked. It ranges from 0.2 to 600 seconds.
Normally Open Time	The door will be always open or closed.
Normally Close Time	
Timeout (Sec.)	A timeout alarm will be triggered if the door stays unlock for longer than this value.
Duress Alarm	An alarm will be triggered when a duress card or duress password is used to unlock the door.
Door Sensor	Intrusion and overtime alarms can be triggered only after Door Sensor is enabled.
Intrusion Alarm	When Door Sensor is enabled, an intrusion alarm will be triggered if the door is opened abnormally.
Overtime Alarm	A timeout alarm will be triggered if the time that a user takes to unlock the door exceeds the Timeout(s) , which ranges from 1 to 9999 seconds.
Anti-passback Alarm	<p>If enabled, users need to verify identities both for entry and exit; otherwise an alarm will be triggered.</p> <ul style="list-style-type: none"> • If a person enters with the identity checked and exits without the identity checked, an alarm will be triggered when the person tries to enter again and the person will have no permission to unlock the door any more. • If a person enters without the identity checked, an alarm will be triggered when the person tries to exit with the identity checked, and the person will have no permission to unlock the door any more.

Step 5

3.5

Click **OK**.

Alarm Linkage

Step 1

3.5.1 Setting Alarm Linkage

Step 2

Alarm input devices can be connected to the device, and you can modify the alarm linkage parameter as needed.

Log in to the web interface.

Select **Alarm Linkage > Alarm Linkage**.

Alarm linkage

Alarm Input	Name	Alarm Input Type	Modify
1	Zone1	NO	


Click  to modify the alarm linkage parameters.

Figure 3-11

Change alarm linkage parameters

Step 3

Figure 3-1

Modify

Alarm Input: 1

Name: Zone1

Alarm Input Type: NO

Fire Link Enable:

Alarm Output Enable:

Duration (Sec.): 30 (1~300)


Alarm Output Channel: 1

Access Link Enable:

Channel Type: NO

OK Cancel

Table 3-2 Alarm linkage parameter description

Parameter	Description
Alarm Input	You cannot modify the value. Keep it default.
Name	Enter a zone name.
Alarm Input Type	Select the type according to the alarm input type of the alarm device you have purchased. <ul style="list-style-type: none"> • NO: The circuit of the alarm device is normally open, and it closes when an alarm is triggered. • NC: The circuit of the alarm device is normally closed, and it opens when an alarm is triggered.
Fire Link Enable	If enabled, the device will output fire alarms when triggered. The alarm details will be displayed in the alarm log.  Alarm output and access link are NO by default if fire link is enabled.
AlarmOutput Enable	After enabling alarm output, the relay can output alarm information.
Duration (Sec.)	Alarm duration. It ranges from 1 s through 300 s.
AlarmOutput Channel	The device has only one output channel. Select the one according to your alarm device.
Access Link Enable	If enabled, the device will be normally on or normally closed when there are input alarm signals.

Parameter	Description
Channel Type	There are two options: NO and NC.

Click **OK**, and then the configuration is completed.



The configuration on the web will be synchronized with the configuration in the client if the device is added to a client.

3.5.2 Alarm Log

You can view the alarm type and time range in the **Alarm Log** interface.


Log in to the web interface.

Select **Alarm Linkage > Alarm Log**.

Alarm log

Step 1

Step 2

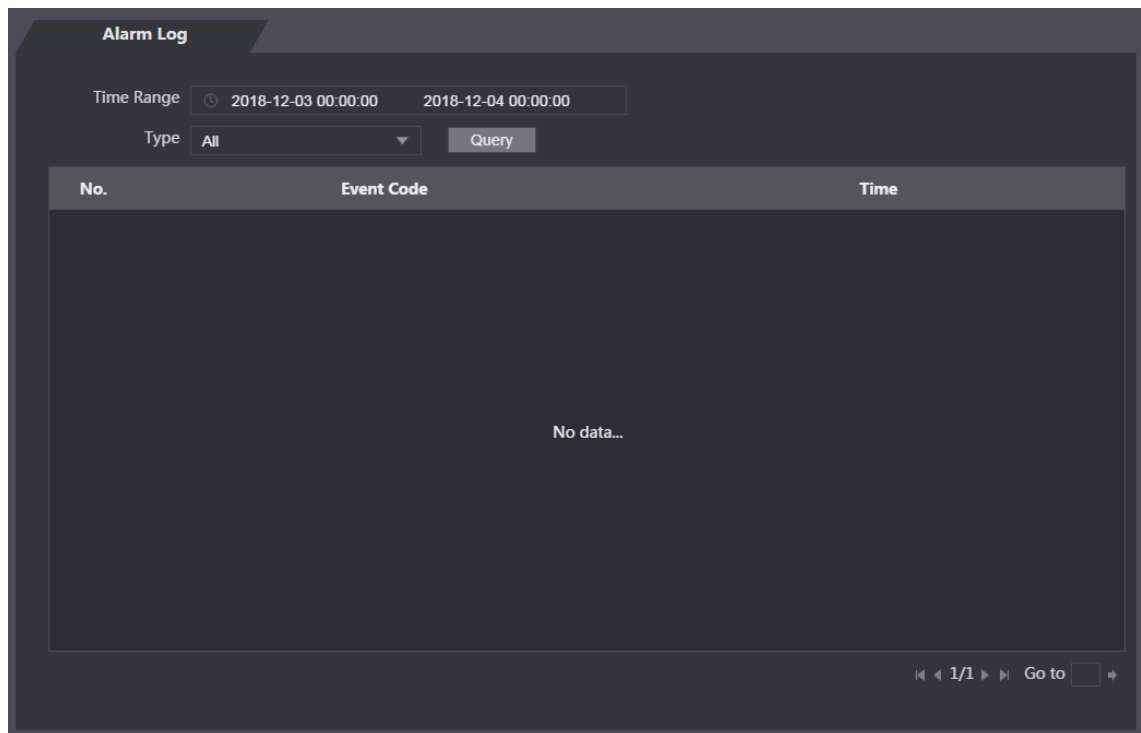


Step 3

Select a time range and alarm type, and then click **Query**.

Query results

3.6

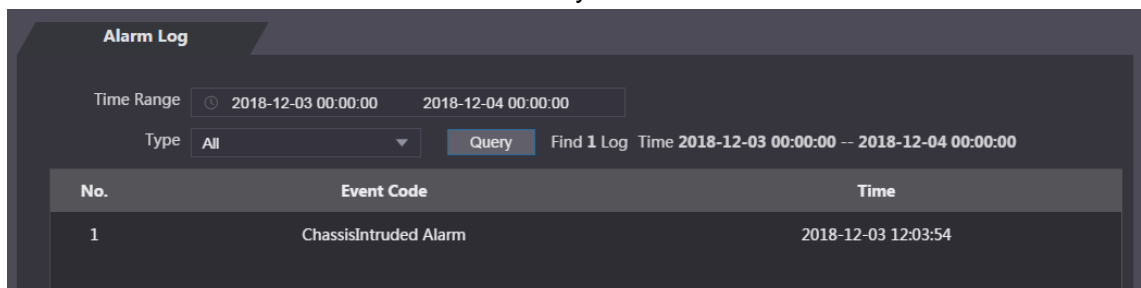

Time Section

Configure time sections and holiday plans, and then you can define when a user has the permissions to unlock doors.

3.6.1 Configuring Time Section

You can configure 128 time sections (0–127), and 4 time sections at most for each day. A user can only unlock doors in the configured time sections.

Log in to the web interface.

Select **Time Section > Time Section**.

Click **Add**.

Time section parameters

[Step 1](#)
[Step 2](#)
[Step 3](#)

The screenshot shows a dark-themed 'Add' dialog box. At the top, there's a title bar with 'Add' and a close icon. Below that, there are two input fields: 'No.' with the value '0' and 'Time Section Name' which is empty. Underneath is a 'Period Config' section with a row of tabs for the days of the week: Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, and Saturday. The 'Sunday' tab is selected and highlighted in blue. Below the tabs, there are four rows of configuration. Each row starts with an 'Enable' checkbox. The first row has the checkbox checked and shows a 'Time Section' field with a range from 00:00:00 to 23:59:59. The other three rows have the checkboxes unchecked and show a range from 00:00:00 to 00:00:00. At the bottom of the dialog, there is an 'Apply to the whole week' checkbox which is unchecked. In the bottom right corner, there are two buttons: 'OK' and 'Cancel'.

[Step 4](#)

Enter a number and name for the time section.

- No.: Enter a section number. It ranges from 0 through 127.
- Time Section Name: Enter a name for each time section. You can enter 10 Chinese characters or 32 characters (contain number, special characters and English characters).

[Step 5](#)
[Step 6](#)
[Step 7](#)

Configure periods for each day. You can configure up to four periods.

(Optional) Click **Apply to the whole week** to copy the configuration to other days.

Click **OK**.

3.6.2 Configuring Holiday Group

[Step 1](#)
[Step 2](#)
[Step 3](#)

Divide holidays into groups, and set holiday plans for different holiday groups. You can configure 128 holiday groups (0–127). Each group supports 16 holidays. Configure start and end time for a holiday group, and users can unlock doors in the configured period.

Log in to the web interface.

Select **Time Section > Holiday Group Config**.

Click **Add**.

Add a holiday group

No.	Holiday Group Name	Starting Time	Ending Time	Modify	Delete
No data...					

Step 4

Enter a number and a name for the holiday group.

- No.: Enter a section number. It ranges from 0 through 127.
- Time Section Name: Enter a name for each time section. You can enter 10 Chinese characters or 32 characters (contain numbers, special characters and English characters).

Step 5

Click **Add**.

Add a holiday

Time Section Name	<input type="text"/>
Time Section	<input type="text" value="2021-04-30 - 2021-05-01"/>

Step 6

Step 7

Enter a name for the holiday, select the start and end date, and then click **OK**.



You can add multiple holidays for one holiday group.

Click **OK**.

Step 1

3.6.3 Configuring Holiday Plan

Add the configured holiday groups to a holiday plan for management. Users can only unlock the doors within the days defined in the holiday plan.

Log in to the web interface.

Select **Time Section > Holiday Plan Config.**

Click **Add.**

Add a holiday plan

Step 2
Step 3

Add

No. Time Section Name

Holiday Group No.

Holiday Period

<input checked="" type="checkbox"/> Enable	Time Section:	<input type="text" value="00:00:00"/>	-	<input type="text" value="23:59:59"/>
<input type="checkbox"/> Enable	Time Section:	<input type="text" value="00:00:00"/>	-	<input type="text" value="00:00:00"/>
<input type="checkbox"/> Enable	Time Section:	<input type="text" value="00:00:00"/>	-	<input type="text" value="00:00:00"/>
<input type="checkbox"/> Enable	Time Section:	<input type="text" value="00:00:00"/>	-	<input type="text" value="00:00:00"/>

Enter a number and name for the holiday plan.

- No.: Enter a section number. It ranges from 0 through 127.
- Time Section Name: Enter a name for each time section. You can enter 10 Chinese characters or 32 characters (contain numbers, special characters and English characters).

Step 4

Select the number of a holiday group that you have configured.

Step 5



Select **255** if you do not want to select a holiday group.

Step 6

Configure periods for each day in the holiday group that you selected. You can configure up to four periods.

Step 7

Click **OK.**

3.7

Data Capacity

Step 1

Step 2 You can see data capacity such as users, cards, and fingerprints that the device can hold on the **Data Capacity** interface.

3.8

Log in to the web interface.

Select **Data Capacity** on the navigation bar.

Step 1

Step 2


Volume Setting

You can adjust the volume as needed.

Log in to the web interface.

Click **Volume Setting**, and adjust the volume as needed.

Volume setting

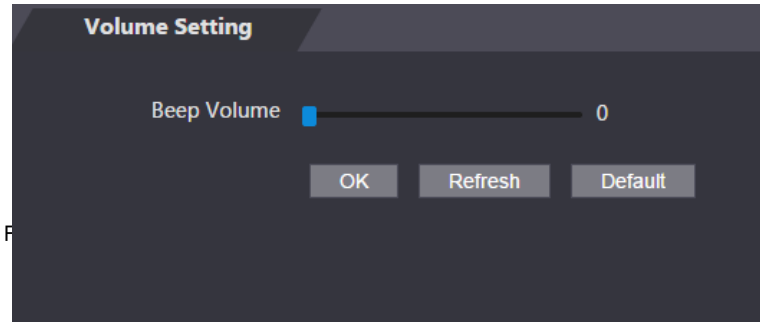

Click **OK**.

Step 3 Network Setting

3.9 3.9.1 TCP/IP

You need to configure IP address and DNS server so that the device can communicate with other devices.

Prerequisite

Make sure that the device is connected to the network and you can log in to its web interface.

Step 1


Log in to the web interface.

Step 2

Select **Network Setting > TCP/IP**.

Figure 3-20


TCP/IP

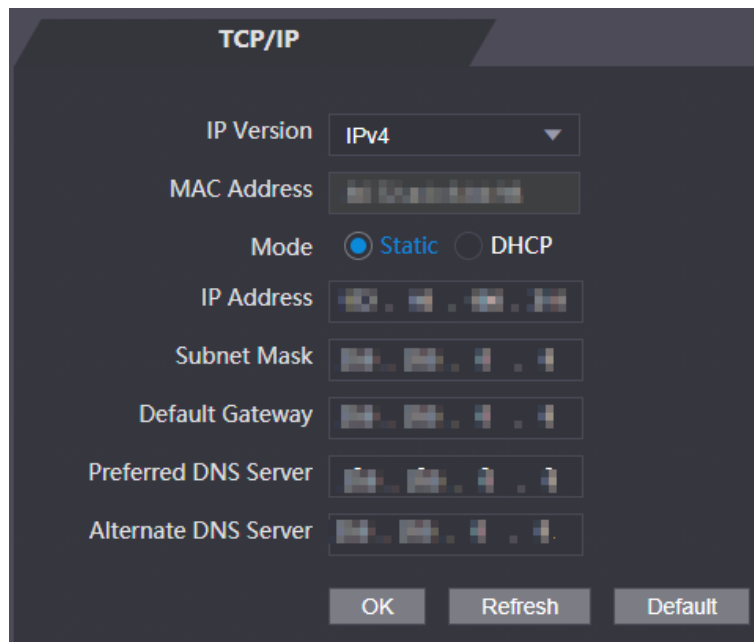

Step 3

Configure parameters.

Table 3-3 TCP/IP

Parameter	Description
IP Version	IPv4.
MAC Address	MAC address of the device.
Mode	<p>Static: Set IP address, subnet mask, and gateway address manually.</p> <p>DHCP</p> <ul style="list-style-type: none"> ◇ After DHCP is enabled, IP address, subnet mask, and gateway address cannot be configured. ◇ If DHCP is effective, IP address, subnet mask, and gateway address will be displayed automatically. ◇ If you want to see the default IP when DHCP is effective, you need to disable DHCP.
Link-local address	Only available when IPv6 is selected in the IP version. Unique link-local addresses will be assigned to network interface controller in each local area network to enable communications. The link-local address cannot be modified.
IP Address	Enter IP address, and then configure subnet mask and gateway address.
Subnet Mask	
Default Gateway	IP address and gateway address must be in the same network segment.
Preferred/ Alternate DNS Server	Set IP address of the preferred DNS server.

Step 4 Click **OK** to complete the setting.

3.9.2 Port

Step 1 Set the maximum connections clients that the device can be connected to and port numbers.

Step 2 Log in to the web interface.


Step 3 Select **Network Setting > Port**.

Configure port numbers. See the following table.



Except max connection, you need to restart the device to make the configuration effective after modifying values.

Table 3-4 Port description

Parameter	Description
Max Connection	<p>You can set the maximum connections of clients that the device can be connected to.</p> <p></p> <p>Platform clients like SmartPSS AC are not counted.</p>
TCP Port	Default value is 37777.
HTTP Port	Default value is 80. If other value is used as port number, you need to add this value behind the address when logging in through browsers.
HTTPS Port	Default value is 443.

Parameter	Description
RTSP Port	Default value is 554.

Click **OK** to complete the setting.

3.9.3 Register

When connected to external network, the device will report its address to the server that is Step 4 designated by the user so that clients can get access to the device.

Log in to the web interface.

Select **Network Setting > Auto Register**.

Select **Enable**, and enter host IP, port, and sub device ID.

Step 1
Step 2
Step 3

Table 3-5 Auto register description

Parameter	Description
Host IP	Server IP address or server domain name.
Port	Server port used for auto registration.
Sub Device ID	Access controller ID assigned by the server.

Click **OK** to complete the setting.

Step 4


3.9.4 P2P

Peer-to-peer computing or networking is a distributed application architecture that partitions tasks or workloads between peers. Users can download mobile application by scanning QR code, and then register an account so that more than one access controller can be managed on the mobile app. You do not need to apply dynamic domain name, do port mapping or do not need transit server.



If you want to use P2P, you must connect the device to the Internet; otherwise this function cannot work properly.

P2P

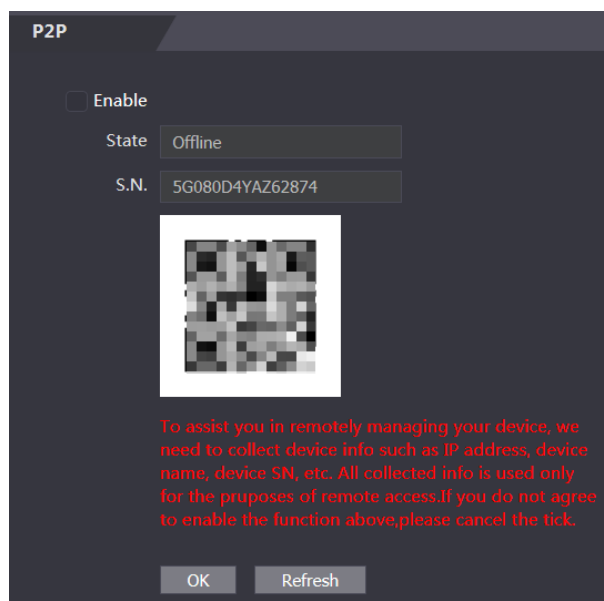

Log in to the web interface.
 Select **Network Setting > P2P**.
 Select **Enable** to enable the P2P function.
 Click **OK**.



Scan the QR code on your web interface to get the serial number of the device.

[Step 1](#)
[Step 2](#)
[Step 3](#)
[Step 4](#)

Date Setting

You can configure time zone, system time, DST (Daylight Saving Time) or NTP server.

3.10

Log in to the web interface.
 Click Date Setting.

Date setting

[Step 1](#)
[Step 2](#)

Table 3-6 Data setting description

Parameter	Description
Time Zone	Configure the time zone as needed.
System Time	Configure system time. Click Sync with PC , and the system time changes to the PC time.
DST	<ol style="list-style-type: none"> 1. Enable DST as needed. 2. Select Date or Week in Sate Setting. 3. Configure start time and end time.

Parameter	Description
NTP Setting	<ol style="list-style-type: none"> 1. Select the NTP Setting check box. 2. Configure parameters. <ul style="list-style-type: none"> ◇ Server: Enter the domain of a NTP server, and the device syncs time with the server in real time. ◇ Port: Enter the port of the NTP server. ◇ Update Cycle: The interval of to use NTP.

Click **OK**.

Safety Management

Step 3

3.11.1 IP Authority


Log in to the web interface.

Click Safety Mgmt. > IP Authority.

Step 1

Step 2

IP authority

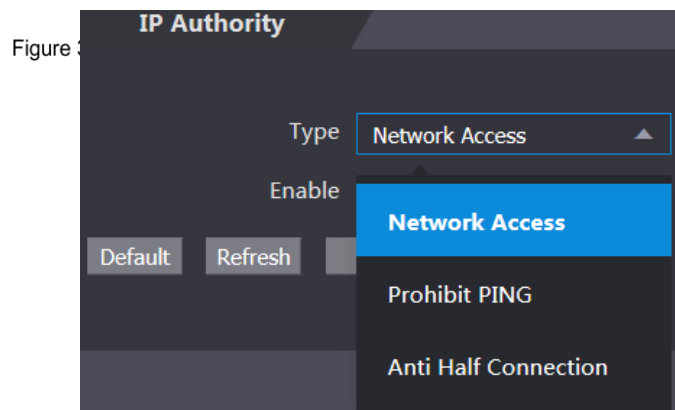

Step 3

Select a cybersecurity mode as needed.

- **Network Access:** Set allowlist and blacklist to limit access.
 - ◇ **Allowlist:** Only when the IP/MAC of your PC in the allowlist, can you access the device. Ports are the same.
 - ◇ **Blocklist:** When the IP/MAC of your PC is in the blacklist, you cannot access the device. Ports are the same.
- **Prohibit PING:** Enable **PING prohibited** function, and the device will not respond to the ping request.
- **Anti Half Connection:** Enable **Anti Half Connection** function, and the device can provide service normally under half connection attack.

3.11.1.2 Network Access

Select **Network Access** in **Type**.

Procedure

Select the **Enable** check box.

Network access

The screenshot shows the 'IP Authority' configuration window for 'Network Access'. The 'Type' is set to 'Network Access', 'Enable' is checked, and 'Mode' is set to 'Allow List'. Below the mode selection are two tabs: 'Allow List' (active) and 'Block List'. A table with columns 'IP Address', 'MAC Address', 'Port', 'Modify', and 'Delete' is shown, but it is empty with the text 'No data...'. At the bottom, there is a red warning message: 'Only the listed IP addresses/MAC are allowed to visit corresponding ports of the device.' and buttons for 'Add', 'Default', 'Refresh', and 'OK'.

Step 2
Step 3

Select **Allow List** or **Block List**.
Click **Add**.

Figure 3-25

Add IP

The 'Add IP' dialog box contains the following fields: 'Type' (dropdown menu set to 'IP Address'), 'IP Version' (dropdown menu set to 'IPv4'), 'IPv4' (text input field containing '1.0.0.1'), 'All Ports' (checkbox, unchecked), 'Device Start Port' (text input field containing '1'), and 'Device End Port' (text input field containing '1'). At the bottom are 'Save' and 'Cancel' buttons.

Step 4

Configure parameters.



Table 3-7 Description of adding IP parameters

Parameter	Description
Type	Select IP address, IP segment, MAC address or all IP addresses. IP address: Select IP version and enter the IP address of the host to be added. IP segment: Select IP version and enter the start address and end address of the segment to be added. MAC address: Enter MAC address of the host to be added. All IP addresses: Set all IP addresses in allowlist or restricted list.
All Ports	Set access ports. You can select all ports or the ports in defined areas.
Device Start Server Port	Device all ports: Set all IP port in allowlist or blocklist. When selecting Blocklist in Mode , and All IP Address in Rule Type , you cannot select the Device All Ports check box. Device start server port and Device end server port: Set Device start server port and device end server port, and the range is 1–65535.
Device End Server Port	

Click **Save**, and the **IP Authority** interface is displayed.

Click **OK**.

Step 5 Other Operations

- Click  to edit the allowlist or blocklist.
- Click  to delete the allowlist or blocklist

3.11.1.3 Prohibit PING

Step 1

Step 2


Set **Type** to **Prohibit PING**.

Figure 3-26
 Select the **Enable** check box.

Prohibit PING

Step 3

Step 1

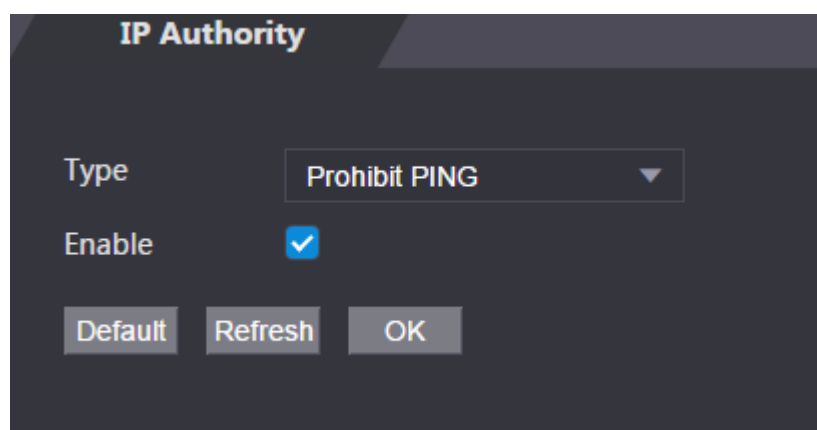

Click **OK**.

3.11.1.4 Anti Half Connection


Set **Type** to **Anti Half Connection**.

Select the **Enable** check box.

Network access

Step 2

Fig

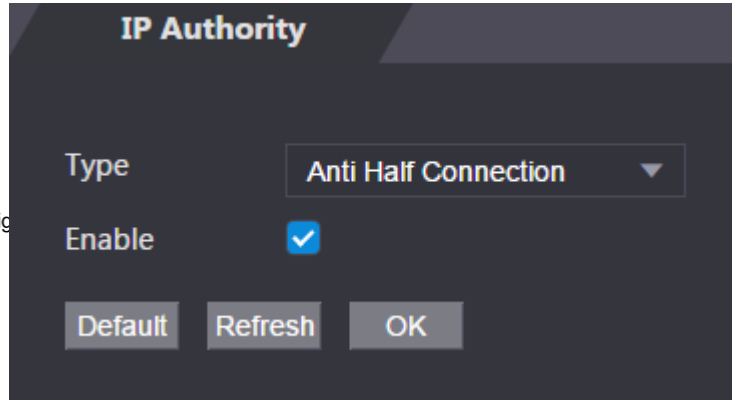

Click **OK**.

3.11.2 Systems

Step 3

3.11.2.1 System Service

Log in to the web interface.

Select **Safety Mgmt. > System Service**.

Enable or disable the system services as needed.

Step 1

Step 2

Step 3



The system service configuration on the web interface is synchronized to the **Features** interface of the device.

Figure 3-28

System service

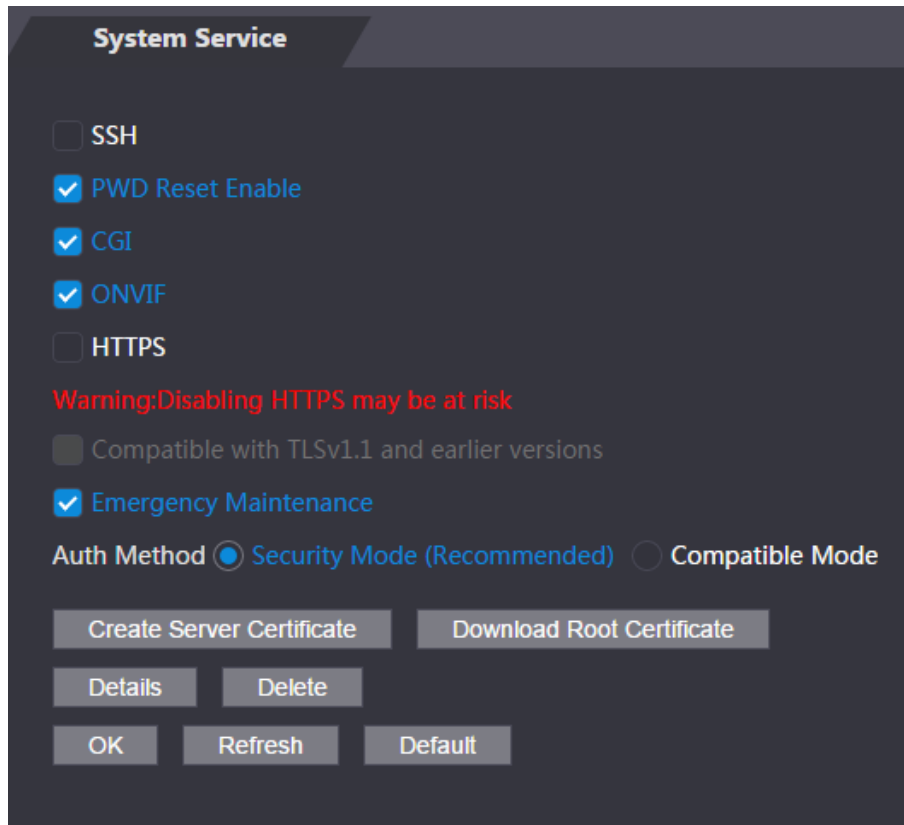




Table 3-8 Parameter description

Parameter	Description
SSH	Secure Shell (SSH) is a cryptographic network protocol for operating network services securely over an unsecured network. When SSH is enabled, SSH provides cryptographic service for the data transmission.
PWD Reset Enable	If enabled, you can reset the password. This function is enabled by default.
CGI	Common Gateway Interface (CGI) offers a standard protocol for web servers to execute programs similarly to console applications running on a server that dynamically generates web pages. When CGI is enabled, CGI commands can be used. The CGI is enabled by default.
ONVIF	Enable other devices to pull video stream of the VTO through the ONVIF protocol.
HTTPS	Hypertext Transfer Protocol Secure (HTTPS) is a protocol for secure communication over a computer network. When HTTPS is enabled, HTTPS will be used to access CGI commands; otherwise HTTP will be used.  When HTTPS is enabled, the device will restart automatically.
Compatible with TLSv1.1 and earlier versions	Enable this function if your browser is using TLS V1.1 or earlier versions.
Emergency Maintenance	Enable it for fault analysis and repair.  This function will occupy 8088 and 8087 ports.
• Auth Method	Security Mode (recommended): Support logging in with Digest authentication. Compatible Mode: Use the old login method.

3.11.2.2 Creating Server Certificate


Click **Create Server Certificate**, enter needed information, click **Save**, and then the device will restart.

[Step 1](#)
[Step 2](#)

3.11.2.3 Downloading Root Certificate

Click Download Root Certificate.
Double-click the file that you have downloaded.


Figure 4-115 File download

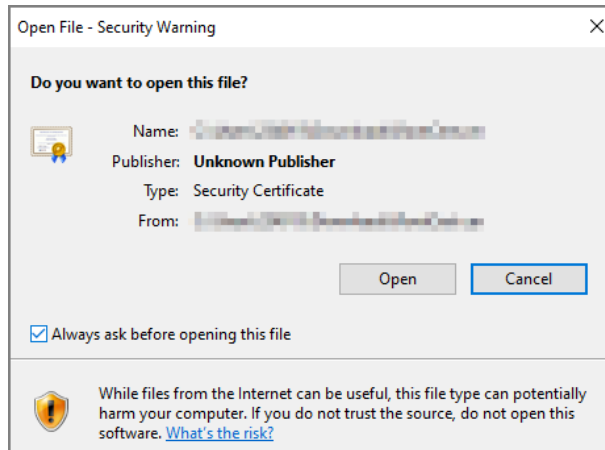

Click **Open**.

Figure 4-116 Certificate information


Step 3

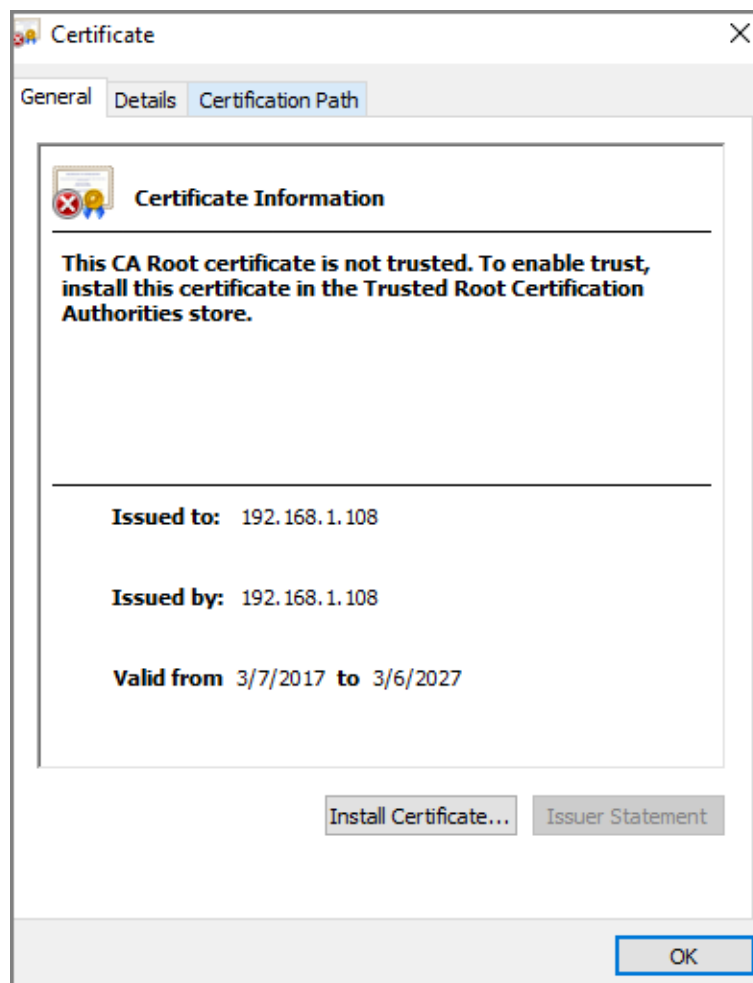

Step 4

Click Install Certificate.

Figure 4-117 Certificate import wizard (1)

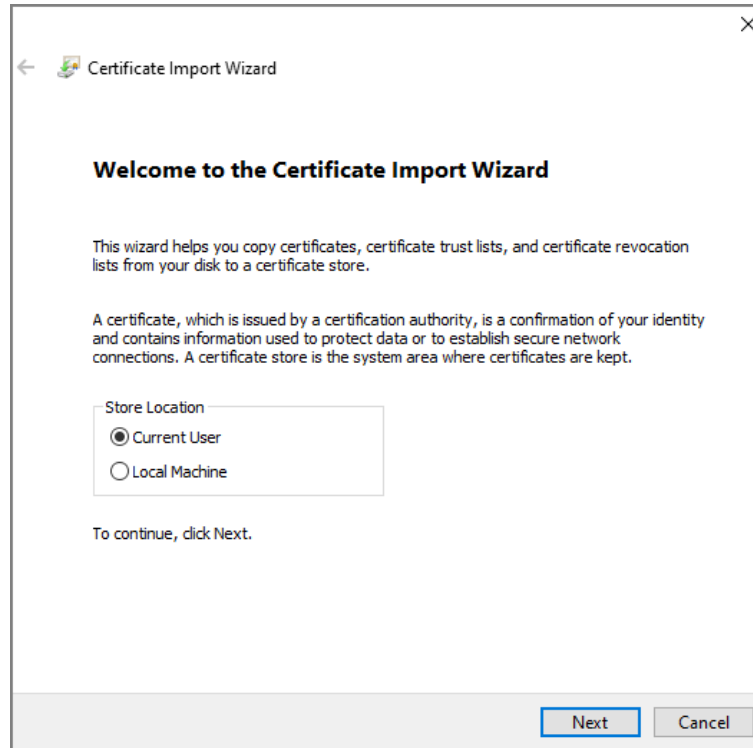


Select **Current User** or **Local Machine**, and then click **Next**.

Step 5


- **Current User:** Applies to the user that has logged in to the PC.
- **Local Machine:** Applies to all users that have logged in to the PC

Figure 4-118 Certificate store

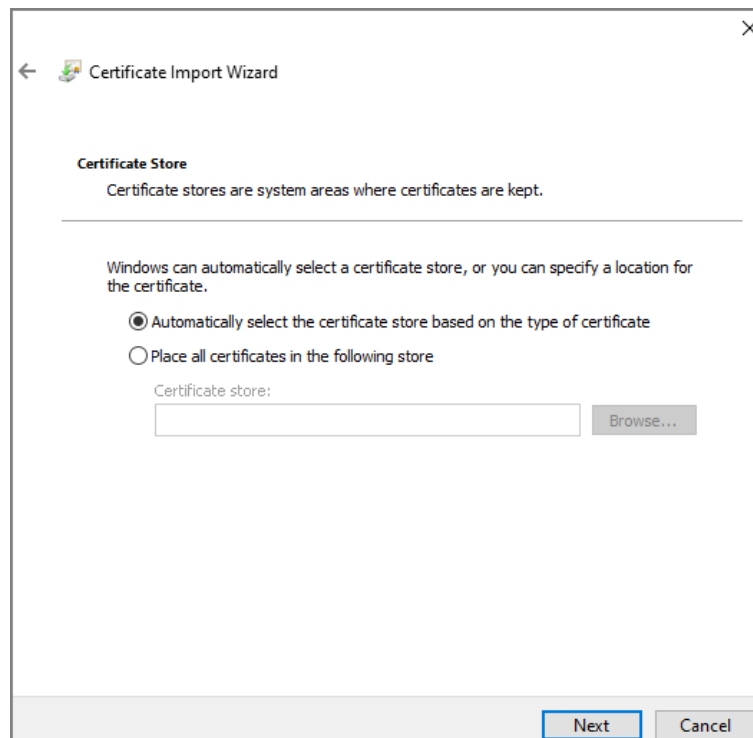


Step 10 Select the storage location, and then click **Next**.

Figure 4-119 Certificate import wizard (2)

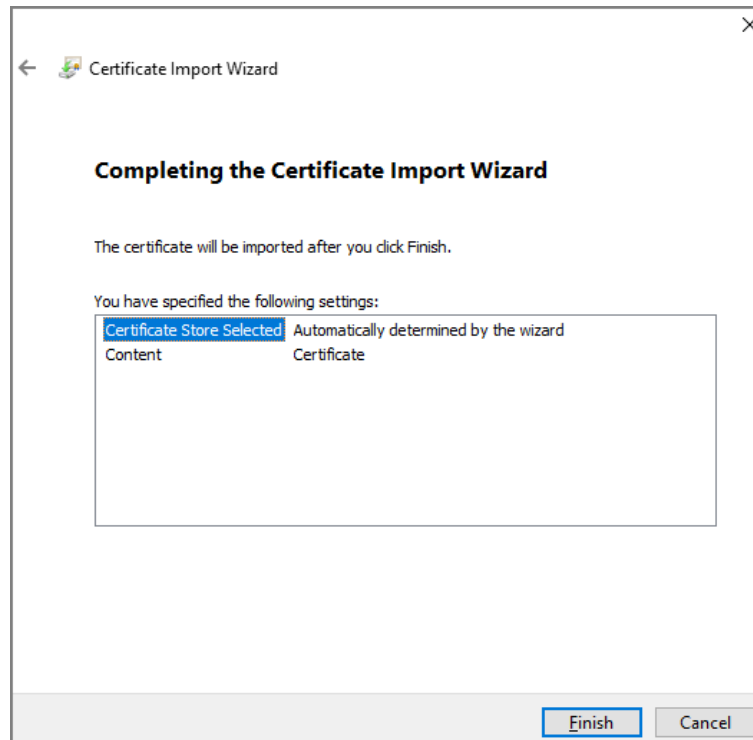

Step 11 Click **Finish**.

Figure 4-120 Imported successfully

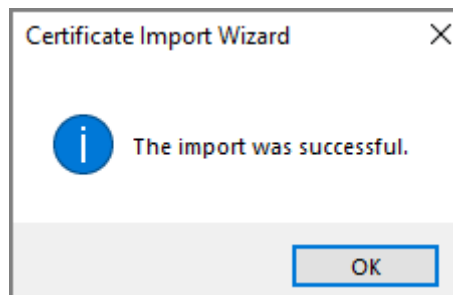

3.12

User Management

You can add and delete users that can log in to the web interface, modify users' passwords, and enter an email address for resetting the password when you forget your password.



User refers to the use who logging in to the web interface.


^{Step 1} 3.12.1 User

3.12.1.1 Adding Users

Log in to the web interface.

Select **User Mgmt. > User Mgmt.**

User management

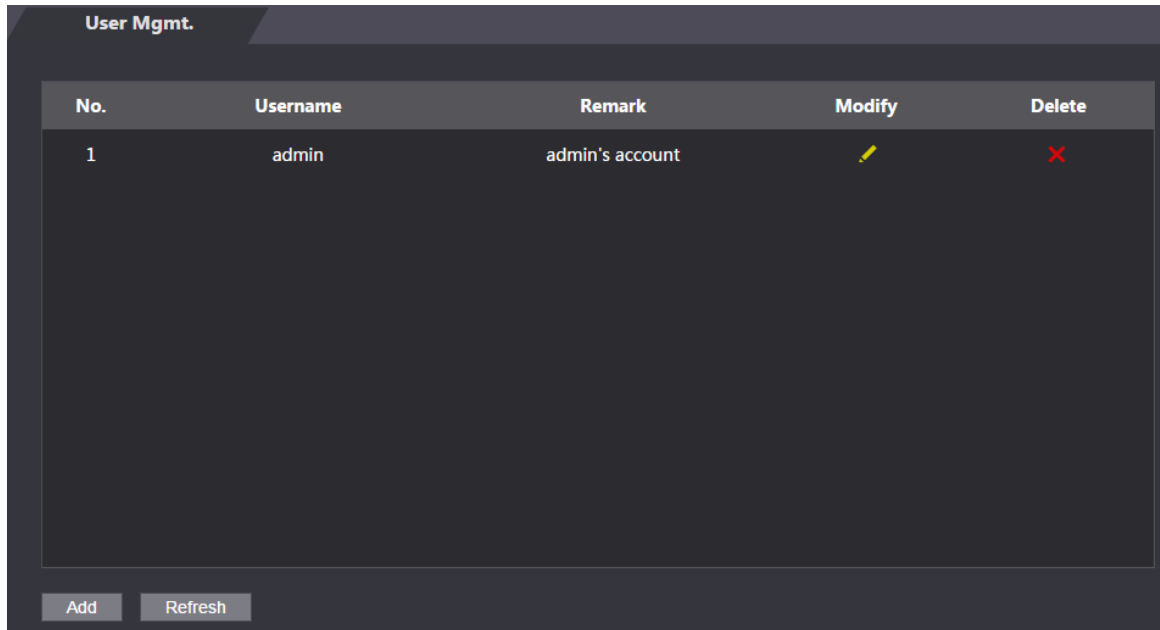

Click **Add**.

Step 3

Add user

The "Add" dialog box contains the following fields and options:

- Username:
- Password:
- Strength selection:
- Confirm Password:
- Remark:
- Buttons:

Step 4

Step 5

Enter username, password, confirm password, and remark.

Click **OK**.

Step 1

Step 2

Step 3

3.12.1.2 Changing Password


Log in to the web interface.

Select **User Mgmt. > User Mgmt.**

Click to change the password.

Modify user information

Figure

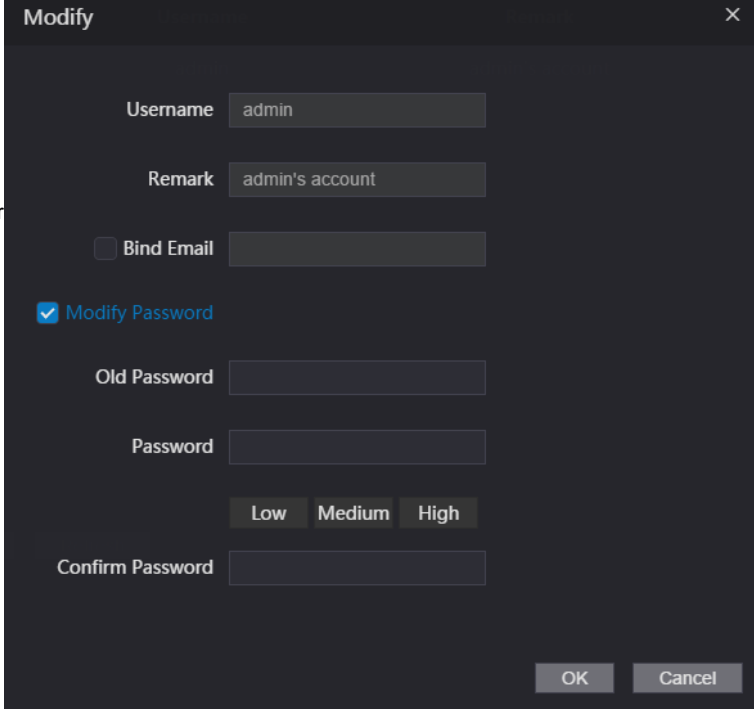

The screenshot shows a 'Modify' dialog box with the following fields and options:

- Username: admin
- Remark: admin's account
- Bind Email:
- Modify Password:
- Old Password: [Empty text box]
- Password: [Empty text box]
- Confirm Password: [Empty text box]
- Low Medium High (radio buttons)
- OK Cancel (buttons)

Select the **Bind Email** check box and then enter the linked email address.

Step 4

Select the **Modify Password** check box, and then enter the old password, new password and confirm password.

Step 5

Click **OK**.

Step 6

3.12.2 ONVIF User

Open Network Video Interface Forum (ONVIF), a global and open industry forum with the goal of facilitating the development and use of a global open standard for the interface of physical IP-based security products. When ONVIF is used, administrator, operator, and user have different permission of ONVIF server. Create ONVIF users as needed.

Step 1


Step 2

3.12.2.1 Adding ONVIF User

Log in to the web interface.

Select **User Mgmt. > Onvif User**.

Onvif user

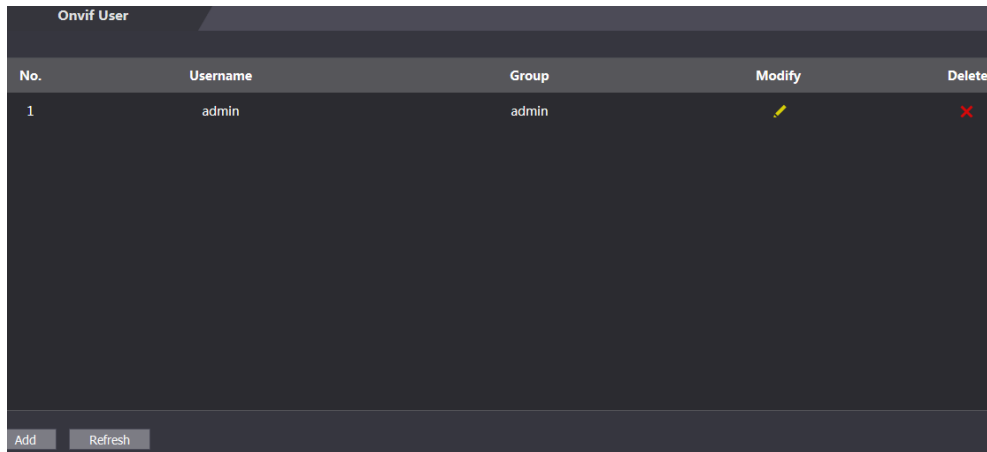


No.	Username	Group	Modify	Delete
1	admin	admin		

At the bottom of the interface, there are two buttons: **Add** and **Refresh**.

Click **Add**.

Add ONVIF user

Step 3

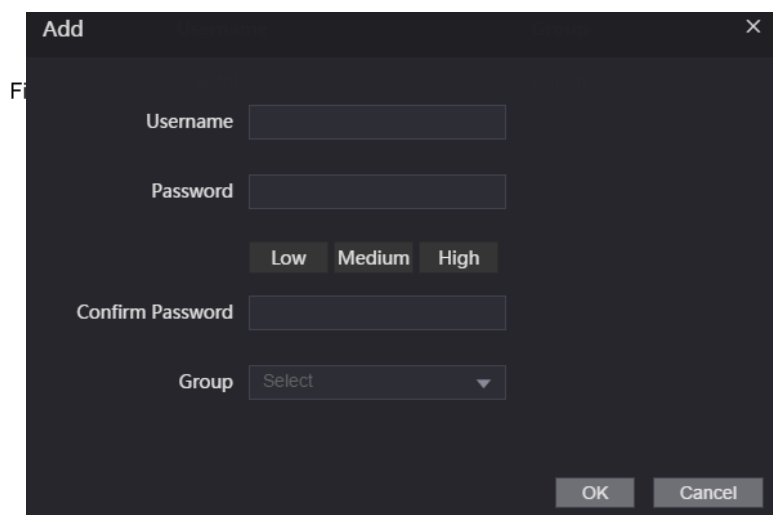

The 'Add' dialog box contains the following fields and options:

- Username**: Text input field.
- Password**: Text input field.
- Strength Selection**: Three buttons labeled **Low**, **Medium**, and **High**.
- Confirm Password**: Text input field.
- Group**: A dropdown menu currently showing **Select**.
- Buttons**: **OK** and **Cancel** buttons at the bottom right.

Step 4

Step 5

Step 6

Enter username, password, and confirm password.

Select the group.

Click **OK**.


Step 1 Step 2 Step 3 3.12.2.2 Changing Password

Figure 3-34
Log in to the web interface.

Select **User Mgmt. > Onvif User**.

Click to change the password.

Change the password (ONVIF user)

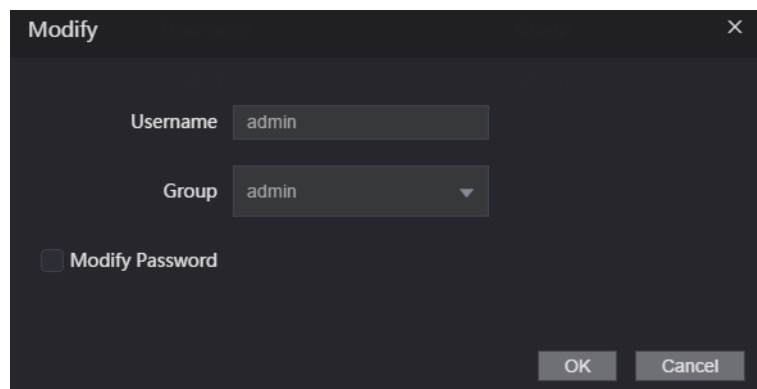

The 'Modify' dialog box contains the following fields and options:

- Username**: Text input field with the value **admin**.
- Group**: A dropdown menu with the value **admin**.
- Modify Password**: A checkbox that is currently unchecked.
- Buttons**: **OK** and **Cancel** buttons at the bottom right.

Select the **Modify Password** check box, and then enter the old password, new password and confirm password.
Click **OK**.

Maintenance

Step 4

You can regularly restart the device to improve the device performance.

Step 5

Log in to the web interface.


Select **Maintenance**.

3.13

Maintenance

Step 1

Step 2

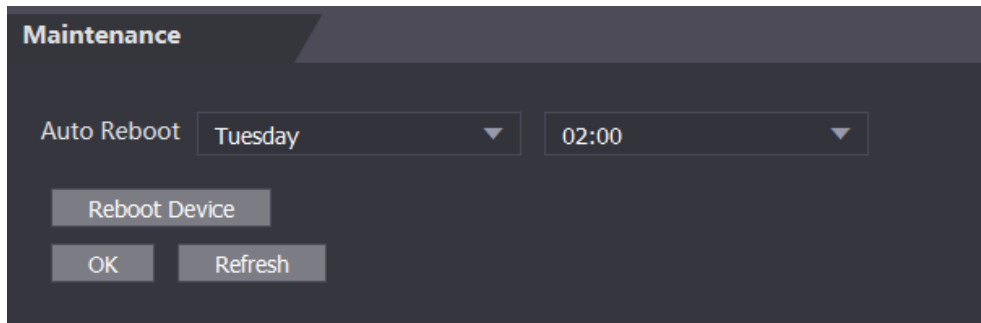

Set the time, and then click **OK**.

Step 3



It is **Never** by default.

Step 4

(Optional) Click **Reboot Device**, the device will restart immediately.

3.14 Configuration Management

When more than one device needs the same configuration, you can configure parameters for them by importing or exporting configuration files.

3.14.1 Exporting Configuration File

Step 1

Step 2


You can export the configuration file of the device for backup.

Log in to the web interface.

Select **Config Mgmt.** on the navigation bar.

Configuration management

Step 3

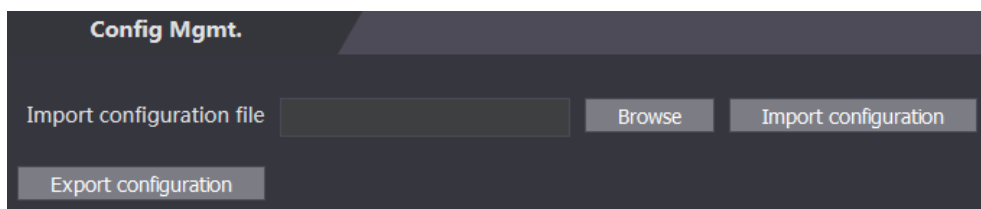

Click **Export configuration** to save the configuration file locally.



IP information of the device will not be exported.

3.14.2 Importing Configuration File

You can import the configuration file that is exported from an access controller to another access controller with the same model.

Log in to the web interface.

Select **Config Mgmt.** on the navigation bar.

On the configuration management interface, click **Browse** to select the configuration file that you want to import, and then click **Import configuration**.

The device will restart after importing configuration file.

Step 1

Step 2

3.14.3 Default



Be careful when doing this operation. It will restore the device to default configuration, and result in data loss.

- **Restore Factory:** Reset all the data and configuration of the device.
- **Restore Factory (Save user & log):** Reset all data and configuration, except for user information and logs.

Log in to the web interface.


Select **Config Mgmt. >Default**.

Step 1

Step 2

Figure 3-37

Default

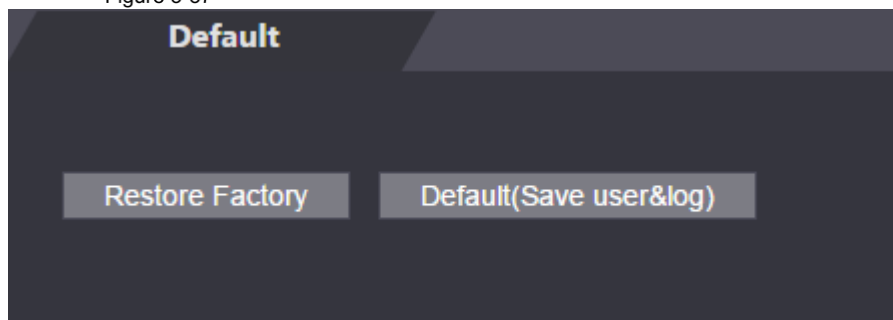

3.15

Upgrade



Step 1


Step 2

- Export the configuration file for backup before upgrade, and then import it after the upgrade is completed.
- Make sure that the upgrade file has been obtained. You can get it from technical support.
- Do not disconnect the power or network, or restart or shutdown the device during upgrade.

Log in to the web interface.

Select **Upgrade** on the navigation bar.

Upgrade

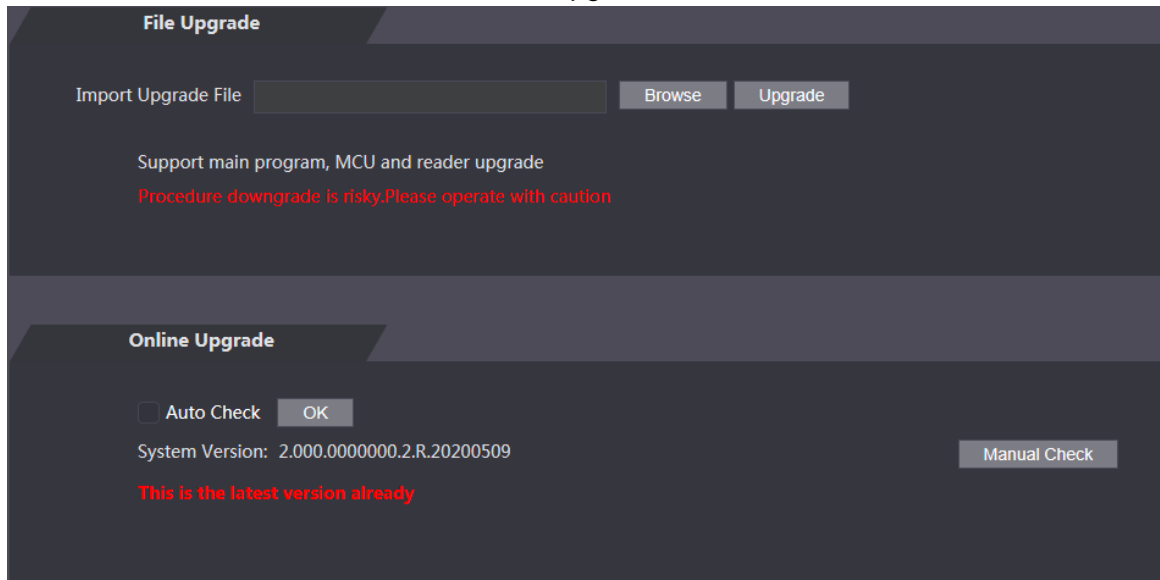

Select upgrading method according to the actual needs.

Step 3

- File Upgrade
 - 1) Click **Browse**, and then upload upgrade file.
 - 2) The upgrade file should be a .bin file.
 - 3) Click **Upgrade**.

The upgrade starts.
- Online Upgrade
 - 1) Select the **Auto-check** check box, and then click **OK**.

The system checks for upgrade once a day automatically, and there will be system notice if any upgrade is available.



We need to collect the data such as device name, firmware version, and device serial number to proceed auto-check. The collected information is only used for verifying the legality of cameras and upgrade notice.

- 2) If there is any upgrade available, click **Upgrade**, and then the system starts upgrading.



3.16

Click **Manual Check** to check for upgrade manually.

Step 1

Step 2

Version Information

3.17

You can view information including MAC address, serial number, MCU version, web version, security baseline version, system version, and firmware version.

Log in to the web interface.

Step 1

Select **Version Info** on the navigation bar.

Online User

You can view username, IP address, and user login time on the **Online User** interface.

Log in to the web interface.

Select **Online User** on the navigation bar.

Online user

Step 2

No.	Username	IP Address	User Login Time
1	admin	10.33.5.16	2018-12-03 15:34:20

Refresh

System Log

3.18

View and back up system logs, admin logs, and unlock records.


3.18.1 System Logs

Step 1 View and search for system logs.

Step 2 Log in to the web interface.

Step 3 Select **System Log > System Log**.

Select a time range and a type, and then click **Query**.

 Figure 3-40

Click **Backup** to download the results.

Search for logs

No.	Log Time	Username	Log Type
1	2020-06-04 04:36:20	admin	Save Config
2	2020-06-04 04:36:20	admin	Save Config
3	2020-06-04 03:57:37	admin	Save Config
4	2020-06-04 03:57:35	admin	Save Config
5	2020-06-04 03:57:19	admin	Save Config
6	2020-06-04 03:57:18	admin	Restore
7	2020-06-04 03:37:41	System	Save Config

Time:
Username:
Type:
Content:

Backup

Go to

3.18.2 Admin Log

Search for admin logs by admin ID.

Log in to the web interface.

Select **System Log > Admin Log**.


Enter the admin ID, and then click **Query**.

Admin log

Step 1

Step 2

Step 3

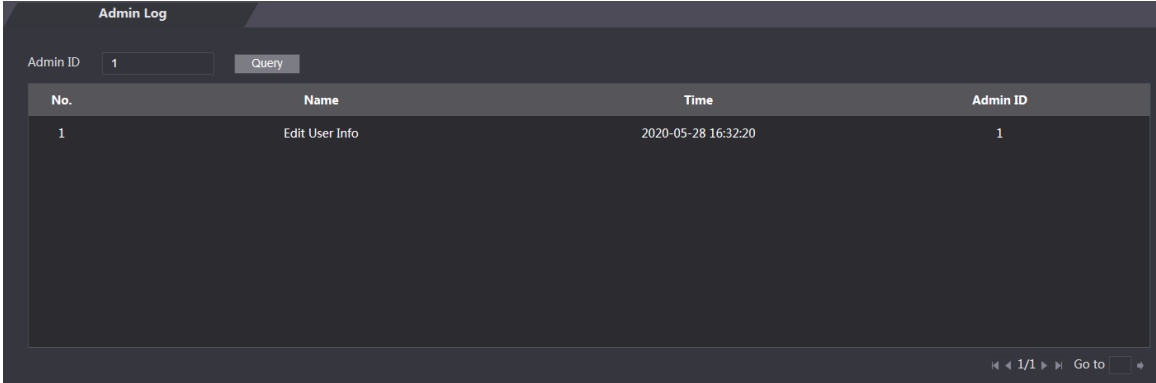

The screenshot shows the 'Admin Log' web interface. At the top, there is a search bar with 'Admin ID' and a 'Query' button. Below the search bar is a table with the following data:

No.	Name	Time	Admin ID
1	Edit User Info	2020-05-28 16:32:20	1

At the bottom right of the table, there is a pagination control showing '1/1' and a 'Go to' button.

3.18.3 Unlock Records

Search for unlock records and export them.

Step 1

Log in to the web interface.

Step 2

Select **System Log > Search Records**.

Step 3


Select a time range and a type, and then click **Query**.

Step 4

Click **Export Data** to download the results.

3.19

Exit

Click  at the upper-left corner, and then click **OK** to log out of the web interface.

4 SmartPSS AC Configuration

You can remotely manage the device through SmartPSS AC. This chapter mainly introduces quick configuration. For detailed operations, see the user's manual of SmartPSS AC.



The interfaces of Smart PSS AC are for reference only, and might differ from the actual ones.

Login

Install SmartPSS AC.

4.1

Double-click , and then follow the instructions to finish the initialization and log in.

Step 1

Step 2 Adding Devices

4.2

You need to add the device to SmartPSS AC. You can click **Auto Search** to add devices in batches or **Add** to add devices one by one.

4.2.1 One by One

You can add devices one by one. You need to know IP addresses and login username and password of devices that you want to add.

Step 1

Step 2

Step 3

Log in to SmartPSS AC.

Click **Device Manager** on the lower-left corner.

Click **Add** on the **Device Manager** interface.

Manual add

Add Device
✕

Device Name:
* Device

Method to add:
IP

IP:
*

Port:
* 37777

User Name:
* admin


Password:
*

Add and Continue
Add
Cancel

Step 4

Enter detailed information of the device.

Table 4-1 Parameters

Parameter	Description
Device Name	Enter a name of the device. We recommend naming the device with installation area for easy identification.
Method to add	Select IP to add the device through IP address.
IP	Enter IP address of the device. It is 192.168.1.108 by default.
Port	Enter the port number of the device. The port number is 37777 by default.
User Name, Password	Enter the username and password of the added device.  The username is admin and password is admin123 by default. We recommend changing the password after login.

Step 5

Click **Add**, and then you can see the added device on the **Devices** interface.



After adding, SmartPSS AC logs in to the device automatically. In case of successful login, status displays **Online**. Otherwise, it displays **Offline**.


4.2.2 In Batches

We recommend adding devices by auto search when you need to add devices in batches within the same network segment, or when the network segment is clear but the device IP address is unclear.

Log in to SmartPSS AC.


Click **Device Manager** on the lower-left corner.

Devices

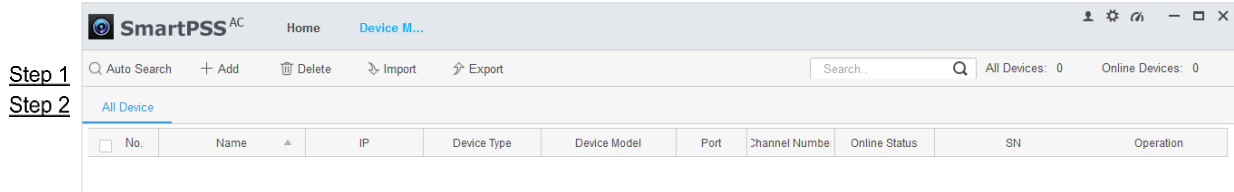

Click **Auto Search**.

Auto search

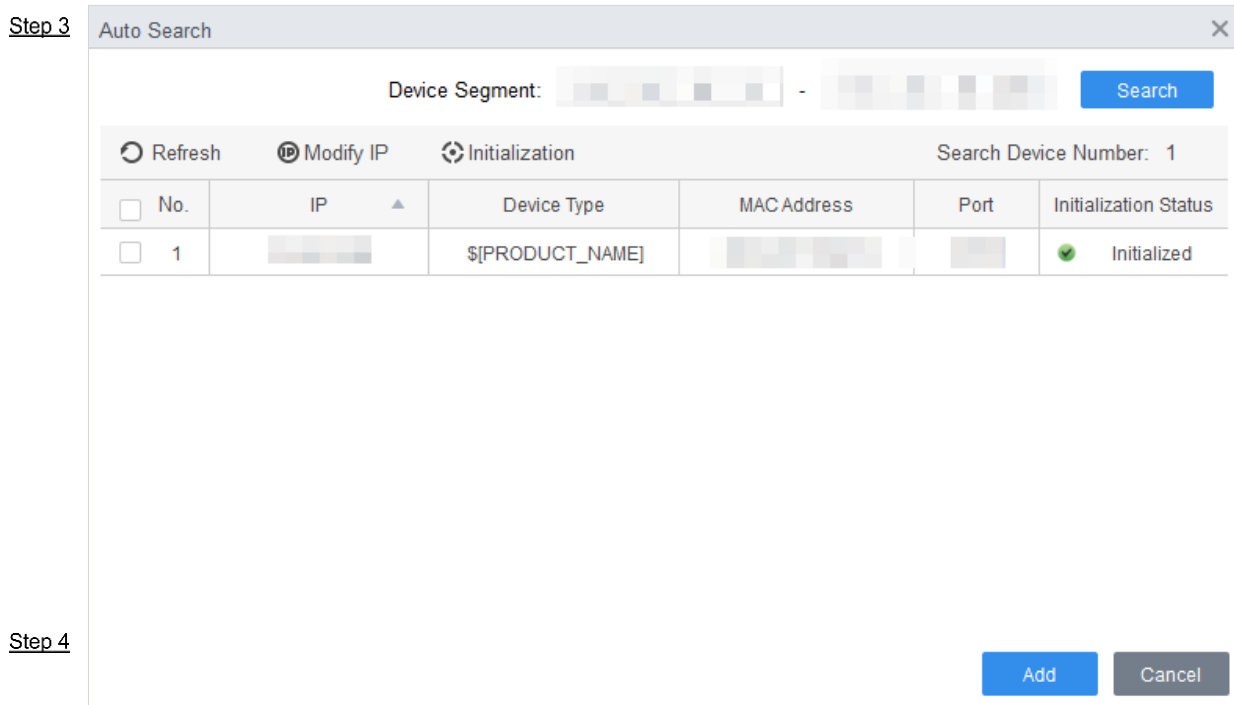

Step 4

Enter the network segment, and then click **Search**.

A search result list will be displayed.

Step 5



Step 6

- Click **Search** to refresh the device list.
- Select a device, and then click **Modify IP** to modify its IP address, subnet mask, and gateway.

Select devices that you want to add to the SmartPSS AC, and then click **Add**.

Enter the username and the login password to login.






You can see the added devices on the **Devices** interface.



- The username is admin and password is admin123 by default. We recommend changing the password after login.

- After adding, SmartPSS AC logs in to the device automatically. If succeeded, the status of the device will be **Online**. Otherwise, it is **Offline**.

Other Operation

- : Edit the information of the device, including device name, IP address, port number, username, and password.
You can also double-click the device to edit its information.
- : Goes to the device configuration interface. You can set up the time, update the device, restart the device, and extract user information or attendance records from the device.
-  and : Log in to and out of the device.
- : Delete the device.

User Management

4.3

Add users, issue cards to them, and configure their access permissions.

4.3.1 Setting Card Type

Before issuing card, set card type first. For example, if the issued card is ID card, set type to ID card.



Step 1

Step 2

Card types must be the same as card issuer types; otherwise, card numbers cannot be read.

Log in to SmartPSS AC.


Click **Personnel Manager**.

Personnel manager

Step 3


Step 4

Step 5

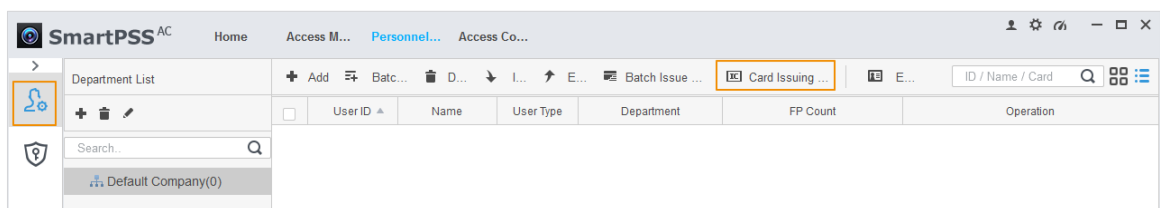

On the **Personnel Manager** interface, click , then click .

On the **Setting Card Type** interface, select a card type.

Click  to select display method of card number in decimal or in hex.

Setting card type

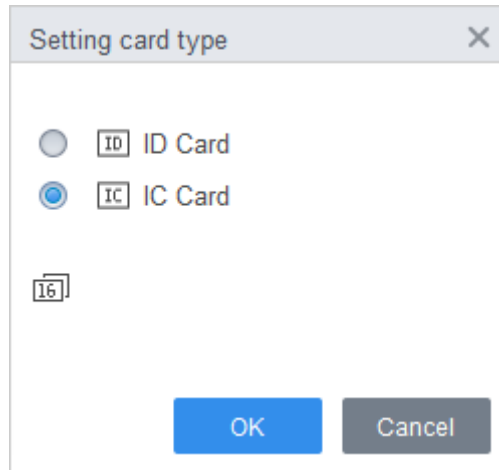


Figure 4-5

Click **OK**.

4.3.2 Adding User

4.3.2.1 One by One

You can add users one by one manually.

Step 1

Log in to SmartPSS AC.

Step 2

Click **Personnel Manger > User > Add**.

Step 3

Add basic information of the user.

- 1) Click the **Basic Info** tab on the **Add User** interface, and then add basic information of the user.

Add basic information

The screenshot shows the 'Add User' dialog box with the 'Basic Info' tab selected. The form contains the following fields and values:

- User ID: * 2
- Name: * test
- Department: Default Company
- User Type: General
- Valid Time: 2020/6/5 0:00:00 to 2030/6/5 23:59:59 (3653 Days)
- Profile Picture: Placeholder with 'CameraCaptchaPicture' and 'Upload Picture' button. Image Size: 0 ~ 120KB
- Gender: Male, Female
- ID Type: ID
- Title: Mr
- ID No.: [Empty]
- DOB: 1985-3-15
- Company: [Empty]
- Tel: [Empty]
- Occupation: [Empty]
- Email: [Empty]
- Entry Time: 2020/6/4 14:37:59
- Mailing Address: [Empty]
- Resign Time: 2030/6/5 14:37:59
- Administrator:
- Remark: [Empty text area]

Buttons at the bottom: Continue, Finish, Cancel.



Step 4

Click the **Certification** tab to add certification information of the user.

- Configure password.
The password must consist of 6–8 digits.
- Configure card.



The card number can be read automatically or entered manually. To read the card number automatically, select a card reader, and then place the card on the card reader.

- 1) Click , set **Card Reader** to **Device**, and then select the device you add from **Device**.
 - 2) Click **Add**, swipe a card on the device, and then the card number will be displayed.
 - 3) Click **OK**.
 - 4) After adding a card, you can set the card to main card or duress card, or replace the card with a new one, or delete the card.
- Configure fingerprint.
- 1) Click , set **Fingerprint Collector** to **Device**.

- 2) Click **Add Fingerprint** and press your finger on the scanner three times continuously.

Add password, card, and fingerprint

Edit user

Basic Info | Certification | Permission configuration

Password For the 2nd-generation access controller, it is the personnel password; otherwise it is card password.

Card Add The card number must be added if not the 2nd generation access controller is used.

45C50AE0
Card Issuin... 2021-05-29
Card Repla... 2021-05-29

Fingerprint

+ Add - Delete

<input type="checkbox"/>	Fingerprint Name	Operation
<input type="checkbox"/>	Fingerprint 1	

Step 5

Configure permissions for the user.

For details, see "4.4 Assigning Permissions".

Figure 4-8

Permission configuration

Basic Info | Certification | Permission configuration

Permission group is a combination of various devices including attendance check and access control. After selecting the permission group, the personnel info will be sent to corresponding device and used for related functions of access control and attendance check.

Add Group

Group Name/Remark

<input type="checkbox"/>	Permission Group	Memo
<input type="checkbox"/>	Permission Group1	
<input type="checkbox"/>	Permission Group2	

Step 6

Click **Finish**.

Step 1

Step 2

Step 3

Step 4

4.3.2.2 In Batches

You can add users in batches.

Log in to SmartPSS AC.

Click **Personnel Manger > User > Batch Add**.

Select **Device** from **Device**, and then select the device that you add on the right.

Configure the following parameters.

- **Start No.:** The user IDs of the users you want to add start with the number you defined.

- **Quantity:** The number of users you want to add.
- **Department:** Select the department you want to add the users to.
- **Effective Time** and **Expired Time:** The users will only have unlocking permissions within the defined time frame.

Click **Issue** to start issuing cards.

The card number will be read automatically.

Click **Stop** when you finish issuing cards.

Click **OK**.

Add users in batches


Step 5

Step 6

Step 7

ID	Card No.
5	900ABCAF
6	45C50AE0

Step 8

In the user list, click  to edit the information of the users added.

4.4

Assigning Permissions

Step 1 Add needed devices to a permission group, and then users in the group can unlock

Step 2

Step 3 corresponding doors.

Step 4

Step 5

Click **Permission configuration**.


Click .

Enter the group name, remarks (optional), and select a time template.

Select the devices you need.

Click **OK**.

Create a permission group

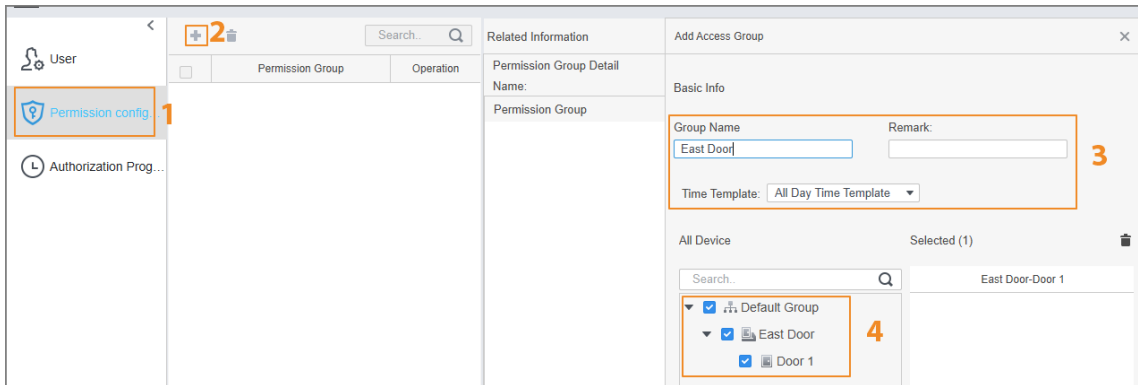

Click  of the permission group you added.

Select the users you want to add to the permission group.

Click **OK**.


Step 6

Step 7

Step 8

Users in the permission group can now swipe their cards, or use other unlock methods to unlock the door.

Add users to a permission group

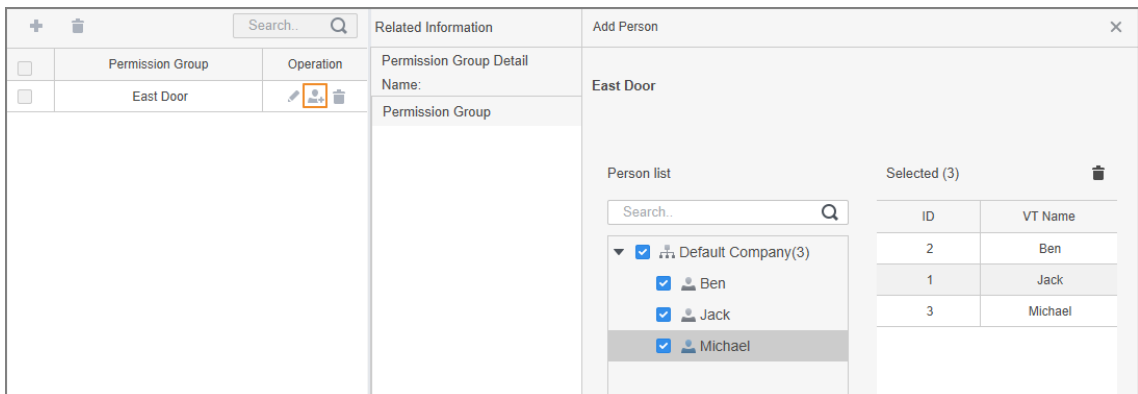

Fingerprint Registration Instructions

Appendix 1


Before register your fingerprints, pay attention to the following:

- Make sure that your fingers are clean and dry.
- Press your finger on the center of the fingerprint scanner.
- Do not put the fingerprint sensor in a place with intense light, high temperature, and high humidity.
- If your fingerprints are unclear, use other unlocking methods.

Fingers Recommended


Forefingers, middle fingers, and ring fingers are recommended. Thumbs and little fingers cannot be put at the recording center easily.

Appendix Figure 1-1 Recommended fingers

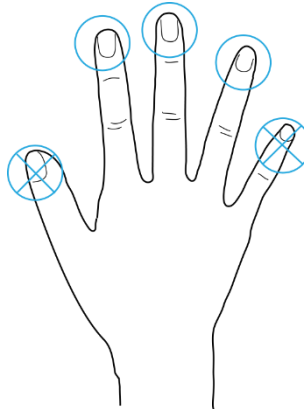


How to Press Your Fingerprint on the Scanner

Appendix Figure 1-2 Correct

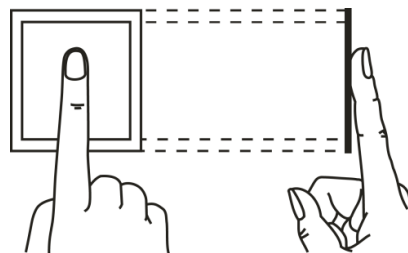

Appendix Figure 1-3 Wrong

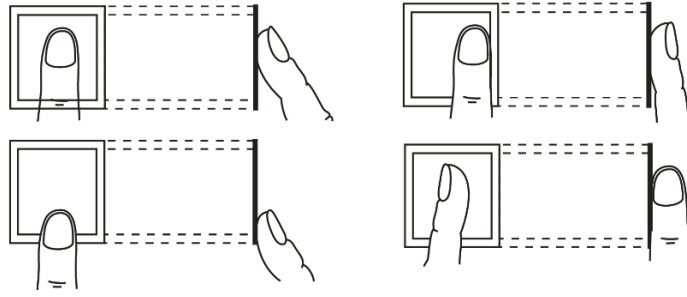

Cybersecurity Recommendations

Mandatory actions to be taken for cybersecurity

1. Use a strong password

Refer to the following recommendations for setting up the password:

Appendix 2 The length should not be less than 8 characters

- A strong password is comprised of at least two of these three character types: letters in upper and lower cases, numbers, and special characters.
- Do not contain the username in its forward or reverse sequence.
- Do not use continuous characters, such as 123 and abc.
- Do not use repeated characters, such as 111 and aaa.

2. Timely update firmware and client software

- As is standard procedure in the tech-industry, the firmware of devices should be timely updated to the latest version to ensure the system is current with the latest security patches and fixes. With the device connected into Internet, it is recommended to turn on automatic online update detection to timely get firmware updates launched by providers.
- You are recommended to download and use the latest client software.

Recommended measures to enhance cybersecurity:

1. Physical protection

Physical protection is recommended for devices (especially storage devices), such as placing them in a special room, special cabinet, and well conduct access control and key control to prevent damages to hardware and external devices (U disk, serial ports) by unauthorized persons through physical contact.

2. Change Passwords Regularly

Regularly change the passwords to your devices to help ensure that only authorized users are able to access the system.

3. Timely set up and update password resetting information

This device supports password reset. To reduce the risk of this function being attacked by hackers, it is recommended to timely set up password reset, including reserved phone number/email, and security questions. If any of such information changes, update the password reset in time. When setting up security questions, set up an answer that is difficult for someone to guess their way into your system.

4. Enable account lock-down

Account lock-down is enabled by default. To keep your Account safe, it is recommended to keep this setting. After hackers fail multiple attempts to hack passwords, the corresponding Account and source IPs are locked.

5. Change HTTP and other default service ports

These ports can be changed to any set of numbers between 1024–65535. Avoiding the default ports reduces the risk of hackers being able to guess which ports you are using.

6. Enable HTTPS

Enable HTTPS to access Web services through safe channels.

7. Bind MAC Address

Bind the IP and MAC address of the gateway device to reduce the risk of ARP deception.

8. Reasonably allocate account and permission

Add users properly according to business and management needs, and allocate minimum sets of permissions to them.

9. Turn off Unnecessary Services and Use Safe Modes

If not needed, SNMP, SMTP and UPnP can be turned off to reduce the risks for the device.

If necessary, it is strongly recommended to use safe modes, including but not limited to:

- SNMP: Select SNMP v3 and set a stronger encryption password and authentication password.
- SMTP: Select TLS to access to the email server.
- FTP: Select SFTP and set a strong password.
- AP hotspot: Select WPA2-PSK encryption mode and set a strong password.

10. Audio and Video Encrypted Transmission

If your audio/video data includes important or sensitive contents, use encrypted transmission to make it more difficult for someone to steal your data.

11. Security Audit

- Review online users: Do this from time to time to find out illegal login, if any.
- Review device log: This gives you the IP data of a device trying to login and the critical operation information of users already in the login status.

12. Network Log

Limited storage capacity of the device cannot store many logs for a long time. If you need to save logs for long, enable online log to ensure key logs are synced to the online log server for easy back tracking.

13. Building Safe Network Environment

To keep the device safer and reduce network risks, we recommend you to:

- Turn off the port mapping of the router to prevent external networks from directly accessing services of router intranet devices.
- Divide network into different partitions as needed: If two subnetworks do not have to establish communications, use VLAN or gatekeeper for network division.
- Build up the 802.1x access authentication to reduce the risk of illegal terminals connecting with your private networks.
- Enable device IP/MAC address filtering to limit the hosts that can access the device.

Legal and Regulatory Information

Legal Considerations

Video surveillance can be regulated by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.

Disclaimer

Every care has been taken in the preparation of this document. Please inform your nearest Dahua office of any inaccuracies or omissions. Dahua Technology shall not be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Dahua Technology makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Dahua Technology shall not be liable or responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material. This product is only to be used for its intended purpose.

Intellectual Property Rights

Dahua Technology retains all intellectual property rights relating to technology embodied in the product described in this document.

Equipment Modifications


This equipment must be installed and used in strict accordance with the instructions given in the user documentation. This equipment contains no user-serviceable components. Unauthorized equipment changes or modifications will invalidate all applicable regulatory certifications and approvals.

Trademark Acknowledgments

 ,  , **HDCVI** ,  are registered trademarks or trademark applications of Dahua Technology in various jurisdictions. All other company names and products are trademarks or registered trademarks of their respective companies.

Regulatory Information

European Directives Compliance

 This product complies with the applicable CE marking directives and standards:

- Low Voltage (LVD) Directive 2014/35/EU.
- Electromagnetic Compatibility (EMC) Directive 2014/30/EU.
- Restrictions of Hazardous Substances (RoHS) Directive 2011/65/EU and its amending Directive (EU) 2015/863.

A copy of the original declaration of conformity may be obtained from Dahua

Technology.

The most up to date copy of the signed EU Declaration of Conformity (DoC) can be downloaded from: www.dahuasecurity.com/support/notice/

CE-Electromagnetic Compatibility (EMC)

This digital equipment is compliant with Class A according to EN 55032.



Warning:

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

CE-Safety

This product complies with IEC/EN/UL 60950-1 or IEC/EN/UL 62368-1, Safety of Information Technology Equipment.

Declaration of Conformity CE

(Only for the product has RF function)

Hereby, Dahua Technology declares that the radio equipment is compliant with Radio Equipment Directive (RED) 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.dahuasecurity.com/support/notice/

USA Regulatory Compliance

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC SDOC Statement can be downloaded from:
<https://us.dahuasecurity.com/support/notices/>

RF exposure warning

(Only for the product has RF communication function)

This equipment must be installed and operated in accordance with provided

instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Canada Regulatory Compliance

ICES-003

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF exposure warning

(Only for the product has RF communication function)

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Japan Regulatory Compliance

VCCI

These products comply with the requirements of VCCI Class A Information

Technology Equipment.

CAUTION

This is a Class A equipment. Operation of this equipment in a residential environment could cause radio interference. In such a case, the user may be required to take corrective actions.

Batteries

Correct disposal of batteries in this product



This marking on the battery indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in Directive 2006/66/EC and its amending Directive 2013/56/EU. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

CAUTION

Do not ingest battery. Chemical Burn Hazard.

This product contains a coin cell battery. If the coin cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

Do not throw or immerse into water, heat to more than 100°C (212°F), repair or disassemble, leave in an extremely low air pressure environment or extremely high-temperature environment, crush, puncture, cut or incinerate.

Dispose of the battery as required by local ordinances or regulations.

Safety

The product complies with IEC/EN/UL 60950-1, Information Technology Equipment – Safety – Part 1: General Requirements; or complies with IEC/EN/UL 62368-1, Audio/video, information and communication technology equipment – Part 1: Safety requirements.

If the power supply to the product is from external power adaptor without connecting to AC Mains, and the product is not shipped with power adaptor, customers are required to use the external power adaptor that must fulfill the requirements for Safety Extra Low Voltage (SELV) and Limited Power Source (LPS).

Waste Electrical and Electronic Equipment (WEEE) statements

Disposal and Recycling

When this product has reached the end of its useful life, dispose of it according

to local laws and regulations. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. In accordance with local legislation, penalties may be applicable for incorrect disposal of this waste.



■ This symbol means that the product shall not be disposed of together with household or commercial waste. Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) is applicable in the European Union member states. To prevent potential harm to human health and the environment, the product must be disposed of in an approved and environmentally safe recycling process. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. Businesses should contact the product supplier for information about how to dispose of this product correctly.

Privacy Protection Notice

As the device user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures, including but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related jurisdictions. For detailed information, refer to the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Support

Should you require any technical assistance, please contact your Dahua distributor. If your questions cannot be answered immediately, your distributor will forward your queries through the appropriate channels to ensure a rapid

response. If you are connected to the Internet, you can:

- Download user documentation and software updates.
- Search by product, category, or phrase.
- Report problems to Dahua support staff by logging in to your private support area.
- Chat with Dahua support staff.
- Visit Dahua Support at www.dahuasecurity.com/support

Contact Information

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1199, Bin'an Road, Binjiang District, Hangzhou, P.R. China

Postcode: 310053

Tel: +86-571-87688883

Fax: +86-571-87688815

Email: overseas@dahuatech.com

Website: www.dahuasecurity.com






English

Important Safeguards and Warnings

This Chapter describes the contents covering proper handling of the device, hazard prevention, and prevention of property damage. Read these contents carefully before using the device, comply with them when using, and keep it well for future reference.

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Safety Requirement

- Abide by local electrical safety standards to ensure that the voltage is stable and complies with the power supply requirement of the device.
- Transport, use, and store the device under the allowed humidity and temperature conditions. Refer to the corresponding technical specifications of

- device for specific working temperature and humidity.
- Do not place the device in a location exposed to dampness, dust, extreme hot or cold, strong electronic radiation, or unstable lighting conditions.
- Do not install the device in a place near the heat source, such as radiator, heater, furnace, or other heat generating device to avoid fire.
- Prevent liquid from flowing into the device to avoid damage to internal components.
- Install the device horizontally or install on the stable place to prevent it from falling.
- Install the device in a well-ventilated place, and do not block the ventilation of the device.
- Do not disassemble the device arbitrarily.
- Avoid heavy stress, violent vibration, and soaking during during transportation, storage, and installation. Complete package is necessary during the transportation.
- Use the factory package or the equivalent for transportation.

Battery

Low battery power affects the operation of the RTC, causing it to reset at every power-up. When the battery needs replacing, a log message will appear in the product's server report. For more information about the server report, see the product's setup pages or contact Dahua support.



WARNING

- Risk of explosion if the battery is incorrectly replaced.
- Replace only with an identical battery or a battery which is recommended by Dahua.
- Dispose of used batteries according to local regulations or the battery manufacturer's instructions.




Polski



Ważne środki ostrożności i ostrzeżenia

Niniejszy rozdział opisuje właściwe sposoby korzystania z urządzenia, sposoby zapobiegania zagrożeniom, a także sposoby zapobiegania uszkodzeniu mienia. Przed rozpoczęciem korzystania z urządzenia zapoznaj się dokładnie z tymi informacjami i zachowaj je na przyszłość do celów referencyjnych.

Instrukcje dot. bezpieczeństwa

W podręczniku mogą pojawić się następujące symbole. Ich znaczenie wyjaśnia poniższa tabela.

Symbol	Znaczenie
 ZAGROŻENIE	Oznacza potencjalne zagrożenie wysokiego stopnia, którego nieuniknięcie może skutkować poważnymi urazami lub śmiercią.
 OSTRZEŻENIE	Oznacza potencjalne zagrożenie średniego lub niskiego stopnia, którego nieuniknięcie może skutkować pomniejszymi lub średnimi urazami.
 UWAGA	Oznacza potencjalne zagrożenie, którego nieuniknięcie może skutkować zniszczeniem mienia, utratą danych, spadkiem wydajności lub mieć inne nieprzewidziane skutki.

Symbol	Znaczenie
 WSKAZÓWKI	Oznacza wskazówki pozwalające na rozwiązanie problemu lub oszczędność czasu.
 UWAGA	Oznacza informacje uzupełniające tekst główny.

Wymogi dot. Bezpieczeństwa

- Przestrzegaj lokalnych standardów bezpieczeństwa elektrycznego celem upewnienia się, że źródło napięcia jest stabilne i zgodne z wymogami określonymi dla urządzenia.
- Urządzenie należy transportować, używać i przechowywać w warunkach o dozwolonym poziomie wilgotności i temperatury. Szczegółowe informacje na temat wilgotności i temperatury roboczej znaleźć można w odpowiedniej specyfikacji technicznej urządzenia.
- Nie umieszczaj urządzenia w miejscach narażonych na wilgoć, kurz, ekstremalne temperatury, silne promieniowanie elektroniczne oraz niestabilne warunki oświetleniowe.
- Nie instaluj urządzenia w pobliżu źródeł ciepła, takich jak kaloryfery, grzałki, piece bądź inne urządzenia generujące ciepło, aby zapobiegać wystąpieniu pożaru.
- Zabezpiecz urządzenie przed dostaniem się do jego wnętrza cieczy, ponieważ może to spowodować uszkodzenie komponentów wewnętrznych.
- Zamontuj urządzenie poziomo lub wybierz stabilne miejsce, tak aby wyeliminować ryzyko upadku.
- Zamontuj urządzenie w dobrze wentylowanym miejscu i upewnij się, że jego otwory wentylacyjne nie są zablokowane.
- Nie rozmontowuj urządzenia samodzielnie.
- Chroń urządzenie przed dużymi obciążeniami i naprężeniami, silnymi wibracjami oraz zalaniem zarówno podczas transportu, przechowywania, jak i montażu. Na potrzeby transportu wymagane jest korzystanie z kompletnego opakowania.
- Do transportu używaj oryginalnego opakowania lub innego zapewniającego podobny poziom ochrony.

Akumulator

Niski poziom naładowania akumulatora wpływa na działanie zegara czasu rzeczywistego, powodując jego resetowanie przy każdym włączeniu. Gdy akumulator wymaga wymiany, w raporcie serwerowym dla produktu pojawi się stosowna wiadomość. Aby uzyskać więcej informacji na temat raportu serwerowego, zapoznaj się z instrukcjami konfiguracji urządzenia lub skontaktuj się z personelem pomocy technicznej firmy Dahua.



OSTRZEŻENIE

- W przypadku niewłaściwej wymiany akumulatora występuje zagrożenie wybuchem.
- Akumulator należy zastępować wyłącznie takim samym typem lub innym typem zalecanym przez firmę Dahua.
- Akumulatory należy utylizować zgodnie z lokalnymi regulacjami lub instrukcjami producenta akumulatora.






Dansk

Vigtige sikkerhedsanvisninger og advarsler

Kapitlet beskriver korrekt håndtering af produktet, undgåelse af risici og undgåelse af skader på ejendom. Læs kapitlet omhyggeligt, før du bruger produktet, overhold alle anvisninger og advarsler under brugen, og gem kapitlet til senere brug.

Sikkerhedsanvisninger

Følgende signalord med beskrivelse kan forekomme i vejledningen.

Signalord	Beskrivelse
 FARE	Angiver høj risiko, som, hvis den ikke undgås, kan medføre død eller alvorlig personskade.
 ADVARSEL	Angiver middel eller lav risiko, som, hvis den ikke undgås, kan medføre lettere til moderat personskade.
 FORSIGTIG	Angiver mulig risiko, som hvis den ikke undgås, kan resultere i skade på ejendom, tab af data, reduceret ydelse eller uforudsigelige resultater.
 TIPS	Indeholder forslag, som hjælper dig med at løse et problem eller sparer tid.
 BEMÆRK	Indeholder yderligere oplysninger, som understreger og supplerer teksten.

Sikkerhedskrav

- Følg lokale standarder for elsikkerhed for at sikre, at spændingen er stabil og i overensstemmelse med produktets krav til strømforsyning.
- Transportér, brug og opbevar produktet i henhold til de tilladte klimatiske forhold (temperatur og luftfugtighed). Se produktets tekniske specifikationer for specifik temperatur og luftfugtighed ved drift.
- Placér ikke produktet et sted med fugt, støv, stærk varme eller kulde, stærk elektronisk udstråling eller ustabile lysforhold.
- Installér ikke produktet i nærheden af en varmekilde, såsom en radiator, et varmeapparat, et centralfyr eller andre varmeafgivende enheder, for at undgå ildebrand.
- Undgå, at væske løber ind i produktet og dermed forårsager skade på de indvendige komponenter.
- Installér produktet vandret, eller installér det et stabilt sted for at undgå, at det falder ned.
- Installér produktet et sted med god udluftning, og blokér ikke produktets ventilationsåbninger.
- Adskil ikke produktet.
- Undgå stærkt tryk, kraftige vibrationer og gennemblødning under transport, opbevaring og installation. Produktet skal være fuldt emballeret under transport.
- Brug fabriksemballage eller tilsvarende til transporten.

Batteri

Lav batterispænding påvirker driften af realtidsuret og får uret til at nulstille, hver gang produktet tændes. Der vises en logbesked i produktets serverrapport, når batteriet skal udskiftes. Se konfigurationssiderne til produktet, eller kontakt Dahuas supportteam for at få flere oplysninger om serverrapporten.

ADVARSEL

- Der er risiko for eksplosion, hvis batteriet udskiftes forkert.
- Udskift kun med et tilsvarende batteri eller et batteri, der anbefales af Dahua.

- Bortskaf brugte batterier i overensstemmelse med lokale bestemmelser eller batteriproducentens anvisninger.






Suomi

Tärkeitä varotoimenpiteitä ja varoituksia

Tässä luvussa kuvataan laitteen asianmukainen käsittely, vaarojen torjunta ja omaisuusvahinkojen estäminen. Lue tämä sisältö huolellisesti ennen laitteen käyttämistä ja noudata näitä ohjeita, kun käytät laitetta. Säilytä ohjeet tulevia tarpeita varten.

Turvallisuusohje

Seuraavat luokitellut huomiosanat kuvatulla merkityksellä saattavat esiintyä oppaassa.

Huomiosanat	Merkitys
 VAARA	Ilmaisee suuren potentiaalisen vaaran, joka johtaa kuolemaan tai vakavaan loukkaantumiseen, jos sitä ei vältetä.
 VAROITUS	Ilmaisee keskisuuren tai pienen potentiaalisen vaaran, joka saattaa johtaa lievään tai kohtalaiseen loukkaantumiseen, jos sitä ei vältetä.
 HUOMIO	Ilmaisee mahdollisen vaarallisen tilanteen, joka saattaa johtaa omaisuusvahinkoon, tietojen menetykseen, suoritustehon heikkenemiseen tai odottamattomiin tuloksiin, jos sitä ei vältetä.
 VINKIT	Tarjoavat apua ongelmien ratkaisemiseen tai säästävät aikaa.
 HUOMAUTUS	Tarjoaa lisätietoa, joka korostaa tai täydentää tekstiä.

Turvallisuusvaatimus

- Noudata paikallisia sähköturvallisuusstandardeja varmistaaksesi, että jännite on vakaa ja vastaa laitteen virtalähteelle asetettuja vaatimuksia.
- Kuljeta, käytä ja säilytä laitetta sallituissa kosteus- ja lämpötilaolosuhteissa. Katso laitteen erityinen käyttölämpötila ja -kosteus laitteen vastaavista teknisistä tiedoista.
- Älä sijoita laitetta paikkaan, jossa se altistuu kosteudelle, pölylle, erittäin kuumalle tai kylmälle lämpötilalle, voimakkaalle sähkösaiteilylle tai epävakaille valaistusolosuhteille.
- Älä asenna laitetta lähelle lämmönlähdettä, kuten lämpöpatteria, lämmitintä, uunia tai muuta lämpöä tuottavaa laitetta, tulipalon välttämiseksi.
- Vältä nesteen pääsemistä laitteen sisälle sisäisten komponenttien vahingoittumisen estämiseksi.
- Asenna laite vaakasuoraan tai asenna se vakaaseen paikkaan estääksesi sen kaatumisen.
- Asenna laite hyvin ilmastoituun paikkaan äläkä peitä laitteen tuuletusaukkoja.
- Älä pura laitetta omavaltaisesti.
- Vältä kovaa räsitusta, voimakasta tärinää ja kosteutta kuljetuksen, säilytyksen ja asennuksen aikana. Kuljetus vaatii täydellisen pakkaamisen.
- Käytä tehtaan pakkausta tai vastaavaa kuljetuksen aikana.

Paristo

Alhainen pariston varaustaso vaikuttaa tosiaikakellon (RTC:n) toimintaan nollaten sen jokaisella käynnistyskerralla. Lokiviesti ilmestyy tuotteen palvelinraporttiin, kun paristo on vaihdettava. Lisätietoa palvelinraportista saat tuotteen asetussivuilta tai ottamalla yhteyttä Dahuan tukeen.



VAROITUS

- Räjähdyksivaara, jos paristo asetetaan väärin paikalleen.
- Vaihda vain samanlaiseen paristoon tai Dahuan suositteluun paristoon.
- Hävitä käytetty paristot ja akut paikallisten määräysten tai valmistajan ohjeiden mukaisesti.






Magyar

Fontos óvintézkedések és figyelmeztetések

A jelen Fejezet leírja az Eszköz megfelelő kezelését, a veszélyek megelőzését és a vagyoni károk megelőzését. Az Eszköz használata előtt olvassa el figyelmesen, a használata során tartsa be, és őrizze meg jól jövőbeni hivatkozás céljára.

Biztonsági utasítások

Az Útmutatóban az alábbi meghatározott jelentéssel bíró kategorizált figyelmeztetések jelenhetnek meg.

Figyelmeztetés	Jelentés
 VESZÉLY	Nagy potenciális veszélyt jelez, amely, ha nem kerül el, halált vagy súlyos sérülést okoz.
 FIGYELEM	Közepes vagy kis potenciális veszélyt jelez, amely, ha nem kerül el, enyhe vagy mérsékelt sérülést okozhat.
 VIGYÁZAT	Olyan potenciális kockázatot jelez, amely, ha nem kerül el, vagyoni kárt, adatvesztést, alacsonyabb teljesítményt vagy kiszámíthatatlan eredményt okozhat.
 TIPPEK	Olyan módszereket biztosít, amelyek segítenek megoldani a problémáját vagy időt takarítanak meg.
 MEGJEGYZÉSEK	További információkat biztosít a szöveg kiemelésével és kiegészítésével.

Biztonsági követelmények

- Tartsa be a helyi elektromos biztonsági szabványokat annak biztosítása érdekében, hogy a feszültség stabil és az eszköz áramellátási követelményének megfelelő legyen.
- Az eszközt a megengedett páratartalom és hőmérséklet viszonyok között szállítsa, használja, és tárolja. A konkrét üzemi hőmérsékletet és páratartalmat megtalálja az eszköz műszaki leírásában.
- Ne tegye az eszközt olyan helyre, ahol nedvességnek, pornak, rendkívüli melegnek vagy hidegnek, erős elektronikus sugárzásnak, vagy instabil fényviszonyoknak van kitéve.

- A tűz elkerülése érdekében ne telepítse az eszközt hőforrás, mint például radiátor, hőszugárzó, kemence, vagy más hőtermelő eszköz közelében lévő helyre.
- A belső alkatrészek károsodásának elkerülése érdekében akadályozza meg, hogy folyadék folyjon az eszközbe.
- A leesésének megakadályozása érdekében az eszközt vízszintesen telepítse, vagy stabil helyre telepítse.
- Az eszközt jól szellőző helyre telepítse, és ne blokkolja az eszköz szellőzését.
- Önkényesen ne szerelje szét az eszközt.
- A szállítás, tárolás és telepítés során kerülje a nagy igénybevételt, erős rezgést, és az eláztatást. A szállítás során a teljes csomagolásra szükség van.
- A szállításhoz gyári csomagolást vagy azzal egyenértékűt használjon.

Elem

Az alacsony elem töltöttségi szint hatással van az RTC működésére, minden bekapcsoláskor alaphelyzetbe áll. Amikor az elemet cserélni kell, egy napló üzenet jelenik meg a termék szerver jelentésében. A szerver jelentésről további információkat talál a termék beállítási oldalain, vagy forduljon a Dahua támogatáshoz.



FIGYELEM

- Robbanásveszély, ha az elemet nem megfelelőre cseréli.
- Csak ugyanolyan elemre vagy a Dahua által ajánlott elemre cserélje.
- A használt elemet a helyi előírások vagy az elemgyártó utasításai szerint ártalmatlanítsa.

Б ъ л г а р с к и



Важни предпазни мерки и предупреждения

Тази глава описва инструкциите за правилна експлоатация на устройството, за предотвратяване на опасностите и материалните щети. Прочетете внимателно тези инструкции, преди да използвате устройството, спазвайте ги при използването на устройството, и ги запазете за бъдещи справки.

Инструкции за безопасност

Ръководството съдържа следните определени сигнални думи.

Сигнални думи	Значение
ОПАСНОСТ	Показва висока потенциална опасност, която, ако не бъде избегната, ще доведе до смърт или сериозно нараняване.
ПРЕДУПРЕЖДЕНИЕ	Показва средна или ниска потенциална опасност, която, ако не бъде избегната, може да доведе до леки или умерени наранявания.
ВНИМАНИЕ	Посочва потенциален риск, който, ако не бъде избегнат, може да доведе до материални щети, загуба на данни, по-ниска производителност или непредсказуем резултат.

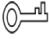Сигнални думи	Значение
 СЪВЕТИ	Обозначава начини, които да ви помогнат да разрешите проблем или да спестите време.
 ЗАБЕЛЕЖКА	Предоставя допълнителна информация като акцент и допълнение към основния текст.

Изисквания за безопасност

- Спазвайте местните стандарти за електрическа безопасност, за да осигурите стабилно напрежение, отговарящо на изискването за захранване на устройството.
- Транспортирайте, използвайте и съхранявайте устройството при указаните условия на влажност и температура. Направете справка в съответните технически спецификации на устройството за конкретната работна температура и влажност.
- Не поставяйте устройството на място, изложено на влага, прах, много висока или ниска температура, със силно електронно излъчване или на място с променливо осветление.
- Не поставяйте устройството близо до източник на топлина, като радиатор, нагревател, пещ или друго устройство за генериране на топлина, за да избегнете пожар.
- Не допускайте в устройството да попадне течност, за да не се повредят вътрешните компоненти.
- Монтирайте устройството хоризонтално или го поставете на стабилно място, за да не падне.
- Монтирайте устройството на добре проветриво място и не блокирайте вентилацията на устройството.
- Не разглобявайте устройството произволно.
- Избягвайте силно натоварване, вибрации и намокряне по време на транспортиране, съхранение и монтаж. При транспортиране следва да се опакова напълно.
- Използвайте за транспортиране фабричната опаковка или подобна.

Батерия

Ниската мощност на батерията влияе на работата на часовника в реално време (RTC), което води до нулиране при всяко включване. Когато батерията трябва да бъде сменена, в отчета на сървър на продукта ще се покаже съобщение. За повече информация относно отчета на сървър вижте страниците за настройка на продукта или се свържете с екипа на Dahua.



ПРЕДУПРЕЖДЕНИЕ

- Ако батерията е неправилно подменена, има риск от експлозия.
- Сменяйте само със същата или батерия, препоръчана от Dahua.
- Изхвърляйте използваните батерии в съответствие с местните разпоредби или инструкциите на производителя на батерията.






Românesc

Masuri de siguranta si Atentionari

Acest capitol descrie indicatiile de utilizare corecta a Dispozitivului , prevenirea pericolului si prevenirea distrugerii proprietatii.Cititi aceste randuri inaintea folosirii

Instrucțiuni de siguranță

Următoarele semne categorizate pot apărea în Ghid.

Signal Words	Meaning
 PERICOL	Indică un risc potențial ridicat care, dacă nu este evitat, va duce la deces sau vătămări grave.
 AVERTIZARE	Indică un pericol potențial mediu sau scăzut care, dacă nu este evitat, poate duce la răni ușoare sau moderate.
 ATENȚIE	Indică un risc potențial care, dacă nu este evitat, ar putea duce la daune materiale, pierderi de date, performanțe mai scăzute sau rezultate imprevizibile.
 SFATURI	Oferă metode care să vă ajute să rezolvați o problemă sau să economisiți timp.
 NOTA	Oferă informații suplimentare ca accent și supliment la text.

Cerințe de siguranță

- Respectați standardele locale de siguranță electrică pentru a vă asigura că tensiunea este stabilă și respectă cerințele de alimentare ale dispozitivului.
- Transportați, utilizați și depozitați dispozitivul sub condițiile de umiditate și temperatură admise. Consultați specificațiile tehnice corespunzătoare ale dispozitivului pentru temperatură și umiditate specifice de lucru.
- Nu așezați dispozitivul într-o locație expusă la umezeală, praf, extrem de caldă sau rece, de radiații electronice puternice sau de condiții de iluminare instabile.
- Nu instalați dispozitivul într-un loc în apropierea sursei de căldură, cum ar fi radiatorul, încălzitorul, cuptorul sau alt dispozitiv generator de căldură, pentru a evita incendiul.
- Împiedicați curgerea lichidului în dispozitiv pentru a evita deteriorarea componentelor interne.
- Instalați dispozitivul în poziție orizontală sau instalați-l pe un loc stabil pentru a preveni căderea acestuia.
- Instalați aparatul într-un loc bine ventilat și nu blocați ventilația aparatului.
- Nu dezasamblați dispozitivul voit.
- Evitați loviturile puternice, vibrațiile violente și umiditatea în timpul transportului, depozitării și instalării. Este necesar un pachet complet în timpul transportului.
- Utilizați pachetul de fabrica sau echivalent în timpul transportului.

Bateriile

Puterea redusă a bateriei afectează funcționarea RTC, determinând resetarea la fiecare pornire. Când bateria are nevoie de înlocuire, în raportul serverului produsului va apărea un mesaj de jurnal. Pentru mai multe informații despre raportul serverului, consultați paginile de configurare ale produsului sau contactați asistența Dahua.



AVERTIZARE

- Risc de explozie dacă bateria este înlocuită incorect.
- Înlocuiți numai cu o baterie identică sau cu o baterie recomandată de Dahua.
- Aruncați bateriile uzate în conformitate cu reglementările locale sau cu instrucțiunile producătorului bateriei.






Čeština

Důležitá bezpečnostní opatření a varování

Tato kapitola popisuje obsah vztahující se na správnou manipulaci se zařízením, prevenci nebezpečí a prevenci škod na majetku. Pečlivě si tyto informace přečtěte před použitím zařízení, během používání zařízení je dodržujte a uschovejte je pro budoucí použití.

Bezpečnostní pokyny

Tato příručka může obsahovat následující kategorie signálních slov.

Signální slova	Význam
 NEBEZPEČÍ	Označuje možnost závažného nebezpečí, které, pokud by mu nebylo zamezeno, může mít za následek smrt nebo vážné zranění.
 VAROVÁNÍ	Označuje možnost středně nebo málo závažného nebezpečí, které, pokud by mu nebylo zamezeno, může mít za následek lehké nebo nepříliš závažné zranění.
 UPOZORNĚNÍ	Označuje možné riziko, které, pokud by mu nebylo zamezeno, může mít za následek škodu na majetku, ztrátu dat, snížení výkonu nebo neočekávaný výsledek.
 TIPY	Uvádí metody, které vám pomohou vyřešit problém nebo vám ušetří čas.
 POZNÁMKA	Poskytuje dodatečné informace formou důrazu a doplnění textu.

Bezpečnostní požadavek

- Dodržujte místní normy pro elektrickou bezpečnost pro zajištění stabilního napětí a dodržení požadavků na napájení zařízení.
- Zařízení přepravujte, používejte a skladujte při odpovídající teplotě a vlhkosti. Konkrétní pracovní teplotu a vlhkost naleznete v příslušných technických specifikacích zařízení.
- Neumísťujte zařízení tam, kde bude vystaveno vlhkosti, prachu, extrémnímu horku nebo chladu, silnému elektronickému záření nebo nestabilním světelným podmínkám.
- Neinstalujte zařízení v blízkosti zdrojů tepla, jako je radiátor, ohřívač, kotel nebo jiné zařízení generující teplo, aby nedošlo k požáru.
- Zamezte proniknutí kapalin do zařízení, aby nedošlo k poškození jeho vnitřních součástí.
- Zařízení instalujte vodorovně nebo je instalujete na stabilním místě, aby bylo chráněno před pádem.

- Zařízení instalujte na dobře větraném místě a neblokujte odvětrávání zařízení.
- Zařízení svévolně nedemontujte.
- Během přepravy, skladování a instalace zamezte silnému tlaku, prudkým vibracím a namočení. Při přepravě je nezbytné úplné zabalení.
- Při přepravě použijte obal z výroby nebo obdobný obal.

Baterie

Nízké nabití baterie ovlivňuje fungování hodin ve skutečném čase a způsobuje, že se při každém spuštění resetují. V případě, že je třeba baterii vyměnit, se v serverové zprávě produktu zobrazí zpráva protokolu. Další informace o serverové zprávě naleznete na stránkách o nastavení produktu, případně kontaktujte podporu společnosti Dahua.



VAROVÁNÍ

- Nebezpečí výbuchu v případě nesprávné výměny baterie.
- Vyměňte pouze za totožnou baterii nebo baterii doporučenou společností Dahua.
- Použité baterie likvidujte v souladu s místními předpisy nebo pokyny výrobce baterie.




Ε λ λ η ν ι κ ά



Σημαντικές Διασφαλίσεις και Προειδοποιήσεις

Αυτό το Κεφάλαιο περιγράφει το περιεχόμενο που καλύπτει το σωστό χειρισμό της Συσκευής, την πρόληψη των κινδύνων και την πρόληψη της καταστροφής της ιδιοκτησίας. Διαβάστε προσεκτικά τα αναγραφόμενα πριν χρησιμοποιήσετε τη Συσκευή, τηρήστε τα κατά τη χρήση και κρατήστε τα καλά για μελλοντική χρήση.

Οδηγίες Ασφαλείας

Τα ακόλουθα κατηγοριοποιημένα σήματα με λέξεις έχουν καθορισμένη σημασία και ενδέχεται να εμφανίζονται στις Οδηγίες Χρήσης.

Σήματα με λέξεις	Σημασία
 Κ Ι Ν Δ Υ Ν Ο Σ	Δείχνει έναν υψηλό δυνητικό κίνδυνο, ο οποίος, εάν δεν αποφευχθεί, θα έχει ως αποτέλεσμα θάνατο ή σοβαρό τραυματισμό.
 Π Ρ Ο Ε Ι Δ Ο Π Ο Ι Η Σ Η	Υποδεικνύει έναν μεσαίο ή χαμηλό δυνητικό κίνδυνο, ο οποίος, αν δεν αποφευχθεί, θα μπορούσε να προκαλέσει ελαφρύ ή μέτριο τραυματισμό.
 Π Ρ Ο Σ Ο Χ Η	Δείχνει έναν πιθανό κίνδυνο, ο οποίος, εάν δεν αποφευχθεί, θα μπορούσε να προκαλέσει ζημιά στην ιδιοκτησία, απώλεια δεδομένων, χαμηλότερη απόδοση ή απρόβλεπτο αποτέλεσμα.

Σήματα με λέξεις	Σημασία
 Σ Υ Μ Β Ο Τ Λ Ε Σ	Παρέχει μεθόδους που θα σας βοηθήσουν να επιλύσετε ένα πρόβλημα ή να εξοικονομήσετε χρόνο.
 Σ Η Μ Ε Ι Ω Σ Η	Παρέχει πρόσθετες πληροφορίες δίνοντας έμφαση και συμπληρώνοντας το κείμενο.

Απαιτήσεις ασφαλείας

- Τηρήστε τα τοπικά πρότυπα ηλεκτρικής ασφάλειας για να βεβαιωθείτε ότι η τάση είναι σταθερή και συμμορφώνεται με την απαίτηση τροφοδοσίας της συσκευής.
- Μεταφέρετε, χρησιμοποιήστε και αποθηκεύστε τη συσκευή υπό τις επιτρεπόμενες συνθήκες υγρασίας και θερμοκρασίας. Ανατρέξτε στις αντίστοιχες τεχνικές προδιαγραφές της συσκευής για τη συγκεκριμένες συνθήκες λειτουργίας θερμοκρασίας και υγρασίας.
- Μην τοποθετείτε τη συσκευή σε θέση που είναι εκτεθειμένη σε υγρασία, σκόνη, ακραία ζέστη ή κρύο, ισχυρή ηλεκτρονική ακτινοβολία ή ασταθές φωτισμό.
- Μην τοποθετείτε τη συσκευή σε μέρος κοντά στην πηγή θερμότητας, όπως καλοριφέρ, θερμάστρα, κλίβανο ή άλλη συσκευή παραγωγής θερμότητας για να αποφύγετε τη φωτιά.
- Αποφύγετε να ρέει υγρό μέσα στη συσκευή για να αποφύγετε την αποδυνάμωση των εσωτερικών εξαρτημάτων.
- Εγκαταστήστε τη συσκευή οριζόντια ή εγκαταστήστε την στο σταθερό μέρος για να μην πέσει.
- Τοποθετήστε τη συσκευή σε καλά αεριζόμενο μέρος και μην εμποδίζετε τον εξαερισμό της συσκευής.
- Μην αποσυναρμολογείτε αυθαίρετα τη συσκευή.
- Αποφύγετε την υψηλή συμπίεση, το υψηλό βάρος, τη βίαιη δόνηση και τη διαβροχή κατά τη διάρκεια της μεταφοράς, της αποθήκευσης και της εγκατάστασης. Το πλήρες πακέτο είναι απαραίτητο κατά τη μεταφορά.
- Χρησιμοποιήστε το εργοστασιακό πακέτο ή το αντίστοιχο για μεταφορά.

Μπαταρία

Η χαμηλή ισχύς της μπαταρίας επηρεάζει τη λειτουργία του RTC, προκαλώντας την επαναφορά του σε κάθε επανεκκίνηση. Όταν η μπαταρία χρειάζεται αντικατάσταση, ένα μήνυμα συμβάντος θα εμφανιστεί στην αναφορά συμβάντων του διακομιστή. Για περισσότερες πληροφορίες σχετικά με την αναφορά διακομιστή, ανατρέξτε στις σελίδες εγκατάστασης του προϊόντος ή επικοινωνήστε με την υποστήριξη Dahua.



Π Ρ Ο Ε Ι Δ Ο Π Ο Ι Η Σ Η






- Κίνδυνος έκρηξης σε περίπτωση λανθασμένης αντικατάστασης της μπαταρίας.
- Αντικαταστήστε μόνο με πανομοιότυπη μπαταρία ή μπαταρία που συνιστάται από τη Dahua.
- Απορρίψτε τις χρησιμοποιημένες μπαταρίες σύμφωνα με τους τοπικούς κανονισμούς ή τις οδηγίες του κατασκευαστή της μπαταρίας.

Važne zaštitne mjere i upozorenja

Ovo poglavlje opisuje sadržaj koji obuhvaća pravilno rukovanje uređajem, sprječavanje opasnosti i sprečavanje oštećenja imovine. Pažljivo pročitajte ove sadržaje prije korištenja Uređaja, pridržavajte ih se pri upotrebi i sačuvajte ih za buduću uporabu.

Sigurnosne upute

U vodiču se mogu pojaviti sljedeće kategorizirane signalne riječi s definiranim značenjem.

Signal Words	Meaning
 OPASNOST	Označava veliku potencijalnu opasnost koja će, ako se ne izbjegne, rezultirati smrću ili ozbiljnim ozljedama.
 UPOZORENJE	Označava srednju ili malu potencijalnu opasnost koja, ako se ne izbjegne, može rezultirati malom ili umjerenom ozljedom.
 OPREZ	Ukazuje na potencijalni rizik koji, ako se ne izbjegne, može rezultirati oštećenjem imovine, gubitkom podataka, manjom učinkovitošću ili nepredvidivim rezultatom.
 SAVJETI	Pružava vam metode kojim vam pomaže riješiti problem ili će vam uštedjeti vrijeme.
 BILJEŠKA	Pružava dodatne informacije kao naglasak i dopunu teksta.

Sigurnosni zahtjevi

- Avoid heavy stress, violent vibration, and soaking during during transportation, storage, and installation. Complete package is necessary during the transportation.
- Pridržavajte se lokalnih električnih sigurnosnih standarda kako biste osigurali da je napon stabilan i da udovoljava zahtjevima napajanja uređaja.
- Prijenosite, upotrebljavajte i pohranjujte uređaj pod dopuštenim uvjetima vlage i temperature. Pogledajte odgovarajuće tehničke specifikacije uređaja za određenu radnu temperaturu i vlagu.
- Nemojte postavljati uređaj na mjesto izloženo vlazi, prašini, ekstremno vrućoj ili hladnoj okolini, jakom elektronskom zračenju ili nestabilnim uvjetima osvjetljenja.
- Kako biste izbjegli požar nemojte postavljati uređaj na mjesto u blizini izvora topline, kao što su radijator, grijač, peć ili neki drugi uređaj za stvaranje topline.
- Spriječite da tekućina teče u uređaj kako bi se izbjegla šteta na unutarnjim dijelovima.
- Ugradite uređaj vodoravno ili ga postavite na stabilno mjesto kako biste spriječili padanje.
- Ugradite uređaj na dobro prozračeno mjesto i ne blokirajte ventilaciju uređaja.
- Nemojte rastavljati uređaj samovoljno.
- Izbjegavajte teški stres, nasilne vibracije i natapanje tijekom prijevoza, skladištenja i instalacije. Prilikom prijevoza potrebno je koristiti tvorničko

- zaštitno pakiranje.
- Koristite tvorničko pakiranje ili ekvivalent za transport.

Baterija

Niska baterija utječe na rad RTC, uzrokujući da se resetira pri svakom uključivanju. Kad bateriju treba zamijeniti, pojaviti će se poruka u izvješću poslužitelja (server). Dodatne informacije o izvješću poslužitelja (server) potražite na stranicama priručnika proizvođača ili se obratite Dahua podršci.



UPOZORENJE

- Rizik od eksplozije ako se baterija nepravilno zamijeni.
- Zamijeniti samo sa jednakom baterijom ili sa baterijom koja je preporučena od strane Dahua Technology.
- instructions. Dotrajale baterije treba zbrinuti u skladu sa lokalnim propisima ili u skladu s uputama proizvođača baterije.

Slovenčina

Dôležité bezpečnostné pokyny a varovania

Táto kapitola obsahuje informácie týkajúce sa správnej manipulácie so zariadením, prevencie pred nebezpečenstvom a prevencie poškodenia majetku. Pred používaním zariadenia si pozorne prečítajte tieto informácie, dodržiavajte ich pri používaní a uchovajte ich na budúce použitie.

Bezpečnostné pokyny

V príručke sa môžu nachádzať nasledujúce kategorizované signálne výrazy s definovaným významom.

Signálne výrazy	Význam
NEBEZPEČENSTVO	Označuje vysoké potenciálne nebezpečenstvo, ktoré spôsobí smrť alebo vážne zranenie, ak sa mu nevyhnete.
VAROVANIE	Označuje stredné alebo nízke potenciálne nebezpečenstvo, ktoré môže mať za následok mierne alebo stredne ťažké zranenie, ak sa mu nevyhnete.
POZOR	Označuje potenciálne riziko, ktoré môže viesť k poškodeniu majetku, strate údajov, zníženiu výkonu alebo nepredvídateľnému výsledku, ak sa mu nevyhnete.
TIPY	Poskytuje metódy, ktoré vám pomôžu vyriešiť problém alebo ušetriť čas.
POZNÁMKA	Poskytuje ďalšie informácie ako zdôraznenie a doplnenie textu.

Požiadavky na bezpečnosť

- Dodržujte miestne elektrické bezpečnostné normy, aby ste zabezpečili, že napätie je stabilné a zodpovedá požiadavkám na napájanie zariadenia.
- Zariadenie prepravujte, používajte a uchovávajte pri povolených podmienkach

vlhkosti a teploty. Prečítajte si príslušné technické špecifikácie zariadenia pre špecifickú pracovnú teplotu a vlhkosť.

- Zariadenie neumiestňujte na miesto vystavené vlhkosti, prachu, extrémnemu teplu alebo chladu, silnému elektronickému žiareniu alebo nestabilným podmienkam osvetlenia.
- Zariadenie nainštalujte na miesto, ktoré sa nachádza blízko zdroja tepla, ako je napríklad radiátor, ohrievač, pec alebo iné zariadenie na tvorbu tepla. Predídete tak vzniku požiaru.
- Zabráňte vnikaniu kvapaliny do zariadenia, aby nedošlo k poškodeniu vnútorných komponentov.
- Zariadenie nainštalujte horizontálne alebo ho nainštalujte na stabilné miesto, aby ste zabránili pádu.
- Zariadenie nainštalujte na dobre vetranom mieste a neblokujte ventiláciu zariadenia.
- Zariadenie svojvoľne nerozoberajte.
- Počas prepravy, skladovania a inštalácie sa vyhnite silnému namáhaniu, prudkým vibráciám a namáčaniu. Počas prepravy je potrebné prepravovať kompletne balenie.
- Na prepravu použite továrenské balenie alebo jeho ekvivalent.

Batéria

Nízka kapacita batérie ovplyvňuje prevádzku RTC, čo spôsobí jeho vynulovanie pri každom zapnutí. Keď je batériu potrebné vymeniť, v správe servera produktu sa zobrazí hlásenie. Ďalšie informácie o hlásení servera nájdete na stránkach s nastaveniami produktu alebo sa obráťte na podporu spoločnosti Dahua.



VAROVANIE

- Nebezpečenstvo výbuchu, ak je batéria nesprávne vymenená.
- Vymeňte iba za tú istú batériu alebo batériu, ktorú odporúča spoločnosť Dahua.
- Použité batérie zlikvidujte v súlade s miestnymi predpismi alebo pokynmi výrobcu batérie.


Српски





Važne Zaštitne mere i Upozorenja

Ovo poglavlje opisuje sadržaj koji pokriva pravilno rukovanje uređajem, sprečavanje opasnosti i sprečavanje oštećenja imovine. Pažljivo pročitajte ove sadržaje pre korišćenja uređaja, pošaljite ih kada koristite i čuvajte ga za buduću referencu.

Bezbednosna Uputstva

Sledeće kategorije reči sa definisanim značenjem mogu se pojaviti u „Vodiču“.

Oznaka	Značenje
 OPASNOST	Označava visoku potencijalnu opasnost koja će, ako se i ne izbegne, rezultirati smrću ili ozbiljnim povredama.

Oznaka	Značenje
 UPOZORENJE	Označava opasnost srednje ili niske potencijale koja bi, ukoliko se ne izbegne, mogla dovesti do blagih ili umerenih povreda.
 OPREZ	Označava potencijalni rizik koji bi, ukoliko se to ne izbegne, mogao dovesti do oštećenja imovine, gubitka podataka, niže performanse ili nepredvidivog rezultata.
 PREPORUKE	Pruža metode za pomoć u rešavanju problema ili uštede vremena.
 BELEŠKA	Pruža dodatne informacije kao naglasak i dodatak tekstu.

Bezbednosna Uputstva

- Pridržavajte se lokalnih standarda električne sigurnosti kako biste bili sigurni da je napon stabilan i da odgovara zahtevu za napajanje uređaja.
- Prevoz, korišćenje i skladištenje uređaja treba da budu u skladu sa dozvoljenim uslovima vlage i temperaturnim uslovima. Pogledajte odgovarajuće tehničke specifikacije uređaja koji se odnose na specifičnu radnu temperaturu i vlažnost vazduha.
- Nemojte postavljati uređaj na mesto izloženo vlazi, prašini, ekstremnom vrućem ili hladnom vazduhu, jakom elektronskom zračenju ili nestabilnim uslovima osvetljenja.
- Ne postavljajte uređaj na mesto blizu izvora toplote, kao što je radijator, grejač, peć ili drugi uređaj za proizvodnju toplote kako biste izbegli požar.
- Sprečite tečnost da teče u uređaj kako bi se izbeglo oštećenje unutrašnjih komponenti.
- Instalirajte uređaj horizontalno ili postavite na stabilno mesto kako biste sprečili padanje.
- Ugradite uređaj na dobro provetreno mesto i ne blokirajte ventilaciju uređaja.
- Nemojte rastavljati uređaj proizvoljno.
- Izbegavajte jak pritisak, nasilne vibracije i usisavanje tokom transporta, skladištenja i instalacije. Kompletan paket je neophodan tokom transporta.
- Koristite fabričko pakovanje ili ekvivalent u toku transporta.

Baterija

Baterija male snage utiče na rad RTC-a, dovodeći do reseta pri svakom uključivanju. Kada se baterija mora zameniti, logovna poruka će se pojaviti u izveštaju servera proizvođača. Za više informacija o izveštaju servera, pogledajte stranice za podešavanje proizvođača ili kontaktirajte Dahua podršku.



UPOZORENJE

- Opasnost od eksplozije ako se baterija nepravilno zameni.
- Zamenite je samo sa identičnom baterijom ili sa baterijom koju preporučuje Dahua.
- Odložite iskorišćene baterije u skladu sa lokalnim propisima ili uputstvima proizvođača baterije.






Türkçe

Önemli Kurallar ve Uyarılar

Bu Bölüm, Cihazın doğru kullanımını, tehlike önlemeyi ve mal zararının önlenmesini kapsayan içerikleri anlatmaktadır. Cihazı kullanmadan önce bu içerikleri dikkatli şekilde okuyun, kullanırken bunlara uyun ve ileride başvurmak üzere saklayın.

Güvenlik Talimatları

Aşağıda, belirtilen açıklamaya sahip kategorize edilmiş uyarı sözcüklerini Kılavuzda görebilirsiniz.

Uyarı Sözcükleri	Anlamı
 TEHLİKE	Kaçınılması durumunda ölüm veya ciddi yaralanmalara neden olacak yüksek potansiyelli bir tehlikeyi belirtir.
 UYARI	Kaçınılması durumunda hafif veya orta dereceli yaralanmaya neden olabilecek orta veya düşük potansiyelli bir tehlikeyi belirtir.
 DİKKAT	Kaçınılması durumunda mal hasarına, veri kaybına, düşük performansa veya tahmin edilemeyen sonuca neden olabilecek potansiyel bir riski belirtir.
 İPUÇLARI	Bir problemi çözmeye veya zamandan tasarruf etmenize yardımcı olmak için yöntemler sunar.
 NOT	Metne pekiştirme ve ek olarak ilave bilgiler sağlar.

Güvenlik Gereksinimi

- Voltajın istikrarlı olduğundan ve cihazın güç kaynağı gereksinimine uygun olduğundan emin olmak için yerel elektrik güvenliği standartlarına uyun.
- Cihazı izin verilen nem ve sıcaklık şartları altında nakledin, kullanın ve saklayın. Belirli çalışma sıcaklığı ve nem değerleri için cihazın ilgili teknik özelliklerine bakın.
- Cihazı rutubete, toza, aşırı ısıya veya soğuğa, güçlü elektronik radyasyona veya değişken aydınlatma şartlarına maruz kalan bir yere yerleştirmeyin.
- Yangını önlemek için cihazı radyatör, ısıtıcı, fırın veya başka ısı üreten cihazlar gibi ısı kaynağına yakın bir yere monte etmeyin.
- İçerisindeki parçaların hasar görmesini önlemek için cihazın içerisine sıvıların girmesini önleyin.
- Cihazın düşmesini önlemek için yatay olarak veya dayanıklı bir yere monte edin.

- Cihazı iyi havalandırılan bir yere monte edin ve cihazın hava sirkülasyonunu engellemeyin.
- Cihazın parçalarını gelişigüzel sökmeyin.
- Cihazın nakliyesi, saklanması ve montajı esnasında ağır baskılardan, şiddetli sarsıntılardan ve sıvıya batmalardan kaçınin. Cihazın nakliyesi esnasında ambalajın tamamı gereklidir.
- Nakliye için fabrikasyon ambalajı ya da eş değerini kullanın.

Pil

Düşük pil gücü, her güç açma esnasında sıfırlanmasına neden olarak RTC'nin çalışmasını etkiler. Pillerin değiştirilmesi gerektiğinde ürünün sunucu raporunda bir günlük iletisi görüntülenir. Sunucu raporu hakkında daha fazla bilgi için ürünün kurulum sayfalarına bakın veya Dahua destek merkeziyle iletişime geçin.



UYARI

- Pil yanlış şekilde takılırsa patlama tehlikesi.
- Sadece aynı türde veya Dahua tarafından önerilen bir pil takın.
- Eski pilleri, yerel yönetmeliklere veya pil üreticisinin talimatlarına göre elden çıkarın.

עברית


חשיבות בעלי ואזהרות זהירות אמצעי

יש רכוש נזקי ומניעת בעיות מניעת, במכשיר נאות טיפול בנושא התכנים את מתאר זה פרק המכשיר הפעלת בעת לאורם לפעול, במכשיר שימוש לפני לב בתשומת אלה תכנים לקרוא עתידי לעיון אותם ולשמור.

בטיחות הנחיות

במדריך להופיע עשויות המוגדרים הפירושים עם הבאות המסווגות הסימון מילות.

משמעות	סימון מילות
לגרום עשויה, תימנע לא שאם, גבוהה בסבירות סכנה מציינת קשה לפציעה או למוות.	סכנה
עשויה, תימנע לא שאם, נמוכה או בינונית בסבירות סכנה מציינת בינונית או קלה לפציעה לגרום.	אזהרה
אובדן, לנזק לגרום עשויה, תימנע לא שאם לסכנה סבירות מציינת צפויות לא לתוצאות או הביצועים ברמת הפחתה, מידע.	זהירות
זמן לך שיחסכו או בעיות לפתור לך שיסייעו שיטות מספקות.	עצות

משמעות	סימון מילות
ולהשלמתו לטקסט להדגשה נוסף מידע מספקת	הערה 

בטיחות דרישת

- ותואם יציב שהמתח להבטיח מנת על בחשמל לבטיחות המקומיים התקנים לכל לציית יש המכשיר של החשמל אספקת לדרישות
- המותרים והלחות הטמפרטורה לתנאי בהתאם יעשו המוצר של ואחסון שימוש, הובלה המוגדרים וללחות לטמפרטורה המכשיר של המקבילים הטכניים למפרטים להתייחס יש עבודה לביצוע
- קרינה, קיצוניים חום או קור תנאי, אבק, לרטיבות חשוף במקום המכשיר את למקם אין יציבים לא תאורה תנאי או חזקה חשמלית
- מכשיר או כבשן, תנור, מקרן כגון, חום מקור בקרבת המכשיר את להתקין אין מנת על חום שפולט אחר
- הפנימיים למרכיביו נזק למנוע מנת על המכשיר על נוזל משפיכת להימנע יש יציב במקום או מאוזנת בצורה המכשיר את להתקין יש, לייפו שלא מנת על
- למכשיר האוויר מעבר את לחסום ולא היטב מאוורר במקום המכשיר את להתקין יש
- עצמך בכוחות המכשיר את לפרק אין
- אחסונו, המכשיר הובלת במהלך הרטבתו או חזק טלטול, כבד משקל מהצבת להימנע יש המלאה באריזתו להשתמש שי המכשיר העברת לשם. התקנתו או
- במקבילה או היצרן ידי על המסופקת באריזה להשתמש יש המכשיר העברת לשם

סוללה

צורך יש כאשר. שלו הדלקה בכל להתאפס לו ותגרום RTC-ה פעולת על תשפיע חלשה סוללה ח"דו אודות נוסף למידע. המוצר של השרת ח"דו אירועים יומן הודעת תופיע, הסוללה בהחלפת Dahua של התמיכה עם קשר ליצור או המוצר של ההגדרה בדפי לעיין יש, השרת



אזהרה

- לפיצוץ לגרום עלולה הסוללה של נכונה לא החלפה
- Dahua ידי על שמומלצת כזו או זהה בסוללה ורק אך להחליף יש
- היצרן של להנחיותיו או המקומיות לתקנות בהתאם משומשות סוללות לסלק יש




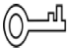

Français

Précautions et avertissements importants

Le contenu de ce chapitre aborde la bonne manipulation de l'appareil, la prévention des risques et la prévention des dommages matériels. Lisez ce contenu soigneusement avant d'utiliser l'appareil, respectez-le lorsque vous l'utilisez, et conservez-le pour vous y référer ultérieurement.

Précautions d'emploi

Les mentions d'avertissement catégorisées suivantes ayant un sens défini sont susceptibles d'apparaître dans le manuel.

Mentions d'avertissement	Signification
 DANGER	Indique un danger à risque élevé qui entraînera la mort ou des blessures graves si les instructions données ne sont pas respectées.
 AVERTISSEMENT	Indique une situation moyennement ou faiblement dangereuse qui entraînera des blessures faibles ou modérées si les instructions données ne sont pas respectées.
 AVERTISSEMENT	Indique une situation potentiellement dangereuse qui pourra entraîner des dommages de la propriété, des pertes de données, une performance moindre ou des résultats imprévisibles, si les instructions données ne sont pas respectées.
 ASTUCES	Fournit des instructions qui vous permettront de résoudre un problème ou de vous faire gagner du temps.
 REMARQUE	Fournit des informations supplémentaires pour mettre en évidence et compléter le texte.

Exigences de sécurité

- Respectez les normes de sécurité électrique locales pour vous assurer que la tension est stable et conforme aux exigences d'alimentation de l'appareil.
- Transportez, utilisez et stockez l'appareil dans les conditions d'humidité et de température autorisées. Consultez les spécifications techniques correspondantes de l'appareil pour connaître la température et l'humidité de fonctionnement spécifiques.
- Ne placez pas l'appareil dans un lieu exposé à l'humidité, à la poussière, à une chaleur ou un froid extrême, à de forts rayonnements électroniques, ou à des conditions d'éclairage instables.
- N'installez pas l'appareil près d'une source de chaleur telle qu'un radiateur, un chauffage, une chaudière, ou tout autre dispositif générant de la chaleur afin d'éviter les risques d'incendie.
- Empêchez aux liquides de couler sur l'appareil afin d'éviter d'endommager les composants internes.
- Installez l'appareil horizontalement ou sur une surface stable afin de l'empêcher de tomber.
- Installez l'appareil dans un lieu bien ventilé et ne bloquez pas la ventilation de l'appareil.
- Ne démontez pas l'appareil de façon arbitraire.
- Au cours du transport, du stockage et de l'installation de l'appareil, évitez de le soumettre à de fortes contraintes, à des vibrations violentes ou à une immersion. L'emballage complet est nécessaire au cours du transport.
- Utilisez l'emballage d'usine ou équivalent pour le transport.

Batterie

Un niveau de batterie faible affecte le fonctionnement du RTC, qui se réinitialisera à chaque redémarrage. Lorsque la batterie doit être remplacée, un message de journal apparaît dans le rapport du serveur du produit. Pour plus d'informations sur le rapport du serveur, consultez les pages de configuration du produit ou contactez l'assistance Dahua.



AVERTISSEMENT

- Risque d'explosion si la batterie est remplacée de façon incorrecte.
- Remplacez la batterie uniquement par une batterie recommandée par Dahua.
- Éliminez les batteries usagées conformément aux réglementations locales ou aux instructions du fabricant de la batterie.




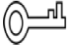

Español(España)

Advertencias y precauciones de seguridad importantes

En este capítulo se describe el contenido que cubre la manipulación correcta del dispositivo, la prevención de riesgos y la prevención de daños materiales. Lea detenidamente este contenido antes de usar el dispositivo, sígalo cuando lo utilice y consérvelo para consultas futuras.

Instrucciones de seguridad

Las siguientes palabras de advertencia con un significado definido podrían aparecer en la guía.

Palabras de advertencia	Significado
 PELIGRO	Indica un riesgo potencial alto que, si no se evita, resultará en muerte o lesiones graves.
 ADVERTENCIA	Indica un riesgo potencial medio o bajo que, si no se evita, podría resultar en lesiones leves o moderadas.
 PRECAUCIÓN	Indica un riesgo potencial que, si no se evita, podría resultar en daños materiales, pérdida de datos, rendimiento menor o resultados impredecibles.
 CONSEJOS	Ofrece métodos para ayudarle a resolver un problema o ahorrar tiempo.
 NOTA	Proporciona información adicional como hincapié y complemento para el texto.

Requisitos de seguridad

- Cumpla las normas locales de seguridad eléctrica para garantizar que la tensión sea estable y cumpla los requisitos de alimentación eléctrica del dispositivo.
- Transporte, utilice y almacene el dispositivo bajo las condiciones de humedad y temperatura permitidas. Consulte las especificaciones técnicas

correspondientes del dispositivo para la temperatura y humedad operativas específicas.

- No coloque el dispositivo en un lugar expuesto a humedad, polvo, calor o frío extremos, radiaciones electrónicas fuertes o condiciones de iluminación inestables.
- No instale el dispositivo en un lugar cerca de fuentes de calor, como radiadores, calentadores, hornos u otros dispositivos generadores de calor, para evitar un incendio.
- No deje que entre líquido en el dispositivo para evitar daños en los componentes internos.
- Instale el dispositivo horizontalmente o instálo sobre un lugar estable para evitar que caiga.
- Instale el dispositivo en un lugar bien ventilado y no obstruya la ventilación.
- No desmonte de forma arbitraria el dispositivo.
- Evite las presiones excesivas, las vibraciones violentas y mojar el dispositivo durante el transporte, almacenamiento e instalación. Es necesario utilizar el embalaje completo durante el transporte.
- Utilice el embalaje de fábrica o uno equivalente para transportarlo.

Pilas

La baja batería afecta al funcionamiento del RTC, provocando que se restablezca cada vez que recibe alimentación. Cuando sea necesario sustituir las pilas, aparecerá un mensaje de registro en el informe de servidor del producto. Para más información acerca del informe de servidor, consulte las páginas de configuración del producto o póngase en contacto con el departamento de soporte de Dahua.



ADVERTENCIA

- Riesgo de explosión si se sustituyen incorrectamente las pilas.
- Sustitúyalas únicamente por pilas idénticas o pilas recomendadas por Dahua.
- Elimine las pilas gastadas en conformidad con la normativa local o las instrucciones del fabricante de las pilas.


Deutsch





Wichtige Sicherheits- und Warnhinweise

Dieses Kapitel beschreibt die Inhalte zum richtigen Umgang mit dem Gerät, zur Verhütung von Gefahren und zur Vermeidung von Sachschäden. Lesen Sie dieses Kapitel sorgfältig durch, bevor Sie das Gerät verwenden, halten Sie die Anweisungen bei der Verwendung ein und bewahren Sie diese Anleitung zum späteren Nachlesen gut auf.

Sicherheitshinweise

Die folgenden kategorisierten Signalwörter mit definierter Bedeutung können in der Kurzanleitung verwendet werden.

Signalwörter	Bedeutung
 GEFAHR	Weist auf ein hohes Gefahrenpotential hin, das, wenn es nicht vermieden wird, zum Tod oder zu schweren Verletzungen führt.

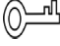Signalwörter	Bedeutung
 WARNUNG	Weist auf eine mittlere oder geringe potentielle Gefahr hin, die, wenn sie nicht vermieden wird, zu leichten oder mittelschweren Verletzungen führen kann.
 VORSICHT	Weist auf ein potenzielles Risiko hin, das, wenn es nicht vermieden wird, zu Sachschäden, Datenverlust, geringerer Leistung oder unvorhersehbaren Ergebnissen führen kann.
 TIPPS	Stellt Methoden bereit, mit denen Sie ein Problem lösen oder Zeit sparen können.
 HINWEIS	Bietet zusätzliche Informationen als Schwerpunkt und Ergänzung zum Text.

Sicherheitsanforderungen

- Halten Sie sich an die örtlichen elektrischen Sicherheitsnormen, um sicherzustellen, dass die Spannung stabil ist und den Anforderungen an die Stromversorgung des Geräts entspricht.
- Transportieren, verwenden und lagern Sie das Gerät unter den zulässigen Feuchtigkeits- und Temperaturbedingungen. Die entsprechenden technischen Spezifikationen des Geräts für die jeweilige Betriebstemperatur und Luftfeuchtigkeit sind zu beachten.
- Stellen Sie das Gerät nicht an Orten auf, an denen es Feuchtigkeit, Staub, extremer Hitze oder Kälte, starker elektronischer Strahlung oder instabilen Lichtverhältnissen ausgesetzt ist.
- Installieren Sie das Gerät nicht in der Nähe einer Wärmequelle, z. B. einem Heizkörper, Heizlüfter, Ofen oder anderen Wärme erzeugenden Geräten, um Feuer zu vermeiden.
- Verhindern Sie, dass Flüssigkeit in das Gerät fließt, um Schäden an internen Bauteilen zu vermeiden.
- Installieren Sie das Gerät waagrecht oder an einem stabilen Ort, damit es nicht herunterfällt.
- Installieren Sie das Gerät an einem gut belüfteten Ort und blockieren Sie die Belüftung des Geräts nicht.
- Nehmen Sie das Gerät nicht eigenmächtig auseinander.
- Vermeiden Sie starke Belastungen, Vibrationen und eindringende Nässe während des Transports, der Lagerung und der Installation. Das Gerät sollte immer vollständig verpackt transportiert werden.
- Verwenden Sie die ab Werk verwendete Verpackung oder eine gleichwertige Verpackung für den Transport.

Batterie

Eine niedrige Batterieleistung beeinträchtigt den Betrieb der Echtzeituhr, wodurch sie bei jedem Einschalten zurückgesetzt wird. Wenn die Batterie ausgetauscht werden muss, wird eine Protokollmeldung im Serverbericht des Produkts angezeigt. Weitere Informationen zum Serverbericht finden Sie auf den Einrichtungsseiten des Produkts oder wenden Sie sich an den Support von Dahua.



WARNUNG

- Bei nicht ordnungsgemäßem Austausch der Batterie besteht

Explosionsgefahr.

- Ersetzen Sie die Batterie nur durch eine identische Batterie oder eine Batterie, die von Dahua empfohlen wird.
- Entsorgen Sie leere Batterien entsprechend den örtlichen Vorschriften oder den Anweisungen des Batterieherstellers.




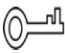

Italiano

Norme di sicurezza e avvertenze importanti

Il presente capitolo descrive le procedure per una corretta manipolazione del dispositivo, per la prevenzione dei rischi e per la prevenzione di danni materiali. Leggere attentamente queste informazioni prima di utilizzare il dispositivo, attenersi alle istruzioni fornite durante l'uso e conservarle come futuro riferimento.

Istruzioni di sicurezza

I seguenti indicatori di pericolo, aventi i significati indicati, possono apparire nella presente guida.

Indicatori di pericolo	Significato
 PERICOLO	Indica una situazione ad alto rischio che, se non viene evitata, può causare il decesso o gravi lesioni.
 AVVERTENZA	Indica una situazione a medio o basso rischio che, se non viene evitata, può causare lesioni di leggera o moderata entità.
 ATTENZIONE	Indica un rischio potenziale che, se non evitato, può causare danni materiali, perdite di dati, riduzione delle prestazioni o altre conseguenze imprevedibili.
 CONSIGLI	Spiegano metodi utili per risolvere un problema o per aiutarvi a risparmiare tempo.
 NOTA	Fornisce informazioni aggiuntive che completano quelle riportate nel testo.

Requisiti di sicurezza

- Attenersi alle leggi locali sulla sicurezza elettrica per garantire una tensione stabile e soddisfare i requisiti di alimentazione del dispositivo.
- Trasportare, utilizzare e conservare il dispositivo alle condizioni di umidità e temperatura consentite. Fare riferimento alle specifiche tecniche del dispositivo per conoscere i valori specifici della temperatura di esercizio e dell'umidità.
- Non posizionare il dispositivo in un ambiente esposto ad una eccessiva umidità, a polvere, a condizioni di caldo e freddo estremi, a forti radiazioni elettroniche o a condizioni di illuminazione non stabile.
- Non installare il dispositivo vicino ad una fonte di calore, quali ad esempio radiatori, apparecchi di riscaldamento, forni o altri dispositivi di generazione del calore, per evitare il rischio di incendio.
- Evitare di versare liquido sul dispositivo per non danneggiare i componenti interni.
- Installare il dispositivo in posizione orizzontale, oppure in una zona stabile, per evitare che possa cadere.

- Installare il dispositivo in un ambiente adeguatamente ventilato e non ostruire la circolazione dell'aria.
- Non smontare il dispositivo in modo casuale.
- Evitare forte sollecitazioni, violente vibrazioni e non bagnare il prodotto durante il trasporto, lo stoccaggio e l'installazione. Trasportare il prodotto utilizzando un imballaggio adeguato.
- Utilizzare l'imballaggio standard previsto o un imballaggio equivalente.

Batteria

L'uso di una batteria scarica può compromettere il funzionamento del dispositivo RTC, che si resetterà ad ogni avvio. Quando è necessario sostituire la batteria, nel report del server del prodotto viene visualizzato un messaggio di log. Per ulteriori informazioni sul report del server, leggere le pagine di configurazione del prodotto, oppure contattare il servizio assistenza di Dahua.



AVVERTENZA

- Se la batteria non viene sostituita correttamente, può generare il rischio di esplosione.
- Sostituire solo con una batteria identica o una batteria raccomandata da Dahua.
- Smaltire le batterie usate in conformità con le normative locali o attenendosi alle istruzioni del produttore della batteria.

Nederlands

Belangrijke voorzorgsmaatregelen en waarschuwingen

Dit hoofdstuk beschrijft de inhoud die de juiste omgang met het apparaat behandelt, het voorkomen van gevaren alsmede het voorkomen van materiële schade. Lees deze inhoud zorgvuldig door voordat u het apparaat gebruikt, houdt u eraan tijdens het gebruik, en bewaar ze goed voor toekomstige referentie.

Veiligheidsinstructies

De volgende gecategoriseerde signaalwoorden met gedefinieerde betekenis staan in de handleiding vermeld.

Signaalwoorden	Betekenis
GEVAAR	Geeft een hoog potentieel gevaar aan dat, indien niet voorkomen, kan leiden tot overlijden of ernstig.
WAARSCHUWING	Geeft een gemiddeld of laag potentieel gevaar aan dat, indien niet voorkomen, kan leiden tot licht of matig letsel.
LET OP	Geeft een potentieel risico aan dat, indien niet voorkomen, kan leiden tot materiële schade, gegevensverlies, lagere prestaties of onvoorspelbaar resultaat.
TIPS	Biedt methodes om u te helpen een probleem op te lossen of tijd te besparen.
OPMERKING	Biedt aanvullende informatie als nadruk op en aanvulling van de tekst.

Veiligheidsvereiste

- Houdt u aan plaatselijke veiligheidsstandaarden om ervoor te zorgen dat het voltage stabiel is en voldoet aan de vereiste stroomvoorziening van het apparaat.
- Transporteer, gebruik en bewaar het apparaat onder de toegestane relatieve luchtvochtigheid en temperaturomstandigheden. Zie de overeenkomstige technische specificaties van het apparaat voor specifieke werktemperatuur en relatieve luchtvochtigheid.
- Plaats het apparaat niet op een locatie die blootgesteld is aan vocht, stof, extreme hitte of koude, sterke elektronische straling of onstabiele verlichtingsomstandigheden.
- Installeer het apparaat niet op een plek vlakbij de warmtebron, zoals een radiator, verwarming, fornuis of ander warmte-genererend apparaat om brand te voorkomen.
- Voorkom dat er vloeistof in het apparaat loopt om schade aan interne componenten te vermijden.
- Installeer het apparaat horizontaal of installeer het op een stabiele plek om te voorkomen dat het valt.
- Installeer het apparaat in een goed geventileerde ruimte en blokkeer de ventilatie van het apparaat niet.
- Haal het apparaat niet willekeurig uit elkaar.
- Vermijd zware druk, hevige trilling en nat worden tijdens het transport, de opslag en de installatie. De complete verpakking is noodzakelijk tijdens het transport.
- Gebruik de fabrieksverpakking of gelijkwaardig voor het transport.

Batterij

Lage batterijstroom beïnvloedt de bediening van de RTC, waardoor deze bij iedere stroominschakeling reset. Als de batterij vervangen moet worden, verschijnt een logbericht in het serverrapport van het product. Zie voor meer informatie over het serverrapport de setuuppagina's van het product of neem contact op met Dahua Support.



WAARSCHUWING

- Gevaar op ontploffing als de batterij onjuist wordt vervangen.
- Vervang alleen met een identieke batterij die wordt aanbevolen door Dahua.
- Verwerk de gebruikte batterijen volgens de plaatselijke regelgeving of de instructies van de batterijfabrikant.




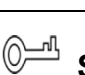

Portugués

Instruções e advertências importantes

Este capítulo descreve os conteúdos relativos ao manuseamento correto do dispositivo, à prevenção de riscos e à prevenção de danos materiais. Leia estes conteúdos atentamente antes de utilizar o dispositivo, respeite as instruções durante a utilização e guarde-as em boas condições para consulta futura.

Instruções de segurança

As seguintes palavras-sinal categorizadas, com um significado definido, poderão surgir no Guia.

Palavras-sinal	Significado
 PERIGO	Indica um risco potencial elevado que, se não for evitado, resultará em morte ou ferimentos graves.
 AVISO	Indica um risco potencial médio ou baixo que, se não for evitado, poderá resultar em ferimentos ligeiros ou moderados.
 ATENÇÃO	Indica um risco potencial que, se não for evitado, pode resultar em danos materiais, perda de dados, desempenho inferior ou resultados imprevisíveis.
 SUGESTÕES	Disponibiliza métodos para o ajudar a resolver um problema ou a poupar o seu tempo.
 NOTA	Disponibiliza informações adicionais como destaque e complemento ao texto.

Requisitos em termos de segurança

- Respeite as normas locais de segurança elétrica de forma a garantir que a tensão é estável e respeita os requisitos da fonte de alimentação do dispositivo.
- Transporte, utilize e armazene o dispositivo nas condições de humidade e temperatura permitidas. Consulte as respetivas especificações técnicas do dispositivo para conhecer a temperatura e humidade de funcionamento específicas.
- Não coloque o dispositivo num local exposto a humidade, poeira, condições de calor ou frio extremas, radiação eletrónica intensa ou condições de iluminação instáveis.
- Não instale o dispositivo num local próximo de uma fonte de calor, como, por exemplo, um radiador, aquecedor, fofalha ou outro dispositivo de geração de calor de forma a evitar incêndios.
- Não permita o escorrimento de líquidos para o dispositivo, evitando, assim, danos nos componentes internos.
- Instale o dispositivo numa posição horizontal ou num local estável, prevenindo possíveis quedas.
- Instale o dispositivo num local bem ventilado e não bloqueie a ventilação do dispositivo.
- Não desmonte o dispositivo de forma arbitrária.
- Evite pressões intensas, vibrações violentas e a imersão do dispositivo durante o transporte, armazenamento e instalação. Para o transporte, é necessária a embalagem completa.
- Utilize a embalagem de fábrica ou equivalente para efetuar o transporte.

Bateria

Uma bateria fraca afeta a operação do RTC, fazendo com que este reinicie sempre que é ligado. Quando a bateria tiver de ser substituída, surgirá uma mensagem de registo no relatório do servidor do produto. Para mais informações sobre o relatório do servidor, consulte as páginas de configuração do produto ou contacte a Dahua para obter assistência.



AVISO

- Risco de explosão se a bateria não for corretamente colocada.
- Substitua apenas por uma bateria idêntica ou por uma bateria recomendada pela Dahua.
- Elimine as baterias usadas de acordo com os regulamentos locais ou com as instruções do fabricante da bateria.