

Network Keyboard 5000 Series

Quick Start Guide

V2.0.0

Foreword

General




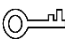

This document mainly introduces appearance, functions and operations of network keyboard (hereinafter referred to be "the keyboard").

Models

NKB5000, NKB5000-F

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision Content	Release Time
V2.0.0	<ul style="list-style-type: none">• Add audio adjustment, task management, plan tour and channel group configuration to local preview module.• DSS-PRO, DSS-C9100 and DSS-Express platforms support TV wall and live view.• Add safety baseline V1.4 needs.• Lock the screen with one button.	October 2019
V1.1.0	<ul style="list-style-type: none">• Update the program	December 2018
V1.0.0	<ul style="list-style-type: none">• First Release	October 2017

Privacy Protection Notice

As the device user or data controller, you might collect personal data of others, such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures, including but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

Important Safeguards and Warnings

The following description is the correct application method of the device. Please read the manual carefully before use, in order to prevent danger and property loss. Strictly conform to the manual during application and keep it properly after reading.

Operating Requirement

- Do not place and install the device in an area exposed to direct sunlight or near heat generating device.
- Do not install the device in a humid, dusty or fuliginous area.
- Keep its horizontal installation, or install it at stable places, and prevent it from falling.
- Do not drip or splash liquids onto the device; do not put on the device anything filled with liquids, in order to prevent liquids from flowing into the device.
- Install the device at well-ventilated places; do not block its ventilation opening.
- Use the device only within rated input and output range.
- Do not dismantle the device arbitrarily.
- Transport, use and store the device within allowed humidity and temperature range.



This device has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules and EMC Directive 2014/30/EU. Operation of this device in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Power Requirement

- Use batteries according to requirements; otherwise, it may result in fire, explosion or burning risks of batteries.
- To replace batteries, only the same type of batteries can be used!
- The product shall use electric wires (power wires) recommended by this area, which shall be used within its rated specification.
- Use standard power adapter matched with this device. Otherwise, the user shall undertake resulting personnel injuries or device damages.
- Use power supply that meets SELV (safety extra low voltage) requirements, and supply power with rated voltage that conforms to Limited Power Source in IEC60950-1. For specific power supply requirements, please refer to device labels.
- Products with category I structure shall be connected to grid power output socket, which is equipped with protective grounding.
- Appliance coupler is a disconnecting device. During normal use, keep an angle that facilitates operation.

Table of Contents

Foreword	I
Important Safeguards and Warnings	III
1 Introduction	1
1.1 Overview	1
1.2 Key Module	2
1.3 Port Introduction.....	3
1.3.1 Rear Panel Ports	3
1.3.2 Side Panel Port.....	5
2 Start and Shutdown	6
2.1 Start.....	6
2.2 Shutdown	6
2.3 Lock Screen	6
3 Quick Configuration	7
3.1 Initialization	7
3.2 Login Interface	7
3.3 Main Interface	7
3.4 Settings Interface	8
3.5 Network Settings.....	9
3.5.1 Wired Network	9
3.5.2 Wi-Fi.....	11
3.6 Adding Device	12
3.6.2 Manual Add.....	13
3.6.3 Auto Search	16
4 System Configurations	18
4.1 Preview.....	18
4.1.1 Icons of Preview Interface	18
4.1.2 Channel Grouping.....	19
4.1.3 Video on Wall.....	21
4.1.4 PTZ Control	23
4.1.5 Scheme Management	23
4.1.6 Patrol Config	25
4.1.7 Snapshot.....	27
4.1.8 Recording.....	28
4.1.9 Snapshot and Recording Settings.....	28
4.1.10 Playback of Recorded Videos	31
4.2 Playback.....	32
4.3 TV Wall.....	34
4.3.1 Adding TV Wall through Matrix Web Interface	34
4.3.2 Adding TV Wall through Decoder Web Interface.....	36
4.3.3 Adding Device.....	38
4.3.4 Video on Wall.....	38

4.3.5 TV Wall Icon Description	39
4.3.6 PTZ Control	40
4.3.7 Adding Tasks.....	40
4.3.8 Configuring TV Wall.....	41
4.4 Platform.....	43
4.4.1 Adding Devices and Video Wall.....	43
4.4.2 Video on Wall.....	48
4.4.3 Icons of Platform Interface.....	51
4.4.4 PTZ Control	52
4.4.5 Adding Task.....	52
4.5 PTZ Control.....	52
4.5.1 Call.....	53
4.5.2 Settings	54
4.5.3 SD Menu.....	55
4.5.4 Auxiliary Function.....	56
4.6 Settings	56
4.6.1 Device Management.....	57
4.6.2 General Settings	57
4.6.3 Account	63
4.6.4 System.....	68
4.7 Extension	72
Appendix 1 Cybersecurity Recommendations	75

1 Introduction

1.1 Overview

The network keyboard can add TV wall, display videos on the TV wall, and carry out PTZ control.

For appearance of network keyboard, see Figure 1-1. For details, see Table 1-1.

Figure 1-1 Appearance



Table 1-1 Icon description

No.	Icon	Function
1	Power	Working power indicator light. Green light turns on when working power of network keyboard is normal.
	Network	Network indicator light. Green light turns on when the keyboard is connected to network normally.
	Alarm	Alarm indicator light. Red light turns on in case of alarms.
2	⊕ / ⊖	Zoom in/zoom out PTZ lens.
	⊞ / ⊞	Increase/decrease the focus of PTZ lens.
	⊞ / ⊞	Increase/decrease the iris of PTZ lens.
	💡	Shortcut key to control speed dome light.
	👉	Shortcut key to control speed dome wiper.
3	—	Touch screen, showing keyboard screen menu.

No.	Icon	Function
4		Navigation bar.
		Homepage.
		Return.
5	Fn	Function key. It is line scanning by default.
	Preset	Make PTZ control, and configure preset point.
	Tour	Make PTZ control, and tour between points.
	Aux	Auxiliary key. It is pattern by default.
6	—	Includes remote control lever, auxiliary menu and function operation.

1.2 Key Module



- Key module is not available in platform preview mode.
- F1 cannot be called in platform TV wall mode.

After key module is connected to network keyboard through USB or Bluetooth successfully, green light at the upper right corner will be on for 10s and then turn off. For appearance of key module, see Figure 1-2. For details, see Table 1-2.








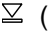


When key module is connected with network keyboard, turn on main switch at the side of key module. For Bluetooth connection, default BLE network name is "KEYBOARD".

Figure 1-2 Key module



Table 1-2 Key description

Key	Example	Function
F1	Number 1 to 16 +F1	Call No. 1 to 16 plans quickly. It applies to preview and TV wall functions. View the plan numbers on the Plan Management interface.
F2	Number 1 to 16 +F2	Call No. 1 to 16 MAC plans quickly. View the Mac plan numbers on the MAC interface .
F3	Press F3	Reserved.
F4	Press F4	Reserved.

Key	Example	Function
Mode	Operation mode switch. It is operation mode at present.	Reserved.
0–9	Number 0–9	—
Screen	123 + Screen	Select screen.
Window	3 + Window	Focus on the third window of present screen.
Split	4 + Split	Divide present screen into 4 splits.
	Press	Delete 1 digit from number buffer zone. The icon is similar to squares.
 (Camera group)	123 + 	Drag No. 123 camera group onto the current window for automatic tour of videos in the channel.
 (Camera)	567 + 	Drag No. 567 camera onto present window.  0 + camera means to turn off present video source.
Preset	2 + Preset	Call No. 2 preset.
Tour	5 + Tour	Call No. 5 tour.
PTZ	—	In case of USB power supply, press and hold the button to turn on and off the backlight.
Scan	3 + Scan	Call No. 3 scan.
Pattern	4 + Pattern	Call No. 4 pattern.
Rotate	Press	Press it once to start rotation, and then press it again to stop rotation.
Exit	—	Reserved.
Confirm	—	Reserved.
 (Switch) previous channel	KEY_ previous channel	Present focus window channel reduces by 1. The icon is similar to squares.
 (Next channel)	KEY_ next channel	Present focus window channel adds by 1. The icon is similar to squares.
	2+ 	Play back videos of No. 2 channel.

1.3 Port Introduction

1.3.1 Rear Panel Ports

For rear panel ports, see Figure 1-3. For details, see Table 1-3.

Figure 1-3 Rear panel port

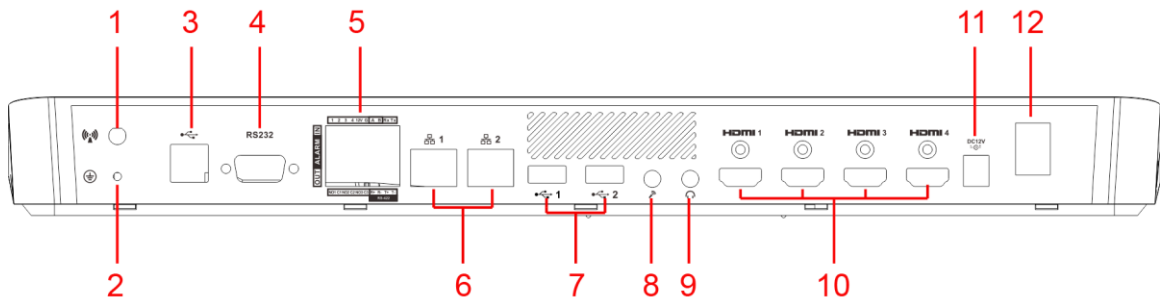


Table 1-3 Rear panel port description

Number	Name	Description
1	Wi-Fi port	Connect Wi-Fi antenna.
2	Grounding stud	Grounding.
3	USB2.0	Connect mouse and USB.
4	RS-232	Connect serial port.
5	Alarm input/output port	For details, see Table 1-4.
6	Network port	Connect the network.
7	USB3.0	Connect mouse and USB.
8	Microphone	Connect microphone.
9	Earphone	Connect earphone.
10	HDMI1-HDMI4	Connect devices with HDMI port, such as display screen.
11	Power port	Connect power cord to supply power.
12	Power button	Turn on and off the power supply.

For alarm input and output port, see Figure 1-4. For details, see Table 1-4.

Figure 1-4 Alarm input and output port

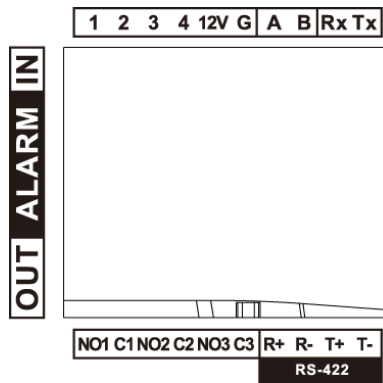





Table 1-4 Alarm input and output port description

Name	Description
1-4	Alarm input port. Reserved. The software does not support at present.
12V	12V DC 4A power.
G	Grounding.
A, B	Connect PTZ through RS-485.

Name	Description
Rx, Tx	RS-232 receiving and sending port.  Reserved. The software does not support at present.
NO1C1, NO2C2, NO3C3	3 groups of alarm output port.  Reserved. The software does not support at present.
R+, R-, T+, T-	RS-422 port.  Reserved. The software does not support at present.

1.3.2 Side Panel Port

There are three keys on the side panel, including mute key, volume up key and volume down key.


2 Start and Shutdown

2.1 Start

Connect the power, press power button, and boot up the network keyboard. The system displays login interface after it is booted up successfully. Its interface can be operated with touch screen and external mouse.

2.2 Shutdown

Step 1 Shutdown.

- Method 1: Click  at the upper right corner of main interface, and then select **Shutdown** to exit the system.
- Method 2: Press power button on the rear panel.

Step 2 After exiting the system, unplug the power cable to turn off the device.

2.3 Lock Screen


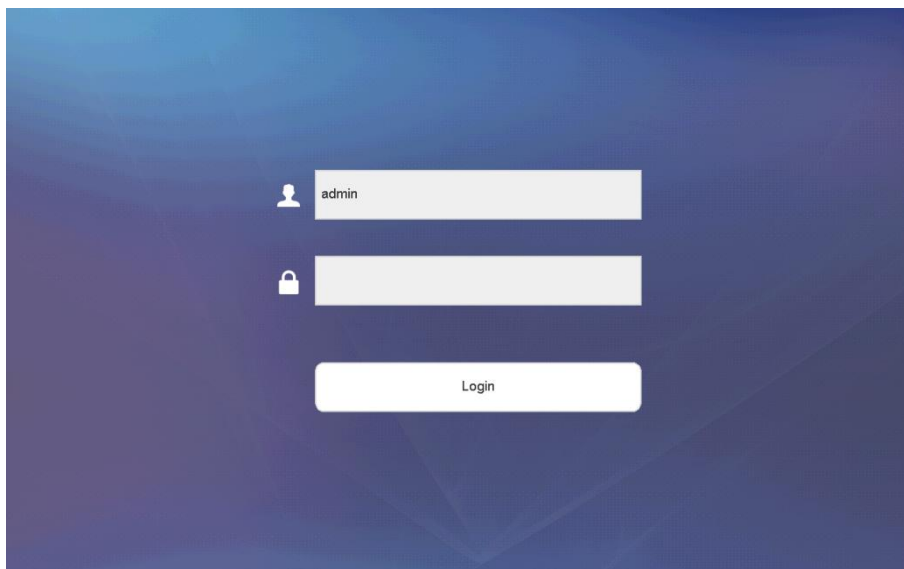
Press and hold  at the lower left corner of the keyboard. The keyboard will lock screen, and displays the login interface. See Figure 2-1.

Figure 2-1 Login interface




3 Quick Configuration

3.1 Initialization

Initialize the device for the first use.



On the login interface, press and hold  at the lower left corner of the keyboard for 15 s.

The interface prompts that "Do you want to clear all of the configurations?" Click **OK** to initialize the device.



All configurations will be cleared after initialization. Be cautious.

Step 1 Boot up the device.

The **End-User License Agreement** interface is displayed.

Step 2 Read the agreement, and select I have read and agree to all terms.

Step 3 Click **Next**.

The **Device Initialize** interface is displayed.

Step 4 Enter password and confirm password.



The password must consist of more than 8 characters, and must be the combination of numbers and letters.

Step 5 Click **OK**.

The initialization succeeds.

Step 6 Click **OK**.

The login interface is displayed.

3.2 Login Interface

After booting up, the login interface is displayed.

Step 1 Enter password. Default password of the system is admin.

Step 2 Click **Login**.

After successful login, the main interface is displayed.



Please modify admin password timely after login.

3.3 Main Interface

Main interface consists of preview, TV wall, playback, platform, settings and extension. See Figure 3-1. For details, refer to Table 3-1.

Figure 3-1 Main interface

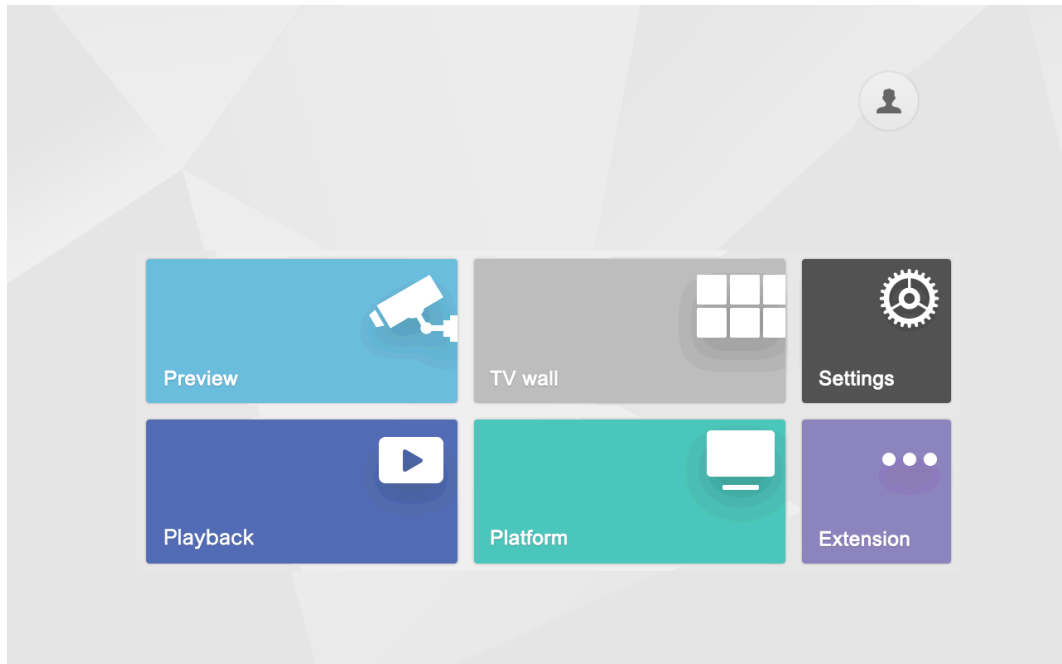


Table 3-1 Main interface description

Name	Description
Preview	Decode and preview local encoding devices and corresponding operations.
TV wall	Control the locally added decoder, matrix and TV wall.
Playback	Play back videos in local added recording device.
Platform	After connecting to the platform, network keyboard is able to control devices on the platform.
Settings	There are four modules, including device, general, account and system.
Extension	Control the devices with direct physical connection with network keyboard. At present, it only supports to control speed dome with RS-485 port.

3.4 Settings Interface

On the main interface, click **Settings** to enter the interface. See Figure 3-2. For details, refer to Table 3-2.

Figure 3-2 Settings

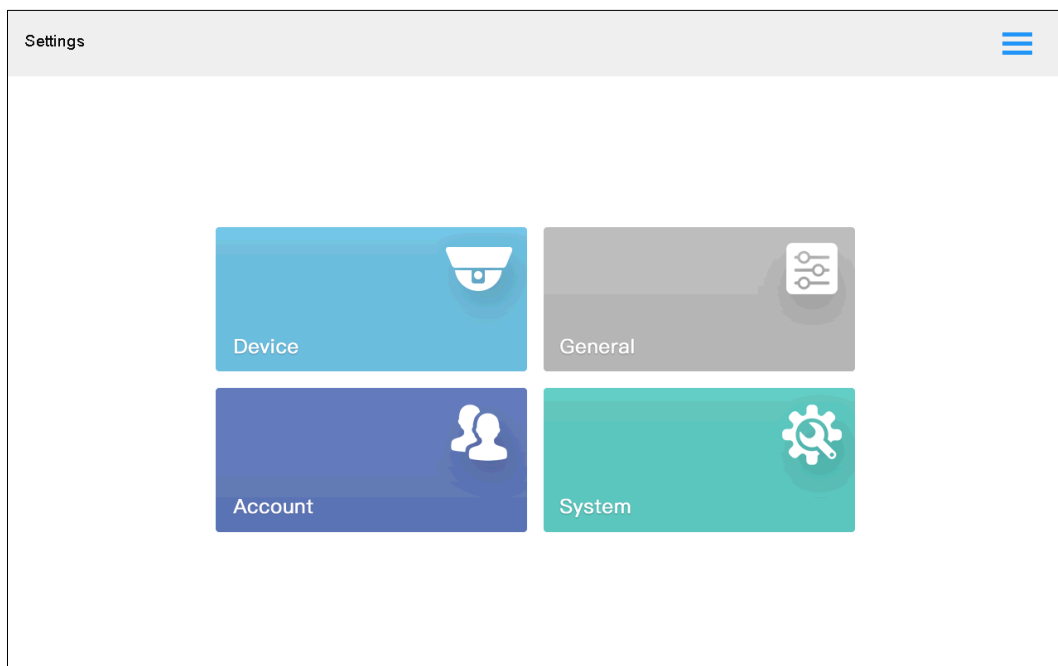



Table 3-2 Settings description

Name	Description
Device	Add, modify and delete devices; view input channel, and modify input channel number.
General	Set network, Bluetooth, serial port, date, time, hardware and MAC.
Account	Add, delete and modify role information and account information.
System	View program version and upgrade.



Click  at the upper right corner, and a navigation bar appears in the page. With navigation bar, quickly return to preview, device, settings, playback, extension and homepage interfaces.

3.5 Network Settings

It includes wired network and Wi-Fi settings.

3.5.1 Wired Network

Configure IP address and DNS server of network keyboard to connect other devices in the networking.

Before setting network parameters, ensure that the network keyboard is connected to network correctly.

Step 1 On the **Settings** interface, click **General**.

The **Network** interface is displayed. See Figure 3-3.

Figure 3-3 Network

Network

Net Mode	<input type="text" value="Multi-address"/>		▼	Default Card	<input type="text" value="Ethernet1"/>		▼
TCP Port	<input type="text" value="37777"/>			IP Version	<input type="text" value="IPv4"/>	▼	

Ethernet Card	<input type="text" value="Ethernet1"/>		▼	IP	<input type="text" value="192 . 168 . 78 . 107"/>
Subnet Mask	<input type="text" value="255 . 255 . 0 . 0"/>			Gateway	<input type="text" value="192 . 168 . 0 . 1"/>

Preferred DNS

Alternate DNS

Step 2 Set the parameters. For details, see Table 3-3.

Table 3-3 Wired network parameter description

Parameter	Description
Net mode	<p>It includes multi-address, fault tolerance and load balance.</p> <ul style="list-style-type: none"> ● Multi-address: Two Ethernet cards are used independently. During network status detection, network is deemed to be disconnected if one Ethernet card is disconnected. ● Fault tolerance: Two Ethernet cards use one IP address. Only one Ethernet card works under normal conditions; if the working Ethernet card breaks down, the other Ethernet card starts to work automatically, so as to ensure smooth network. During network status detection, network is deemed to be disconnected only when both Ethernet cards are disconnected. Both Ethernet cards shall be in the same LAN. ● Load balance: Two Ethernet cards use one IP address and work together to bear network load. Their network throughput is basically the same. If one breaks down, the other one still works normally. During network status detection, network is deemed to be disconnected only when both Ethernet cards are disconnected. Both Ethernet cards shall be in the same LAN.
Default card	When Net Mode is set to be Multi-address and multiple Ethernet cards are bound, one Ethernet card can be designated to be default working Ethernet card.
TCP port	Keep the default value.


Parameter	Description
IP version	Keep the default value.
Ethernet card	Select Ethernet card.
IP address	Enter numbers to modify IP address, set corresponding Subnet Mask and Gateway. Default IP address of network keyboard is 192.168.1.108.
Subnet mask	
Gateway	
Preferred DNS	IP address of DNS server.
Alternate DNS	IP address of alternate DNS server.

Step 3 Click **Save**.

3.5.2 Wi-Fi

On the **General** interface, click the **Wi-Fi** tab to enter the interface.

Automatic Search for Wi-Fi

Click  to enable Wi-Fi function.


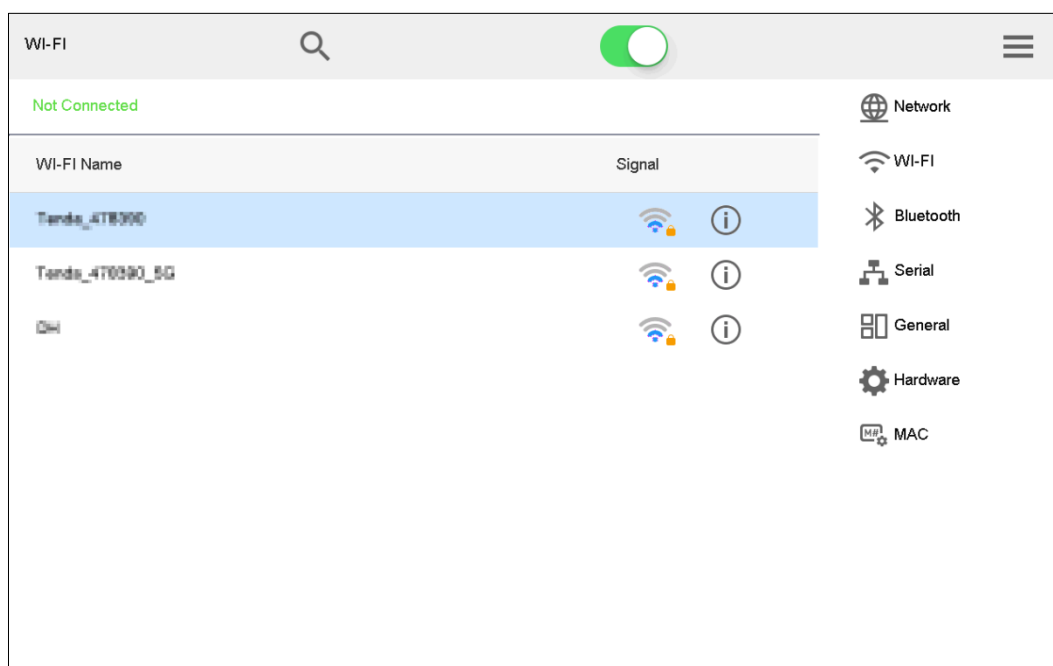
The system will search Wi-Fi automatically and display results. See Figure 3-4. Click  to refresh.

Figure 3-4 Automatic search for Wi-Fi




Wi-Fi Connection

Step 1 Double-click Wi-Fi name or signal strength.

The **Wi-Fi Connection** dialog box pops out. See Figure 3-5.

Figure 3-5 Wi-Fi connection



Step 2 Enter correct password, and then tap .

In case of successful connection, the connected Wi-Fi Name and **Connected** will be displayed at the upper-left corner.

Disconnect Wi-Fi



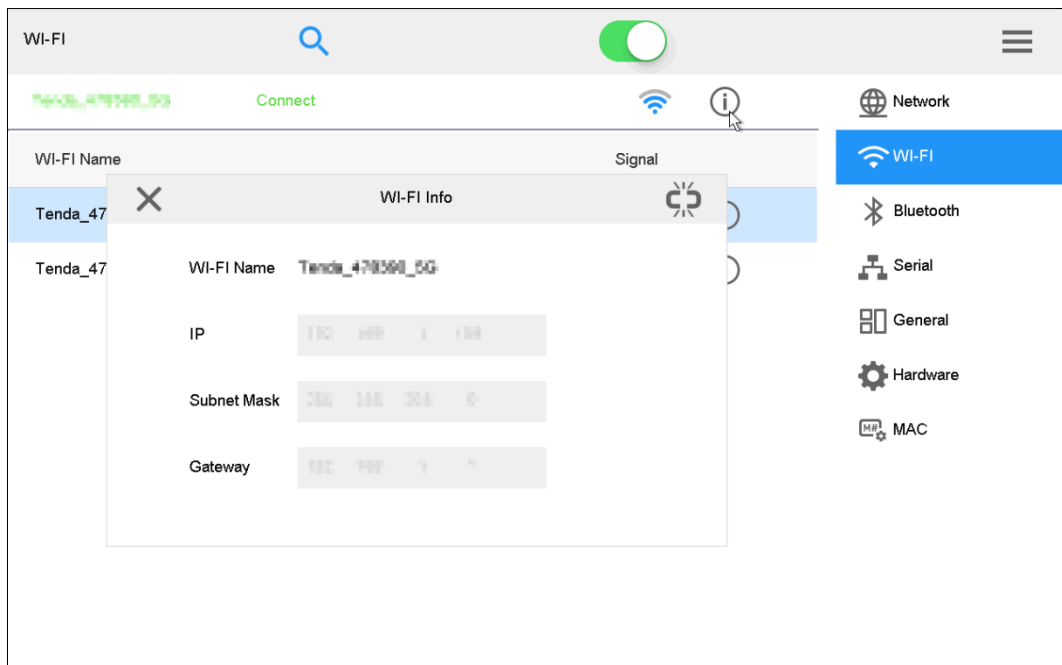
Click  on the right of connected Wi-Fi and click **Disconnect** in the pop-up dialog box. See Figure 3-6. Click  to disconnect the Wi-Fi.

Figure 3-6 Disconnect



3.6 Adding Device

It includes manual adding and auto search.


On the **Settings** interface, click **Device**. The **Device** interface is displayed. See Figure 3-7.

Figure 3-7 Device

No.	Dev Name	IP	Port	Type	State	Detail
<input type="checkbox"/>	1 123456	191.23.23.23	37777	NVR		
<input type="checkbox"/>	2 NVD	191.23.23.23	37777	NVD		
<input type="checkbox"/>	3 2G00710PAN00033	191.23.23.23	37777	IPC		
<input type="checkbox"/>	5 XVR	191.23.23.23	37777	DVR		
<input type="checkbox"/>	6 2J0274FYAK00001	191.23.23.23	37777	IPC		
<input type="checkbox"/>	7 NVR	191.23.23.23	37777	NVR		
<input type="checkbox"/>	8 2L06150FAC00001	191.23.23.23	37777	IPC		

PgUp PgDn 1/1 1 GO Delete

3.6.2 Manual Add


Step 1 On the **Device** interface, click .

The **Manual Add** dialog box is displayed.

Step 2 Select **Protocol**.

The **Protocol** interface is displayed. See Figure 3-8.

Figure 3-8 Manual add (Private)


✕
Manual Add



Protocol ▼

Start IP

End IP

Port





Channel

Figure 3-9 Manual add (ONVIF)

The screenshot shows a 'Manual Add' dialog box with the following fields and values:

- Protocol: Onvif
- Start IP: 0 . 0 . 0 . 0
- End IP: 0 . 0 . 0 . 0
- Port: 80
- Username: admin
- Password: (empty)
- Channel: 16
- Encryption:

Step 3 Set the parameters. See Table 3-4.


Table 3-4 Manual add parameter description

Parameter	Description
Protocol	Select protocol type. It supports Private and Onvif at present. With ONVIF protocol, PTZ control only supports rotation and zoom function in the fixed speed mode, rather than other auxiliary PTZ functions.
Start IP and End IP	<ul style="list-style-type: none"> Enter start IP and end IP when one IP segment is added. Enter start IP when one IP is added.
Port	Enter port number. It is usually default value.
Username and password	Enter username and password.
Channel	Enter channel quantity. means that it is enabled, while means that it is disabled. <ul style="list-style-type: none"> For example, total channel quantity of the device is 48. When it is enabled, you can set the channel quantity to display 1st channel –16th channel. When it is disabled, display the total acquired channels.
Encryption	It is supported by Onvif protocol only. <ul style="list-style-type: none"> When it is encrypted, port number is 443 by default. When it is not encrypted, port number is 80 by default. Cameras shall enable HTTPS function.

Step 4 Click .

- Click . The **Dev Import** interface is displayed. See Figure 3-10.
 - ◇ Click **USB Check** to check USB capacity.
 - ◇ Click **Dev Import** to import device files.

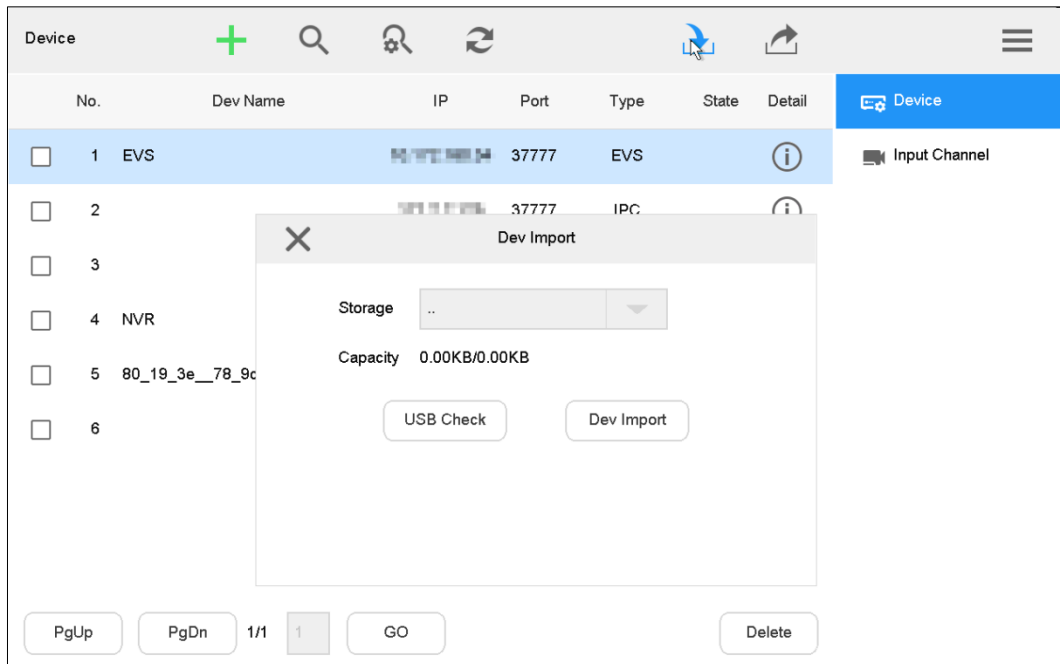Figure 3-10 Dev Import




- Click . The **Dev Export** interface is displayed. Click **USB Check** to check whether USB flash drive is inserted, and then click **Dev Export** to export files.
 - ◇ Select **Dev Export Encryption** to export encrypted files. See Figure 3-11.
 - ◇ If **Dev Export Encryption** is not selected, export unencrypted files. See Figure 3-12.

Figure 3-11 Dev Export (Encrypted)


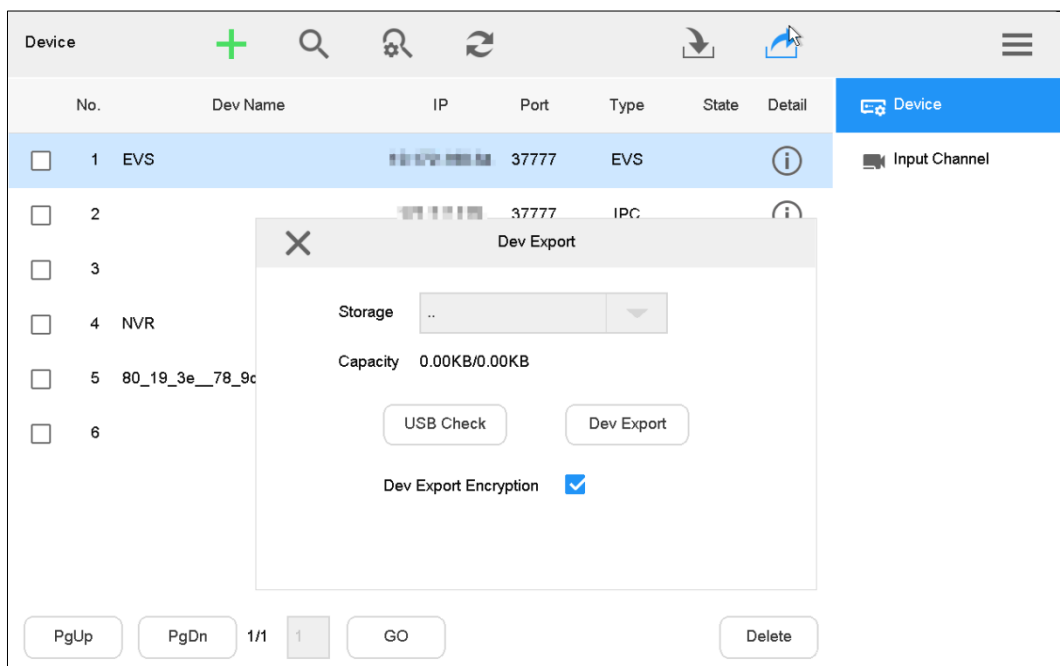




Figure 3-12 Dev Export (Unencrypted)

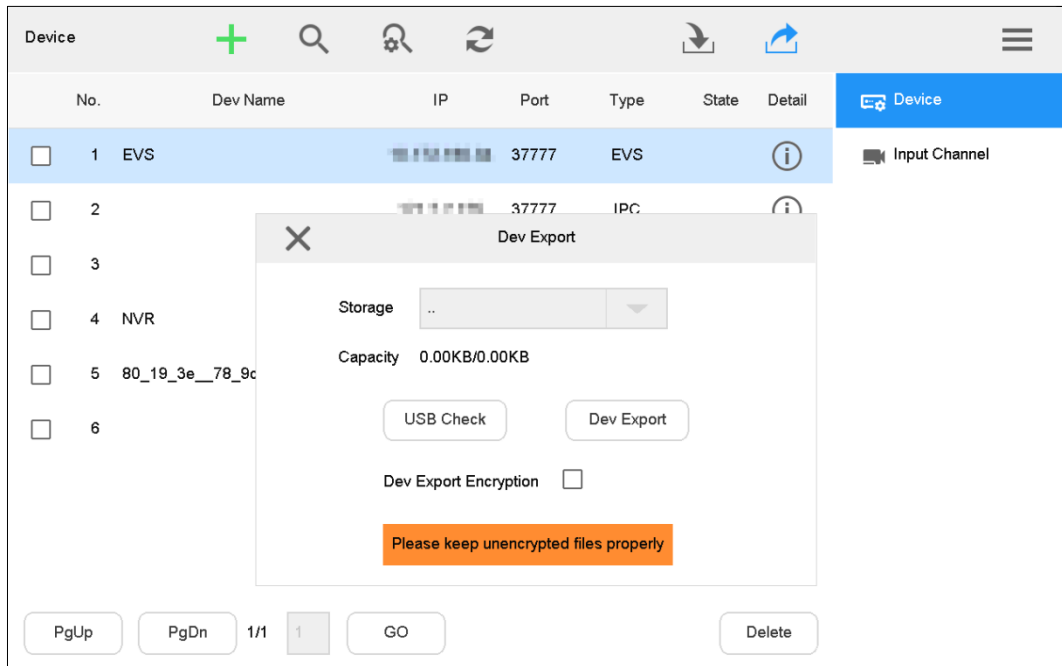


- Click  to refresh the interface.

3.6.3 Auto Search

Step 1 On the **Device** interface, click .

The auto search interface is displayed. See Figure 3-13.

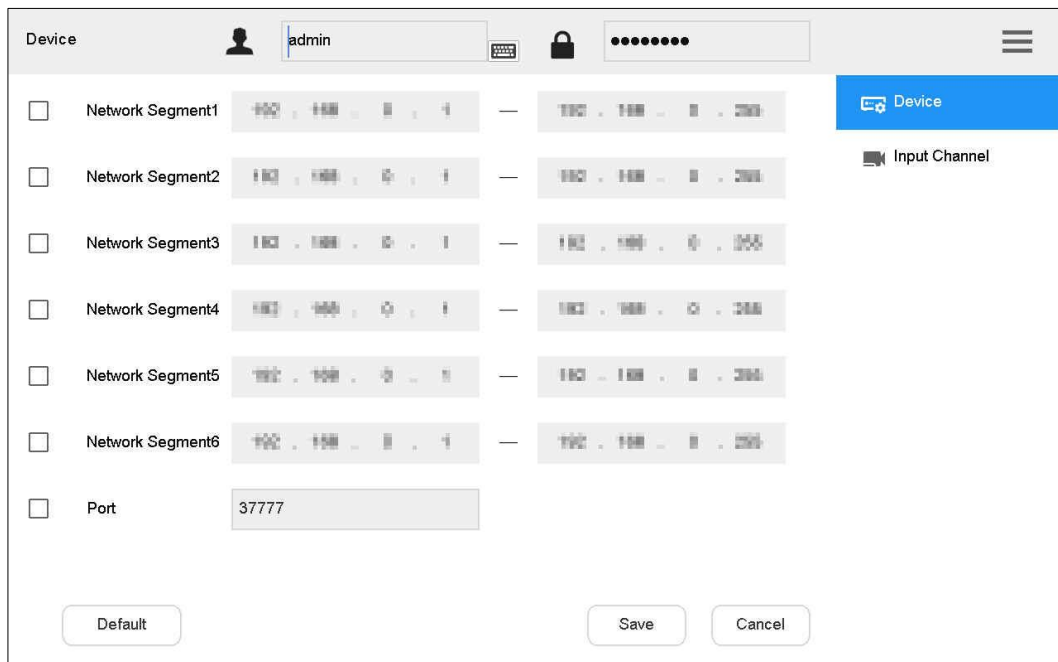Figure 3-13 Auto search setting



Step 2 Enter IP segment and select the check box.

Step 3 Click **Save**.

The auto search results are displayed. See Figure 3-14.




Alternatively, click  to view search results.

Figure 3-14 Auto search result

Device						
	+	🔍	🔧	↩	↪	☰
	Dev Name	IP	Port	State	Device	
<input type="checkbox"/>	IPC-HF8249F-FD	192.168.2.85	80		Input Channel	
<input type="checkbox"/>	IP_Camera	192.168.1.11	80			
<input type="checkbox"/>	IPC-HF8249F-FD	192.168.2.84	80			
<input type="checkbox"/>	IPC-HFW8301D	192.168.1.16	80			
<input type="checkbox"/>	IPC-HF8249F-FD	192.168.1.3	80			
<input type="checkbox"/>	HIC5621@FA-V	192.168.286.28	80			
<input type="checkbox"/>	Libra-F	192.168.286.28	8001			
<input type="checkbox"/>	NVS_4K	192.168.1.224	37777			

PgUp PgDn 1/7 1 GO None Add

Step 4 Select the check box in the line of a device, and then click  to add the device.

4 System Configurations

4.1 Preview


Preview local devices, video on wall, PTZ control, snapshot and recording.



There are 3 buttons on the side panel, including mute button, volume up button and volume down button, to adjust the volume of local preview interface.

Click **Preview** on the main interface. The **Preview** interface is displayed. See Figure 4-1. There are five modes, including HDMI1–HDMI4 and VGA5.



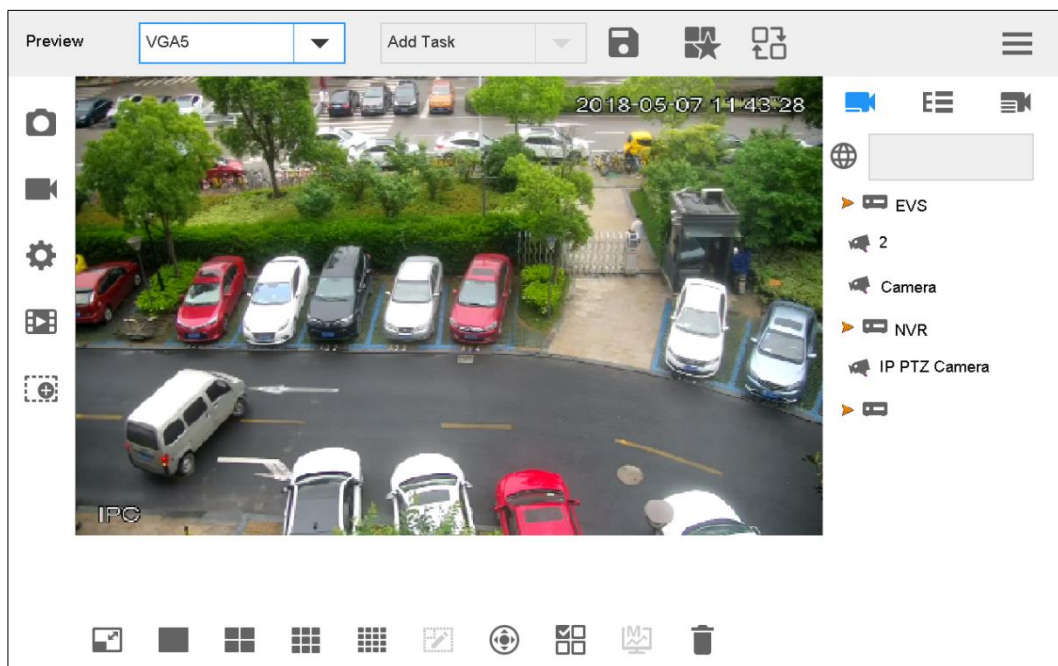










Figure 4-1 Preview



4.1.1 Icons of Preview Interface

Table 4-1 Preview interface icon description

Icon	Description	Icon	Description
	Select a task.		Add a task.
	Plan management.		Enable plan tour.
	Snapshot and screenshot, and store in flash drive.		Manual recording.
	Snapshot and recording settings.		Play back recording.

Icon	Description	Icon	Description
	Maximize and restore the window.		Single split.
	4-split.		9-split.
	16-split.		Custom split.  Local preview interface does not support custom split.
	PTZ.		Select window/all windows on the screen.  This button is used with deletion button.
	Smart stream mode.  <ul style="list-style-type: none"> Switch main and sub streams on the local preview interface. Manual switch is not needed on the local preview interface. 		Delete.

4.1.2 Channel Grouping

Step 1 On the **Preview** interface, click  .

The **Input Channel** interface is displayed. See Figure 4-2.

Figure 4-2 Input channel (1)

Input Channel					
	NO.	Channel	Ch Name	Device	IP
<input type="checkbox"/>	1	1	1	EVS	172.20.0.180

PgUp PgDn 1/1 1 GO + - Group Return

Step 2 Click .

The **Add channel** interface is displayed. See Figure 4-3.

Figure 4-3 Add channel

Add channel					
	NO.	Channel	Ch Name	Device	IP
<input type="checkbox"/>	1	1	IPC2	172.20.0.180	172.20.0.180
<input type="checkbox"/>	2	1	IPC	172.20.0.181	172.20.0.181
<input type="checkbox"/>	3	1	IPC	172.20.0.182	172.20.0.182
<input type="checkbox"/>	4	1	IPC	172.20.0.183	172.20.0.183
<input type="checkbox"/>	5	1	500W+Ration+MD+IVS+SD	NVR	172.20.0.200
<input type="checkbox"/>	6	2	500W+HDR+MD+IVS+AUDIO+SI	NVR	172.20.0.200
<input type="checkbox"/>	7	3	500W+20fps+MD+IVS+Audio 10k	NVR	172.20.0.200
<input type="checkbox"/>	8	4	400W+30fps+MD+IVS 107	NVR	172.20.0.200

PgUp PgDn 1/3 1 GO OK Return

Step 3 Select the channels, and then click **OK**.

The added channels are displayed on the **Input Channel** interface.

Step 4 Click **Group**.

The **Channel grouping** interface is displayed. See Figure 4-4.

Figure 4-4 Channel grouping

NO.	Channel	Ch Name	Device	IP
<input type="checkbox"/> 8	4	400W+30fps+MD+IVS 107	NVR	192.168.1.107

Step 5 Select **Input group**, and then configure **Group name** and **Time**.

Step 6 Select the channels that you need.



Click **+** on the **Channel grouping** interface to add channels.

Step 7 Click **Save** to save the channel group.

4.1.3 Video on Wall

Step 1 On the **Preview** interface, select HDMI1–HDMI4 or VGA5 in drop-down list.

Step 2 Select video source on the right, drag it onto TV wall or double-click the video source.

Quick Video on Wall (Optional)










- Click , and a dialog box pops up. See Figure 4-5. Enter a number (such as 1) + , so video of channel 1 will be displayed on wall quickly.
- Click , and a dialog box pops up. See Figure 4-5. Enter channel group number (such as 123) + , so videos of the channel group No. 123 will be displayed on wall quickly.





Figure 4-5 Short-cut

7	8	9
4	5	6
1	2	3
	0	
		




Refer to "4.6.1.2 Input Channel" to inquire **Number** in the input channel.

Relevant operation

- Click , and channel with the previous number will be displayed on wall. For example, current number is 123, click , and No. 122 channel will be displayed on the wall.
- Click , and channel with the next number will be displayed on wall. For example, current number is 123, click , and No. 124 channel will be displayed on the wall.




Channel group does not support  and  at present.

Quick Search for Added Device (Optional)

In the input box after , enter keywords of the added device to search for it.

Click the pop-up keypad. See Figure 4-6. Press Shift key to switch the input method.

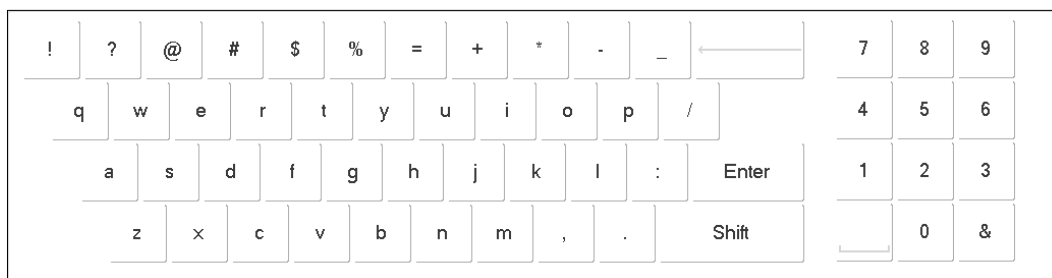

Figure 4-6 Keypad



Maximize and Restore Window



Click  to maximize and restore the window.


Single, 4, 9, 16 and Custom Split

Click , , ,  or  respectively, representing single, 4, 9, 16 or custom split.

Clearing Video Source

Step 1 Select a window.

- Click  to select the focused window.
- Click again and the icon turns into  to select all windows within present operating screen.

Step 2 Click .

Smart Stream Mode

- Main stream goes on wall in case of single split.
- Sub-stream goes on wall in case of 9-split and 16-split.
- In case of 4-split, with HDMI1 and HDMI2 preview mode, main stream goes on wall. In other preview modes, sub-stream goes on wall.

4.1.4 PTZ Control


Please refer to "4.5 PTZ Control" for details.

4.1.5 Scheme Management

If you need to view one video channel frequently, save it as a scheme task for convenient calling. Maximum 16 tasks can be configured.


4.1.5.1 Adding Task

Step 1 On the **Preview** interface, select video according to actual needs. For example, play the videos of channel 1 and channel 2.

Step 2 Click  on the **Preview** interface.

The **Add Task** interface is displayed. See Figure 4-7.

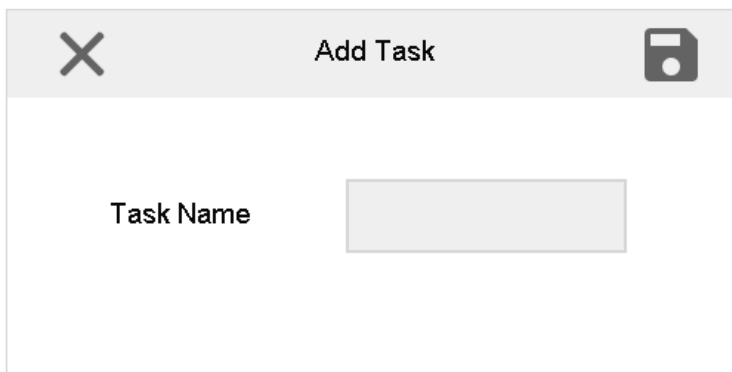Figure 4-7 Add Task




Step 3 Enter task name.

Step 4 Click  to save the task.

4.1.5.2 Viewing Task

Select task name from **Add Task** drop-down list. See Figure 4-8. You can view the task.

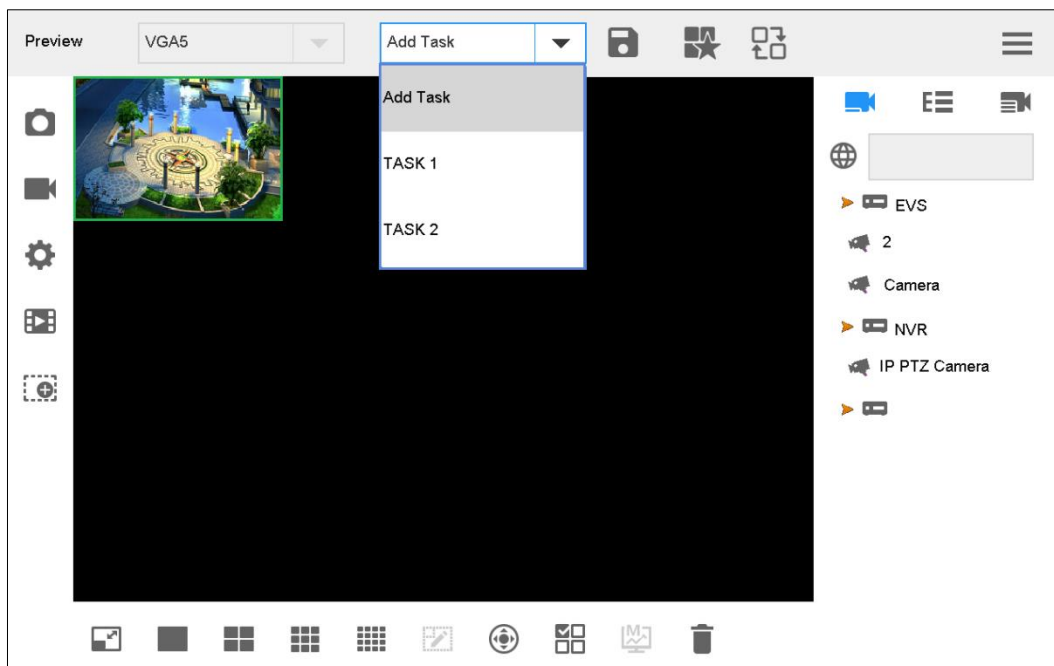Figure 4-8 View task





4.1.5.3 Deleting the Scheme

Step 1 Click .

The **Scheme Config** interface is displayed. See Figure 4-9.

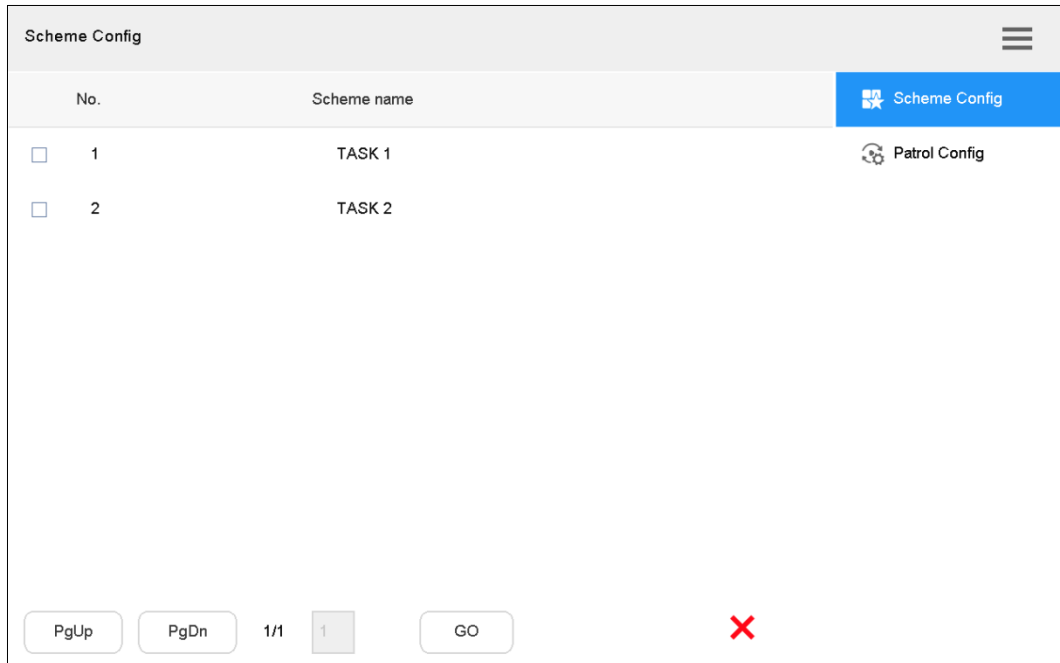Figure 4-9 Scheme Config



Step 2 Select the scheme that you want to delete, and then click  to delete it.


4.1.6 Patrol Config

Carry out patrol according to the sequence of adding scheme to the patrol.

Step 1 On the **Scheme Config** interface, click **Patrol Config**.

The **Patrol Config** interface is displayed. See Figure 4-10.

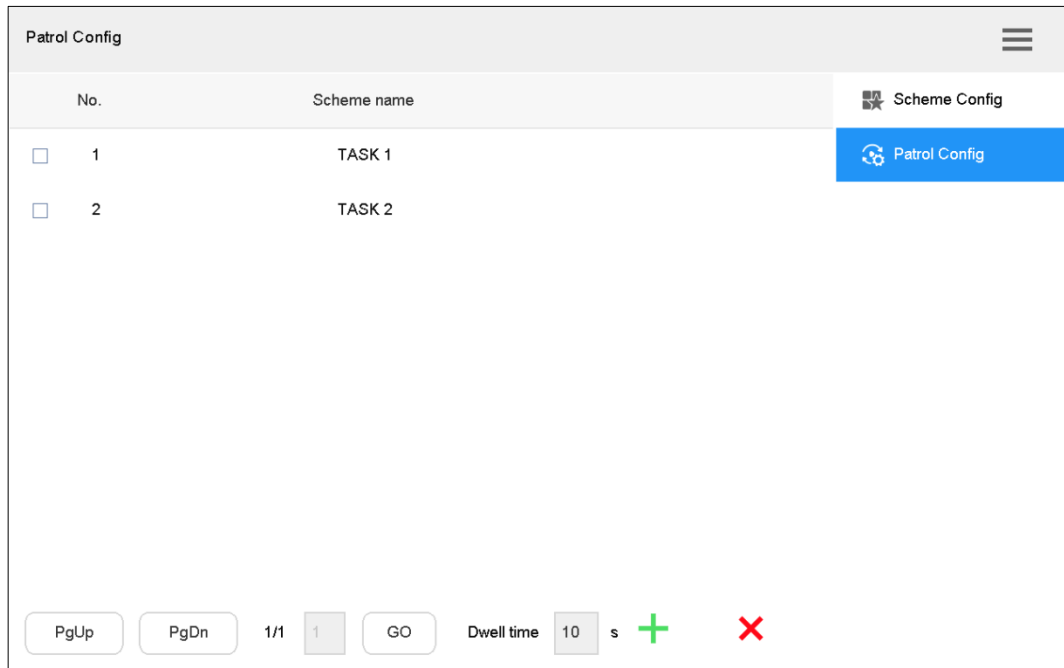
Figure 4-10 Patrol Config



Step 2 Click .

The **Scheme Config** interface is displayed. See Figure 4-11.

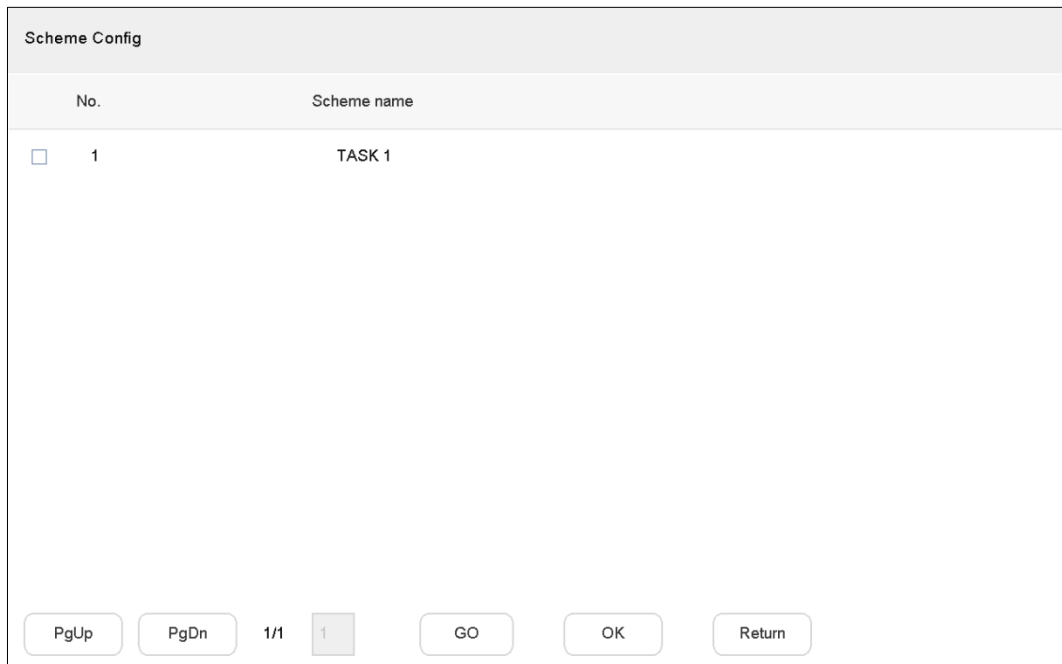Figure 4-11 Scheme Config



Step 3 Select the scheme, and click **OK**.




- Scheme can only be added one by one.
- If less than 2 schemes are added, patrol is not available.

Step 4 Click **Return** to configure **Patrol Time**.

Relevant Operation

- On the **Preview** interface, click  to enable patrol. See Figure 4-12.

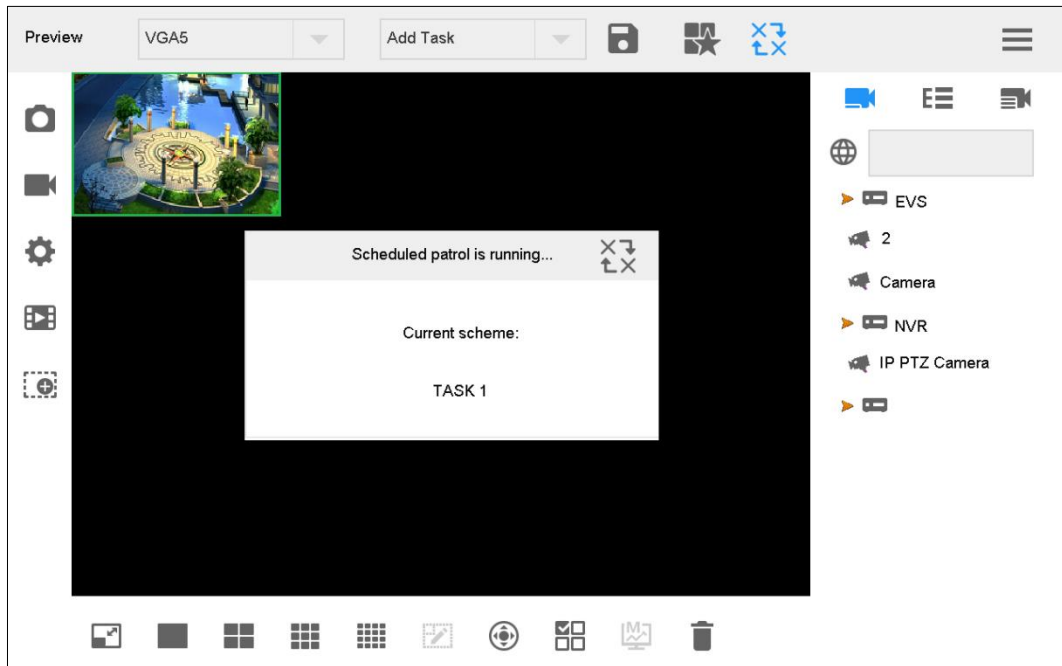Figure 4-12 Patrol




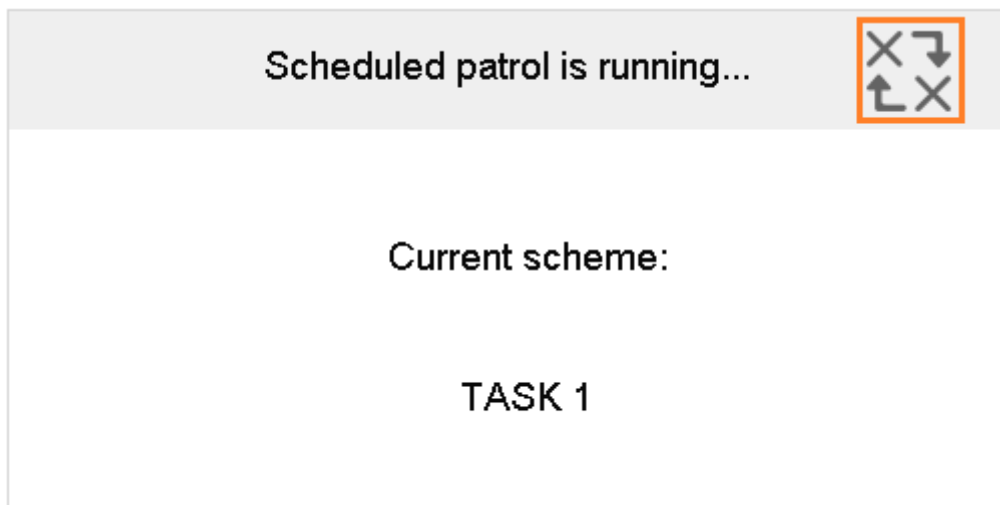
- Click  to stop the patrol. See Figure 4-13.

Figure 4-13 Stop patrol



4.1.7 Snapshot

Step 1 Insert the USB flash drive into network keyboard.

Step 2 On the **Preview** interface, click  .

The **Snap & Record** interface is displayed.

Step 3 Set the snapshot storage path. For details, refer to "4.1.9 Snapshot and Recording Settings."

Step 4 On the **Preview** interface, click  .



You can take a snapshot with joystick buttons.

4.1.8 Recording

Step 1 Insert the USB flash drive into network keyboard.

Step 2 On the **Preview** interface, click .

The **Snap & Record** interface is displayed.

Step 3 Set the recording storage path. For details, refer to "4.1.9 Snapshot and Recording Settings."

Step 4 On the **Preview** interface, click .


4.1.9 Snapshot and Recording Settings

Store in USD Flash Drive

Step 1 On the **Preview** interface, click .

The **Snap & Record** interface is displayed. See Figure 4-14.

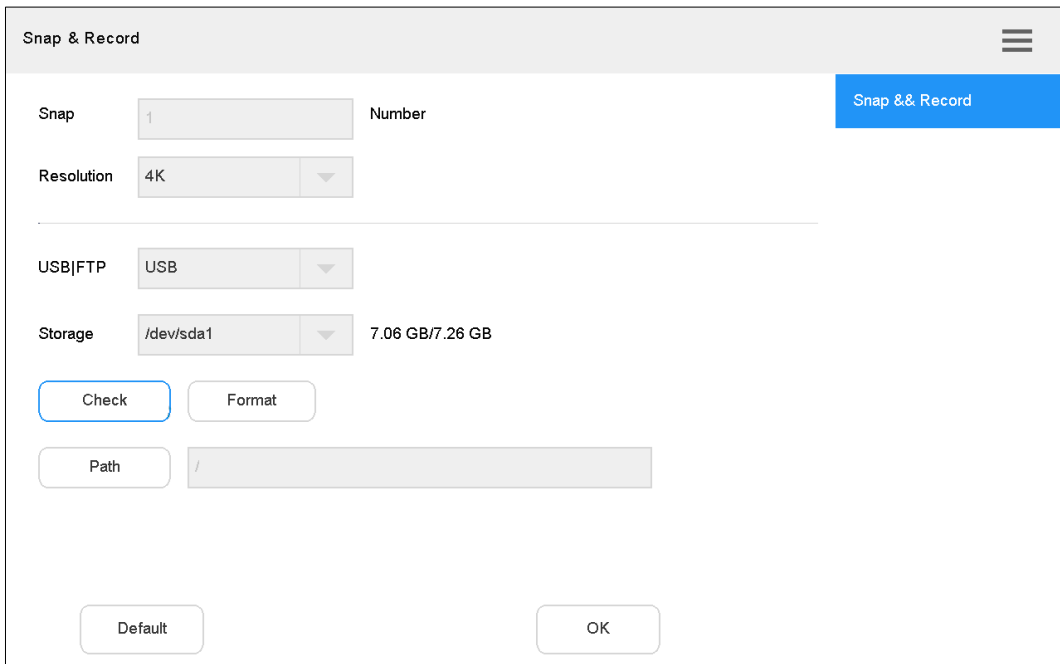Figure 4-14 Snap & Record



Step 2 Insert USB flash drive into network keyboard.

Step 3 Click **Check**.

The system displays general storage disk name and device capacity.

Step 4 Set the parameters. See Table 4-2.

Table 4-2 Snap & record parameter (USB flash drive)

Parameter	Description
Snap	It supports only 1 snapshot at present.




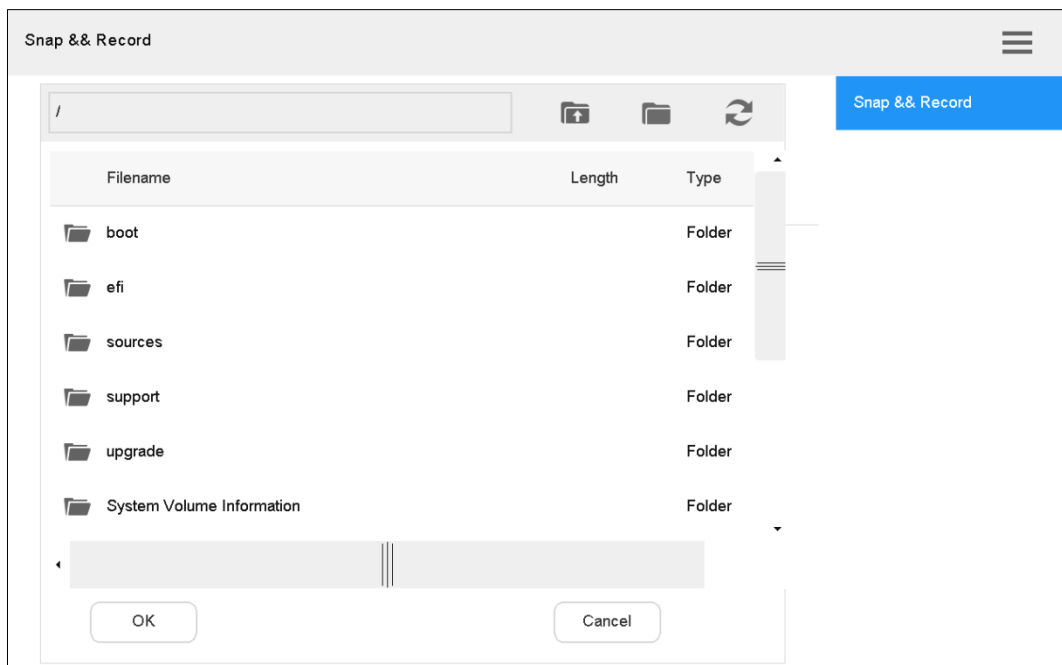
Parameter	Description
Resolution	<p>Select resolution.</p> <ul style="list-style-type: none"> When video resolution is > the set resolution, snapshot image adopts the set resolution. When video resolution is < the set resolution, snapshot image adopts actual video resolution.
USB FTP	USB is enabled for storage by default.
Format	Click this button to format USB flash drive.
Path	<p>Click this button to select snapshot storage path. See Figure 4-15.</p> <ul style="list-style-type: none"> Click  to return to the upper level of folder. Click  to create a folder. Click  to refresh the interface.

Figure 4-15 Snap storage



Step 5 Click **OK**.

Store in FTP

Step 1 On the **Preview** interface, click  .

The **Snap & Record** interface is displayed. See Figure 4-16.

Figure 4-16 Snap & Record

Step 2 In the **USB|FTP** drop-down list, select **FTP**.
The **FTP** interface is displayed. See Figure 4-17.

Figure 4-17 FTP

Step 3 Click to enable FTP storage.

Step 4 Configure parameters. For details, see Table 4-3.

Table 4-3 Snap & record parameter (FTP)

Parameter	Description
Snap	It supports only 1 snapshot at present.

Parameter	Description
Resolution	Select resolution. <ul style="list-style-type: none"> When video resolution is > the set resolution, snapshot image adopts the set resolution. When video resolution is < the set resolution, snapshot image adopts actual video resolution.
USB FTP	Select FTP.
Address	Set FTP address.
User Name	<ul style="list-style-type: none"> FTP user name.
Password	<ul style="list-style-type: none"> FTP login password.
Directory	<ul style="list-style-type: none"> Set directory name.
Test	<ul style="list-style-type: none"> Click this button to test whether FTP is available.

Step 5 Click **OK**.


4.1.10 Playback of Recorded Videos

This function is supported by NVR devices that have recorded videos, rather than IVSS device.

Step 1 On the **Preview** interface, click .

The **Playback** interface is displayed. See Figure 4-18.

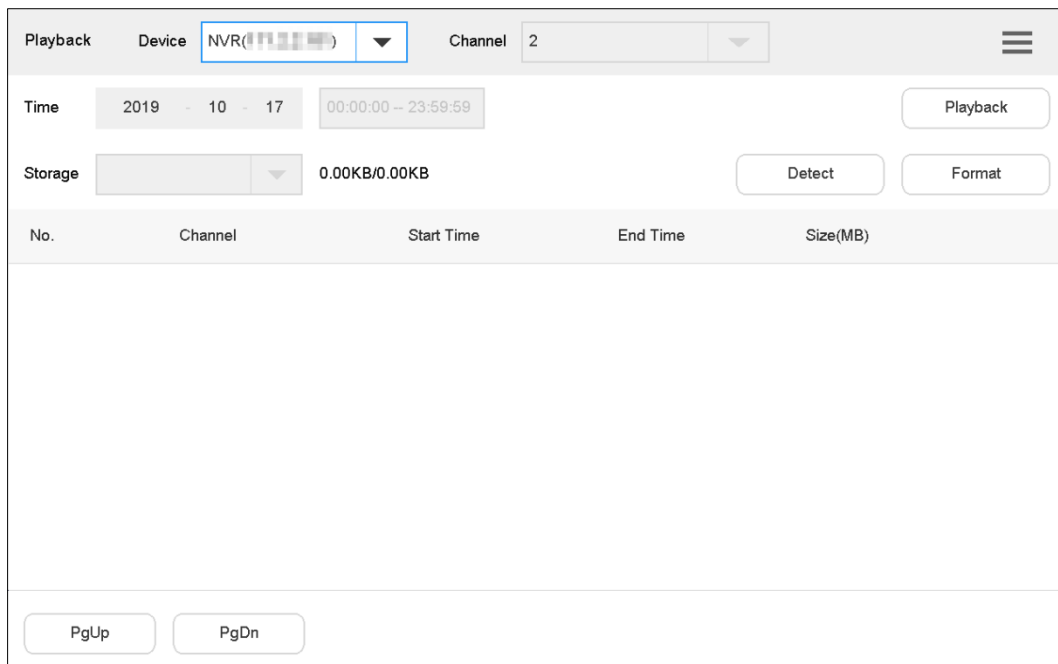Figure 4-18 Playback




The screenshot shows the Playback interface with the following elements:

- Device:** NVR(11111111) (selected)
- Channel:** 2 (selected)
- Time:** 2019 - 10 - 17, 00:00:00 - 23:59:59
- Storage:** 0.00KB/0.00KB
- Buttons:** Playback, Detect, Format
- Table Headers:** No., Channel, Start Time, End Time, Size(MB)
- Bottom Buttons:** PgUp, PgDn

Step 2 Select playback device and channel, configure time and click **Playback**.

The system starts to play back recorded videos. See Figure 4-19.

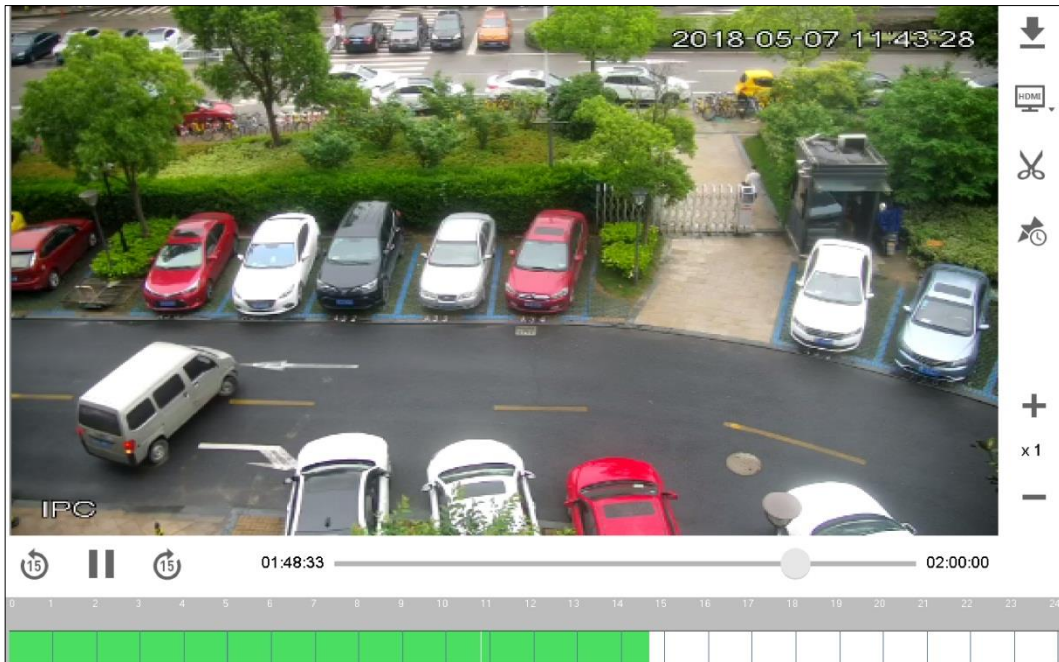Figure 4-19 Playback of recorded video




4.2 Playback

Play back the recorded videos.

Step 1 On the main interface, click **Playback**.

The **Playback** interface is displayed. See Figure 4-20.

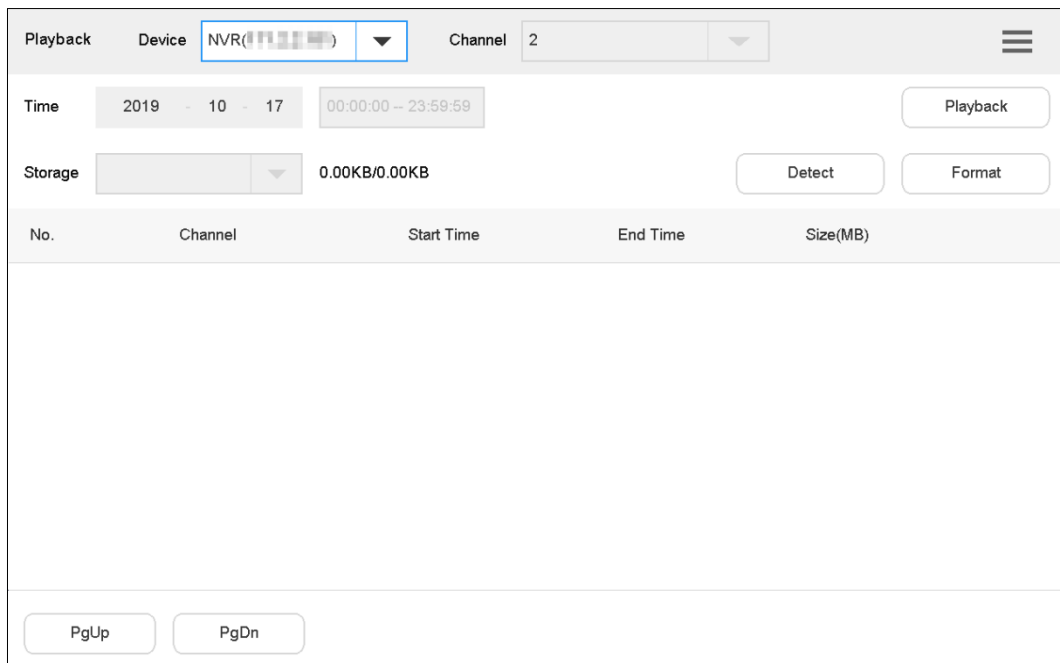
Figure 4-20 Playback (2)



Step 2 Select playback device and channel, configure time and click **Playback**.

The system starts to play back recorded videos. See Figure 4-21.

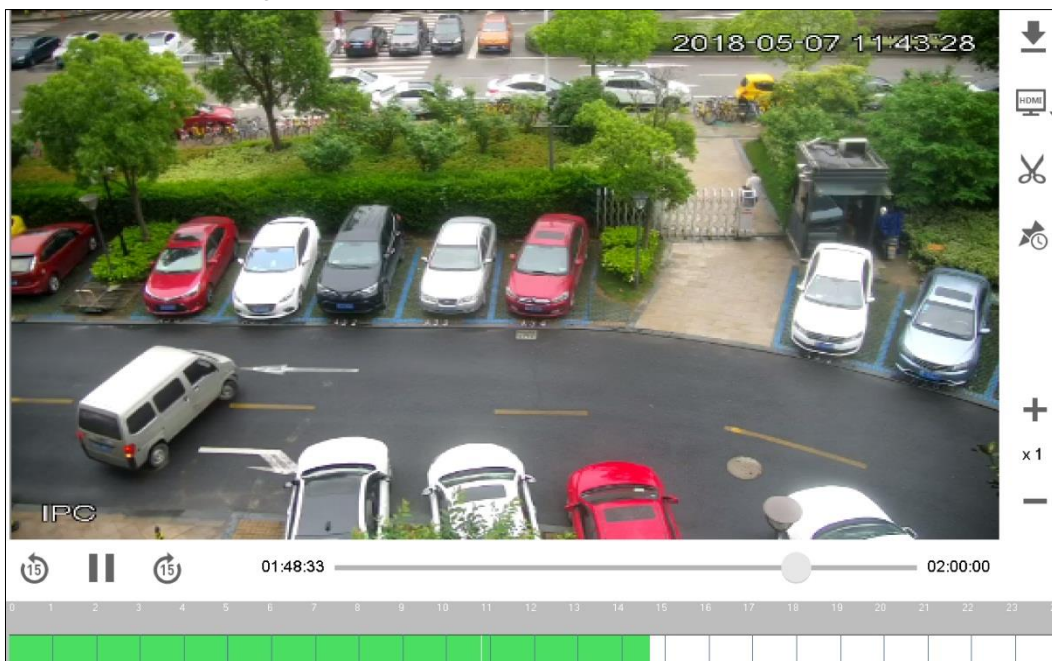Figure 4-21 Playback of recorded video



During playback, you can control the playback speed, download the video and display the video on the TV wall. For details, see Table 4-4.

Table 4-4 Playback icon description

Icon	Description	Icon	Description
	Download the video to USB flash drive.		With HDMI port, display the video on TV wall and then view the video.
	Clip the video and save it to USB flash drive. The playback is paused during clipping.		Configure the play time.
	During playback, click this icon to start fast forward mode, such as x2 and x4.		During playback, click this icon to slow down the play, such as x1/2 and x1/4.
	Play/pause During playback, click this icon to play or pause.		Go back to previous 15s/Fast forward 15s and then play.
	Click green area at the bottom to adjust play period.	—	—

Step 3 Click on the network keyboard panel.

The system returns to **Playback** main interface. See Figure 4-22.

Figure 4-22 Playback (3)

The screenshot shows a playback control interface. At the top, there are dropdown menus for 'Device' (EVS(HL/CL/MS...)) and 'Channel' (1(1)). Below these are fields for 'Time' (2019 - 10 - 16, 00:00:00 - 23:59:59) and 'Storage' (0.00KB/0.00KB). There are buttons for 'Playback', 'Detect', and 'Format'. A table lists playback items with columns for No., Channel, Start Time, End Time, and Size(MB). At the bottom, there are 'PgUp' and 'PgDn' buttons.

No.	Channel	Start Time	End Time	Size(MB)
1	1(1)	19-10-16 00:00:00	19-10-16 01:00:01	1051.69MB
2	1(1)	19-10-16 01:00:01	19-10-16 02:00:01	1051.25MB
3	1(1)	19-10-16 02:00:01	19-10-16 03:00:01	1051.69MB
4	1(1)	19-10-16 03:00:01	19-10-16 04:00:00	1051.00MB
5	1(1)	19-10-16 04:00:00	19-10-16 05:00:00	1051.69MB
6	1(1)	19-10-16 05:00:00	19-10-16 06:00:00	1051.69MB



- Click **Detect** to search external USB flash drive.
- Click **Format** to format the storage device, and all files in the storage device will be cleared. Please be careful.

4.3 TV Wall



In platform TV wall mode, it does not support calling with F1 number.

Control decoder, matrix and TV wall.

Devices can be added only through WEB client. For details, refer to "4.3.1 Adding TV Wall through Matrix Web Interface" and "4.3.2 Adding TV Wall through Decoder Web Interface."

There are two ways to add TV wall on the web interface:

- Matrix web interface (support multiple TV walls).
- Decoder web interface (only one TV wall).



The display control baseline version (VMP and NVD) supports multiple TV walls.

TV walls can be added in TV wall configuration of keyboard. For details, see "4.3.8 Configuring TV Wall."

4.3.1 Adding TV Wall through Matrix Web Interface

This part takes matrix web interface as an example.



- This part is operated at matrix web interface.
- For more specific configurations, refer to matrix user's manual.

- This part also applies to TV wall device.

Step 1 Enter IP address of matrix at address bar of the browser, and then press Enter. Matrix login interface is displayed. See Figure 4-23.

Figure 4-23 Matrix login interface

Step 2 Enter username and password.

Step 3 Click **Login** to enter web interface.

4.3.1.1 Adding Network Signal

Search or add network signals manually.

Step 1 Select **Setup > Signal Management > Network Signal**.

The **Network Signal** interface is displayed. See Figure 4-24.

Figure 4-24 Registration

No.	IP Address	Port	Device Name	Manufacturer	Type
1	192.168.1.1	443	TV WALL	Onuf	ONUF

Step 2 Add network signals.


- Click **Device Search** to show search results, select the needed device and then click **Add**.
- Click **Add** to set parameters in the pop-up dialog box.

4.3.1.2 Signal Group

Select **Setup > Signal Management > Signal Group**.

The **Signal Group** interface is displayed. See Figure 4-25. Devices in the device list can be added to group list.

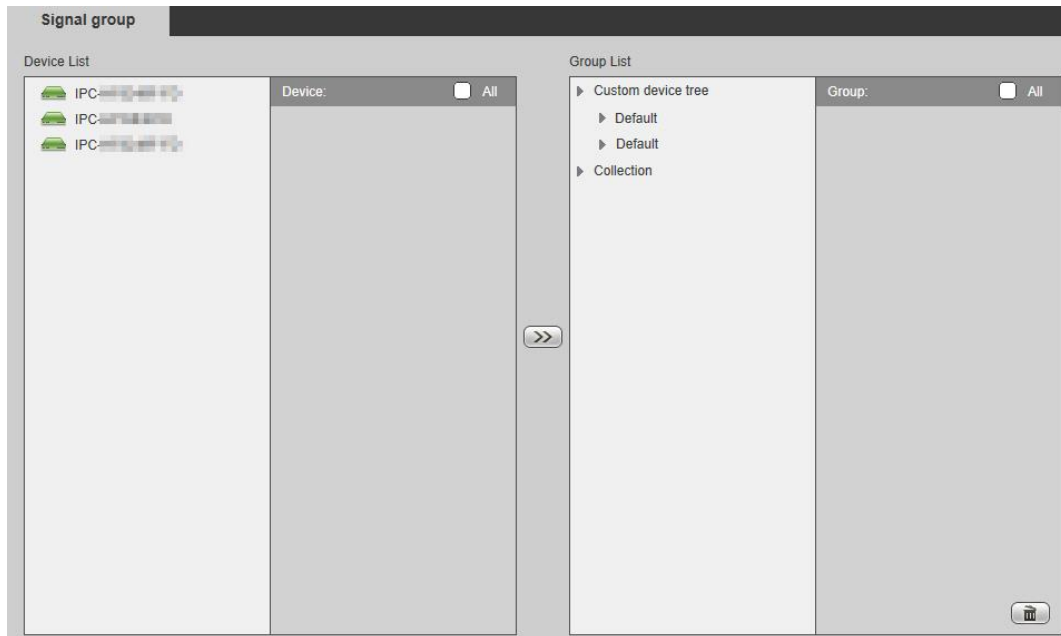Figure 4-25 Signal group




4.3.1.3 Adding Video Wall

Step 1 Select **Setup > Display Management > Video Wall Setup**.

The **Video Wall Setup** interface is displayed. See Figure 4-26.

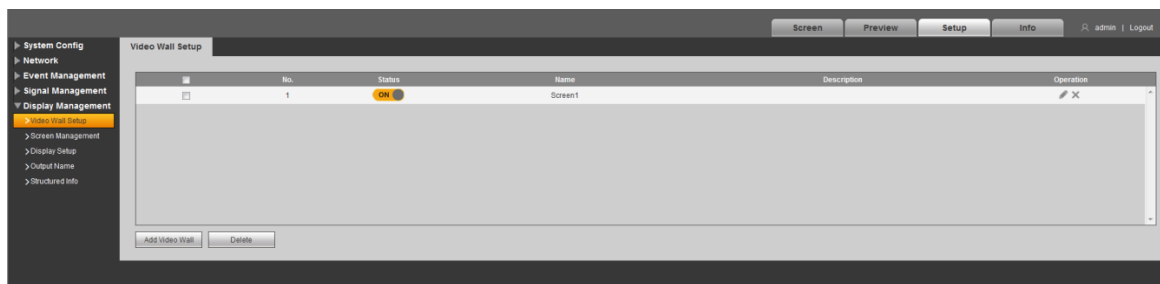Figure 4-26 Video wall setup



Step 2 Click Add Video Wall to add.

4.3.2 Adding TV Wall through Decoder Web Interface


This part takes decoder web interface as an example.



- This part is operated on the decoder web interface.
- For more specific configurations, refer to decoder user's manual.

Step 1 Enter IP address of decoder at address bar of the browser, and press Enter to enter decoder login interface. See Figure 4-27.

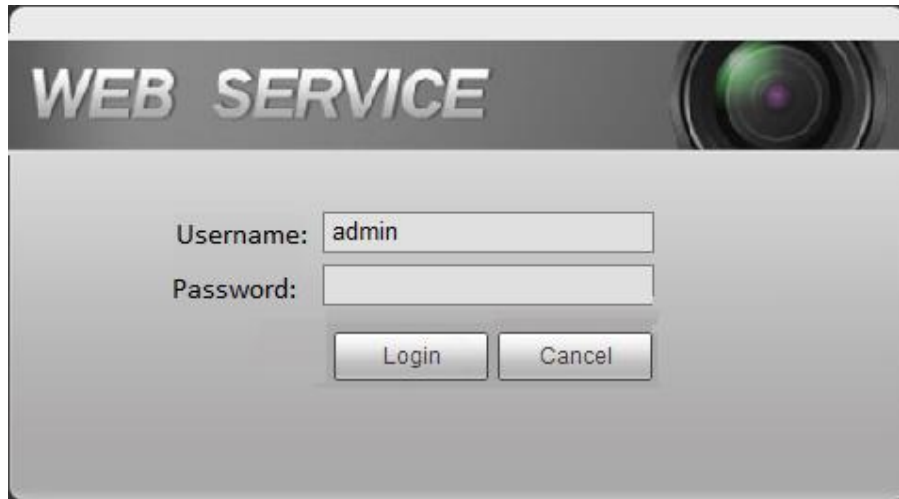Figure 4-27 Login interface of decoder



Step 2 Enter username and password.

Step 3 Click **Login** to enter web interface.


4.3.2.1 Adding Remote Device

Search or add network signals manually.

Step 1 Select Settings > Remote Device.

The **Remote Device** interface is displayed. See Figure 4-28.

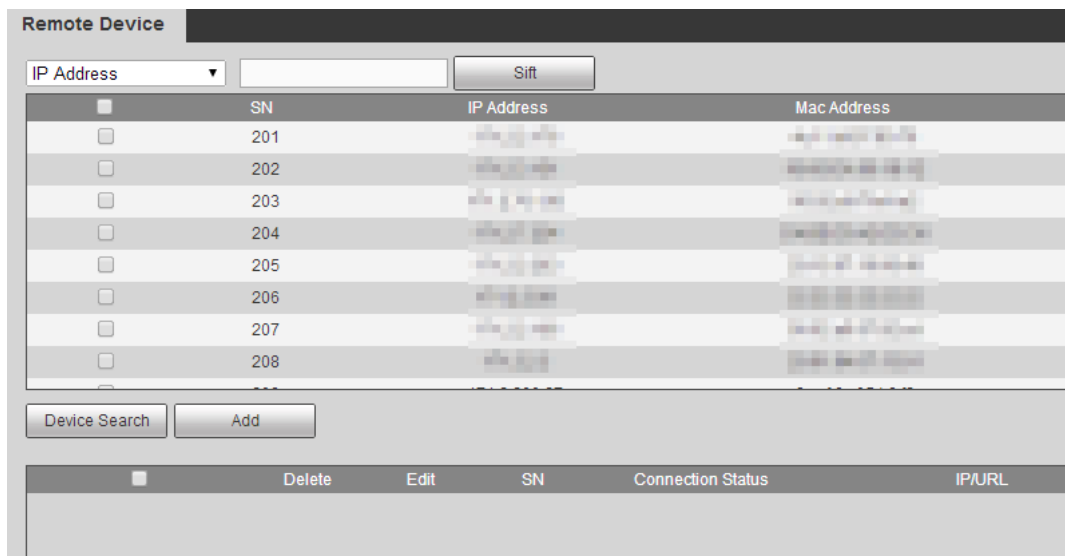Figure 4-28 Remote device



Step 2 Add a remote device.

- Click **Device Search** to show search results, select the needed device and click **Add**.
- Click **Add** to set parameters in the pop-up dialog box.

4.3.2.2 Editing Decoder TV Wall

Click the merged screen to edit TV wall.

4.3.3 Adding Device

Add TV wall, matrix and decoder device at the network keyboard. Refer to "3.6 Adding Device" for details.


4.3.4 Video on Wall

Step 1 On the main interface, click **TV Wall**.

The **TV Wall** interface is displayed.

Step 2 In the pull-down list, select TV wall. See Figure 4-29.

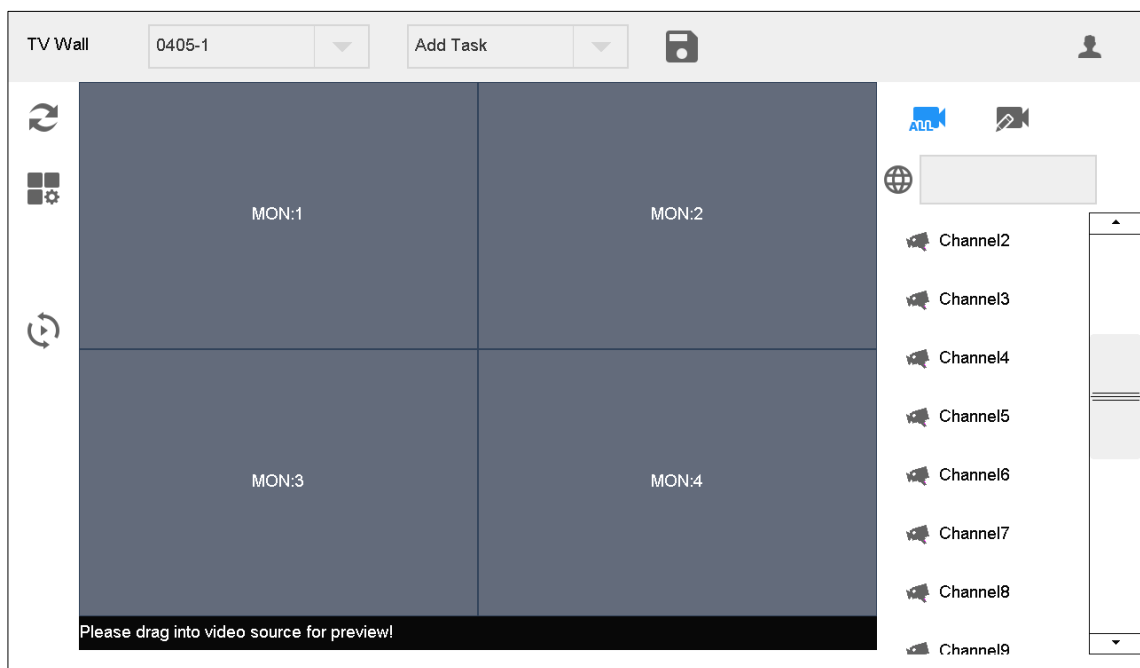
Figure 4-29 TV wall (screen)



Step 3 Click one screen in Figure 4-29, such as MON:1.

Step 4 Split the screen.




Click , enter the line and column numbers, and customize the splicing. Maximum splicing is 20 × 20.


Step 5 Drag video source on the right onto TV wall.

The system displays relevant information. See Figure 4-30.

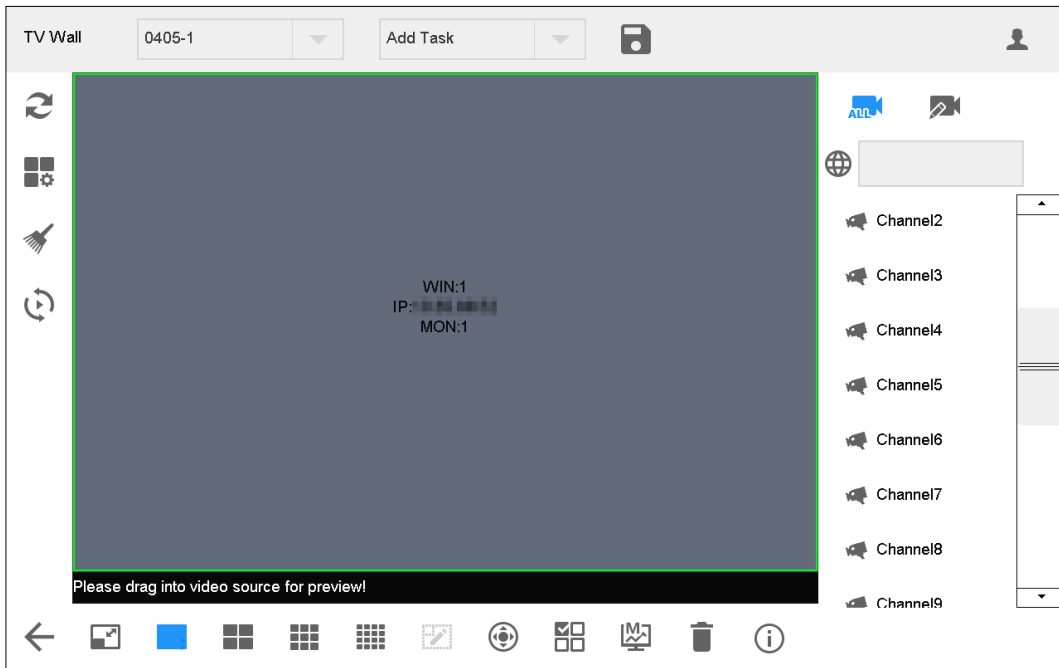Figure 4-30 TV wall (screen information)




Switching Main and Sub-stream

Click  to switch main and sub-stream. M represents main stream, while S represents sub-stream.



Please switch the stream, and then drag the video onto the TV wall.









Clearing Screen
















Click  to clear screen.

4.3.5 TV Wall Icon Description

Refer to Table 4-5 for icon description.

Table 4-5 Icons of TV wall interface

Icon	Description	Icon	Description
	Refresh		Configure TV wall
	Clear screen		Return
	Maximize and restore the window		Single split
	4-split		9-split

Icon	Description	Icon	Description
	16-split		Custom split
	PTZ		Select one window or all windows on the screen.  This button is used with deletion button.
	Switch main and sub-stream. M represents main stream, while S represents sub-stream.		Delete
	Detailed information about channel.		Display the video on the wall quickly.  Refer to "4.1.3 Video on Wall" for details.
	Display all input channels.		Display signal group.  Refer to "4.3.1.2 Signal Group" for new signal group.
	Start or stop the scheme patrol.  Please configure patrol task on the decoder. This is just a switch.	-	-

4.3.6 PTZ Control

Please refer to "4.5 PTZ Control."

4.3.7 Adding Tasks


Frequently-used operations can be saved as tasks, in order to call them quickly. Maximum 16 tasks can be created.

Step 1 On the **TV Wall** interface, carry out a series of operations according to actual needs. For example, split the screen into 16 parts.

Step 2 Click .

The **Add Task** dialog box will pop out. See Figure 4-31.

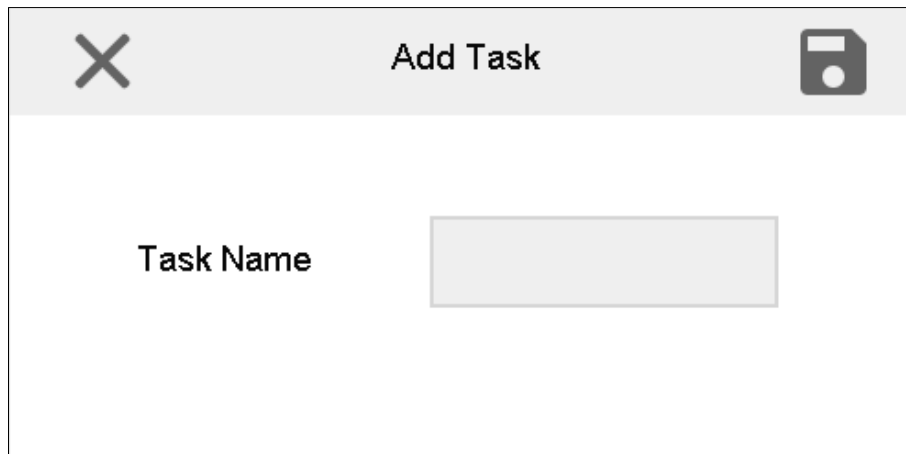Figure 4-31 Add task



Step 3 Enter task name.

Step 4 Click .

4.3.8 Configuring TV Wall




On the **TV Wall** interface, click   to enter **TV Wall** interface. See Figure 4-32.

Figure 4-32 Configure TV wall



Enable TV Wall

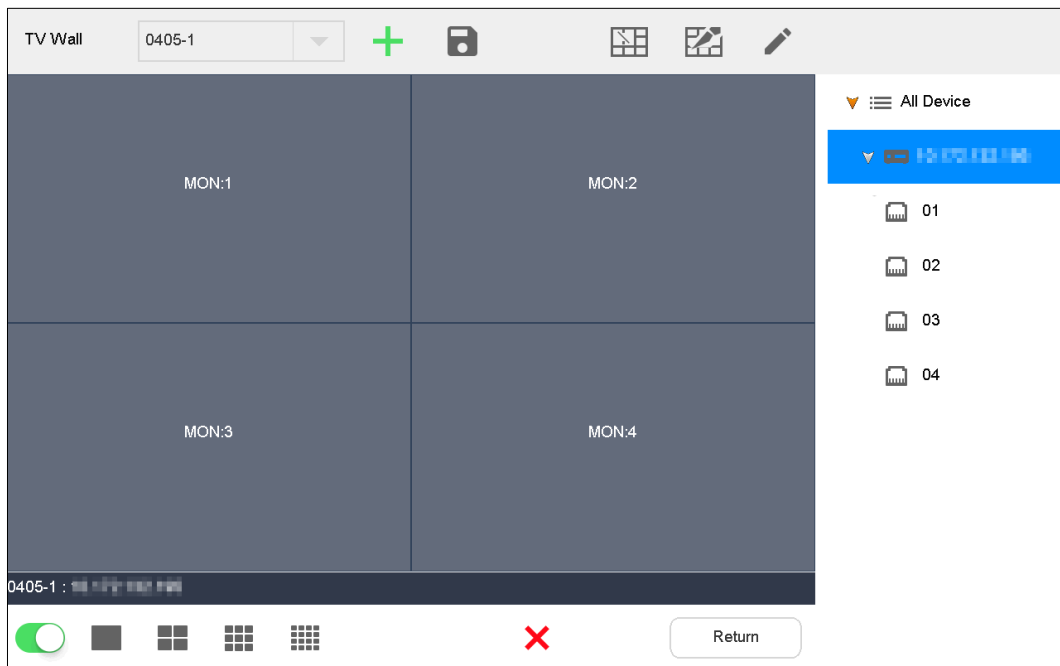Click  to enable TV Wall. Then, **TV Wall** pull-down list in Figure 4-29 will display this TV wall.




If decoding channel of this TV wall is bound to other TV walls, other TV walls will be disabled.

New TV Wall


Step 1 Click .

The **New TV Wall** dialog box pops up. See Figure 4-33.

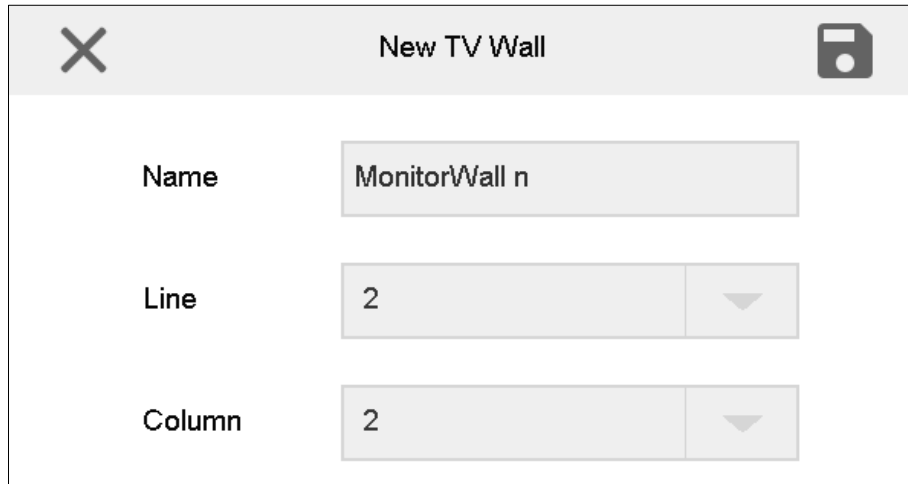
Figure 4-33 New TV wall



New TV Wall	
Name	MonitorWall n
Line	2
Column	2


Step 2 Enter the name, select line and column, and then click .

Step 3 Drag decoding channels on the right into the screen to bind them.


Step 4 (Optional) Select two or more screens, and then click  to merge them into one screen.

Step 5 Click .

Delete TV Wall

Click  to delete TV wall.


Cancel Merged Screen

Select a merged screen and then click .

Edit TV Wall

Click  and the **Edit TV Wall** dialog box is displayed. See Figure 4-34.

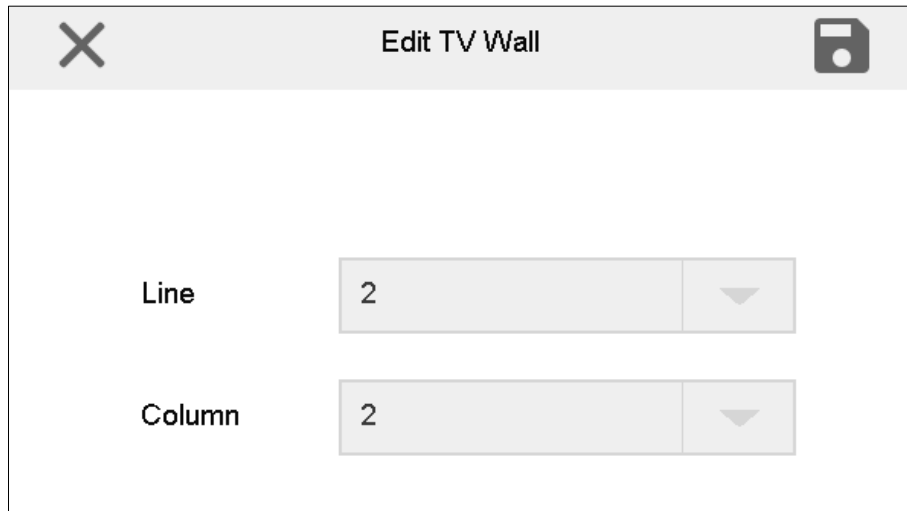Figure 4-34 Edit TV wall



Return to TV Wall Interface

Click **Return** to return to TV wall interface.

Exit TV Wall Interface

Click  to exit TV wall interface.

4.4 Platform

The network keyboard can connect to a platform, and thus control the devices that are added to the platform. At present, the supported platforms include DSS, DSS-PRO, DSS-C9100 and DSS-Express.



- DSS platform does not support platform channel preview at present.
- Key module is not supported in platform preview mode.

4.4.1 Adding Devices and Video Wall

4.4.1.1 Adding Devices to Platform

You can add an encoder, decoder, TV wall and matrix device. Take adding a decoder for example.



This part is about operations on the DSS-PRO platform.

Step 1 Enter IP address of platform server at address bar of the browser, and then press Enter.

The platform server login interface is displayed. See Figure 4-35.


Figure 4-35 Platform server login interface (DSS-PRO)



Step 2 Enter username and password. The default username is system and default password is admin123. Click **Login**.

Main interface of platform server is displayed. See Figure 4-36.

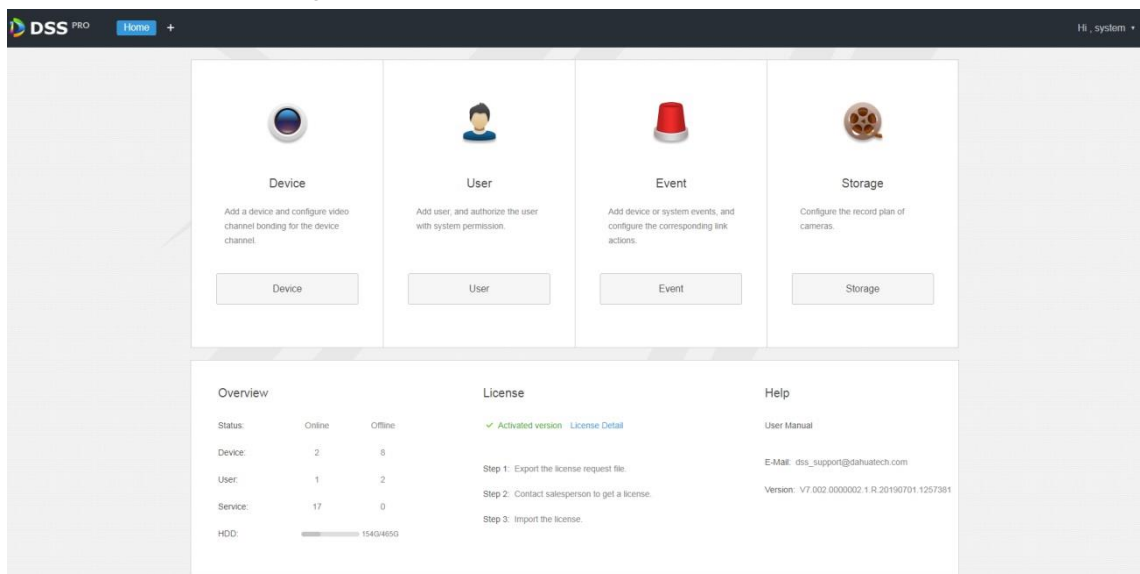Figure 4-36 Main interface of platform



Step 3 Click **+** and select **Device** on the **New Tab** interface.

The system will display the **Device** interface. See Figure 4-37.

Figure 4-37 Device

Init Status	IP Address	Type	Port	MAC Address
● Initialized		Unknown	37777	
● Initialized		NVR	37777	
● Initialized		NVR	37117	
● Initialized		IPC	37755	

Device ID	IP/Domain	Home Server	Device Name	Type	Org	Status	Offline Cause	Operation
1001886		Center Server		Access Snapsho...	root	● Offline	Network anomaly.	✎ ✕
1001880		Center Server		EVS	root	● Offline	Network anomaly.	✎ ✕
1001878		Center Server		VTH	root	● Offline	Network anomaly.	✎ ✕
1001875		Center Server		Access Snapsho...	root	● Offline	Network anomaly.	✎ ✕
1001874		Center Server		NVR	root	● Offline	Network anomaly.	✎ ✕
1001873		Center Server		Unit VTO		● Offline	Network anomaly.	✎ ✕
1001872		Center Server		VTH		● Offline	Network anomaly.	✎ ✕

Step 4 Click **Add**.

The interface is shown in Figure 4-38.

Figure 4-38 Add a device (1)

Add All [Close]

1. Login Information. 1.Login Information 2.Device Information

Protocol: Dahua

Manufacturer: Dahua

Add Type: IP Address

Device Category: Decoder

IP Address: *

Device Port: * 37777

User: * admin

Password: *****

Org: root

[Add] [Cancel]

Step 5 Select **Protocol**, **Manufacturer**, **Add Type**, **Device Category**, **Organization**, **Video Server**, input **IP Address**, **Device Port** and **Username/Password**.



The parameters vary with the selected protocols. The actual interface shall prevail.

In the **Add Type** dropdown list,

- When **IP Address** is selected, enter device IP address.
- When **Auto Register** is selected, enter device registration ID. Add encoders through auto register; the ID of auto register has to be in accordance with the registered ID configured at encoder.
- When **Domain Name** is selected, the options are from the configured domain during deployment.

Step 6 Click **Add**.

The interface is shown in Figure 4-39.

Figure 4-39 Add a device (2)

The screenshot shows a web-based configuration window titled "Add All". It has a close button (X) in the top right corner. Below the title bar, there are two tabs: "1. Login Information" and "2. Device Information". The "2. Device Information" tab is selected and highlighted in green. The main content area contains several form fields:

- Device Name:** A text input field with a red asterisk (*) indicating a required field.
- Type:** A dropdown menu currently showing "DVR".
- Device SN:** A text input field.
- Role:** A text input field containing the text "Administrator, Operator".
- Video Channel:** A text input field with a red asterisk (*) indicating a required field.
- Alarm Input Channel:** A text input field.
- Alarm Output Channel:** A text input field.

At the bottom of the dialog, there are three buttons: "Back", "Continue to add", and "OK".

Step 7 Select Device Type and enter Device Name, Alarm input/output channel, and so on.

Step 8 Click **OK**.


Please click **Continue to add** if it continues to add device.

4.4.1.2 Adding Video Wall

Add a video wall layout on the platform.

Step 1 Click **+** and select **Video Wall** on the **New Tab** interface. See Figure 4-40.

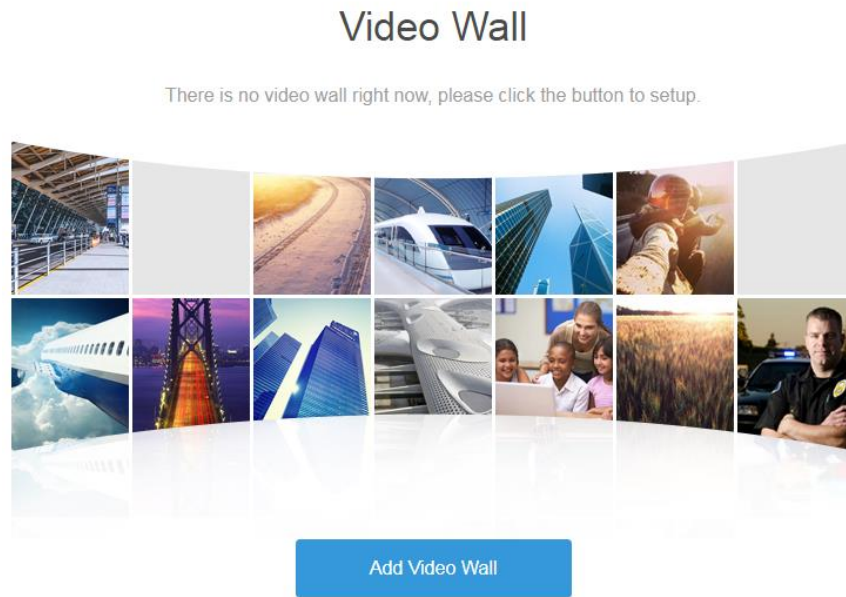
Figure 4-40 Video wall configuration interface



Step 2 Click Add Video Wall.

The **Add New Video Wall** interface is displayed. See Figure 4-41.

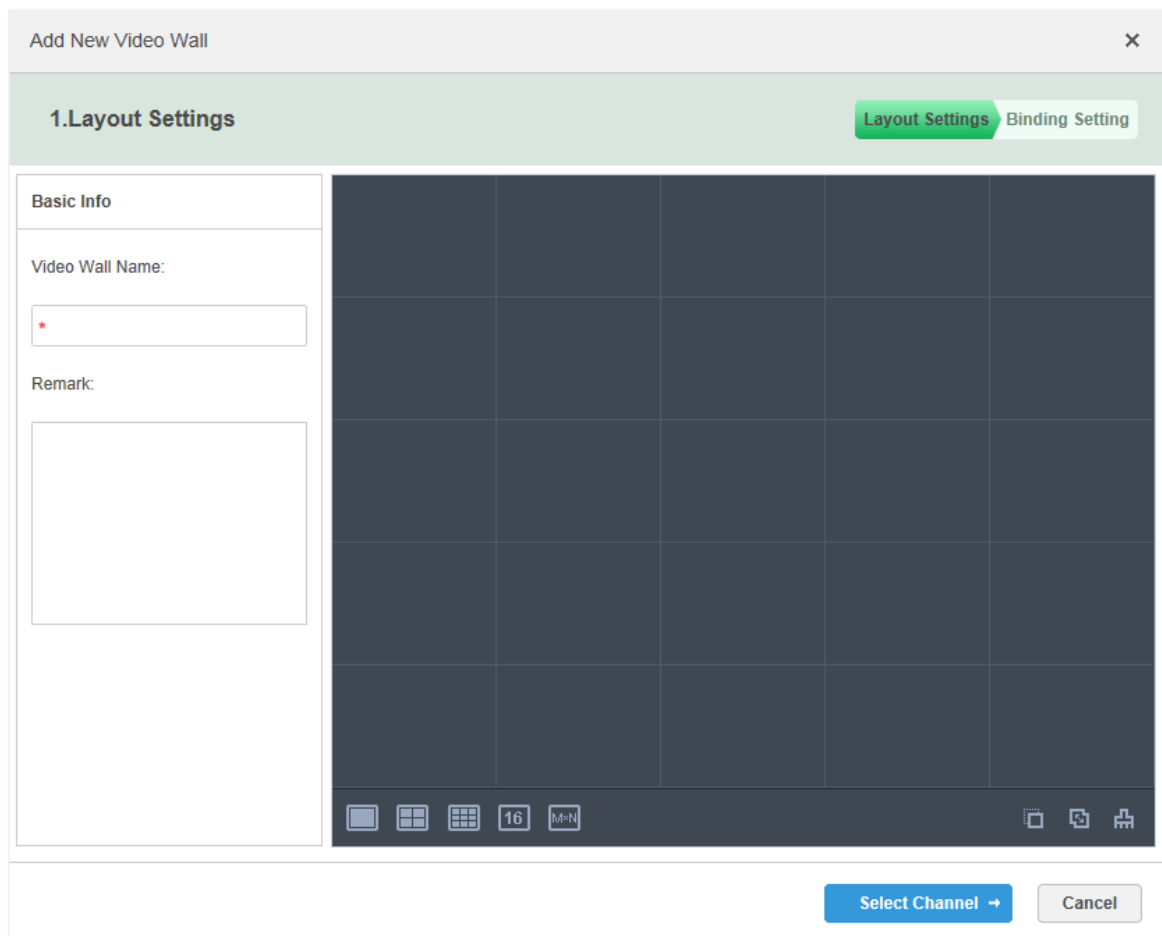Figure 4-41 Add a video wall




Step 3 Enter **Video Wall Name**, select window distribution.

Step 4 Click Select Channel.

The **Select decode channel** interface is displayed. See Figure 4-42.

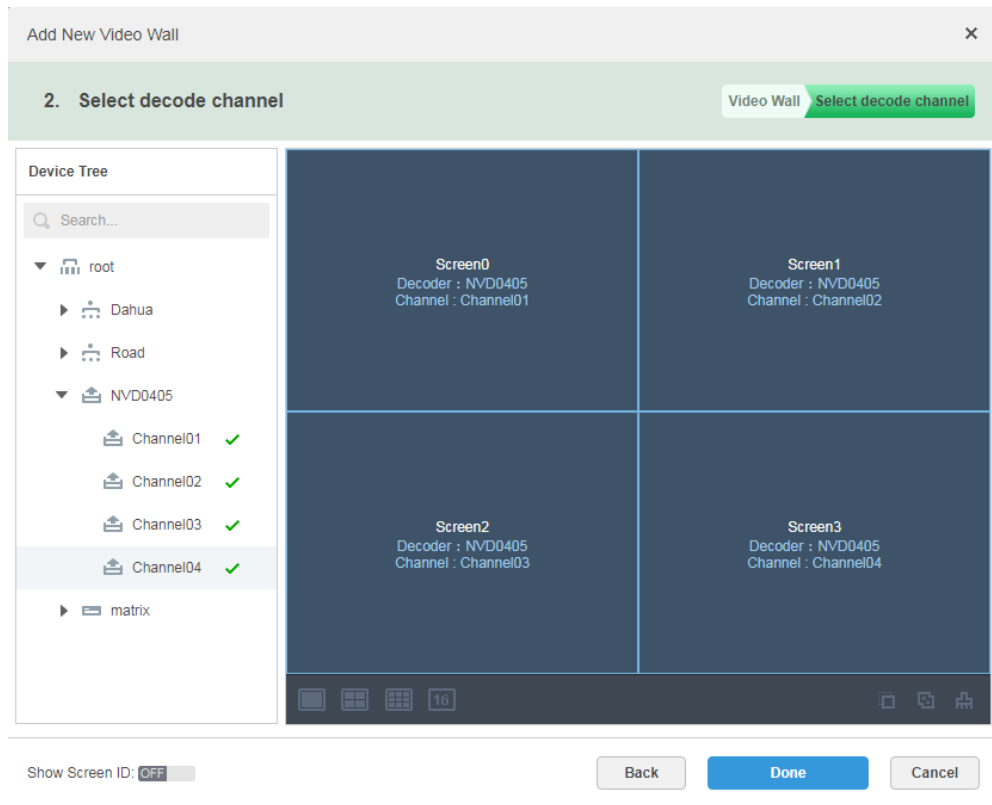Figure 4-42 Select a decoding channel



It can set if it displays ID in the screen, **Show Screen ID: OFF** means that the screen ID has been disabled; click the icon and it becomes **Show Screen ID: ON**, and then it means that screen ID has been enabled.

Step 5 Click **Done**.

4.4.2 Video on Wall

Step 1 On the main interface, click **Platform**.

The connection interface of keyboard operation platform is displayed. See Figure 4-43.

Figure 4-43 Connect keyboard operation platform

Step 2 Set parameters. Refer to Table 4-6.


Table 4-6 Platform parameter description

Parameter	Description
No.	Customize platform number.
Type	<ul style="list-style-type: none"> Select platform type, including DSS (the old version before DSS-PRO), DSS-PRO, DSS-C9100 and DSS- Express.
IP	Enter IP address of platform.
Port	Set port number. <ul style="list-style-type: none"> Regarding DSS platform, default port number is 9000. Regarding DSS-PRO and DSS-Express platform, default port number is 80. Regarding DSS-C9100 platform, default port number is 8314.
Username	Enter username to log in to the platform.
Password	Enter password to log in to the platform.

Step 3 Click **Login**.


The **Login** interface is displayed.




Click  to save the present information.

Step 4 Select platform. See Figure 4-44.

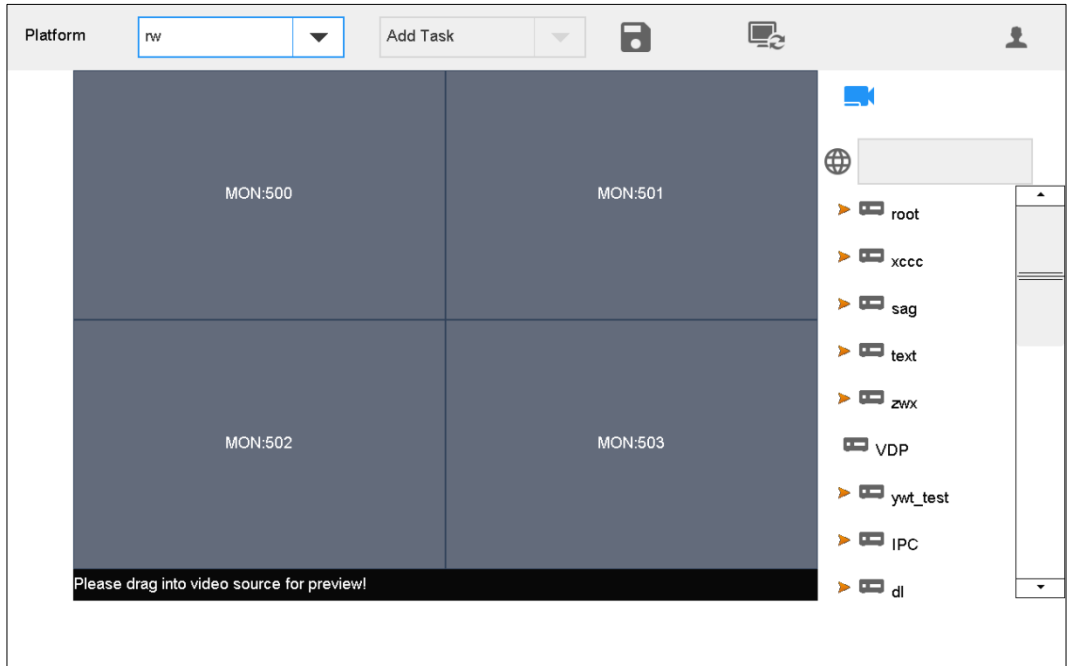
Figure 4-44 Platform (1)



Step 5 Click one screen in Figure 4-44, such as MON:500. Enter display screen information interface.


Step 6 Split the screen. For example, click  to get 16-split screen.



Click , enter the line and column numbers, and customize the splicing. Maximum splicing is 20×20.

Step 7 Drag video source on the right onto large screen. See Figure 4-45.

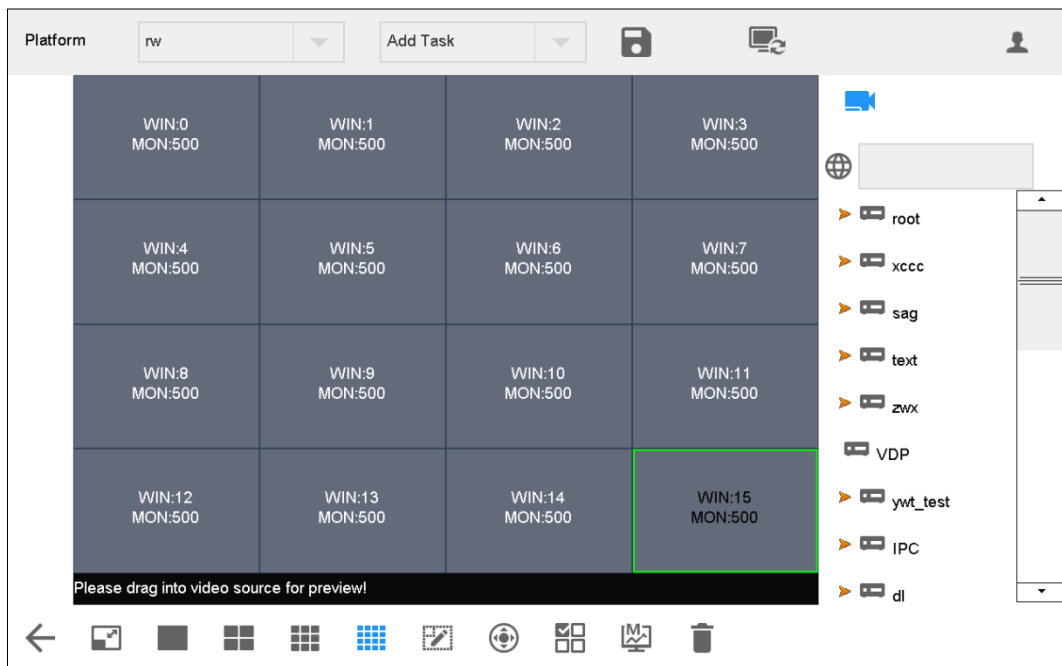
Figure 4-45 Platform (2)




Step 8 Click .

Switch to live view interface. See Figure 4-46.

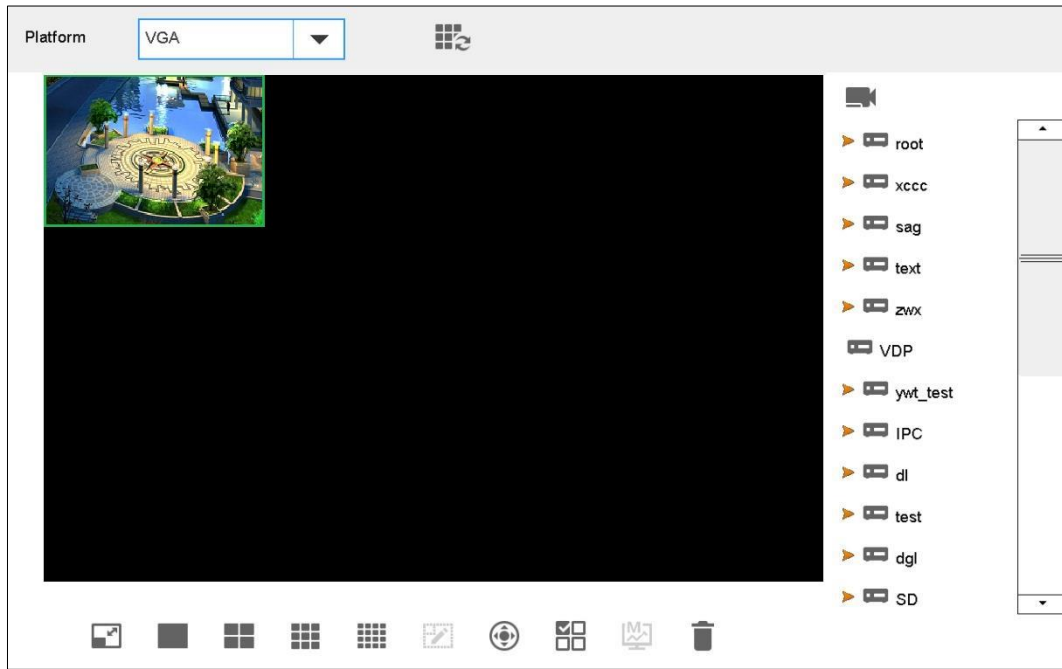Figure 4-46 Live view




Switching Main Stream and Sub-stream

Click  to switch main and sub-stream. M represents main stream, while S represents sub-stream.



Please switch the stream, and then drag the video onto the TV wall.

Clearing Screen

Click  to clear screen.

For other operations of TV wall, please refer to "4.1.3 Video on Wall."


















DSS-PRO, DSS-C9100 and DSS- Express platforms do not have this icon. The layout is cleared after each split.

4.4.3 Icons of Platform Interface

Refer to Table 4-7 for icon description.

Table 4-7 Icons of platform interface

Icon	Description	Icon	Description
	Refresh		Clear screen.

Icon	Description	Icon	Description
	Return		Maximize and restore the window.
	Single split		4-split
	9-split		16-split
	Custom split.		PTZ
	Select one window or all windows on the screen.  This button is used with deletion button.		Switch main and sub-stream. M represents main stream, while S represents sub-stream.
	Delete		Detailed information about input channel.
	Switch to live view interface.		Switch to TV wall mode.

4.4.4 PTZ Control

Refer to "4.5 PTZ Control."

4.4.5 Adding Task

Refer to "4.3.7 Adding Task."

4.5 PTZ Control



The camera shall have PTZ function.


Click  on the **Platform** interface, and then the PTZ control interface is displayed on the right. See Figure 4-47.

Figure 4-47 PTZ control



Table 4-8 PTZ control parameter description

Parameter	Description
Step type	<p>It consists of fixed step and variable step.</p> <ul style="list-style-type: none"> By selecting Fixed, the step remains unchanged when PTZ turns; it is always the set step value. By selecting Variable, the step changes with the tilt of joystick. The larger tilt angle represents quicker turning speed.
8 direction keys	Control turning direction of SD lens.
Zoom	Set the zoom increase/decrease of PTZ lens.
Focus	Set the focus increase/decrease of PTZ lens.
Iris	Set the iris increase/decrease of PTZ lens.
Call	Call the preset point, scan, tour and pattern.
Settings	PTZ operation settings, including the preset point, scan, tour and pattern.
SD menu	Open and close SD menu.
AUX Fn	Lighting and wiper function.
Exit	Exit PTZ control.



Use the joystick to control 8 directions of PTZ.

4.5.1 Call

Click **Call**. The **Call** interface is displayed. See Figure 4-48.

Figure 4-48 Call

The screenshot shows a mobile application interface titled "Call". At the top, there is a header bar with the word "Call". Below the header, there is a numeric input field containing the number "1". Underneath the input field, there are four buttons stacked vertically: "Preset", "Scan", "Tour", and "Pattern". At the bottom of the screen, there is a "Return" button. The entire interface is enclosed in a light gray border.

Enter a number in the input box, such as 1. Click **Preset** to call the preset point 1.



- It will be called successfully after you have set preset point.
- Call methods of scan, tour and pattern are the same as that of preset point. Refer to "4.5.2 Settings" for details.

4.5.2 Settings

4.5.2.1 Settings of Preset Point

Step 1 Turn the camera to required position with the joystick or direction button.

Step 2 Select **Preset**.

Step 3 Enter a preset point value in **Preset** input box, such as 1.

Step 4 Click **Settings**. Preset point 1 is set successfully.

4.5.2.2 Settings of Tour

Step 1 Select **Tour**.

Step 2 Enter tour route value in **Tour No.** input box.

Step 3 Enter a preset point value in **Preset** input box, and then click **Add Preset** to add a preset point to the tour route.



- Multiple preset points can be added.

- Click **Del Preset** to delete the preset point from this tour route. Repeat the operation to delete multiple preset points from this tour route. Preset points cannot be deleted in some protocols.
- Click **Del Tour** to delete the present tour route.

4.5.2.3 Settings of Pattern

Step 1 Select **Pattern**.

Step 2 Enter pattern no. in **Pattern No.** input box.

Step 3 Click **Start Pattern** to carry out operations of zoom, focus, iris or direction.

Step 4 Click **Stop Pattern** to complete the settings of one pattern route.

4.5.2.4 Settings of Scan

Step 1 Turn the camera to left margin with the joystick or direction button.

Step 2 Click **Set Left** to determine left margin position.

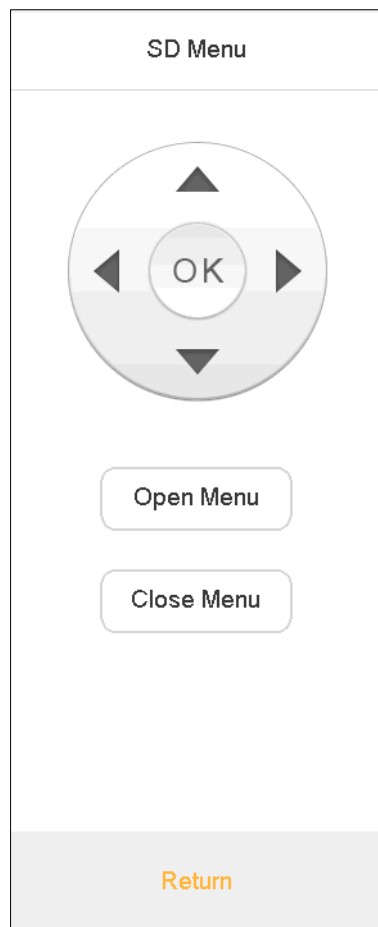
Step 3 Turn the camera to right margin with the joystick or direction button.

Step 4 Click **Set Right** to determine right margin position.

4.5.3 SD Menu


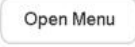
Click **SD Menu**. The **SD Menu** interface is displayed. See Figure 4-49.

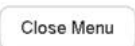Figure 4-49 SD menu




Refer to Table 4-9 for introductions to icons.

Table 4-9 SD menu parameter description

Parameter	Description
Direction key	Select PTZ menu options.
OK key	Confirm operations.
PTZ menu	<ul style="list-style-type: none"> Click  to open PTZ menu on preview interface. Then, use direction key to select different functions to operate the PTZ. Click  to close PTZ menu on preview interface.

4.5.4 Auxiliary Function

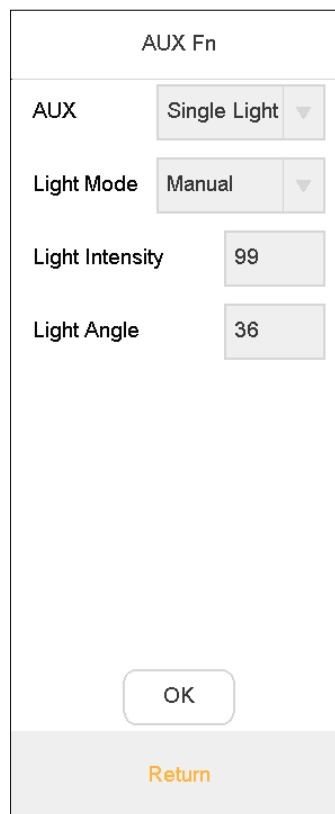Figure 4-50 Auxiliary function



The screenshot shows a mobile interface for the 'AUX Fn' menu. It contains four settings: 'AUX' set to 'Single Light', 'Light Mode' set to 'Manual', 'Light Intensity' set to '99', and 'Light Angle' set to '36'. At the bottom, there is an 'OK' button and a 'Return' button.

- Auxiliary function includes **Single Light**, **Multi-light** and **Wiper**.
- Light mode includes **Manual**, **SmartIR** and **Zoom Ratio First**.
- Light intensity: Light intensity can be set.
- Light angle: Light angle can be set.

4.6 Settings

It consists of four parts, namely, device, general, account and system.

4.6.1 Device Management

4.6.1.1 Adding Device


Refer to "3.6 Adding Device."

4.6.1.2 Input Channel

Display input number, channel, channel name, device, IP address and details. Meanwhile, modify input channel number.

On the **Settings** interface, click **Device**, and then click **Input Channel** tab. The **Input Channel** interface is displayed. See Figure 4-51.

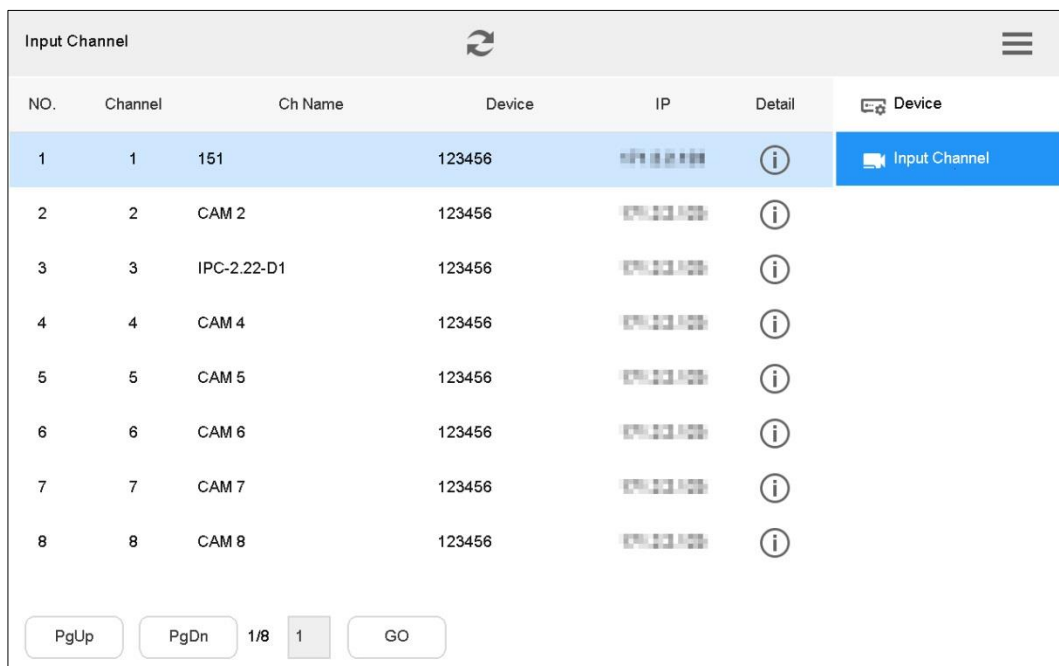Figure 4-51 Input channel



NO.	Channel	Ch Name	Device	IP	Detail	Device
1	1	151	123456	192.168.1.1		Input Channel
2	2	CAM 2	123456	192.168.1.2		
3	3	IPC-2.22-D1	123456	192.168.1.3		
4	4	CAM 4	123456	192.168.1.4		
5	5	CAM 5	123456	192.168.1.5		
6	6	CAM 6	123456	192.168.1.6		
7	7	CAM 7	123456	192.168.1.7		
8	8	CAM 8	123456	192.168.1.8		

PgUp PgDn 1/8 1 GO

Modifying Input Channel Number

Click  to modify input channel number and name in the pop-up dialog box.

4.6.2 General Settings

4.6.2.1 Wired Network

Refer to "3.5.1 Wired Network" for details.


4.6.2.2 Wi-Fi


Refer to "3.5.2 Wi-Fi" for details.

4.6.2.3 Bluetooth

Step 1 On the **General** interface, click **Bluetooth** tab.

The **Bluetooth** interface is displayed.


Step 2 Click  to enable Bluetooth.

Step 3 Click  to search nearby Bluetooth device.

Step 4 Double-click the searched device and the system will display **Connecting**.

After several seconds, the system will display **Connected**, so it is connected successfully. See Figure 4-52.

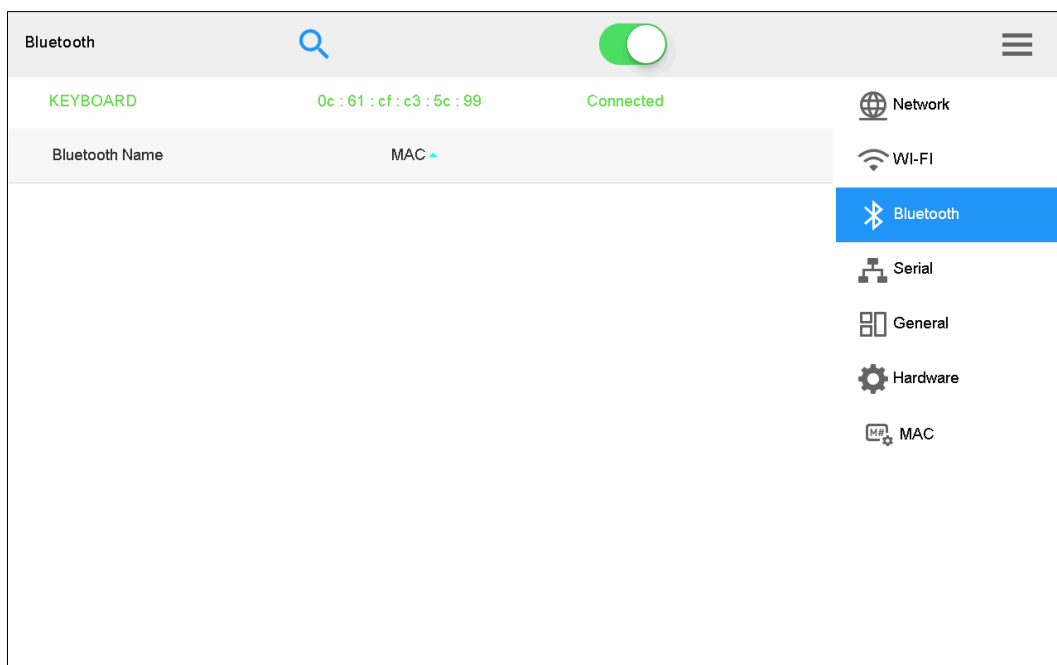Figure 4-52 Bluetooth




4.6.2.4 Serial Port

Step 1 On the **General** interface, click **Serial** tab.

The **Serial** interface is displayed. See Figure 4-53.

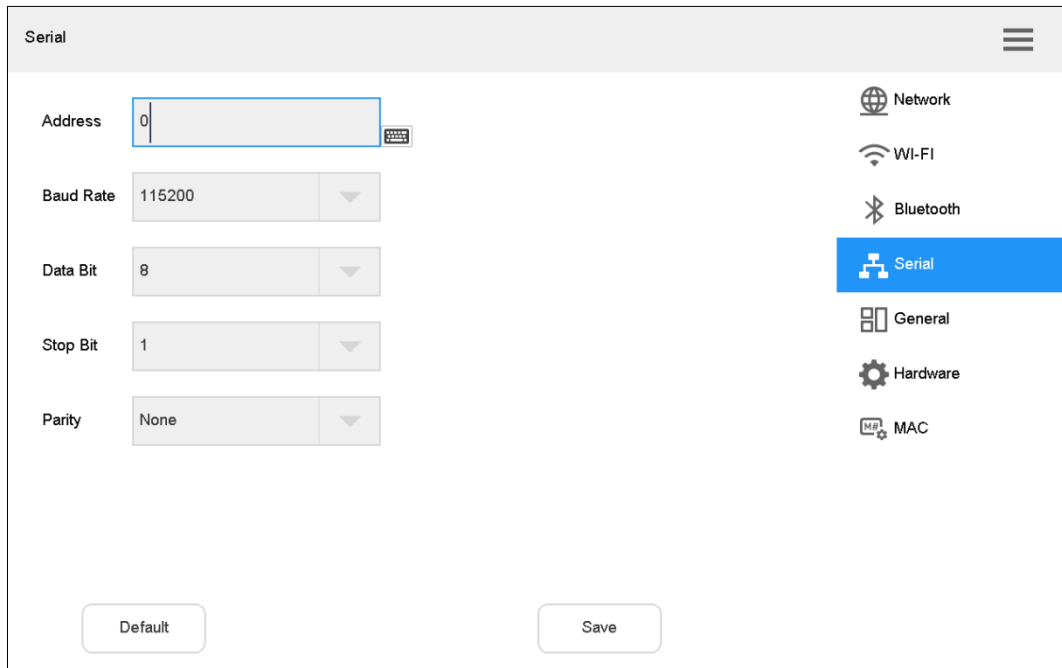Figure 4-53 Serial



Step 2 Set the parameters. Refer to Table 4-10.

Table 4-10 Serial port parameter description

Parameter	Description
Address	In case of serial port control, identify devices according to the address. Value ranges from 0 to 255.
Baud rate	Baud rate ranges from 1200 to 115200. There are 8 levels available.
Data bit	Select data bit, including 5, 6, 7 and 8.
Stop bit	Select stop bit, including 1 and 2.
Parity	Select parity, including none, odd, even, checkmark and null parity.

Step 3 Click **Save**.


4.6.2.5 General

You can set name, date and time etc. of network keyboard.

Step 1 On the **Settings** interface, click **General** tab.

The **General** interface is displayed. See Figure 4-54.

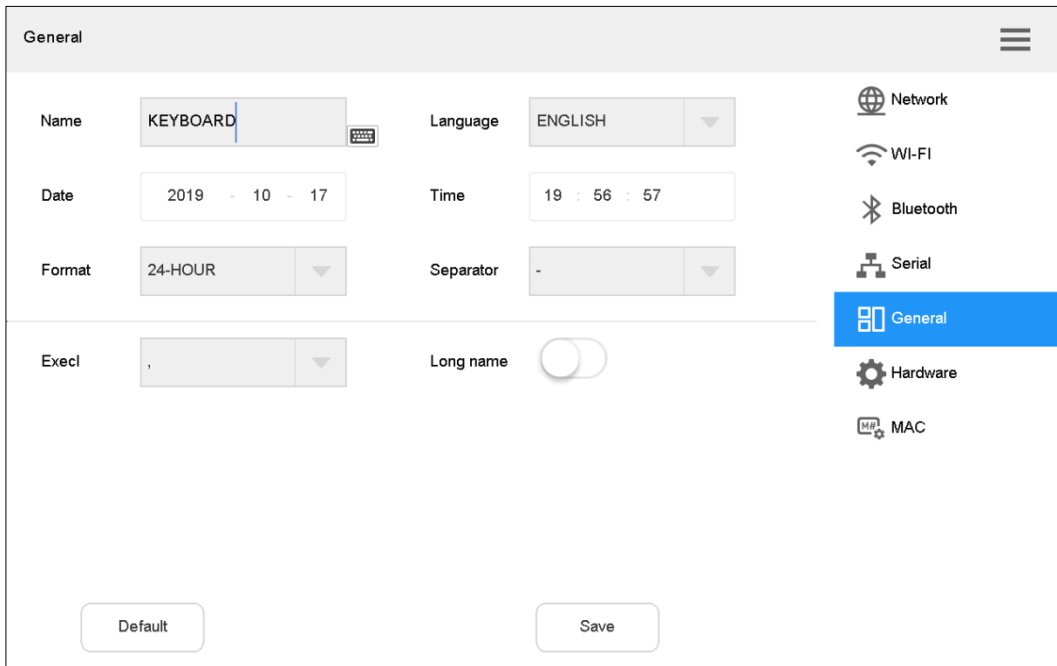Figure 4-54 General



Step 2 Set the parameters. Refer to Table 4-11.

Table 4-11 General parameter description

Parameter	Description
Name	Set network keyboard name.
Language	Select language.
Date	Set date.
Time	Set time.
Format	Set time format, including 24-hour and 12-hour.
Separator	Set date separator, including ".", "-" and "/". When it takes effect, system time is displayed as "2019.10.17", "2019-10-17" and "2019/10/17".
Excel	Excel config file import separator. It is comma by default. Italian config file shall use semicolon.
Long name	In the long name mode, channel name can contain 40 characters. This function is used if channel name is too long and cannot be displayed on previous interface completely.

Step 3 Click **Save**.


4.6.2.6 Hardware

You can adjust volume, and set the locking time of network keyboard.

Step 1 On the **Settings** interface, click **Hardware** tab.

The **Hardware** interface is displayed. See Figure 4-55.

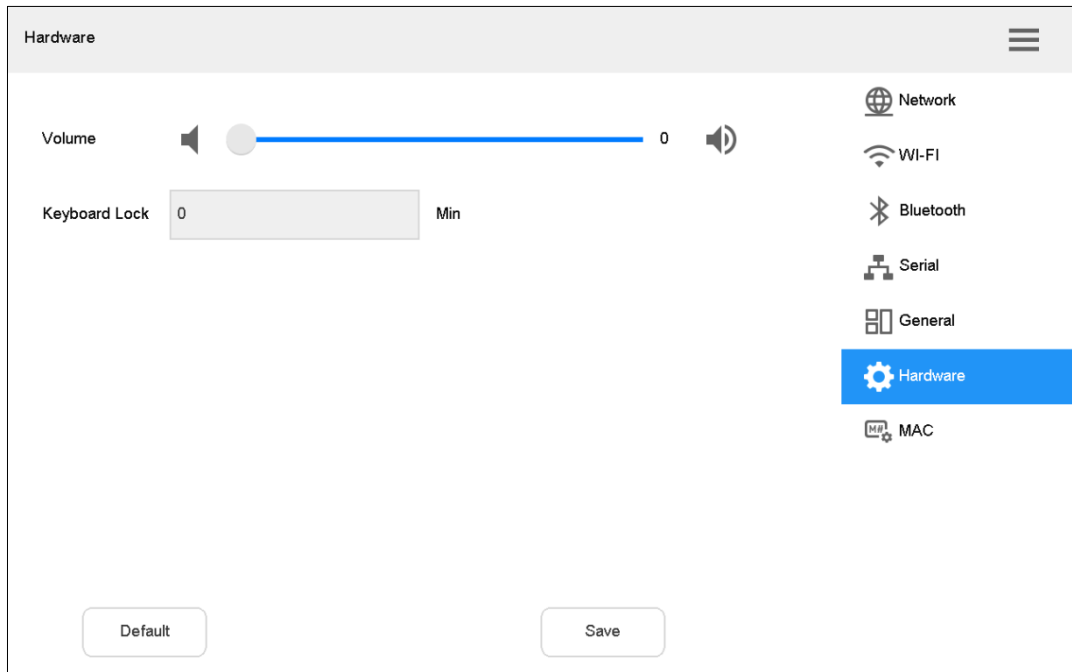Figure 4-55 Hardware



Step 2 Set the parameters. Refer to Table 4-12.

Table 4-12 Hardware parameter description

Parameter	Description
Volume	Adjust the volume. It is 0 by default.
Keyboard lock	After keyboard is locked, log in to the device again to enter it.

Step 3 Click **Save**.

4.6.2.7 MAC

Add MAC through key module, and then execute continuous action groups according to the adding sequence.

On the local preview interface or TV wall interface, press number key + F2 to call MAC.




Before use, please ensure that you have configured MAC with corresponding numbers.

Step 1 On the **Settings** interface, click **MAC** tab.

The **MAC** interface is displayed. See Figure 4-56.

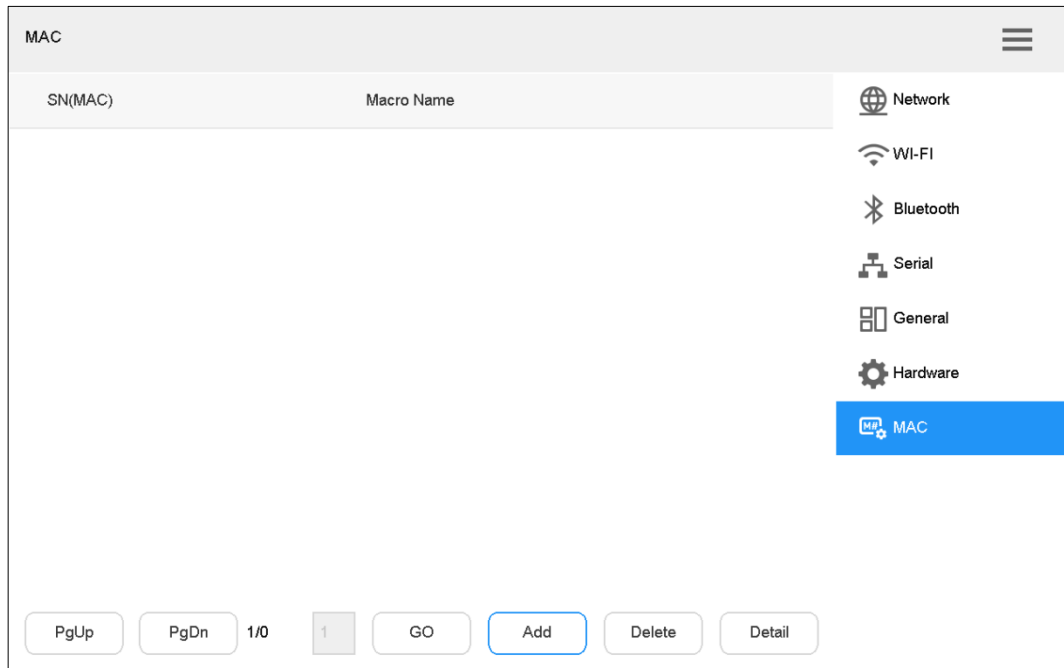
Figure 4-56 MAC



Step 2 Click **Add**.

The **MAC Settings** interface is displayed. See Figure 4-57.

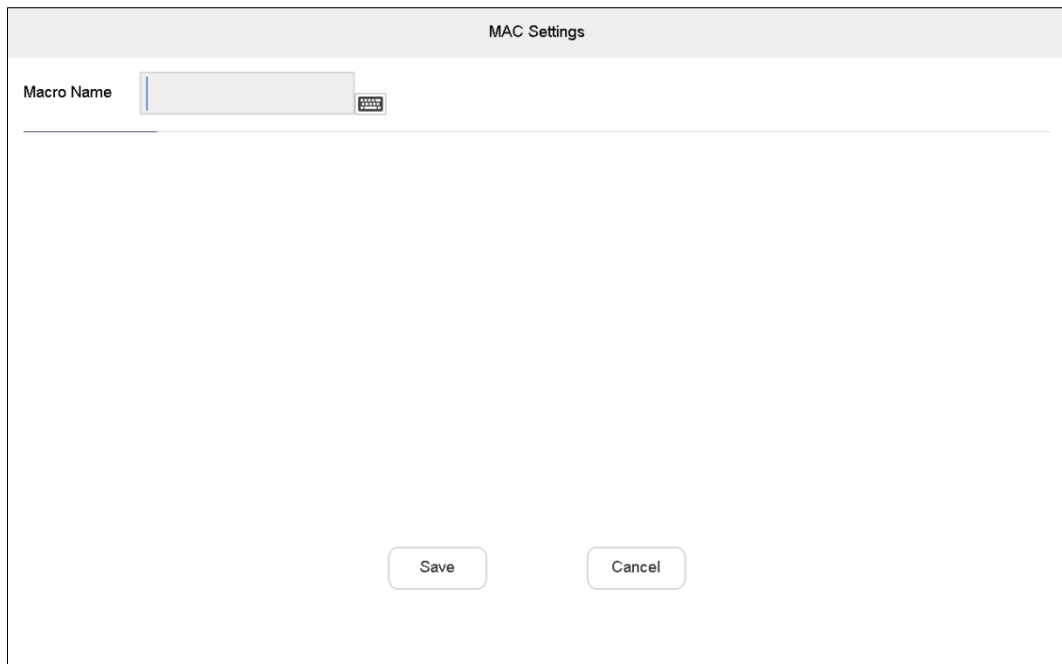Figure 4-57 MAC Settings (1)



Step 3 Enter **Macro Name**, which can be free combination of no more than 15 letters and numbers.

Step 4 Create MAC with key module.

For example, on the key module, press [5+MON+4+MULT+1+WIN+123+CAM+1+GOTO]. The corresponding interface is displayed. See Figure 4-58. You can switch and call the presets.

Figure 4-58 MAC Settings (2)

MAC Settings

Macro Name 222

5+MON+16+MULT+11+WIN+545+CAM+1+GOTO

Return

Step 5 Click **Return**.

Relevant Operation

- Select a MAC, and then click **Delete** to delete the MAC.
- Select a MAC, and then click **Detail** to view detail.

4.6.3 Account

4.6.3.1 Role

In the whole network, users might have different permissions to access network keyboard. You can classify users with the same permission into one role, and thus maintain and manage user information conveniently. Then, you can add, delete and modify role.

Select **Settings > Account > Role**. The **Role** interface is displayed. See Figure 4-59.

Figure 4-59 Role

Role				Role		Role	
<input type="checkbox"/>	1	admin			Account		
<input type="checkbox"/>	2	1					
<input type="checkbox"/>	3	2					
<input type="checkbox"/>	4	3					
<input type="checkbox"/>	5	A					
<input type="checkbox"/>	6	6					
<input type="checkbox"/>	7	7					
<input type="checkbox"/>	8	8					

PgUp PgDn 1/3 1 GO Delete


Adding Roles

Default admin of the system cannot be deleted. Admin has the highest authority by default.

Step 1 Click .


The **Add roles** interface is displayed. See Figure 4-60.

Figure 4-60 Add roles

Add roles 

Information

Role name

Role rank 

System authority

All

Preview TV wall operate

Playback Platform Extension

Device Account General System

Device authority

All

Step 2 Set Role name and Role rank.



There are 8 role ranks. The number 1 rank is the highest, only second to default admin. It drops from number 1 to number 8.

Step 3 In **System authority**, select role authority to operate the system.

- Tick the check box to enable the authority.
- Tick **All** to select all authorities.

Step 4 Configure operation authority of device input channel.

1) Click **Input Channel**.

The **Input Channel** interface is displayed. See Figure 4-61.

Figure 4-61 Input channel

NO.	Channel	Ch Name	Device	IP
-----	---------	---------	--------	----

PgUp PgDn 1/0 1 GO + - Group Return

2) Click  .

The **Add channel** interface is displayed. See Figure 4-62.

Figure 4-62 Add channel

<input type="checkbox"/>	NO.	Channel	Ch Name	Device	IP
<input type="checkbox"/>	1	1	151	123456	192.168.1.1
<input type="checkbox"/>	2	2	CAM 2	123456	192.168.1.2
<input type="checkbox"/>	3	3	IPC-2.22-D1	123456	192.168.1.3
<input type="checkbox"/>	4	4	CAM 4	123456	192.168.1.4
<input type="checkbox"/>	5	5	CAM 5	123456	192.168.1.5
<input type="checkbox"/>	6	6	CAM 6	123456	192.168.1.6
<input type="checkbox"/>	7	7	CAM 7	123456	192.168.1.7
<input type="checkbox"/>	8	8	CAM 8	123456	192.168.1.8

PgUp PgDn 1/8 1 GO OK Return

3) Tick the check box of corresponding channel, and click **OK**.



Click **Group** to divide the input channels into groups.

Step 5 Click **Return** to return to **Add roles** interface.

Step 6 Click  to save the settings.

Deleting Roles


Step 1 Tick the check box of corresponding role.

Step 2 Click **Delete**.

The **Message** dialog box pops up.


Step 3 Click **OK** to finish.

Modifying Role

Step 1 Click  corresponding to the role.

The **Modify role** interface is displayed. See Figure 4-63.

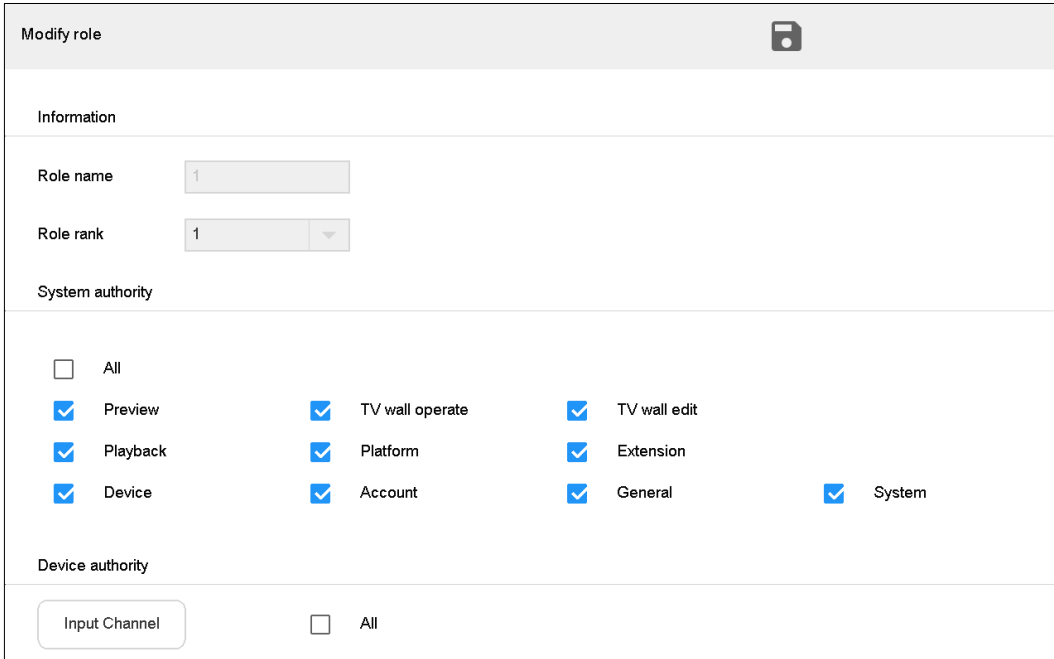Figure 4-63 Modify role



Step 2 Modify role information according to actual needs.


Step 3 Click  to save the settings.

4.6.3.2 Account

You can view details about current user, add and delete user, and modify user password.

Select **Settings > Account > Account**. The **Account** interface is displayed. See Figure 4-64.

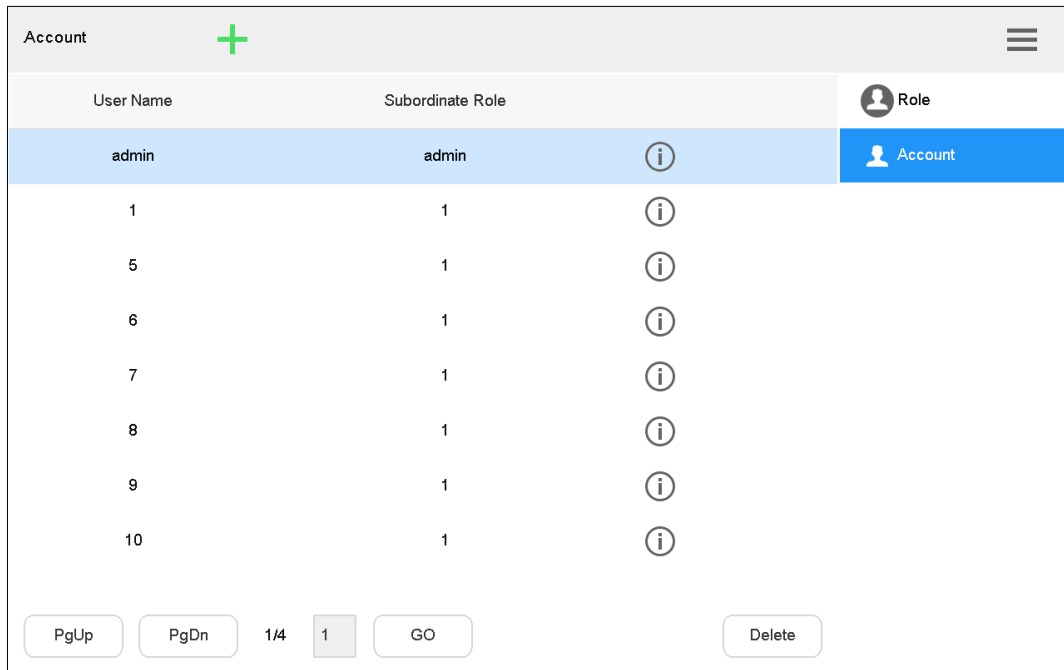Figure 4-64 Account



User Name	Subordinate Role		Role
admin	admin		Account
1	1		
5	1		
6	1		
7	1		
8	1		
9	1		
10	1		

PgUp PgDn 1/4 1 GO Delete


Adding User

Default admin of the system cannot be deleted. Admin has the highest authority by default. Create a role before adding account.

Step 1 Click .

The **Add user** interface is displayed. See Figure 4-65.

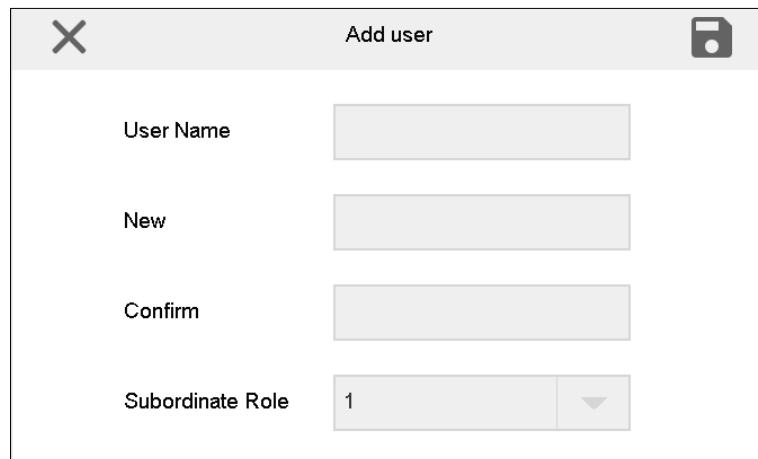Figure 4-65 Add user




Add user

User Name

New


Confirm

Subordinate Role 

Step 2 Set User Name, enter New and Confirm, and select Subordinate Role.



New and **Confirm** shall be the same.

Step 3 Click  to save the settings.

Deleting User


Step 1 Click the user that shall be deleted.

Step 2 Click **Delete**.

The **Message** dialog box pops up.


Step 3 Click **OK** to finish.

Modifying Password

Step 1 Click  corresponding to the user.

The **Modify user** interface is displayed. See Figure 4-66.

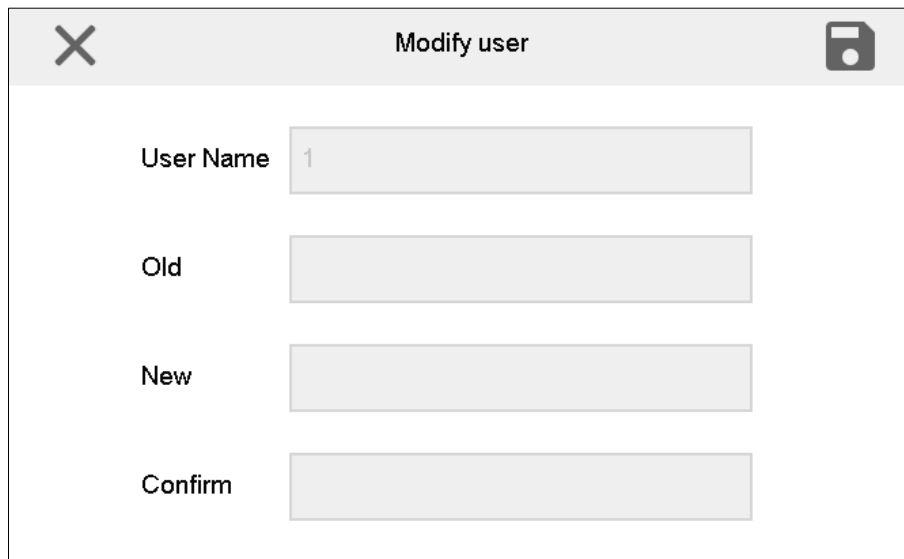Figure 4-66 Modify user



The screenshot shows a dialog box titled "Modify user". The dialog has a close button (X) in the top-left corner and a save button (floppy disk icon) in the top-right corner. The main content area contains four input fields:

- User Name**: A text input field containing the value "1".
- Old**: A text input field for the current password.
- New**: A text input field for the new password.
- Confirm**: A text input field for confirming the new password.

Step 2 Enter old password, and set a new password.

Step 3 Click  to save the settings.

4.6.4 System


4.6.4.1 Version Upgrade

Upgrade the device with flash drive.

Step 1 On the **System** interface, click **Upgrade** tab.

The **Upgrade** interface is displayed. See Figure 4-67.

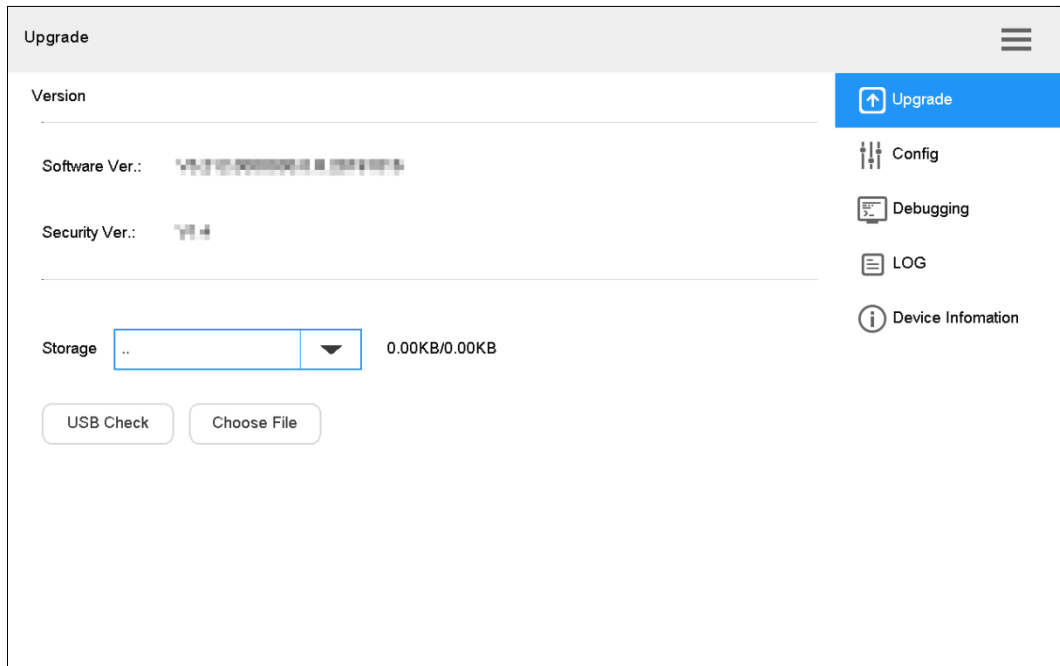Figure 4-67 Upgrade



Step 2 Insert flash drive into the network keyboard, and click **USB Check**.

Step 3 Click **Choose File** to upgrade.

The keyboard will restart automatically after upgrade.


4.6.4.2 Configuration

You can import or export system configurations.

Step 1 On the **System** interface, click **Config** tab.

The **Config** interface is displayed. See Figure 4-68.

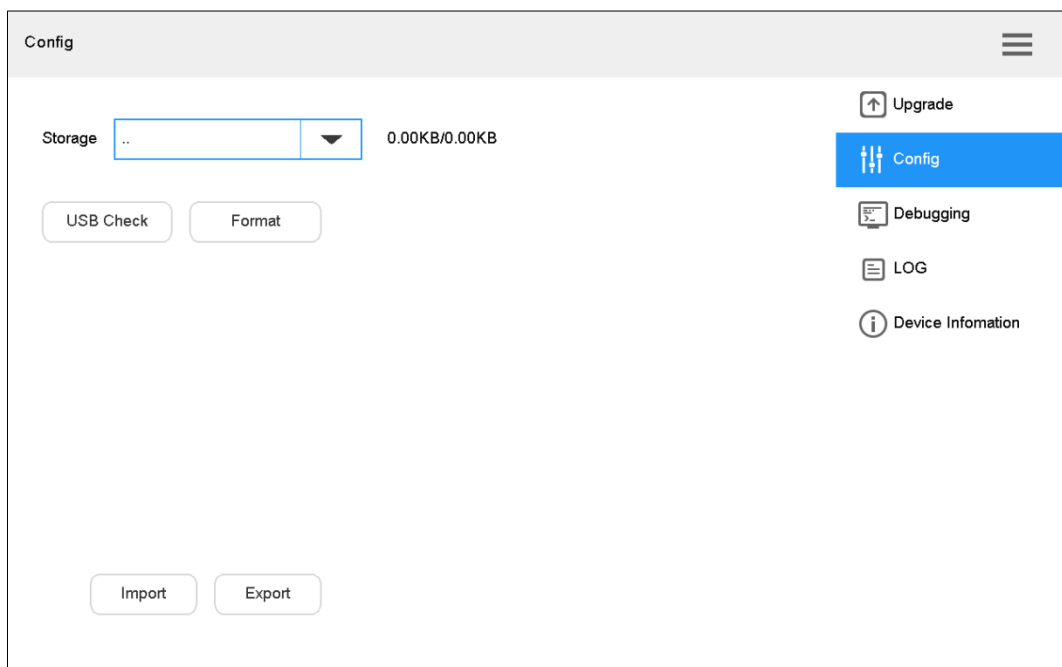Figure 4-68 Config



Step 2 Insert flash drive into the network keyboard, and click **USB Check**. Detect all connected USB and capacity.

Step 3 Import or export configurations.

- Import: Import config information in flash drive into the network keyboard.
- Export: Export config information in the present keyboard to flash drive.



Click **Format** to format the storage device, and all its files will be cleared. Operate cautiously.


4.6.4.3 Debugging

In case of network error, you can capture the packet on this interface, download the file to flash drive, and then provide the file to technical support personnel to analyze network status.

Step 1 On the **System** interface, click **Debugging** tab.

The **Debugging** interface is displayed. See Figure 4-69.

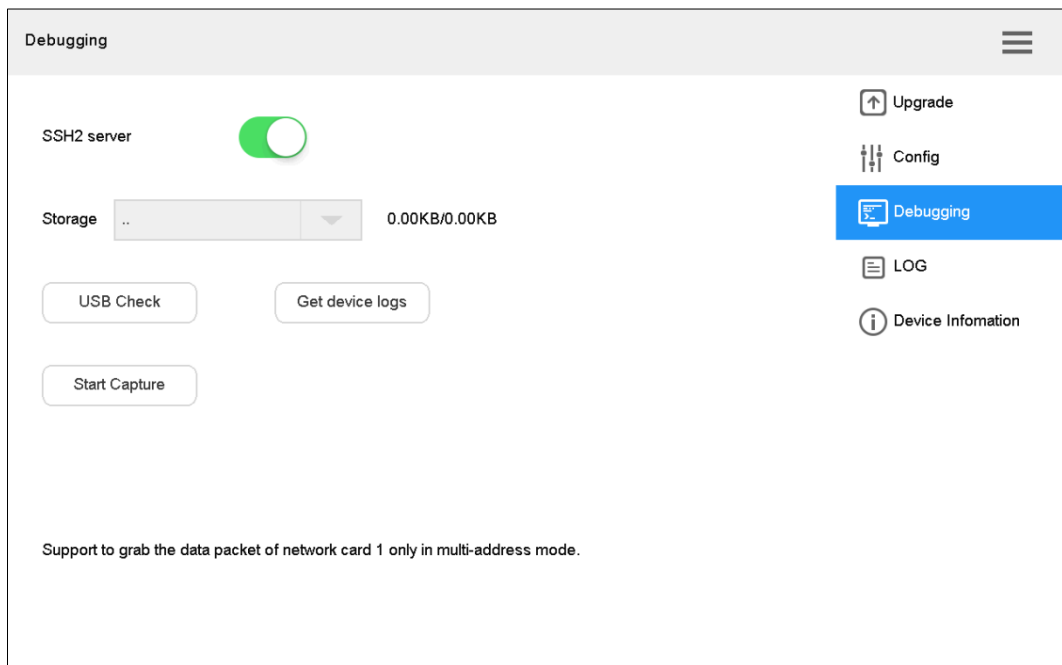Figure 4-69 Debugging



Step 2 Select **SSH2 server** to enable the **SSH2 server** function.

Step 3 Insert flash drive into the network keyboard, and click **USB Check**. Detect all connected USB and capacity.

Step 4 Click **Start Capture**.

Click **Stop Capture** after a while. The captured data packet will be stored in flash drive.

Step 5 Click **Get device logs**.

Get device logs and store them in USB flash drive.



In case of device error, insert the USB flash drive after the device is restarted or restored to normal. Then, click **Get device logs**, and then provide them to developers.

4.6.4.4 Log

You can view the device log information on the interface.

Step 1 On the **System** interface, click **LOG** tab.

The **LOG** interface is displayed. See Figure 4-70.

Figure 4-70 Log

The screenshot shows the LOG interface with the following elements:

- Start Time:** 2019-10-17 00:00:00
- End Time:** 2019-10-18 00:00:00
- Type:** All
- Search:** Search button
- Found 18 logs**
- Navigation:** PgUp, PgDn, 1/3, 1, GO, Clear
- Actions:** Upgrade, Config, Debugging, LOG (selected), Device Information

No.	Time	Username	Event	
1	2019-10-17 09:38:04	default	Shut down	
2	2019-10-17 09:38:04	default	Reboot	
3	2019-10-17 09:38:47	admin	Login	
4	2019-10-17 09:41:46	default	Shut down	
5	2019-10-17 09:41:46	default	Reboot	
6	2019-10-17 09:41:58	admin	Login	
7	2019-10-17 14:25:24	admin	Login	

Step 2 Enter Start Time and End Time.

Step 3 Select **Type**.

Step 4 Click Search.

The found logs are displayed. See Figure 4-71.

Figure 4-71 Search log

The screenshot shows the LOG interface with the following elements:

- Start Time:** 2019-10-16 00:00:00
- End Time:** 2019-10-17 00:00:00
- Type:** All
- Search:** Search button
- Found 18 logs**
- Navigation:** PgUp, PgDn, 1/3, 1, GO, Clear
- Actions:** Upgrade, Config, Debugging, LOG (selected), Device Information

No.	Time	Username	Event	
1	2019-10-16 11:21:34	default	Shut down	
2	2019-10-16 11:21:34	default	Reboot	
3	2019-10-16 11:26:18	default	Shut down	
4	2019-10-16 11:26:18	default	Reboot	
5	2019-10-16 11:26:46	admin	Login	
6	2019-10-16 11:28:55	admin	Login	
7	2019-10-16 11:28:55	admin	Login	

Relevant Operation


- Click to view log details.
- Click **Clear** to clear all the logs. Be careful.

4.6.4.5 Device Information

You can view S/N and MAC address of the network keyboard.

On the **System** interface, click **Device Information** tab. The **Device Information** interface is displayed. See Figure 4-72.

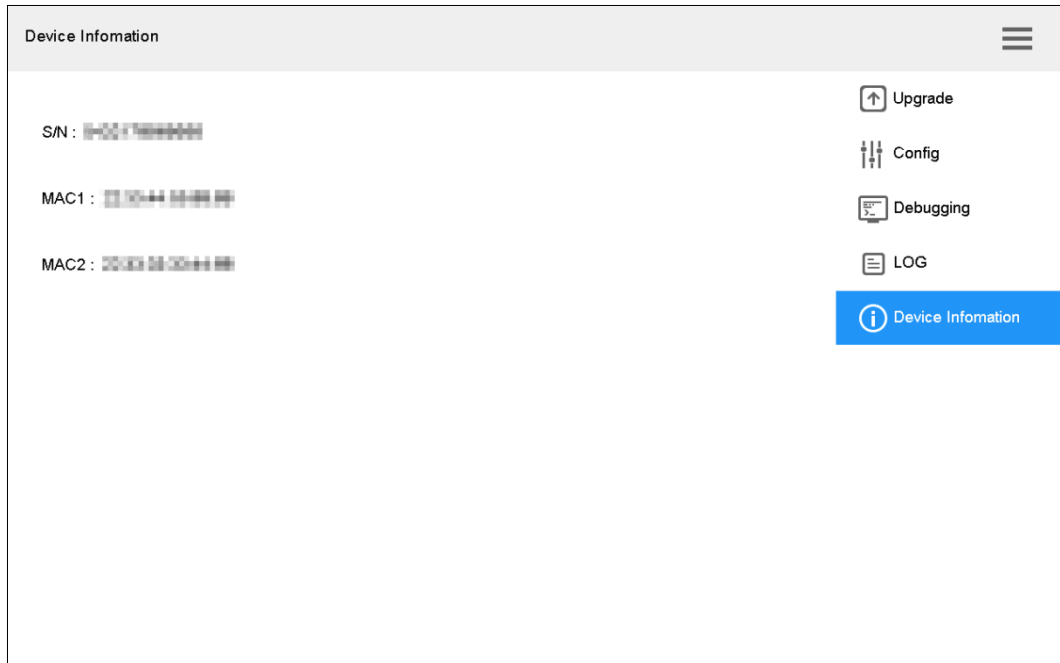Figure 4-72 Device information



4.7 Extension

Control the devices with direct physical connection with network keyboard. At present, it only supports to control speed dome with RS-485 port.

Step 1 On the main interface, click **Extension**.

The **Analog** interface is displayed. See Figure 4-73.

Figure 4-73 Analog (1)


The screenshot shows a configuration window titled "Analog" with a hamburger menu icon in the top right corner. The window contains several configuration fields, each with a label and a value in a dropdown menu:

- Connection Mode: RS485
- Device Type: Dome Camera
- Address: 1
- Protocol: PELCOD
- Baud Rate: 9600
- Data Bit: 8
- Parity: Null
- Stop Bit: 1

At the bottom of the window is an "OK" button.

Step 2 Set the parameters. Refer to Table 4-13.

Table 4-13 Analog keyboard parameter description

Parameter	Description
Connection mode	Set the connection mode, which only supports RS-485 at present.
Device type	Enter device type.
Address	Enter device address.
Protocol	Select the protocol, including SD1, PELCOD and PELCOP.  AA-SD1 is the same as SD1, AA-PELCOD is the same as PELCOD, and AA-PELCOP is the same as PELCOP. They are frequently-used protocols; with AA- prefix, they are ranked in the front of the list.
Baud rate	Select baud rate.
Data bit	It includes 5, 6, 7 and 8.
Parity	It includes null, odd and even parity.
Stop bit	It includes 1, 1.5 and 2.

Step 3 Click **OK**.

Open PTZ control interface to carry out PTZ control. See Figure 4-74.

Figure 4-74 Analog (2)

Analog ☰

Variable ▾

Connection Mode	RS485
Device Type	Dome Camera
Address	1
Protocol	AA-SD1 ▾
Baud Rate	9600 ▾
Data Bit	8 ▾
Parity	Null ▾
Stop Bit	1 ▾

OK

Return

Zoom + -

Focus + -

Iris + -

Call Settings

SD Menu AUX Fn

Exit

Appendix 1 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations on how to create a more secured security system.

Mandatory actions to be taken for basic equipment network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your equipment (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the equipment is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your equipment network security:

1. Physical Protection

We suggest that you perform physical protection to equipment, especially storage devices. For example, place the equipment in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable equipment (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The equipment supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. Enable Whitelist

We suggest you to enable whitelist function to prevent everyone, except those with specified IP addresses, from accessing the system. Therefore, please be sure to add your computer's IP address and the accompanying equipment's IP address to the whitelist.

8. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the equipment, thus reducing the risk of ARP spoofing.

9. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

10. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

11. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

12. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check equipment log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

13. Network Log

Due to the limited storage capacity of the equipment, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

14. Construct a Safe Network Environment

In order to better ensure the safety of equipment and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.

- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.

Legal and Regulatory Information

Legal Considerations

Video surveillance can be regulated by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.

Disclaimer

Every care has been taken in the preparation of this document. Please inform your nearest Dahua office of any inaccuracies or omissions. Dahua Technology shall not be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. Dahua Technology makes no warranty of any kind with regard to the material contained within this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Dahua Technology shall not be liable or responsible for incidental or consequential damages in connection with the furnishing, performance or use of this material. This product is only to be used for its intended purpose.

Intellectual Property Rights

Dahua Technology retains all intellectual property rights relating to technology embodied in the product described in this document.

Equipment Modifications


This equipment must be installed and used in strict accordance with the instructions given in the user documentation. This equipment contains no user-serviceable components. Unauthorized equipment changes or modifications will invalidate all applicable regulatory certifications and approvals.

Trademark Acknowledgments

 ,  , **HDCVI** ,  are registered trademarks or trademark applications of Dahua Technology in various jurisdictions. All other company names and products are trademarks or registered trademarks of their respective companies.

Regulatory Information

European Directives Compliance

 This product complies with the applicable CE marking directives and standards:

- Low Voltage (LVD) Directive 2014/35/EU.
- Electromagnetic Compatibility (EMC) Directive 2014/30/EU.
- Restrictions of Hazardous Substances (RoHS) Directive 2011/65/EU and its amending Directive (EU) 2015/863.

A copy of the original declaration of conformity may be obtained from Dahua

Technology.

The most up to date copy of the signed EU Declaration of Conformity (DoC) can be downloaded from: www.dahuasecurity.com/support/notice/

CE-Electromagnetic Compatibility (EMC)

This digital equipment is compliant with Class A according to EN 55032.



Warning:

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

CE-Safety

This product complies with IEC/EN/UL 60950-1 or IEC/EN/UL 62368-1, Safety of Information Technology Equipment.

Declaration of Conformity CE

(Only for the product has RF function)

Hereby, Dahua Technology declares that the radio equipment is compliant with Radio Equipment Directive (RED) 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.dahuasecurity.com/support/notice/

USA Regulatory Compliance

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC SDOC Statement can be downloaded from:
<https://us.dahuasecurity.com/support/notices/>

RF exposure warning

(Only for the product has RF communication function)

This equipment must be installed and operated in accordance with provided

instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body. (The RF exposure warning applies only to model "DHI-NKB5000-F")

Canada Regulatory Compliance

ICES-003

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF exposure warning

(Only for the product has RF communication function)

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Japan Regulatory Compliance

VCCI

These products comply with the requirements of VCCI Class A Information

Technology Equipment.

CAUTION

This is a Class A equipment. Operation of this equipment in a residential environment could cause radio interference. In such a case, the user may be required to take corrective actions.

Batteries

Correct disposal of batteries in this product



This marking on the battery indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in Directive 2006/66/EC and its amending Directive 2013/56/EU. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

CAUTION

Do not ingest battery. Chemical Burn Hazard.

This product contains a coin cell battery. If the coin cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

Do not throw or immerse into water, heat to more than 100°C (212°F), repair or disassemble, leave in an extremely low air pressure environment or extremely high-temperature environment, crush, puncture, cut or incinerate.

Dispose of the battery as required by local ordinances or regulations.

Safety

The product complies with IEC/EN/UL 60950-1, Information Technology Equipment – Safety – Part 1: General Requirements; or complies with IEC/EN/UL 62368-1, Audio/video, information and communication technology equipment – Part 1: Safety requirements.

If the power supply to the product is from external power adaptor without connecting to AC Mains, and the product is not shipped with power adaptor, customers are required to use the external power adaptor that must fulfill the requirements for Safety Extra Low Voltage (SELV) and Limited Power Source (LPS).

Waste Electrical and Electronic Equipment (WEEE) statements

Disposal and Recycling

When this product has reached the end of its useful life, dispose of it according

to local laws and regulations. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. In accordance with local legislation, penalties may be applicable for incorrect disposal of this waste.



■ This symbol means that the product shall not be disposed of together with household or commercial waste. Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) is applicable in the European Union member states. To prevent potential harm to human health and the environment, the product must be disposed of in an approved and environmentally safe recycling process. For information about your nearest designated collection point, contact your local authority responsible for waste disposal. Businesses should contact the product supplier for information about how to dispose of this product correctly.

Privacy Protection Notice

As the device user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures, including but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related jurisdictions. For detailed information, refer to the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Support

Should you require any technical assistance, please contact your Dahua distributor. If your questions cannot be answered immediately, your distributor will forward your queries through the appropriate channels to ensure a rapid

response. If you are connected to the Internet, you can:

- Download user documentation and software updates.
- Search by product, category, or phrase.
- Report problems to Dahua support staff by logging in to your private support area.
- Chat with Dahua support staff.
- Visit Dahua Support at www.dahuasecurity.com/support

Contact Information

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1199, Bin'an Road, Binjiang District, Hangzhou, P.R. China

Postcode: 310053

Tel: +86-571-87688883

Fax: +86-571-87688815

Email: overseas@dahuatech.com

Website: www.dahuasecurity.com






English

Important Safeguards and Warnings

This Chapter describes the contents covering proper handling of the device, hazard prevention, and prevention of property damage. Read these contents carefully before using the device, comply with them when using, and keep it well for future reference.

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Safety Requirement

- Abide by local electrical safety standards to ensure that the voltage is stable and complies with the power supply requirement of the device.
- Transport, use, and store the device under the allowed humidity and temperature conditions. Refer to the corresponding technical specifications of

- device for specific working temperature and humidity.
- Do not place the device in a location exposed to dampness, dust, extreme hot or cold, strong electronic radiation, or unstable lighting conditions.
- Do not install the device in a place near the heat source, such as radiator, heater, furnace, or other heat generating device to avoid fire.
- Prevent liquid from flowing into the device to avoid damage to internal components.
- Install the device horizontally or install on the stable place to prevent it from falling.
- Install the device in a well-ventilated place, and do not block the ventilation of the device.
- Do not disassemble the device arbitrarily.
- Avoid heavy stress, violent vibration, and soaking during during transportation, storage, and installation. Complete package is necessary during the transportation.
- Use the factory package or the equivalent for transportation.

Battery

Low battery power affects the operation of the RTC, causing it to reset at every power-up. When the battery needs replacing, a log message will appear in the product's server report. For more information about the server report, see the product's setup pages or contact Dahua support.



WARNING

- Risk of explosion if the battery is incorrectly replaced.
- Replace only with an identical battery or a battery which is recommended by Dahua.
- Dispose of used batteries according to local regulations or the battery manufacturer's instructions.




Polski



Ważne środki ostrożności i ostrzeżenia

Niniejszy rozdział opisuje właściwe sposoby korzystania z urządzenia, sposoby zapobiegania zagrożeniom, a także sposoby zapobiegania uszkodzeniu mienia. Przed rozpoczęciem korzystania z urządzenia zapoznaj się dokładnie z tymi informacjami i zachowaj je na przyszłość do celów referencyjnych.

Instrukcje dot. bezpieczeństwa

W podręczniku mogą pojawić się następujące symbole. Ich znaczenie wyjaśnia poniższa tabela.

Symbol	Znaczenie
 ZAGROŻENIE	Oznacza potencjalne zagrożenie wysokiego stopnia, którego nieuniknięcie może skutkować poważnymi urazami lub śmiercią.
 OSTRZEŻENIE	Oznacza potencjalne zagrożenie średniego lub niskiego stopnia, którego nieuniknięcie może skutkować pomniejszymi lub średnimi urazami.
 UWAGA	Oznacza potencjalne zagrożenie, którego nieuniknięcie może skutkować zniszczeniem mienia, utratą danych, spadkiem wydajności lub mieć inne nieprzewidziane skutki.

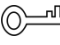Symbol	Znaczenie
 WSKAZÓWKI	Oznacza wskazówki pozwalające na rozwiązanie problemu lub oszczędność czasu.
 UWAGA	Oznacza informacje uzupełniające tekst główny.

Wymogi dot. Bezpieczeństwa

- Przestrzegaj lokalnych standardów bezpieczeństwa elektrycznego celem upewnienia się, że źródło napięcia jest stabilne i zgodne z wymogami określonymi dla urządzenia.
- Urządzenie należy transportować, używać i przechowywać w warunkach o dozwolonym poziomie wilgotności i temperatury. Szczegółowe informacje na temat wilgotności i temperatury roboczej znaleźć można w odpowiedniej specyfikacji technicznej urządzenia.
- Nie umieszczaj urządzenia w miejscach narażonych na wilgoć, kurz, ekstremalne temperatury, silne promieniowanie elektroniczne oraz niestabilne warunki oświetleniowe.
- Nie instaluj urządzenia w pobliżu źródeł ciepła, takich jak kaloryfery, grzałki, piece bądź inne urządzenia generujące ciepło, aby zapobiegać wystąpieniu pożaru.
- Zabezpiecz urządzenie przed dostaniem się do jego wnętrza cieczy, ponieważ może to spowodować uszkodzenie komponentów wewnętrznych.
- Zamontuj urządzenie poziomo lub wybierz stabilne miejsce, tak aby wyeliminować ryzyko upadku.
- Zamontuj urządzenie w dobrze wentylowanym miejscu i upewnij się, że jego otwory wentylacyjne nie są zablokowane.
- Nie rozmontowuj urządzenia samodzielnie.
- Chroń urządzenie przed dużymi obciążeniami i naprężeniami, silnymi wibracjami oraz zalaniem zarówno podczas transportu, przechowywania, jak i montażu. Na potrzeby transportu wymagane jest korzystanie z kompletnego opakowania.
- Do transportu używaj oryginalnego opakowania lub innego zapewniającego podobny poziom ochrony.

Akumulator

Niski poziom naładowania akumulatora wpływa na działanie zegara czasu rzeczywistego, powodując jego resetowanie przy każdym włączeniu. Gdy akumulator wymaga wymiany, w raporcie serwerowym dla produktu pojawi się stosowna wiadomość. Aby uzyskać więcej informacji na temat raportu serwerowego, zapoznaj się z instrukcjami konfiguracji urządzenia lub skontaktuj się z personelem pomocy technicznej firmy Dahua.



OSTRZEŻENIE

- W przypadku niewłaściwej wymiany akumulatora występuje zagrożenie wybuchem.
- Akumulator należy zastępować wyłącznie takim samym typem lub innym typem zalecanym przez firmę Dahua.
- Akumulatory należy utylizować zgodnie z lokalnymi regulacjami lub instrukcjami producenta akumulatora.






Dansk

Vigtige sikkerhedsanvisninger og advarsler

Kapitlet beskriver korrekt håndtering af produktet, undgåelse af risici og undgåelse af skader på ejendom. Læs kapitlet omhyggeligt, før du bruger produktet, overhold alle anvisninger og advarsler under brugen, og gem kapitlet til senere brug.

Sikkerhedsanvisninger

Følgende signalord med beskrivelse kan forekomme i vejledningen.

Signalord	Beskrivelse
 FARE	Angiver høj risiko, som, hvis den ikke undgås, kan medføre død eller alvorlig personskade.
 ADVARSEL	Angiver middel eller lav risiko, som, hvis den ikke undgås, kan medføre lettere til moderat personskade.
 FORSIGTIG	Angiver mulig risiko, som hvis den ikke undgås, kan resultere i skade på ejendom, tab af data, reduceret ydelse eller uforudsigelige resultater.
 TIPS	Indeholder forslag, som hjælper dig med at løse et problem eller sparer tid.
 BEMÆRK	Indeholder yderligere oplysninger, som understreger og supplerer teksten.

Sikkerhedskrav

- Følg lokale standarder for elsikkerhed for at sikre, at spændingen er stabil og i overensstemmelse med produktets krav til strømforsyning.
- Transportér, brug og opbevar produktet i henhold til de tilladte klimatiske forhold (temperatur og luftfugtighed). Se produktets tekniske specifikationer for specifik temperatur og luftfugtighed ved drift.
- Placér ikke produktet et sted med fugt, støv, stærk varme eller kulde, stærk elektronisk udstråling eller ustabile lysforhold.
- Installér ikke produktet i nærheden af en varmekilde, såsom en radiator, et varmeapparat, et centralfyr eller andre varmeafgivende enheder, for at undgå ildebrand.
- Undgå, at væske løber ind i produktet og dermed forårsager skade på de indvendige komponenter.
- Installér produktet vandret, eller installér det et stabilt sted for at undgå, at det falder ned.
- Installér produktet et sted med god udluftning, og blokér ikke produktets ventilationsåbninger.
- Adskil ikke produktet.
- Undgå stærkt tryk, kraftige vibrationer og gennemblødning under transport, opbevaring og installation. Produktet skal være fuldt emballeret under transport.
- Brug fabriksemballage eller tilsvarende til transporten.

Batteri

Lav batterispænding påvirker driften af realtidsuret og får uret til at nulstille, hver gang produktet tændes. Der vises en logbesked i produktets serverrapport, når batteriet skal udskiftes. Se konfigurationssiderne til produktet, eller kontakt Dahuas supportteam for at få flere oplysninger om serverrapporten.

ADVARSEL

- Der er risiko for eksplosion, hvis batteriet udskiftes forkert.
- Udskift kun med et tilsvarende batteri eller et batteri, der anbefales af Dahua.

- Bortskaf brugte batterier i overensstemmelse med lokale bestemmelser eller batteriproducentens anvisninger.






Suomi

Tärkeitä varotoimenpiteitä ja varoituksia

Tässä luvussa kuvataan laitteen asianmukainen käsittely, vaarojen torjunta ja omaisuusvahinkojen estäminen. Lue tämä sisältö huolellisesti ennen laitteen käyttämistä ja noudata näitä ohjeita, kun käytät laitetta. Säilytä ohjeet tulevia tarpeita varten.

Turvallisuusohje

Seuraavat luokitellut huomiosanat kuvatulla merkityksellä saattavat esiintyä oppaassa.

Huomiosanat	Merkitys
 VAARA	Ilmaisee suuren potentiaalisen vaaran, joka johtaa kuolemaan tai vakavaan loukkaantumiseen, jos sitä ei vältetä.
 VAROITUS	Ilmaisee keskisuuren tai pienen potentiaalisen vaaran, joka saattaa johtaa lievään tai kohtalaiseen loukkaantumiseen, jos sitä ei vältetä.
 HUOMIO	Ilmaisee mahdollisen vaarallisen tilanteen, joka saattaa johtaa omaisuusvahinkoon, tietojen menetykseen, suoritustehon heikkenemiseen tai odottamattomiin tuloksiin, jos sitä ei vältetä.
 VINKIT	Tarjoavat apua ongelmien ratkaisemiseen tai säästävät aikaa.
 HUOMAUTUS	Tarjoaa lisätietoa, joka korostaa tai täydentää tekstiä.

Turvallisuusvaatimus

- Noudata paikallisia sähköturvallisuusstandardeja varmistaaksesi, että jännite on vakaa ja vastaa laitteen virtalähteelle asetettuja vaatimuksia.
- Kuljeta, käytä ja säilytä laitetta sallituissa kosteus- ja lämpötilaolosuhteissa. Katso laitteen erityinen käyttölämpötila ja -kosteus laitteen vastaavista teknisistä tiedoista.
- Älä sijoita laitetta paikkaan, jossa se altistuu kosteudelle, pölylle, erittäin kuumalle tai kylmälle lämpötilalle, voimakkaalle sähkösäteilylle tai epävakaille valaistusolosuhteille.
- Älä asenna laitetta lähelle lämmönlähdettä, kuten lämpöpatteria, lämmitintä, uunia tai muuta lämpöä tuottavaa laitetta, tulipalon välttämiseksi.
- Vältä nesteen pääsemistä laitteen sisälle sisäisten komponenttien vahingoittumisen estämiseksi.
- Asenna laite vaakasuoraan tai asenna se vakaaseen paikkaan estääksesi sen kaatumisen.
- Asenna laite hyvin ilmastoituun paikkaan äläkä peitä laitteen tuuletusaukkoja.
- Älä pura laitetta omavaltaisesti.
- Vältä kovaa räsitusta, voimakasta tärinää ja kosteutta kuljetuksen, säilytyksen ja asennuksen aikana. Kuljetus vaatii täydellisen pakkaamisen.
- Käytä tehtaan pakkausta tai vastaavaa kuljetuksen aikana.

Paristo

Alhainen pariston varaustaso vaikuttaa tosiaikakellon (RTC:n) toimintaan nollaten sen jokaisella käynnistyskerralla. Lokiviesti ilmestyy tuotteen palvelinraporttiin, kun paristo on vaihdettava. Lisätietoa palvelinraportista saat tuotteen asetussivuilta tai ottamalla yhteyttä Dahuan tukeen.



VAROITUS

- Räjähdyksivaara, jos paristo asetetaan väärin paikalleen.
- Vaihda vain samanlaiseen paristoon tai Dahuan suosittelemaan paristoon.
- Hävitä käytetty paristot ja akut paikallisten määräysten tai valmistajan ohjeiden mukaisesti.






Magyar

Fontos óvintézkedések és figyelmeztetések

A jelen Fejezet leírja az Eszköz megfelelő kezelését, a veszélyek megelőzését és a vagyoni károk megelőzését. Az Eszköz használata előtt olvassa el figyelmesen, a használata során tartsa be, és őrizze meg jól jövőbeni hivatkozás céljára.

Biztonsági utasítások

Az Útmutatóban az alábbi meghatározott jelentéssel bíró kategorizált figyelmeztetések jelenhetnek meg.

Figyelmeztetés	Jelentés
 VESZÉLY	Nagy potenciális veszélyt jelez, amely, ha nem kerül el, halált vagy súlyos sérülést okoz.
 FIGYELEM	Közepes vagy kis potenciális veszélyt jelez, amely, ha nem kerül el, enyhe vagy mérsékelt sérülést okozhat.
 VIGYÁZAT	Olyan potenciális kockázatot jelez, amely, ha nem kerül el, vagyoni kárt, adatvesztést, alacsonyabb teljesítményt vagy kiszámíthatatlan eredményt okozhat.
 TIPPEK	Olyan módszereket biztosít, amelyek segítenek megoldani a problémáját vagy időt takarítanak meg.
 MEGJEGYZÉSEK	További információkat biztosít a szöveg kiemelésével és kiegészítésével.

Biztonsági követelmények

- Tartsa be a helyi elektromos biztonsági szabványokat annak biztosítása érdekében, hogy a feszültség stabil és az eszköz áramellátási követelményének megfelelő legyen.
- Az eszközt a megengedett páratartalom és hőmérséklet viszonyok között szállítsa, használja, és tárolja. A konkrét üzemi hőmérsékletet és páratartalmat megtalálja az eszköz műszaki leírásában.
- Ne tegye az eszközt olyan helyre, ahol nedvességnek, pornak, rendkívüli melegnek vagy hidegnek, erős elektronikus sugárzásnak, vagy instabil fényviszonyoknak van kitéve.

- A tűz elkerülése érdekében ne telepítse az eszközt hőforrás, mint például radiátor, hőszugárzó, kemence, vagy más hőtermelő eszköz közelében lévő helyre.
- A belső alkatrészek károsodásának elkerülése érdekében akadályozza meg, hogy folyadék folyjon az eszközbe.
- A leesésének megakadályozása érdekében az eszközt vízszintesen telepítse, vagy stabil helyre telepítse.
- Az eszközt jól szellőző helyre telepítse, és ne blokkolja az eszköz szellőzését.
- Önkényesen ne szerelje szét az eszközt.
- A szállítás, tárolás és telepítés során kerülje a nagy igénybevételt, erős rezgést, és az eláztatást. A szállítás során a teljes csomagolásra szükség van.
- A szállításhoz gyári csomagolást vagy azzal egyenértékűt használjon.

Elem

Az alacsony elem töltöttségi szint hatással van az RTC működésére, minden bekapcsoláskor alaphelyzetbe áll. Amikor az elemet cserélni kell, egy napló üzenet jelenik meg a termék szerver jelentésében. A szerver jelentésről további információkat talál a termék beállítási oldalain, vagy forduljon a Dahua támogatáshoz.



FIGYELEM

- Robbanásveszély, ha az elemet nem megfelelőre cseréli.
- Csak ugyanolyan elemre vagy a Dahua által ajánlott elemre cserélje.
- A használt elemet a helyi előírások vagy az elemgyártó utasításai szerint ártalmatlanítsa.

Б ъ л г а р с к и



Важни предпазни мерки и предупреждения

Тази глава описва инструкциите за правилна експлоатация на устройството, за предотвратяване на опасностите и материалните щети. Прочетете внимателно тези инструкции, преди да използвате устройството, спазвайте ги при използването на устройството, и ги запазете за бъдещи справки.

Инструкции за безопасност

Ръководството съдържа следните определени сигнални думи.

Сигнални думи	Значение
ОПАСНОСТ	Показва висока потенциална опасност, която, ако не бъде избегната, ще доведе до смърт или сериозно нараняване.
ПРЕДУПРЕЖДЕНИЕ	Показва средна или ниска потенциална опасност, която, ако не бъде избегната, може да доведе до леки или умерени наранявания.
ВНИМАНИЕ	Посочва потенциален риск, който, ако не бъде избегнат, може да доведе до материални щети, загуба на данни, по-ниска производителност или непредсказуем резултат.

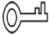Сигнални думи	Значение
 СЪВЕТИ	Обозначава начини, които да ви помогнат да разрешите проблем или да спестите време.
 ЗАБЕЛЕЖКА	Предоставя допълнителна информация като акцент и допълнение към основния текст.

Изисквания за безопасност

- Спазвайте местните стандарти за електрическа безопасност, за да осигурите стабилно напрежение, отговарящо на изискването за захранване на устройството.
- Транспортирайте, използвайте и съхранявайте устройството при указаните условия на влажност и температура. Направете справка в съответните технически спецификации на устройството за конкретната работна температура и влажност.
- Не поставяйте устройството на място, изложено на влага, прах, много висока или ниска температура, със силно електронно излъчване или на място с променливо осветление.
- Не поставяйте устройството близо до източник на топлина, като радиатор, нагревател, пещ или друго устройство за генериране на топлина, за да избегнете пожар.
- Не допускайте в устройството да попадне течност, за да не се повредят вътрешните компоненти.
- Монтирайте устройството хоризонтално или го поставете на стабилно място, за да не падне.
- Монтирайте устройството на добре проветриво място и не блокирайте вентилацията на устройството.
- Не разглобявайте устройството произволно.
- Избягвайте силно натоварване, вибрации и намокряне по време на транспортиране, съхранение и монтаж. При транспортиране следва да се опакова напълно.
- Използвайте за транспортиране фабричната опаковка или подобна.

Батерия

Ниската мощност на батерията влияе на работата на часовника в реално време (RTC), което води до нулиране при всяко включване. Когато батерията трябва да бъде сменена, в отчета на сървър на продукта ще се покаже съобщение. За повече информация относно отчета на сървър вижте страниците за настройка на продукта или се свържете с екипа на Dahua.



ПРЕДУПРЕЖДЕНИЕ

- Ако батерията е неправилно подменена, има риск от експлозия.
- Сменяйте само със същата или батерия, препоръчана от Dahua.
- Изхвърляйте използваните батерии в съответствие с местните разпоредби или инструкциите на производителя на батерията.






Românesc

Masuri de siguranta si Atentionari

Acest capitol descrie indicatiile de utilizare corecta a Dispozitivului , prevenirea pericolului si prevenirea distrugerii proprietatii.Cititi aceste randuri inaintea folosirii

Instrucțiuni de siguranță

Următoarele semne categorizate pot apărea în Ghid.

Signal Words	Meaning
 PERICOL	Indică un risc potențial ridicat care, dacă nu este evitat, va duce la deces sau vătămări grave.
 AVERTIZARE	Indică un pericol potențial mediu sau scăzut care, dacă nu este evitat, poate duce la răni ușoare sau moderate.
 ATENȚIE	Indică un risc potențial care, dacă nu este evitat, ar putea duce la daune materiale, pierderi de date, performanțe mai scăzute sau rezultate imprevizibile.
 SFATURI	Oferă metode care să vă ajute să rezolvați o problemă sau să economisiți timp.
 NOTA	Oferă informații suplimentare ca accent și supliment la text.

Cerințe de siguranță

- Respectați standardele locale de siguranță electrică pentru a vă asigura că tensiunea este stabilă și respectă cerințele de alimentare ale dispozitivului.
- Transportați, utilizați și depozitați dispozitivul sub condițiile de umiditate și temperatură admise. Consultați specificațiile tehnice corespunzătoare ale dispozitivului pentru temperatură și umiditate specifice de lucru.
- Nu așezați dispozitivul într-o locație expusă la umezeală, praf, extrem de caldă sau rece, de radiații electronice puternice sau de condiții de iluminare instabile.
- Nu instalați dispozitivul într-un loc în apropierea sursei de căldură, cum ar fi radiatorul, încălzitorul, cuptorul sau alt dispozitiv generator de căldură, pentru a evita incendiul.
- Împiedicați curgerea lichidului în dispozitiv pentru a evita deteriorarea componentelor interne.
- Instalați dispozitivul în poziție orizontală sau instalați-l pe un loc stabil pentru a preveni căderea acestuia.
- Instalați aparatul într-un loc bine ventilat și nu blocați ventilația aparatului.
- Nu dezamblați dispozitivul voit.
- Evitați loviturile puternice, vibrațiile violente și umiditatea în timpul transportului, depozitării și instalării. Este necesar un pachet complet în timpul transportului.
- Utilizați pachetul de fabrica sau echivalent în timpul transportului.

Bateriile

Puterea redusă a bateriei afectează funcționarea RTC, determinând resetarea la fiecare pornire. Când bateria are nevoie de înlocuire, în raportul serverului produsului va apărea un mesaj de jurnal. Pentru mai multe informații despre raportul serverului, consultați paginile de configurare ale produsului sau contactați asistența Dahua.



AVERTIZARE

- Risc de explozie dacă bateria este înlocuită incorect.
- Înlocuiți numai cu o baterie identică sau cu o baterie recomandată de Dahua.
- Aruncați bateriile uzate în conformitate cu reglementările locale sau cu instrucțiunile producătorului bateriei.






Čeština

Důležitá bezpečnostní opatření a varování

Tato kapitola popisuje obsah vztahující se na správnou manipulaci se zařízením, prevenci nebezpečí a prevenci škod na majetku. Pečlivě si tyto informace přečtěte před použitím zařízení, během používání zařízení je dodržujte a uschovejte je pro budoucí použití.

Bezpečnostní pokyny

Tato příručka může obsahovat následující kategorie signálních slov.

Signální slova	Význam
 NEBEZPEČÍ	Označuje možnost závažného nebezpečí, které, pokud by mu nebylo zamezeno, může mít za následek smrt nebo vážné zranění.
 VAROVÁNÍ	Označuje možnost středně nebo málo závažného nebezpečí, které, pokud by mu nebylo zamezeno, může mít za následek lehké nebo nepříliš závažné zranění.
 UPOZORNĚNÍ	Označuje možné riziko, které, pokud by mu nebylo zamezeno, může mít za následek škodu na majetku, ztrátu dat, snížení výkonu nebo neočekávaný výsledek.
 TIPY	Uvádí metody, které vám pomohou vyřešit problém nebo vám ušetří čas.
 POZNÁMKA	Poskytuje dodatečné informace formou důrazu a doplnění textu.

Bezpečnostní požadavek

- Dodržujte místní normy pro elektrickou bezpečnost pro zajištění stabilního napětí a dodržení požadavků na napájení zařízení.
- Zařízení přepravujte, používejte a skladujte při odpovídající teplotě a vlhkosti. Konkrétní pracovní teplotu a vlhkost naleznete v příslušných technických specifikacích zařízení.
- Neumísťujte zařízení tam, kde bude vystaveno vlhkosti, prachu, extrémnímu horku nebo chladu, silnému elektronickému záření nebo nestabilním světelným podmínkám.
- Neinstalujte zařízení v blízkosti zdrojů tepla, jako je radiátor, ohřívač, kotel nebo jiné zařízení generující teplo, aby nedošlo k požáru.
- Zamezte proniknutí kapalin do zařízení, aby nedošlo k poškození jeho vnitřních součástí.
- Zařízení instalujte vodorovně nebo je instalujete na stabilním místě, aby bylo chráněno před pádem.

- Zařízení instalujte na dobře větraném místě a neblokujte odvětrávání zařízení.
- Zařízení svévolně nedemontujte.
- Během přepravy, skladování a instalace zamezte silnému tlaku, prudkým vibracím a namočení. Při přepravě je nezbytné úplné zabalení.
- Při přepravě použijte obal z výroby nebo obdobný obal.

Baterie

Nízké nabití baterie ovlivňuje fungování hodin ve skutečném čase a způsobuje, že se při každém spuštění resetují. V případě, že je třeba baterii vyměnit, se v serverové zprávě produktu zobrazí zpráva protokolu. Další informace o serverové zprávě naleznete na stránkách o nastavení produktu, případně kontaktujte podporu společnosti Dahua.



VAROVÁNÍ

- Nebezpečí výbuchu v případě nesprávné výměny baterie.
- Vyměňte pouze za totožnou baterii nebo baterii doporučenou společností Dahua.
- Použité baterie likvidujte v souladu s místními předpisy nebo pokyny výrobce baterie.




Ε λ λ η ν ι κ ά



Σημαντικές Διασφαλίσεις και Προειδοποιήσεις

Αυτό το Κεφάλαιο περιγράφει το περιεχόμενο που καλύπτει το σωστό χειρισμό της Συσκευής, την πρόληψη των κινδύνων και την πρόληψη της καταστροφής της ιδιοκτησίας. Διαβάστε προσεκτικά τα αναγραφόμενα πριν χρησιμοποιήσετε τη Συσκευή, τηρήστε τα κατά τη χρήση και κρατήστε τα καλά για μελλοντική χρήση.

Οδηγίες Ασφαλείας

Τα ακόλουθα κατηγοριοποιημένα σήματα με λέξεις έχουν καθορισμένη σημασία και ενδέχεται να εμφανίζονται στις Οδηγίες Χρήσης.

Σήματα με λέξεις	Σημασία
 Κ Ι Ν Δ Υ Ν Ο Σ	Δείχνει έναν υψηλό δυνητικό κίνδυνο, ο οποίος, εάν δεν αποφευχθεί, θα έχει ως αποτέλεσμα θάνατο ή σοβαρό τραυματισμό.
 Π Ρ Ο Ε Ι Δ Ο Π Ο Ι Η Σ Η	Υποδεικνύει έναν μεσαίο ή χαμηλό δυνητικό κίνδυνο, ο οποίος, αν δεν αποφευχθεί, θα μπορούσε να προκαλέσει ελαφρύ ή μέτριο τραυματισμό.
 Π Ρ Ο Σ Ο Χ Η	Δείχνει έναν πιθανό κίνδυνο, ο οποίος, εάν δεν αποφευχθεί, θα μπορούσε να προκαλέσει ζημιά στην ιδιοκτησία, απώλεια δεδομένων, χαμηλότερη απόδοση ή απρόβλεπτο αποτέλεσμα.

Σήματα με λέξεις	Σημασία
 Σ Υ Μ Β Ο Τ Λ Ε Σ	Παρέχει μεθόδους που θα σας βοηθήσουν να επιλύσετε ένα πρόβλημα ή να εξοικονομήσετε χρόνο.
 Σ Η Μ Ε Ι Ω Σ Η	Παρέχει πρόσθετες πληροφορίες δίνοντας έμφαση και συμπληρώνοντας το κείμενο.

Απαιτήσεις ασφαλείας

- Τηρήστε τα τοπικά πρότυπα ηλεκτρικής ασφάλειας για να βεβαιωθείτε ότι η τάση είναι σταθερή και συμμορφώνεται με την απαίτηση τροφοδοσίας της συσκευής.
- Μεταφέρετε, χρησιμοποιήστε και αποθηκεύστε τη συσκευή υπό τις επιτρεπόμενες συνθήκες υγρασίας και θερμοκρασίας. Ανατρέξτε στις αντίστοιχες τεχνικές προδιαγραφές της συσκευής για τη συγκεκριμένες συνθήκες λειτουργίας θερμοκρασίας και υγρασίας.
- Μην τοποθετείτε τη συσκευή σε θέση που είναι εκτεθειμένη σε υγρασία, σκόνη, ακραία ζέστη ή κρύο, ισχυρή ηλεκτρονική ακτινοβολία ή ασταθές φωτισμό.
- Μην τοποθετείτε τη συσκευή σε μέρος κοντά στην πηγή θερμότητας, όπως καλοριφέρ, θερμάστρα, κλίβανο ή άλλη συσκευή παραγωγής θερμότητας για να αποφύγετε τη φωτιά.
- Αποφύγετε να ρέει υγρό μέσα στη συσκευή για να αποφύγετε την αποδυνάμωση των εσωτερικών εξαρτημάτων.
- Εγκαταστήστε τη συσκευή οριζόντια ή εγκαταστήστε την στο σταθερό μέρος για να μην πέσει.
- Τοποθετήστε τη συσκευή σε καλά αεριζόμενο μέρος και μην εμποδίζετε τον εξαερισμό της συσκευής.
- Μην αποσυναρμολογείτε αυθαίρετα τη συσκευή.
- Αποφύγετε την υψηλή συμπίεση, το υψηλό βάρος, τη βίαιη δόνηση και τη διαβροχή κατά τη διάρκεια της μεταφοράς, της αποθήκευσης και της εγκατάστασης. Το πλήρες πακέτο είναι απαραίτητο κατά τη μεταφορά.
- Χρησιμοποιήστε το εργοστασιακό πακέτο ή το αντίστοιχο για μεταφορά.

Μπαταρία

Η χαμηλή ισχύς της μπαταρίας επηρεάζει τη λειτουργία του RTC, προκαλώντας την επαναφορά του σε κάθε επανεκκίνηση. Όταν η μπαταρία χρειάζεται αντικατάσταση, ένα μήνυμα συμβάντος θα εμφανιστεί στην αναφορά συμβάντων του διακομιστή. Για περισσότερες πληροφορίες σχετικά με την αναφορά διακομιστή, ανατρέξτε στις σελίδες εγκατάστασης του προϊόντος ή επικοινωνήστε με την υποστήριξη Dahua.



Π Ρ Ο Ε Ι Δ Ο Π Ο Ι Η Σ Η






- Κίνδυνος έκρηξης σε περίπτωση λανθασμένης αντικατάστασης της μπαταρίας.
- Αντικαταστήστε μόνο με πανομοιότυπη μπαταρία ή μπαταρία που συνιστάται από τη Dahua.
- Απορρίψτε τις χρησιμοποιημένες μπαταρίες σύμφωνα με τους τοπικούς κανονισμούς ή τις οδηγίες του κατασκευαστή της μπαταρίας.

Važne zaštitne mjere i upozorenja

Ovo poglavlje opisuje sadržaj koji obuhvaća pravilno rukovanje uređajem, sprječavanje opasnosti i sprečavanje oštećenja imovine. Pažljivo pročitajte ove sadržaje prije korištenja Uređaja, pridržavajte ih se pri upotrebi i sačuvajte ih za buduću uporabu.

Sigurnosne upute

U vodiču se mogu pojaviti sljedeće kategorizirane signalne riječi s definiranim značenjem.

Signal Words	Meaning
 OPASNOST	Označava veliku potencijalnu opasnost koja će, ako se ne izbjegne, rezultirati smrću ili ozbiljnim ozljedama.
 UPOZORENJE	Označava srednju ili malu potencijalnu opasnost koja, ako se ne izbjegne, može rezultirati malom ili umjerenom ozljedom.
 OPREZ	Ukazuje na potencijalni rizik koji, ako se ne izbjegne, može rezultirati oštećenjem imovine, gubitkom podataka, manjom učinkovitošću ili nepredvidivim rezultatom.
 SAVJETI	Pružava vam metode kojim vam pomaže riješiti problem ili će vam uštedjeti vrijeme.
 BILJEŠKA	Pružava dodatne informacije kao naglasak i dopunu teksta.

Sigurnosni zahtjevi

- Avoid heavy stress, violent vibration, and soaking during during transportation, storage, and installation. Complete package is necessary during the transportation.
- Pridržavajte se lokalnih električnih sigurnosnih standarda kako biste osigurali da je napon stabilan i da udovoljava zahtjevima napajanja uređaja.
- Prijenosite, upotrebljavajte i pohranjujte uređaj pod dopuštenim uvjetima vlage i temperature. Pogledajte odgovarajuće tehničke specifikacije uređaja za određenu radnu temperaturu i vlagu.
- Nemojte postavljati uređaj na mjesto izloženo vlazi, prašini, ekstremno vrućoj ili hladnoj okolini, jakom elektronskom zračenju ili nestabilnim uvjetima osvjetljenja.
- Kako biste izbjegli požar nemojte postavljati uređaj na mjesto u blizini izvora topline, kao što su radijator, grijač, peć ili neki drugi uređaj za stvaranje topline.
- Spriječite da tekućina teče u uređaj kako bi se izbjegla šteta na unutarnjim dijelovima.
- Ugradite uređaj vodoravno ili ga postavite na stabilno mjesto kako biste spriječili padanje.
- Ugradite uređaj na dobro prozračeno mjesto i ne blokirajte ventilaciju uređaja.
- Nemojte rastavljati uređaj samovoljno.
- Izbjegavajte teški stres, nasilne vibracije i natapanje tijekom prijevoza, skladištenja i instalacije. Prilikom prijevoza potrebno je koristiti tvorničko

- zaštitno pakiranje.
- Koristite tvorničko pakiranje ili ekvivalent za transport.

Baterija

Niska baterija utječe na rad RTC, uzrokujući da se resetira pri svakom uključivanju. Kad bateriju treba zamijeniti, pojaviti će se poruka u izvješću poslužitelja (server). Dodatne informacije o izvješću poslužitelja (server) potražite na stranicama priručnika proizvođača ili se obratite Dahua podršci.



UPOZORENJE

- Rizik od eksplozije ako se baterija nepravilno zamijeni.
- Zamijeniti samo sa jednakom baterijom ili sa baterijom koja je preporučena od strane Dahua Technology.
- instructions. Dotrajale baterije treba zbrinuti u skladu sa lokalnim propisima ili u skladu s uputama proizvođača baterije.

Slovenčina

Dôležité bezpečnostné pokyny a varovania

Táto kapitola obsahuje informácie týkajúce sa správnej manipulácie so zariadením, prevencie pred nebezpečenstvom a prevencie poškodenia majetku. Pred používaním zariadenia si pozorne prečítajte tieto informácie, dodržiavajte ich pri používaní a uchovajte ich na budúce použitie.

Bezpečnostné pokyny

V príručke sa môžu nachádzať nasledujúce kategorizované signálne výrazy s definovaným významom.

Signálne výrazy	Význam
NEBEZPEČENSTVO	Označuje vysoké potenciálne nebezpečenstvo, ktoré spôsobí smrť alebo vážne zranenie, ak sa mu nevyhnete.
VAROVANIE	Označuje stredné alebo nízke potenciálne nebezpečenstvo, ktoré môže mať za následok mierne alebo stredne ťažké zranenie, ak sa mu nevyhnete.
POZOR	Označuje potenciálne riziko, ktoré môže viesť k poškodeniu majetku, strate údajov, zníženiu výkonu alebo nepredvídateľnému výsledku, ak sa mu nevyhnete.
TIPY	Poskytuje metódy, ktoré vám pomôžu vyriešiť problém alebo ušetriť čas.
POZNÁMKA	Poskytuje ďalšie informácie ako zdôraznenie a doplnenie textu.

Požiadavky na bezpečnosť

- Dodržujte miestne elektrické bezpečnostné normy, aby ste zabezpečili, že napätie je stabilné a zodpovedá požiadavkám na napájanie zariadenia.
- Zariadenie prepravujte, používajte a uchovávajte pri povolených podmienkach

vlhkosti a teploty. Prečítajte si príslušné technické špecifikácie zariadenia pre špecifickú pracovnú teplotu a vlhkosť.

- Zariadenie neumiestňujte na miesto vystavené vlhkosti, prachu, extrémnemu teplu alebo chladu, silnému elektronickému žiareniu alebo nestabilným podmienkam osvetlenia.
- Zariadenie neinštalujte na miesto, ktoré sa nachádza blízko zdroja tepla, ako je napríklad radiátor, ohrievač, pec alebo iné zariadenie na tvorbu tepla. Predídete tak vzniku požiaru.
- Zabráňte vnikaniu kvapaliny do zariadenia, aby nedošlo k poškodeniu vnútorných komponentov.
- Zariadenie nainštalujte horizontálne alebo ho nainštalujte na stabilné miesto, aby ste zabránili pádu.
- Zariadenie nainštalujte na dobre vetranom mieste a neblokujte ventiláciu zariadenia.
- Zariadenie svojvoľne nerozoberajte.
- Počas prepravy, skladovania a inštalácie sa vyhnite silnému namáhaniu, prudkým vibráciám a namáčaniu. Počas prepravy je potrebné prepravovať kompletne balenie.
- Na prepravu použite továrenské balenie alebo jeho ekvivalent.

Batéria

Nízka kapacita batérie ovplyvňuje prevádzku RTC, čo spôsobí jeho vynulovanie pri každom zapnutí. Keď je batériu potrebné vymeniť, v správe servera produktu sa zobrazí hlásenie. Ďalšie informácie o hlásení servera nájdete na stránkach s nastaveniami produktu alebo sa obráťte na podporu spoločnosti Dahua.



VAROVANIE

- Nebezpečenstvo výbuchu, ak je batéria nesprávne vymenená.
- Vymeňte iba za tú istú batériu alebo batériu, ktorú odporúča spoločnosť Dahua.
- Použité batérie zlikvidujte v súlade s miestnymi predpismi alebo pokynmi výrobcu batérie.


Српски





Važne Zaštitne mere i Upozorenja

Ovo poglavlje opisuje sadržaj koji pokriva pravilno rukovanje uređajem, sprečavanje opasnosti i sprečavanje oštećenja imovine. Pažljivo pročitajte ove sadržaje pre korišćenja uređaja, pošaljite ih kada koristite i čuvajte ga za buduću referencu.

Bezbednosna Uputstva

Sledeće kategorije reči sa definisanim značenjem mogu se pojaviti u „Vodiču“.

Oznaka	Značenje
 OPASNOST	Označava visoku potencijalnu opasnost koja će, ako se i ne izbegne, rezultirati smrću ili ozbiljnim povredama.

Oznaka	Značenje
 UPOZORENJE	Označava opasnost srednje ili niske potencijale koja bi, ukoliko se ne izbegne, mogla dovesti do blagih ili umerenih povreda.
 OPREZ	Označava potencijalni rizik koji bi, ukoliko se to ne izbegne, mogao dovesti do oštećenja imovine, gubitka podataka, niže performanse ili nepredvidivog rezultata.
 PREPORUKE	Pruža metode za pomoć u rešavanju problema ili uštede vremena.
 BELEŠKA	Pruža dodatne informacije kao naglasak i dodatak tekstu.

Bezbednosna Uputstva

- Pridržavajte se lokalnih standarda električne sigurnosti kako biste bili sigurni da je napon stabilan i da odgovara zahtevu za napajanje uređaja.
- Prevoz, korišćenje i skladištenje uređaja treba da budu u skladu sa dozvoljenim uslovima vlage i temperaturnim uslovima. Pogledajte odgovarajuće tehničke specifikacije uređaja koji se odnose na specifičnu radnu temperaturu i vlažnost vazduha.
- Nemojte postavljati uređaj na mesto izloženo vlazi, prašini, ekstremnom vrućem ili hladnom vazduhu, jakom elektronskom zračenju ili nestabilnim uslovima osvetljenja.
- Ne postavljajte uređaj na mesto blizu izvora toplote, kao što je radijator, grejač, peć ili drugi uređaj za proizvodnju toplote kako biste izbegli požar.
- Sprečite tečnost da teče u uređaj kako bi se izbeglo oštećenje unutrašnjih komponenti.
- Instalirajte uređaj horizontalno ili postavite na stabilno mesto kako biste sprečili padanje.
- Ugradite uređaj na dobro provetreno mesto i ne blokirajte ventilaciju uređaja.
- Nemojte rastavljati uređaj proizvoljno.
- Izbegavajte jak pritisak, nasilne vibracije i usisavanje tokom transporta, skladištenja i instalacije. Kompletan paket je neophodan tokom transporta.
- Koristite fabričko pakovanje ili ekvivalent u toku transporta.

Baterija

Baterija male snage utiče na rad RTC-a, dovodeći do reseta pri svakom uključivanju. Kada se baterija mora zameniti, logovna poruka će se pojaviti u izveštaju servera proizvođača. Za više informacija o izveštaju servera, pogledajte stranice za podešavanje proizvođača ili kontaktirajte Dahua podršku.



UPOZORENJE

- Opasnost od eksplozije ako se baterija nepravilno zameni.
- Zamenite je samo sa identičnom baterijom ili sa baterijom koju preporučuje Dahua.
- Odložite iskorišćene baterije u skladu sa lokalnim propisima ili uputstvima proizvođača baterije.






Türkçe

Önemli Kurallar ve Uyarılar

Bu Bölüm, Cihazın doğru kullanımını, tehlike önlemeyi ve mal zararının önlenmesini kapsayan içerikleri anlatmaktadır. Cihazı kullanmadan önce bu içerikleri dikkatli şekilde okuyun, kullanırken bunlara uyun ve ileride başvurmak üzere saklayın.

Güvenlik Talimatları

Aşağıda, belirtilen açıklamaya sahip kategorize edilmiş uyarı sözcüklerini Kılavuzda görebilirsiniz.

Uyarı Sözcükleri	Anlamı
 TEHLİKE	Kaçınılması durumunda ölüm veya ciddi yaralanmalara neden olacak yüksek potansiyelli bir tehlikeyi belirtir.
 UYARI	Kaçınılması durumunda hafif veya orta dereceli yaralanmaya neden olabilecek orta veya düşük potansiyelli bir tehlikeyi belirtir.
 DİKKAT	Kaçınılması durumunda mal hasarına, veri kaybına, düşük performansa veya tahmin edilemeyen sonuca neden olabilecek potansiyel bir riski belirtir.
 İPUÇLARI	Bir problemi çözmeye veya zamandan tasarruf etmenize yardımcı olmak için yöntemler sunar.
 NOT	Metne pekiştirme ve ek olarak ilave bilgiler sağlar.

Güvenlik Gereksinimi

- Voltajın istikrarlı olduğundan ve cihazın güç kaynağı gereksinimine uygun olduğundan emin olmak için yerel elektrik güvenliği standartlarına uyun.
- Cihazı izin verilen nem ve sıcaklık şartları altında nakledin, kullanın ve saklayın. Belirli çalışma sıcaklığı ve nem değerleri için cihazın ilgili teknik özelliklerine bakın.
- Cihazı rutubete, toza, aşırı ısıya veya soğuğa, güçlü elektronik radyasyona veya değişken aydınlatma şartlarına maruz kalan bir yere yerleştirmeyin.
- Yangını önlemek için cihazı radyatör, ısıtıcı, fırın veya başka ısı üreten cihazlar gibi ısı kaynağına yakın bir yere monte etmeyin.
- İçerisindeki parçaların hasar görmesini önlemek için cihazın içerisine sıvıların girmesini önleyin.
- Cihazın düşmesini önlemek için yatay olarak veya dayanıklı bir yere monte edin.

- Cihazı iyi havalandırılan bir yere monte edin ve cihazın hava sirkülasyonunu engellemeyin.
- Cihazın parçalarını gelişigüzel sökmeyin.
- Cihazın nakliyesi, saklanması ve montajı esnasında ağır baskılardan, şiddetli sarsıntılardan ve sıvıya batmalardan kaçınin. Cihazın nakliyesi esnasında ambalajın tamamı gereklidir.
- Nakliye için fabrikasyon ambalajı ya da eş değerini kullanın.

Pil

Düşük pil gücü, her güç açma esnasında sıfırlanmasına neden olarak RTC'nin çalışmasını etkiler. Pillerin değiştirilmesi gerektiğinde ürünün sunucu raporunda bir günlük iletisi görüntülenir. Sunucu raporu hakkında daha fazla bilgi için ürünün kurulum sayfalarına bakın veya Dahua destek merkeziyle iletişime geçin.



UYARI

- Pil yanlış şekilde takılırsa patlama tehlikesi.
- Sadece aynı türde veya Dahua tarafından önerilen bir pil takın.
- Eski pilleri, yerel yönetmeliklere veya pil üreticisinin talimatlarına göre elden çıkarın.

עברית


חשיבות בעלי ואזהרות זהירות אמצעי

יש רכוש נזקי ומניעת בעיות מניעת, במכשיר נאות טיפול בנושא התכנים את מתאר זה פרק המכשיר הפעלת בעת לאורם לפעול, במכשיר שימוש לפני לב בתשומת אלה תכנים לקרוא עתידי לעיון אותם ולשמור.

בטיחות הנחיות

במדריך להופיע עשויות המוגדרים הפירושים עם הבאות המסווגות הסימון מילות.

משמעות	סימון מילות
לגרום עשויה, תימנע לא שאם, גבוהה בסבירות סכנה מציינת קשה לפציעה או למוות.	סכנה
עשויה, תימנע לא שאם, נמוכה או בינונית בסבירות סכנה מציינת בינונית או קלה לפציעה לגרום.	אזהרה
אובדן, לנזק לגרום עשויה, תימנע לא שאם לסכנה סבירות מציינת צפויות לא לתוצאות או הביצועים ברמת הפחתה, מידע.	זהירות
זמן לך שיחסכו או בעיות לפתור לך שיסייעו שיטות מספקות.	עצות

משמעות	סימון מילות
ולהשלמתו לטקסט להדגשה נוסף מידע מספקת	הערה 

בטיחות דרישת

- ותואם יציב שהמתח להבטיח מנת על בחשמל לבטיחות המקומיים התקנים לכל לציית יש המכשיר של החשמל אספקת לדרישות
- המותרים והלחות הטמפרטורה לתנאי בהתאם יעשו המוצר של ואחסון שימוש, הובלה המוגדרים וללחות לטמפרטורה המכשיר של המקבילים הטכניים למפרטים להתייחס יש עבודה לביצוע
- קרינה, קיצוניים חום או קור תנאי, אבק, לרטיבות חשוף במקום המכשיר את למקם אין יציבים לא תאורה תנאי או חזקה חשמלית
- מכשיר או כבשן, תנור, מקרן כגון, חום מקור בקרבת המכשיר את להתקין אין מנת על חום שפולט אחר
- הפנימיים למרכיביו נזק למנוע מנת על המכשיר על נוזל משפיכת להימנע יש יציב במקום או מאוזנת בצורה המכשיר את להתקין יש, לייפו שלא מנת על
- למכשיר האוויר מעבר את לחסום ולא היטב מאוורר במקום המכשיר את להתקין יש
- עצמך בכוחות המכשיר את לפרק אין
- אחסונו, המכשיר הובלת במהלך הרטבתו או חזק טלטול, כבד משקל מהצבת להימנע יש המלאה באריזתו להשתמש שי המכשיר העברת לשם. התקנתו או
- במקבילה או היצרן ידי על המסופקת באריזה להשתמש יש המכשיר העברת לשם

סוללה

צורך יש כאשר. שלו הדלקה בכל להתאפס לו ותגרום RTC-ה פעולת על תשפיע חלשה סוללה ח"דו אודות נוסף למידע. המוצר של השרת ח"דו אירועים יומן הודעת תופיע, הסוללה בהחלפת Dahua של התמיכה עם קשר ליצור או המוצר של ההגדרה בדפי לעיין יש, השרת



אזהרה

- לפיצוץ לגרום עלולה הסוללה של נכונה לא החלפה
- Dahua ידי על שמומלצת כזו או זהה בסוללה ורק אך להחליף יש
- היצרן של להנחיותיו או המקומיות לתקנות בהתאם משומשות סוללות לסלק יש




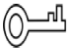

Français

Précautions et avertissements importants

Le contenu de ce chapitre aborde la bonne manipulation de l'appareil, la prévention des risques et la prévention des dommages matériels. Lisez ce contenu soigneusement avant d'utiliser l'appareil, respectez-le lorsque vous l'utilisez, et conservez-le pour vous y référer ultérieurement.

Précautions d'emploi

Les mentions d'avertissement catégorisées suivantes ayant un sens défini sont susceptibles d'apparaître dans le manuel.

Mentions d'avertissement	Signification
 DANGER	Indique un danger à risque élevé qui entraînera la mort ou des blessures graves si les instructions données ne sont pas respectées.
 AVERTISSEMENT	Indique une situation moyennement ou faiblement dangereuse qui entraînera des blessures faibles ou modérées si les instructions données ne sont pas respectées.
 AVERTISSEMENT	Indique une situation potentiellement dangereuse qui pourra entraîner des dommages de la propriété, des pertes de données, une performance moindre ou des résultats imprévisibles, si les instructions données ne sont pas respectées.
 ASTUCES	Fournit des instructions qui vous permettront de résoudre un problème ou de vous faire gagner du temps.
 REMARQUE	Fournit des informations supplémentaires pour mettre en évidence et compléter le texte.

Exigences de sécurité

- Respectez les normes de sécurité électrique locales pour vous assurer que la tension est stable et conforme aux exigences d'alimentation de l'appareil.
- Transportez, utilisez et stockez l'appareil dans les conditions d'humidité et de température autorisées. Consultez les spécifications techniques correspondantes de l'appareil pour connaître la température et l'humidité de fonctionnement spécifiques.
- Ne placez pas l'appareil dans un lieu exposé à l'humidité, à la poussière, à une chaleur ou un froid extrême, à de forts rayonnements électroniques, ou à des conditions d'éclairage instables.
- N'installez pas l'appareil près d'une source de chaleur telle qu'un radiateur, un chauffage, une chaudière, ou tout autre dispositif générant de la chaleur afin d'éviter les risques d'incendie.
- Empêchez aux liquides de couler sur l'appareil afin d'éviter d'endommager les composants internes.
- Installez l'appareil horizontalement ou sur une surface stable afin de l'empêcher de tomber.
- Installez l'appareil dans un lieu bien ventilé et ne bloquez pas la ventilation de l'appareil.
- Ne démontez pas l'appareil de façon arbitraire.
- Au cours du transport, du stockage et de l'installation de l'appareil, évitez de le soumettre à de fortes contraintes, à des vibrations violentes ou à une immersion. L'emballage complet est nécessaire au cours du transport.
- Utilisez l'emballage d'usine ou équivalent pour le transport.

Batterie

Un niveau de batterie faible affecte le fonctionnement du RTC, qui se réinitialisera à chaque redémarrage. Lorsque la batterie doit être remplacée, un message de journal apparaît dans le rapport du serveur du produit. Pour plus d'informations sur le rapport du serveur, consultez les pages de configuration du produit ou contactez l'assistance Dahua.



AVERTISSEMENT

- Risque d'explosion si la batterie est remplacée de façon incorrecte.
- Remplacez la batterie uniquement par une batterie recommandée par Dahua.
- Éliminez les batteries usagées conformément aux réglementations locales ou aux instructions du fabricant de la batterie.




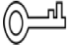

Español(España)

Advertencias y precauciones de seguridad importantes

En este capítulo se describe el contenido que cubre la manipulación correcta del dispositivo, la prevención de riesgos y la prevención de daños materiales. Lea detenidamente este contenido antes de usar el dispositivo, sígalo cuando lo utilice y consérvelo para consultas futuras.

Instrucciones de seguridad

Las siguientes palabras de advertencia con un significado definido podrían aparecer en la guía.

Palabras de advertencia	Significado
 PELIGRO	Indica un riesgo potencial alto que, si no se evita, resultará en muerte o lesiones graves.
 ADVERTENCIA	Indica un riesgo potencial medio o bajo que, si no se evita, podría resultar en lesiones leves o moderadas.
 PRECAUCIÓN	Indica un riesgo potencial que, si no se evita, podría resultar en daños materiales, pérdida de datos, rendimiento menor o resultados impredecibles.
 CONSEJOS	Ofrece métodos para ayudarle a resolver un problema o ahorrar tiempo.
 NOTA	Proporciona información adicional como hincapié y complemento para el texto.

Requisitos de seguridad

- Cumpla las normas locales de seguridad eléctrica para garantizar que la tensión sea estable y cumpla los requisitos de alimentación eléctrica del dispositivo.
- Transporte, utilice y almacene el dispositivo bajo las condiciones de humedad y temperatura permitidas. Consulte las especificaciones técnicas

correspondientes del dispositivo para la temperatura y humedad operativas específicas.

- No coloque el dispositivo en un lugar expuesto a humedad, polvo, calor o frío extremos, radiaciones electrónicas fuertes o condiciones de iluminación inestables.
- No instale el dispositivo en un lugar cerca de fuentes de calor, como radiadores, calentadores, hornos u otros dispositivos generadores de calor, para evitar un incendio.
- No deje que entre líquido en el dispositivo para evitar daños en los componentes internos.
- Instale el dispositivo horizontalmente o instálo sobre un lugar estable para evitar que caiga.
- Instale el dispositivo en un lugar bien ventilado y no obstruya la ventilación.
- No desmonte de forma arbitraria el dispositivo.
- Evite las presiones excesivas, las vibraciones violentas y mojar el dispositivo durante el transporte, almacenamiento e instalación. Es necesario utilizar el embalaje completo durante el transporte.
- Utilice el embalaje de fábrica o uno equivalente para transportarlo.

Pilas

La baja batería afecta al funcionamiento del RTC, provocando que se restablezca cada vez que recibe alimentación. Cuando sea necesario sustituir las pilas, aparecerá un mensaje de registro en el informe de servidor del producto. Para más información acerca del informe de servidor, consulte las páginas de configuración del producto o póngase en contacto con el departamento de soporte de Dahua.



ADVERTENCIA

- Riesgo de explosión si se sustituyen incorrectamente las pilas.
- Sustitúyalas únicamente por pilas idénticas o pilas recomendadas por Dahua.
- Elimine las pilas gastadas en conformidad con la normativa local o las instrucciones del fabricante de las pilas.


Deutsch





Wichtige Sicherheits- und Warnhinweise

Dieses Kapitel beschreibt die Inhalte zum richtigen Umgang mit dem Gerät, zur Verhütung von Gefahren und zur Vermeidung von Sachschäden. Lesen Sie dieses Kapitel sorgfältig durch, bevor Sie das Gerät verwenden, halten Sie die Anweisungen bei der Verwendung ein und bewahren Sie diese Anleitung zum späteren Nachlesen gut auf.

Sicherheitshinweise

Die folgenden kategorisierten Signalwörter mit definierter Bedeutung können in der Kurzanleitung verwendet werden.

Signalwörter	Bedeutung
 GEFAHR	Weist auf ein hohes Gefahrenpotential hin, das, wenn es nicht vermieden wird, zum Tod oder zu schweren Verletzungen führt.

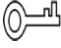Signalwörter	Bedeutung
 WARNUNG	Weist auf eine mittlere oder geringe potentielle Gefahr hin, die, wenn sie nicht vermieden wird, zu leichten oder mittelschweren Verletzungen führen kann.
 VORSICHT	Weist auf ein potenzielles Risiko hin, das, wenn es nicht vermieden wird, zu Sachschäden, Datenverlust, geringerer Leistung oder unvorhersehbaren Ergebnis führen kann.
 TIPPS	Stellt Methoden bereit, mit denen Sie ein Problem lösen oder Zeit sparen können.
 HINWEIS	Bietet zusätzliche Informationen als Schwerpunkt und Ergänzung zum Text.

Sicherheitsanforderungen

- Halten Sie sich an die örtlichen elektrischen Sicherheitsnormen, um sicherzustellen, dass die Spannung stabil ist und den Anforderungen an die Stromversorgung des Geräts entspricht.
- Transportieren, verwenden und lagern Sie das Gerät unter den zulässigen Feuchtigkeits- und Temperaturbedingungen. Die entsprechenden technischen Spezifikationen des Geräts für die jeweilige Betriebstemperatur und Luftfeuchtigkeit sind zu beachten.
- Stellen Sie das Gerät nicht an Orten auf, an denen es Feuchtigkeit, Staub, extremer Hitze oder Kälte, starker elektronischer Strahlung oder instabilen Lichtverhältnissen ausgesetzt ist.
- Installieren Sie das Gerät nicht in der Nähe einer Wärmequelle, z. B. einem Heizkörper, Heizlüfter, Ofen oder anderen Wärme erzeugenden Geräten, um Feuer zu vermeiden.
- Verhindern Sie, dass Flüssigkeit in das Gerät fließt, um Schäden an internen Bauteilen zu vermeiden.
- Installieren Sie das Gerät waagrecht oder an einem stabilen Ort, damit es nicht herunterfällt.
- Installieren Sie das Gerät an einem gut belüfteten Ort und blockieren Sie die Belüftung des Geräts nicht.
- Nehmen Sie das Gerät nicht eigenmächtig auseinander.
- Vermeiden Sie starke Belastungen, Vibrationen und eindringende Nässe während des Transports, der Lagerung und der Installation. Das Gerät sollte immer vollständig verpackt transportiert werden.
- Verwenden Sie die ab Werk verwendete Verpackung oder eine gleichwertige Verpackung für den Transport.

Batterie

Eine niedrige Batterieleistung beeinträchtigt den Betrieb der Echtzeituhr, wodurch sie bei jedem Einschalten zurückgesetzt wird. Wenn die Batterie ausgetauscht werden muss, wird eine Protokollmeldung im Serverbericht des Produkts angezeigt. Weitere Informationen zum Serverbericht finden Sie auf den Einrichtungsseiten des Produkts oder wenden Sie sich an den Support von Dahua.



WARNUNG

- Bei nicht ordnungsgemäßem Austausch der Batterie besteht

Explosionsgefahr.

- Ersetzen Sie die Batterie nur durch eine identische Batterie oder eine Batterie, die von Dahua empfohlen wird.
- Entsorgen Sie leere Batterien entsprechend den örtlichen Vorschriften oder den Anweisungen des Batterieherstellers.




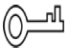

Italiano

Norme di sicurezza e avvertenze importanti

Il presente capitolo descrive le procedure per una corretta manipolazione del dispositivo, per la prevenzione dei rischi e per la prevenzione di danni materiali. Leggere attentamente queste informazioni prima di utilizzare il dispositivo, attenersi alle istruzioni fornite durante l'uso e conservarle come futuro riferimento.

Istruzioni di sicurezza

I seguenti indicatori di pericolo, aventi i significati indicati, possono apparire nella presente guida.

Indicatori di pericolo	Significato
 PERICOLO	Indica una situazione ad alto rischio che, se non viene evitata, può causare il decesso o gravi lesioni.
 AVVERTENZA	Indica una situazione a medio o basso rischio che, se non viene evitata, può causare lesioni di leggera o moderata entità.
 ATTENZIONE	Indica un rischio potenziale che, se non evitato, può causare danni materiali, perdite di dati, riduzione delle prestazioni o altre conseguenze imprevedibili.
 CONSIGLI	Spiegano metodi utili per risolvere un problema o per aiutarvi a risparmiare tempo.
 NOTA	Fornisce informazioni aggiuntive che completano quelle riportate nel testo.

Requisiti di sicurezza

- Attenersi alle leggi locali sulla sicurezza elettrica per garantire una tensione stabile e soddisfare i requisiti di alimentazione del dispositivo.
- Trasportare, utilizzare e conservare il dispositivo alle condizioni di umidità e temperatura consentite. Fare riferimento alle specifiche tecniche del dispositivo per conoscere i valori specifici della temperatura di esercizio e dell'umidità.
- Non posizionare il dispositivo in un ambiente esposto ad una eccessiva umidità, a polvere, a condizioni di caldo e freddo estremi, a forti radiazioni elettroniche o a condizioni di illuminazione non stabile.
- Non installare il dispositivo vicino ad una fonte di calore, quali ad esempio radiatori, apparecchi di riscaldamento, forni o altri dispositivi di generazione del calore, per evitare il rischio di incendio.
- Evitare di versare liquido sul dispositivo per non danneggiare i componenti interni.
- Installare il dispositivo in posizione orizzontale, oppure in una zona stabile, per evitare che possa cadere.

- Installare il dispositivo in un ambiente adeguatamente ventilato e non ostruire la circolazione dell'aria.
- Non smontare il dispositivo in modo casuale.
- Evitare forte sollecitazioni, violente vibrazioni e non bagnare il prodotto durante il trasporto, lo stoccaggio e l'installazione. Trasportare il prodotto utilizzando un imballaggio adeguato.
- Utilizzare l'imballaggio standard previsto o un imballaggio equivalente.

Batteria

L'uso di una batteria scarica può compromettere il funzionamento del dispositivo RTC, che si resetterà ad ogni avvio. Quando è necessario sostituire la batteria, nel report del server del prodotto viene visualizzato un messaggio di log. Per ulteriori informazioni sul report del server, leggere le pagine di configurazione del prodotto, oppure contattare il servizio assistenza di Dahua.



AVVERTENZA

- Se la batteria non viene sostituita correttamente, può generare il rischio di esplosione.
- Sostituire solo con una batteria identica o una batteria raccomandata da Dahua.
- Smaltire le batterie usate in conformità con le normative locali o attenendosi alle istruzioni del produttore della batteria.

Nederlands

Belangrijke voorzorgsmaatregelen en waarschuwingen

Dit hoofdstuk beschrijft de inhoud die de juiste omgang met het apparaat behandelt, het voorkomen van gevaren alsmede het voorkomen van materiële schade. Lees deze inhoud zorgvuldig door voordat u het apparaat gebruikt, houdt u eraan tijdens het gebruik, en bewaar ze goed voor toekomstige referentie.

Veiligheidsinstructies

De volgende gecategoriseerde signaalwoorden met gedefinieerde betekenis staan in de handleiding vermeld.

Signaalwoorden	Betekenis
GEVAAR	Geeft een hoog potentieel gevaar aan dat, indien niet voorkomen, kan leiden tot overlijden of ernstig.
WAARSCHUWING	Geeft een gemiddeld of laag potentieel gevaar aan dat, indien niet voorkomen, kan leiden tot licht of matig letsel.
LET OP	Geeft een potentieel risico aan dat, indien niet voorkomen, kan leiden tot materiële schade, gegevensverlies, lagere prestaties of onvoorspelbaar resultaat.
TIPS	Biedt methodes om u te helpen een probleem op te lossen of tijd te besparen.
OPMERKING	Biedt aanvullende informatie als nadruk op en aanvulling van de tekst.

Veiligheidsvereiste

- Houdt u aan plaatselijke veiligheidsstandaarden om ervoor te zorgen dat het voltage stabiel is en voldoet aan de vereiste stroomvoorziening van het apparaat.
- Transporteer, gebruik en bewaar het apparaat onder de toegestane relatieve luchtvochtigheid en temperaturomstandigheden. Zie de overeenkomstige technische specificaties van het apparaat voor specifieke werktemperatuur en relatieve luchtvochtigheid.
- Plaats het apparaat niet op een locatie die blootgesteld is aan vocht, stof, extreme hitte of koude, sterke elektronische straling of onstabiele verlichtingsomstandigheden.
- Installeer het apparaat niet op een plek vlakbij de warmtebron, zoals een radiator, verwarming, fornuis of ander warmte-genererend apparaat om brand te voorkomen.
- Voorkom dat er vloeistof in het apparaat loopt om schade aan interne componenten te vermijden.
- Installeer het apparaat horizontaal of installeer het op een stabiele plek om te voorkomen dat het valt.
- Installeer het apparaat in een goed geventileerde ruimte en blokkeer de ventilatie van het apparaat niet.
- Haal het apparaat niet willekeurig uit elkaar.
- Vermijd zware druk, hevige trilling en nat worden tijdens het transport, de opslag en de installatie. De complete verpakking is noodzakelijk tijdens het transport.
- Gebruik de fabrieksverpakking of gelijkwaardig voor het transport.

Batterij

Lage batterijstroom beïnvloedt de bediening van de RTC, waardoor deze bij iedere stroominschakeling reset. Als de batterij vervangen moet worden, verschijnt een logbericht in het serverrapport van het product. Zie voor meer informatie over het serverrapport de setuupagina's van het product of neem contact op met Dahua Support.



WAARSCHUWING

- Gevaar op ontploffing als de batterij onjuist wordt vervangen.
- Vervang alleen met een identieke batterij die wordt aanbevolen door Dahua.
- Verwerk de gebruikte batterijen volgens de plaatselijke regelgeving of de instructies van de batterijfabrikant.




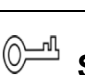

Portugués

Instruções e advertências importantes

Este capítulo descreve os conteúdos relativos ao manuseamento correto do dispositivo, à prevenção de riscos e à prevenção de danos materiais. Leia estes conteúdos atentamente antes de utilizar o dispositivo, respeite as instruções durante a utilização e guarde-as em boas condições para consulta futura.

Instruções de segurança

As seguintes palavras-sinal categorizadas, com um significado definido, poderão surgir no Guia.

Palavras-sinal	Significado
 PERIGO	Indica um risco potencial elevado que, se não for evitado, resultará em morte ou ferimentos graves.
 AVISO	Indica um risco potencial médio ou baixo que, se não for evitado, poderá resultar em ferimentos ligeiros ou moderados.
 ATENÇÃO	Indica um risco potencial que, se não for evitado, pode resultar em danos materiais, perda de dados, desempenho inferior ou resultados imprevisíveis.
 SUGESTÕES	Disponibiliza métodos para o ajudar a resolver um problema ou a poupar o seu tempo.
 NOTA	Disponibiliza informações adicionais como destaque e complemento ao texto.

Requisitos em termos de segurança

- Respeite as normas locais de segurança elétrica de forma a garantir que a tensão é estável e respeita os requisitos da fonte de alimentação do dispositivo.
- Transporte, utilize e armazene o dispositivo nas condições de humidade e temperatura permitidas. Consulte as respetivas especificações técnicas do dispositivo para conhecer a temperatura e humidade de funcionamento específicas.
- Não coloque o dispositivo num local exposto a humidade, poeira, condições de calor ou frio extremas, radiação eletrónica intensa ou condições de iluminação instáveis.
- Não instale o dispositivo num local próximo de uma fonte de calor, como, por exemplo, um radiador, aquecedor, fôrnelha ou outro dispositivo de geração de calor de forma a evitar incêndios.
- Não permita o escorrimento de líquidos para o dispositivo, evitando, assim, danos nos componentes internos.
- Instale o dispositivo numa posição horizontal ou num local estável, prevenindo possíveis quedas.
- Instale o dispositivo num local bem ventilado e não bloqueie a ventilação do dispositivo.
- Não desmonte o dispositivo de forma arbitrária.
- Evite pressões intensas, vibrações violentas e a imersão do dispositivo durante o transporte, armazenamento e instalação. Para o transporte, é necessária a embalagem completa.
- Utilize a embalagem de fábrica ou equivalente para efetuar o transporte.

Bateria

Uma bateria fraca afeta a operação do RTC, fazendo com que este reinicie sempre que é ligado. Quando a bateria tiver de ser substituída, surgirá uma mensagem de registo no relatório do servidor do produto. Para mais informações sobre o relatório do servidor, consulte as páginas de configuração do produto ou contacte a Dahua para obter assistência.



AVISO

- Risco de explosão se a bateria não for corretamente colocada.
- Substitua apenas por uma bateria idêntica ou por uma bateria recomendada pela Dahua.
- Elimine as baterias usadas de acordo com os regulamentos locais ou com as instruções do fabricante da bateria.