

Operational Description of the equipment

1. Power On/Off

Press Blank and Start key together, and then Blue LED will flash. Now, VP-1000 is powered On.

Press Blank and Start key together again, then VP-1000 will be powered Off.

2. Pairing

Press Start and Page Up key together, and then Blue and Red LED flash alternative.

Now, VP-1000 is under pairing mode.

Step 1. Set VP-1000 under pairing mode

Step 2. Follow the pairing process of PC to search & pair with VP-1000

Step 3. After pairing is complete, VP-1000 will connect automatically. When VP-1000 is connected, Blue LED will light on.

PRODUCT	Bluetooth Presenter, V2.1+EDR
MODEL NO.	VP-1000
POWER REQUIREMENTS	DC 3.7V, 0.04A
FREQUENCY BAND	2400 ~ 2483.5MHz
CARRIER FREQUENCY	2402~2480MHz
CARRIER FREQUENCY	CH0: 2402 MHz CH39: 2441 MHz CH78: 2480 MHz
NUMBER OF CHANNEL	79
CHANNEL SPACING	1MHz
RF OUTPUT POWER	0dBm
MODULATION TYPE	GFSK, II/4DQPSK, 8DPSK
DUTY CYCLE	50%
MODE OF OPERATION	Duplex
BIT RATE OF TRANSMISSION	2.1Mbps
ANTENNA TYPE	PCB printed
ANTENNA GAIN	2dBi
CHANNEL BANDWIDTH	1MHz
OPERATING TEMPERATURE	-10°C to 55°C
STORAGE HUMIDITY	10% to 90%