 
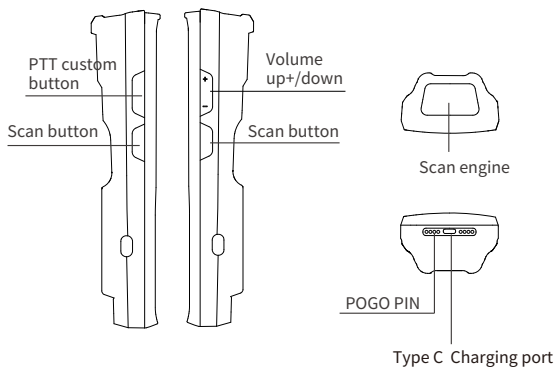 


Appearance and Buttons

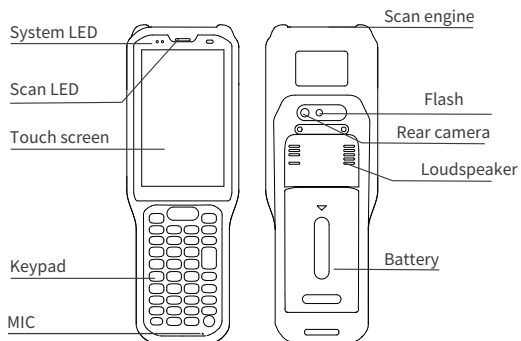

SQ47, SQ47P, SQ47D, RT40, RT40P
MDT1-0400, SQ47C, SQ47CP ,RT40C

Handheld Data Terminal

 
Package Contents

- Device x 1
- Battery x 1
- Power adapter x 1
- USB cable x 1
- Quick Start Guide & Warranty Policy x 1

Unpacking Instructions

SIM Card, TF Card Installation Method

Take card out(as shown)
Gently press SIM card into the tray to secure it. Follow the prompt to insert TF card into Memory card slot (as shown).

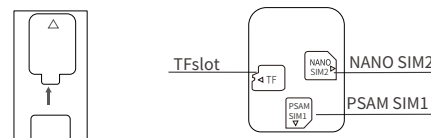


- Note:** 1、SIM1 support PSAM or MINI SIM1 。
2、SIM 2 support NANO SIM。

Battery Installation

Install the battery in the direction as show.

 NOTE: Overexertion should be avoided when installing or removing the battery.

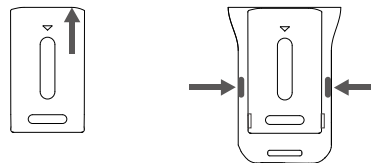

Press the buttons on both sides to remove the battery

Power Options

Power on: Press and hold the power button until device vibrates.
Shutdown: Press and hold the power button until the shutdown prompt appears Click"Shutdown".
Forced restart: Press and hold the power button for 10 seconds.
Do not press the shutdown prompt. Device will restart.

USB Data Cable Charging


Connect one end of the USB cable to the adapter, and the other end to the device. Charging cradle is recommended for convenient charging.

PC Connections

Connect device to PC using the USB cable provided. If additional driver is required, PC will automatically download from internet. Once the USB port has been connected, drag the notification bar from the top of the screen to display the USB setting interface.


- 1) Tap this to activate developer menu shown.(Figure 1)
- 2) Tap this to activate USB preference menu shown.(Figure 2)

 Figure 1

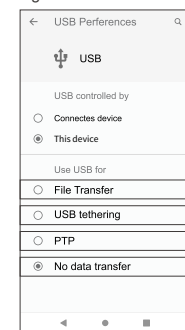

- Select this option to access device storage.
- Select this option to share the device data with the computer.
- Choose this option to transfer images.
- Choose this option for charging the device.

 Figure 2

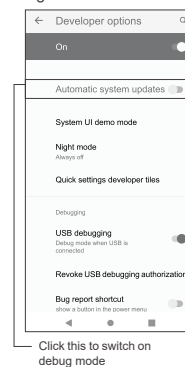

On Windows PC, go to "My Computer". Click on "Removable Disk" to view and transfer device data.

Note:

1. When the device as a SLAVE connect to PC, ' This device ' option will be automatically selected.
2. When the device as a HOST connect to other devices, 'Connected device' will be automatically selected.

Indicator












Battery		Full power
		Medium power
		Charging
Network Signal		Low power
		Good signal
		Unstable signal
	NONE	SIM card not installed
WiFi		SIM card error/no service
		WiFi on. No available wireless networks for connection
		WiFi connected
	NONE	WiFi switched off
NFC		NFC switched on

Table of Toxic and Hazardous Substances and Content in this product

Part	Toxic and hazardous substances or elements					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Host	X	○	○	○	○	○
adapter	X	○	○	○	○	○
USB cable	X	○	○	○	○	○

○ : This symbol indicates that the content of this toxic or hazardous substance in all homogeneous material is under the limit specified in the SJ/T11363-2006

X : This symbol indicates that the content of this toxic or hazardous substance in at least one homogeneous material exceeds the limit specified in the SJ/T11363-2006; however, the exceeding toxic or hazardous substance in the part with a "x" cannot be solved for there is no mature technology can be used.

 This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Battery Information**Caution:**

1. Risk of explosion if battery is replaced by an incorrect type. Dispose of batteries according to instructions.
2. However, there are limitations as to how long a battery can operate or be stored before needing replacement. Many factors affect the actual life cycle of a battery pack such as heat, cold, harsh environmental conditions, and severe drops.
3. When batteries are stored over six months, some irreversible deterioration in overall battery quality may occur. Store batteries at half of full charge in a dry, cool place, removed from the equipment to prevent loss of capacity, rusting of metallic parts, and electrolyte leakage. When storing batteries for one year or longer, the charge level should be verified at least once a year and charged to half of full charge.
4. Replace the battery when a significant loss of run time is detected.

Battery Safety Guidelines

1. The area in which the units are charged should be clear of debris and combustible material or chemicals. Particular care should be taken where the device is charged in non-commercial environment.
2. Follow battery usage, storage, and charging guidelines found in the user's guide.
3. Improper battery use may result in a fire, explosion, or other hazard.
4. To charge the mobile device battery, the battery and charger temperatures must be between 0 C and +40 C.

5. Do not use incompatible batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard.
6. For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
7. Do not disassemble or open, crush, bend or deform, puncture, or shred.
8. Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
9. Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
10. Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
11. Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.
12. Battery usage by children should be supervised.
13. Please follow local regulations to promptly dispose of used re-chargeable batteries.
14. Do not dispose of batteries in fire.
15. Seek medical advice immediately if a battery has been swallowed.
16. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.

Precautions

1. Read all information in this guide before using the device to ensure safe and proper operation.
2. Please use the accessories that have been approved by this manufacturer and corresponds to this model. Use of any power source, charger, battery, etc. that has not been approved by this manufacturer may cause a fire, explosion, or other hazards.
3. Please use device and accessories within the specified temperature range. Equipment failure may occur when the ambient temperature is too high or too low.
4. Do not disassemble the product and its accessories. If the equipment or any of its components are not working properly, consult the after-sales service of the company promptly, or send the equipment to the after-sales service outlet for testing and maintenance.

5. The battery is made from a flammable and explosive material. Do not disassemble, squeeze, drop and make any other destructive operations on the battery. Do not place the battery in high temperatures.
6. Disposal of used batteries is subject to local relevant documents or policies regarding disposal of used batteries.

Warranty Policy

Thank you for using intelligent terminal series products. In the situation of quality problems, which arise from raw materials or production processes, during normal use of purchased products, the seller will be responsible for free maintenance within one year from the date of purchase.

The company may provide repairs due to the user's failure to use the product according to the provided instructions of the product. However, corresponding service fee and component fee will be charged.

Warranty regulations:

1. Under normal circumstances, the warranty period of the device is 12 months (3 months for accessories), subject to the sales agreement.
2. During the product warranty period, under the normal use conditions (determined by our technical staff), the user will be entitled to a free warranty for damaged or faulty warranty parts.
3. During the warranty period, faults caused by repair, disassembly or modification of the product by a personnel other than our company, improper installation, improper use by the user (failure to follow instructions), serial number damage, accident or natural disaster, will not be covered under the warranty.
4. The warranty will expire immediately if any alterations are made to the warranty card.
5. Please show the equipment SN and purchase certificate for repair. The company reserves the right to interpret the above contents.

Place of Origin: Shenzhen	Quality Inspector: 025
UROVO TECHNOLOGY LTD. Website: en.urovo.com	



Note: The contents of the manual are subject to change without prior notice.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

The highest reported SAR level for the head is 0.247 W/kg, for the Hotspot Body is 0.418W/kg, and for the Body Worn is 0.296W/kg. This device was tested for typical body-worn operations with the back of the handset kept 15mm from the body. To maintain compliance with RF exposure requirements, use accessories that maintain a sufficient separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.

EU Declaration of Conformity

Hereby, Urovo Technology Co.,Ltd.declares that this device is in conformity with the Radio Equipment Directive: 2014/53/EU.

For the declaration of conformity, vist:

https://en.urovo.com/ctm_manage/default.aspx



CAUTION:

1. Sound pressure(logo): Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.



2. Battery: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
3. Adapter: Adapter shall be installed near the equipment and shall be easily accessible.