


Front of EUT

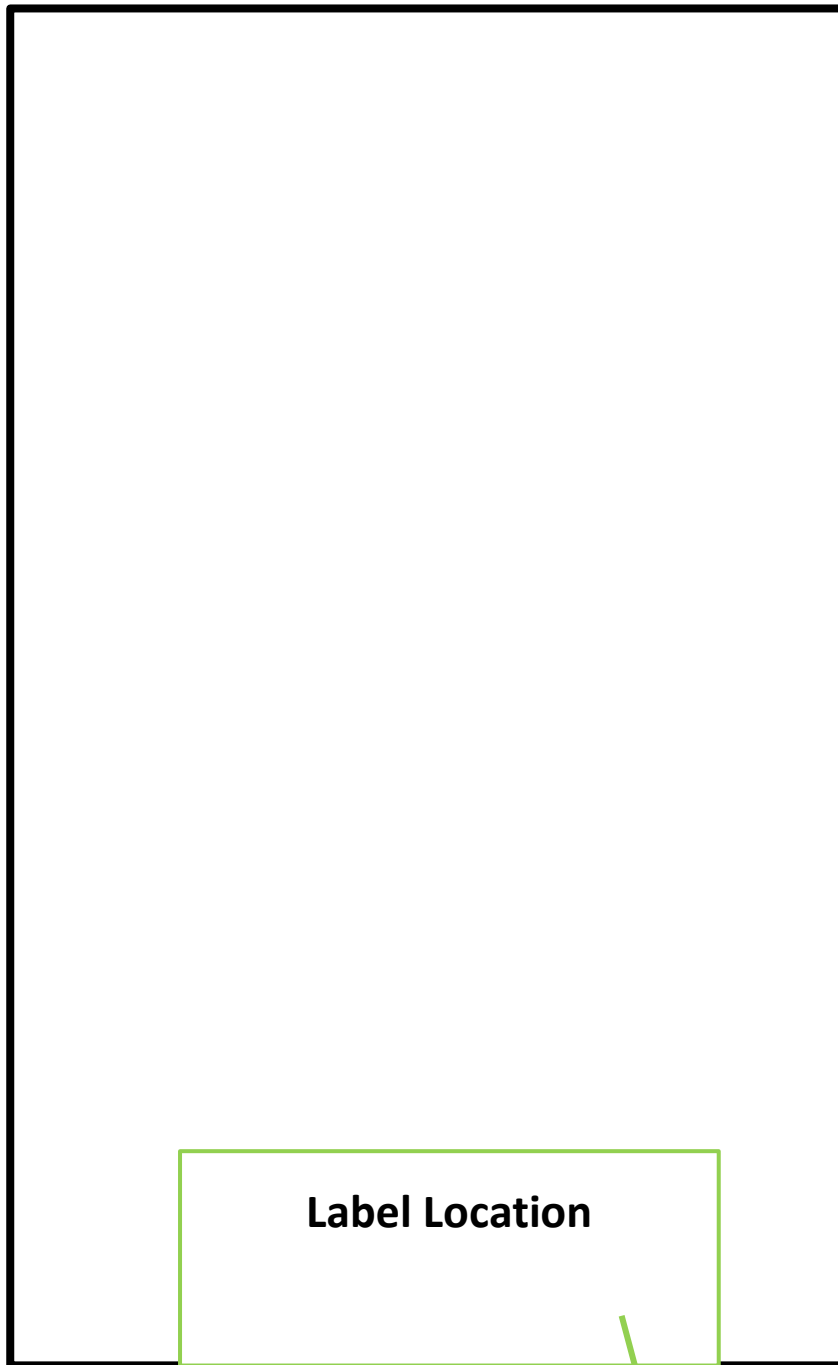

**Label Location**

Remove port cover, you will see the Label.