 
 


BLUETOOTH SPEAKER MANUAL

V7

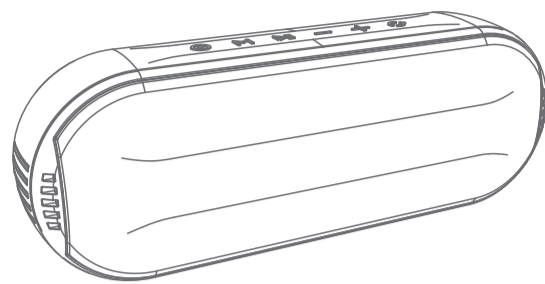

INTRODUCTION >>>

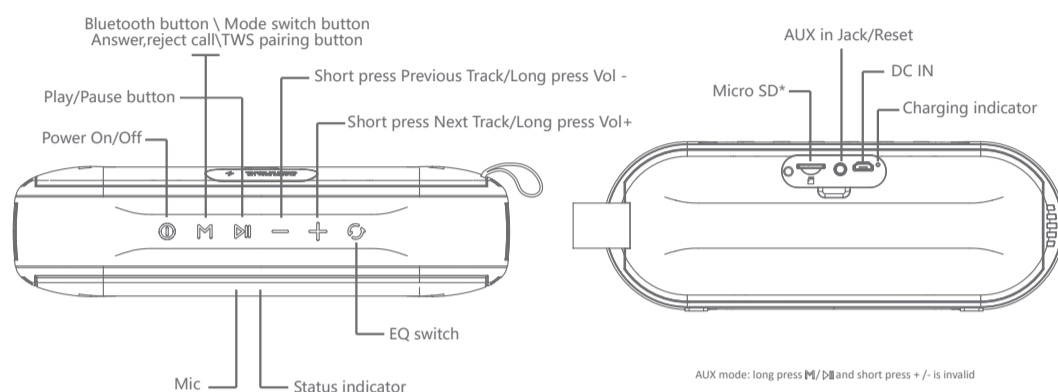

Multifunction Button

1. Bluetooth button: In Bluetooth mode, long press the M button, disconnect the current connection, and the blue indicator light flashes.
2. Mode switch button: Short press the M button, you can switch among Bluetooth /Micro SD /Aux in modes.
3. Answer/reject call button: When the phone rings short press for answering, long press for rejecting call.
4. TWS pairing button: After power on (speaker will be in Bluetooth standby mode, the Blue indicator flashes) long press M for get into TWS pairing mode.

HOW TO CONNECT >>>

1. Long press the power on/off button for 3 seconds and it will be in Bluetooth mode, the Blue indicator flashes
2. Connect to your device
Setting->Bluetooth->Choose device->V7
Connected successfully
Status indicator steady on

FUNCTIONS >>>

Micro SD Card

1. Support Micro SD max 32GB.
2. Micro SD support format:MP3,WMA,WAV,FLAC,APE.

Equalize

1. Two kinds of EQ modes : indoor EQ mode(Indoor version: focus on the low and medium frequency, sounds more comfortable and soft.) outdoor EQ mode(Outdoor version: more emphasis on medium and high frequency, louder vocals, greater range of transmission.)
2. By default it will be on the indoor EQ mode , press EQ Switch Button to switching different EQ.
3. The indoor EQ mode prompt "Di" and the outdoor EQ mode prompt "Di Di".
4. EQ memory mode : speaker will memory the EQ as the last shutdown.

TWS pairing

1. After the two speakers are turned on , the speakers will enter in bluetooth mode(the indicator light flashes). Long press M button of any speaker , the speakers will enter in bluetooth pairing mode ;When the prompt tone"Di Di"sounded (it is the main speaker) , the speaker will automatically search for another speaker.
2. Speakers will be in TWS mode when you hear prompt tone(the main speaker) ,which means pairing successfully between 2 speakers. The blue indicator of main speaker is flashes,and blue indicator of auxiliary speaker is keeps on. (The main speaker as left channel,and the auxiliary speaker as right channel.)
3. After pairing successfully between 2 speakers,the volume of main speaker and auxiliary speaker is synchronous. The button of main speaker and auxiliary speaker can control next/last track and pause on TWS mode.
4. Open the bluetooth of mobile,search and connect the main speaker,the blue indicator of main speaker will keeps on after connected successfully.
5. Long press the M button will disconnect TWS.
6. Long press the M button of main speaker will disconnect the bluetooth between mobile and main speaker.

TWS :True Wireless Stereo

Through bluetooth connected,same 2 speakers will automatic identify opposite,left and right channels will automatic switch,and combine into stereo. 1 plus 1 combine to use,double sound effect. (2 speakers connected 1 mobile phone at the same time,play music synchronously)

OTHER >>>

Charging

Charging via a computer through a USB cable or buy a USB charger separately.

Indicator

Blue indicator flashes	Status of pairing.
Blue indicator remains steady on	Connected to Bluetooth® source or connected to aux-in/Micro SD Card devices.
Red indicator flashes	Battery voltage lower than 3.4V , Red light flashes means your speaker needs charging.
Red charging indicator on	Red indicator is on when charging , and off when fully charged.

Reset

If the device is crashed, please inserting a fine needle-like object into the AUX connector.


Note: Your speaker will power off automatically within 15 minutes if you did not pair it with playback devices in order to save energy.

SPECIFICATIONS >>>


Driver spec:	Φ52mm 4Ω/5Wx2
Size:	L204.5*W53.5*H75.0 mm
Net weight:	352g +/-5g
Frequency response:	100HZ - 20KHZ
Sensitivity:	80dB
S/N ratio:	≥75dB
Distortion:	≤0.3% @ 1W
Working distance:	about 33 feet/ 10M
Transmission Power:	Class2, ≤4dbm
Bluetooth profiles:	A2DP, AVRCP, HFP
Working current:	≤700mA
Working voltage:	3.3 - 4.2V
Charging voltage:	DC 5V
Charging current:	≤800MA
Battery capacity:	2200mAh
Static standby current under shutdown status :	≤110 uA
Static standby current under power on status :	≤25mA
Charging time:	about 3-4 hours
Playtime at full volume :	about 3 hours
Playtime at 60% volume :	about 11 hours
Waterproof :	IPX6

IPX6 : No harm for 3-5 minutes water flushing, but don't soak!

 CONTAIN >>>

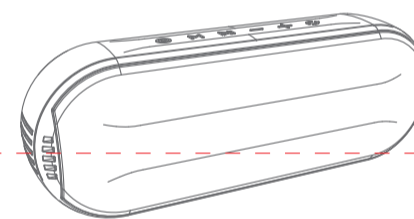

V7 BLUETOOTH SPEAKER

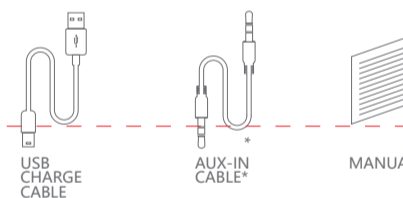 

USB CHARGE CABLE

AUX-IN CABLE*

MANUAL

WARRANTY POLICY >>>

Your Bluetooth speaker is covered by a limited warranty. It is backed by 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchase, Proof of original purchase is required
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall be responsible for any direct, incidental, consequential or other damages of any kind.

FCC WARNING >>> ⚠

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The company reserves the right to the product modification for appearance and function,which is subject to change without prior notice.

OPTIONAL*