

## I. Preface

Thanks for purchasing Gsou U180 Ultra portable Bluetooth® speaker! Please take the time to follow the instructions in this User manual carefully. If you have any query, please call our national service hotline: + (86) 755-83222871

## II. Warnings and Cautions

1. To reduce the risk of fire or electric shock, be sure the electrical circuits are not overloaded.
2. To reduce the risk of electronic shock, be sure not plug the adapter with wet hands.
3. Unplug the power cable if your device is smoking or abnormal and seek professional help from your nearest service center, be sure not detach the device yourself.
4. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquids can cause a failure and/or a fire hazard.
5. The power cable and audio cable can not be twisted or dragged in case of short circuit.
6. Do not place any naked flame sources, such as lighted candles, on or near the apparatus.



## III. FCC Warnings

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different than that which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## IV. Standard Accessories

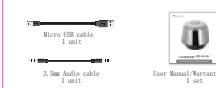


## V. Safety information

Names and Contents of Toxic or Hazardous Substances or Elements					
Part Name	Lead (Pb)	Cadmium (Cd)	Mercury (Hg)	Polychlorinated Biphenyls (PCBs)	Phthalates (PHT)
PCBs	X	O	O	O	O
Mercury	O	O	O	O	O
Plastic Parts	O	O	O	O	O
Speakers	O	O	O	O	O
Cables	O	O	O	O	O

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.

## VI. Structure Introduction

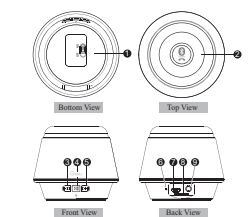

## VII. Structure Introduction

- ① **Power switch**: Press and hold for 3 seconds to disconnect Bluetooth®. In Bluetooth® mode, short press for 1 second to answer the call, and long press for 3 seconds for rejecting call. In Aux mode, short press is invalid and long press for 3 seconds for switch to the Bluetooth pairing mode.
- ② **Previous track button**: In Bluetooth® mode, short press is for previous track, long press is for decreasing volume.
- ③ **Play/Pause button**: In Bluetooth® mode, short press is for Pause. The button is invalid in the AUX-in mode.
- ④ **Next track**: In Bluetooth® mode, short press is for next track, long press is for increasing volume, the button is invalid in the AUX mode.
- ⑤ **Microphone hole**: Micro USB port is for connecting to DC 5V USB cable, to charge the U180 Bluetooth® speaker. Please take note that power adapter is not standard accessory of Gsou Bluetooth® speaker. You can use your mobile phone adapter to charge the speaker or connect to USB port of your PC, power bank to charge the device. The limited voltage is 5V.
- ⑥ **AUX-in Jack**: Connect the U180 with your pc, MP3mp4 player, Tablet, Mobile and other playback devices with 3.5mm jack by audio cable and U180 will disconnect the Bluetooth® automatically.
- ⑦ **Charging indicator**: Red indicator lighted when charging, and off after fully charged.

Indicator Color	U180 working status
Blue indicator flashes	Status of waiting for connecting
Blue indicator remains steadily on	Connected to Bluetooth® source or connected to aux-in device
Low power indicator flashes	Battery voltage lower than 3.3V, Red light flashes means your U180 need to be charged
Red charging indicator light	Red indicator is on when charging, and off when fully charged

## VIII. Operation Steps

- \* **How to connect your U180 with Bluetooth® playback devices?**
- Step 1: Be sure your speaker battery has sufficient power.
- Step 2: Turn on your speaker and it will be in Bluetooth mode automatically and ready for connecting. The blue indicator flashes.
- Step 3: Open the Bluetooth® of your mobile, search the "Gsou U180" device and connect to it. Usually you need to input password for most of Bluetooth® playback devices, but due to the Bluetooth version varies, sometimes, you need to input the default password "0000"(four zeros) if required.

Step 4: Blue light remains steadily on to indicate successfully connected.

Step 5: Run the music player of your mobile, and enjoy the loud but clear sound from your U180.

\* **How to connect your U180 with Bluetooth® playback devices?**



Your U180 supports connect to use Bluetooth® playback device at the same time only. You need to disconnect the previous pairing Bluetooth® device, then other mobiles can be available to connect, and the operation steps will also be same as before.

\* **How to connect the U180 with your notebook pc by Bluetooth®?**

2. In the case of your notebook with the Bluetooth® function.




- Step 1: Start your notebook, search the Bluetooth® device by "Start-Setting-Connect Panel".
- Step 2: Start the Bluetooth® searching function of your notebook, blue light flashes when searching the Audio-in device.
- Step 3: Blue indicator light remains steadily on after connecting successfully.
- Step 4: You can play the audio music of the notebook by the U180.

2. In the case of your notebook without Bluetooth® function.



Please buy the Bluetooth® adaptor additionally. After installing please start the Bluetooth® from the "Control Panel" or the shortcut of your pc desktop, please search for connecting, and the instruction steps are the same as the first case.

## IX. How to play music by AUX-in?

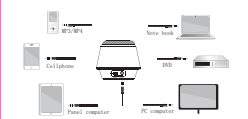

- Step 1: Your U180 comes with a standard 3.5mm Aux-in jack for connecting with other non-Bluetooth audio devices or mobile phones and laptop players, tablet pc and etc. Plug one end of the audio cable to the AUX-in jack of the speaker and the other end connect to audio source AUX jack.
- Step 2: Your U180 will disconnect the Bluetooth®, switches to the external source play, as the external source of AUX-in mode is prior.

## X. Trouble Shooting

1. In such mode, connect the USB port of PC with standard USB cable, or use separately bought USB charging plug to charge our speaker/charger. Please use qualified USB charger, in order to avoid damage of Lithium battery of speaker.
2. Charging indicator light remains steadily on when charging, and off after full charged. The charging time is 2-3 hours(difference according to different charge).
3. Low-voltage indicator: When battery voltage is lower than 3.3V, the low voltage indicator light flashes.

## XI. Trouble Shooting

Problem	Solution
Speaker will not turn on	* Make sure your speaker battery has sufficient power.
Paired Bluetooth device will not connect	* If your device requires a pass code, make sure to input "0000" four zeros. * Turn the Gsou U180 speaker off and back on. * Remove the Gsou U180 speaker from the pairing list on the device's manual for assistance. Then pair the device and the speaker again.
Speaker indicates a connection, but it not playing music	* Turn off or disable Bluetooth on all other paired devices nearby and reconnect the device you want to listen. * Turn the Gsou U180 speaker off and back on.
Can not pair the Gsou U180 with any Bluetooth device	* Make sure your speaker is discoverable. * Your Bluetooth device maybe out of capacity to move closer to your speaker. * Make sure your Bluetooth device supports the transfer of audio. * Reset your Bluetooth speaker.

**Bluetooth® compatibility note:** U180 can be compatible with most of Bluetooth® devices with the different brands and models, but some individual Bluetooth® devices may have compatibility problem with the U180. If you need further assistance, please contact our technical customer service: 86-755-83222871.

Problem	Solution
No audio from a Bluetooth device	* Make sure your Gsou U180 is not muted and the volume is up. * Make sure your Bluetooth device is playing audio and volume is up. * Your Bluetooth device may be out of range, move closer and try. * Turn your Bluetooth speaker off and back on.
Poor sound quality from a Bluetooth device	* Your Bluetooth device may be out of range, move closer and try again. * Move your Bluetooth device and/or Gsou speaker from any device that generates electromagnetic interference, such as another Bluetooth device, cordless phone, microwave oven or wireless router. * Try to turning off WiFi to improve audio quality. * Make sure your music file is not poor quality. * Turn your Bluetooth speaker off and back on.
No Audio from AUX source	* Make sure your connected device is on and playing. * Make sure you speaker is in AUX-in mode. * Make sure the audio cable is correctly inserted. * Increase the volume level on the device and speaker.
Poor sound quality from AUX source	* Reduce the volume level on the AUX source. * Make sure the 3.5mm audio cable is fully inserted into the speaker and device. * Make sure your audio source and music file is not of poor quality.

## XII. Specifications

Product specification	
Channel	1 (L) Channel
Amplifier	Digital Amplifier
Speaker	Full range 90mm 20W
Size	174x74x105mm
Weight	252g
Technical Parameters	
RMS	5W
Bluetooth® chipset	BCM
Bluetooth® version	V3.0+EDR
Supported protocol and profile	A2DP, AVRCP, HFP, HPP
Working voltage	3.7V-4.2V
Working voltage	3.7V-4.2V
Sensitivity	80dB
T/S	200 oh
Distortion	<0.5%
Frequency response	90Hz-20KHz
Working temperature	-10°C ~ 50°C
DC input	DC 5V
Battery	Built-in 500mAh battery

## XIII. Statement

The Gsou trademark and logo are registered trademarks of Gsou Technology (Shenzhen) Co., Ltd. All Rights Reserved. All other trademarks, logos or service marks are the property of their respective owners.

## XIV. Limited Warranty

Your Gsou U180 Bluetooth® speaker is covered by a limited warranty. It is backed by 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- \* The warranty applies to the original purchaser. Proof of original purchase is required.
- \* The warranty does not cover the damage caused by misuse, abuse or improper storage.
- \* In no event shall Gsou be responsible for any direct, incidental, consequential or other damages of any kind.

## XV. Contact details

Gsou Technology (Shenzhen) Co., LTD  
A40144, Block A, Four World Plaza, No.7502 West Hongli Road, Fuzhou District, Shenzhen, China.  
Tel: 0086-755-83222871  
Fax: 0086-755-83222840  
E-mail: sales@gsou.cn  
Website: www.gsootech.com



**Gsou 极速**  
深圳市极速科技有限公司  
Gsou Technology(Shenzhen)Co.Ltd

物料名称 U180蓝牙版说明书  
物料尺寸 552x78.8mm  
物料工艺 单黑印刷

物料编号  
物料材质 100克书写纸  
其它特殊要求 折叠后的尺寸为79x79mm

核 准

审 核

设 计

舒黎明 2013.03.05