

**SYLVANIA**

**Bluetooth Speaker**  
MODEL NO. (KTS-1155)  
INSTRUCTION MANUAL



The picture is only provided for reference. Please refer to the actual unit!  
SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

**Instructions for use**  
Please read all instructions carefully

**Getting started**  
Remove the unit from the box  
Remove any packaging from the product.  
Place the packaging inside the box and store for safekeeping


**In the box**  
Bluetooth Speaker  
USB charging cable  
3.5mm audio cable  
Instruction Manual  
Remote control  
Wired Microphone

**Features**  
-Bluetooth wireless connection functionality  
-Built-in rechargeable battery  
-Volume adjustment  
-Support USB/TF card  
-Karaoke Function  
-FM radio ,search and record  
-Aux in jack

**Safety Instructions**

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use
- Keep the unit out of reach of children
- This product is not a toy
- Do not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc
- Never immerse the unit in water or any other liquid for cleaning purposes

**Produce Diagram**

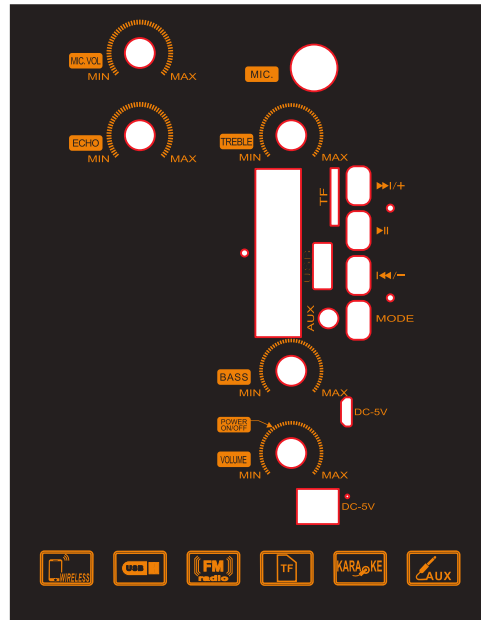

LED	Show the working status
POWER ON/OFF/ VOLUME KNOB:	Turn on/off the machine. And decrease or increase the main volume
DC-5V	DC-5V Micro USB charge port.
LED	Will be on when charging.
▶/+/+	Under FM/USB/TF/Bluetooth mode, short press to move to next channel/track.
▶	Under USB/TF/Bluetooth mode, short press for play and pause; Press and hold the button to switch on/off the flash light Under FM mode.Short press:station scan automatically and stored stations.
◀/◀-	Under FM/USB/TF/Bluetooth mode, short press to move to previous channel/track.
MODE	change to the different function,
Aux	3.5mm aux in jack
TF slot:	Play the Mp3 file from TF card
USB slot:	Play the Mp3 file from USB
MIC-IN	Microphone-in
TREBLE KNOB	Adjust the treble.
BASS KNOB	Adjust the bass.
Echo knob	Adjust the Echo.
Mic: Volume knob:	Adjust the Karaoke volume.



- 1.Unit on/off
- 2.MODE :Change the different mode
- 3.Mute
- 4.Play/Pause
- 5.EQ: Select the different EQ (It doesn't work in AUX in mode)
- 6.◀- : Under the FM/USB/TF/Bluetooth mode, short press to move to previous channel/track.
7. ▶/+/+ :Under the FM/USB/TF/Bluetooth mode, short press to move to next channel/track.
- 8.Press to increase the volume
- 9.Press to decrease the volume
- 10.RPT: repeat
- 11.Turn on/off the light

**INSTRUCTION FOR USE**

**Charging the speaker**  
This unit has a built in rechargeable battery. Before using it for the first time we recommend you use the USB cable to charge the battery fully. Connect USB charging cable to the USB port or USB wall charger(Not included.)And connect other side to the USB charging slot of the speaker. The battery charging LED indicator illuminates while the speaker is being charged. When the battery is fully charged, the red LED indicator will be OFF.

**Pairing your device with Bluetooth speaker**  
Pairing the Bluetooth with Bluetooth devices (phone or music device). Turn the VOL knob to turn the speaker ON and the Bluetooth mode will on automatically, you will hear a tone. Place the speaker and Bluetooth device (phone or music device)so that they are no further than 20 feet apart; Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the pairing name "Sylvania SPA12" from the list of available Bluetooth devices. If required, enter the password 0000 to confirm to pairing. Once paired successfully, you will hear a voice indicating pairing successful.You can now start to play the speaker. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the devices Bluetooth is activated and in range. You do not need to re-pair any previously connected devices. The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turns on.If you want to pair it with a new device, please turn off your last Bluetooth device(phone or music device) then use your new device to search and select the pairing name. Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your devices user manual for further information.

**Function Summary**

**Listening to Music**  
Once the speakers are paired with your device you can stream music wirelessly through the portable speaker. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker, and you can use your device to control the Volume and skip tracks.

**USB/ TF card playback**  
After the speaker is turned on, insert the USB/TF card to the slot will start to play the music automatically, and the Bluetooth mode will be disconnect.

**Using AUX-in**  
After the speaker is turned on, pressing the M button can switch to Aux mode and connect one end of the 3.5mm audio cable into AUX in jack, the other end of the cable to connect MP3/Smart phone / iPhone to play music.

**FM radio**  
After pressing MODE button to change to FM radio status press ▶/+/+ button to search channel automatically. This operation will scan all FM stations and pre-record them to memory. The scan procedure will take several minutes to complete and should not be interrupted.

Once completes , short time press the "◀- " or the "▶/+/+" button to switch to last or next record frequency .

**KARAOKE function**  
Inserting the microphone into speaker MIC port

**Please Note**  
•Not all mobile phones support all the functions listed above Please refer to your cell phone s user's manual for further information  
•Certain functions and indication tones may vary depending on your mobile phone.

**Cleaning & Maintenance**  
Turn OFF the speaker if it is left unattended and before cleaning.  
Never immerse the speaker into water and please use a dry cloth for Cleaning.

**Storage**  
•Turn OFF the power when you not in use, clean and store safety.

**Specifications**

Bluetooth specification	Bluetooth V4.2
Operating distance	10 meters(max.)
Speaker drive size	12 inch
Speaker power	20W
Frequency response	100Hz-20KHz
Signal to noise ratio	≥ 85dB
Charging time	About 5 hours
Working time	About 3 hours

**To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.**

**90 day Year Warranty**

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

**FCC STATEMENT** 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.