



Specification

Wireless version: 5.0+EDR

Speaker driver unit size: 8 NCH

Frequency response: 100Hz-20KHz

Signal to noise ratio: >=85dB

FM scan range: 87.5-108.0Mhz

Wireless range: 10 meter

Max memory USB/SD: 32GB

USB charging: DC 5V/500mA

Battery capacity: 1200mAh

Charging via USB port (PC): 3 hours

Accessory:

Charging cable: 1 piece;


Connect to Bluetooth device

Turn on the unit and switch on your mobile Bluetooth, then search for the speaker mode name and pair the device.

Once device is paired, Bluetooth will automatically connect when unit is turned on subsequently.

TWS: if people has 2pcs and both of them has TWS function. Then turn on both units, and press any pcs of the MODE button few second. then 2pcs unit will connect automatically

Note: True wireless stereo function only work in Bluetooth mode.

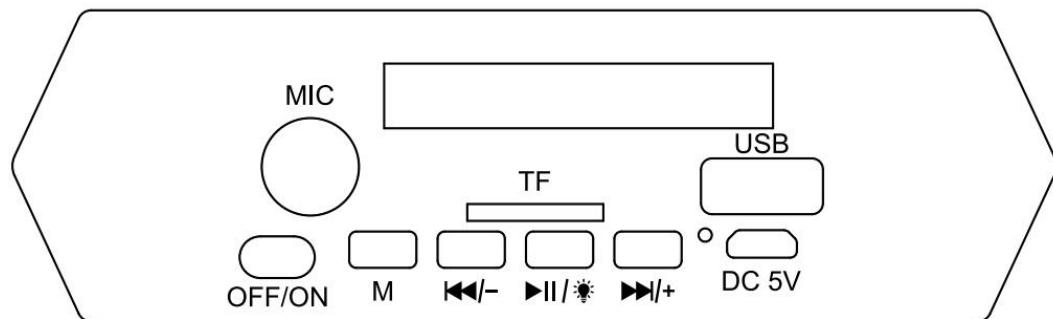

1. DC 5V: Plug the Micro USB cable to the speaker and connect other end USB port to the power source. (DC 5V)
2. USB slot: Used to read the Mp3 files
3. TF slot: Used to read the Mp3 files
4. **Play/Pause:** Under USB/TF/Bluetooth mode, short press for play and pause. Press and hold to change the RGB flame light mode
5. **M:** To change mode during USB/TF, Bluetooth, FM and Aux-in mode. Press and hold for TWS function.
6. **PREV:** USB/TF/Bluetooth/FM mode: press to move to previous FM channel / track. long press to decrease the volume.
7. **NEXT:** USB/TF/Bluetooth/FM mode: press to move to next FM channel / track. long press to increase the volume.
8. **MIC-IN:** Connect with the MIC when you need.
9. Led display

Bluetooth

Turn on the speaker, It comes into the Bluetooth mode directly. After pair the device, it can play the music, Short Press **▶ ||** to Play/Pause, press **◀◀** and **▶▶** to Prev and Next. Press and hold the **◀◀** and **▶▶** button to turn down and turn up the Volume

AUX-IN

AUX-IN, use the audio cable plug into AUX jack, press **M** to switch to Aux in Mode. Press and hold the **◀◀** and **▶▶** button to turn down and turn up the Volume.

In the AUX IN mode, it couldn't shift Prev and Next by Bluetooth speaker, but can control by connection device.

USB/TF Card

Insert the U flash memory or Micro-TF card into the USB/TF slot. it will read the MP3 format music automatically. Press **▶ ||** to Play/Pause, short time press **◀◀** and **▶▶** to Prev. and Next, press and hold **◀◀** and **▶▶** button to turn down and turn up the Volume

FM Radio

Press **M** to switch to FM Mode. Short press **◀◀** and **▶▶** to the frequency station. Press the **▶ ||** to search the frequency station and record automatically , press and hold **◀◀** and **▶▶** button to turn down and turn up the Volume.

Charging

Please use the original charging cable to charge,
Red LED on when charging.

Model: KTS-1301

FCC ID : SXX-KTS1301

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device might not cause harmful interference, and

(2) this device must accept any interference received, including interference that might cause undesired operation.

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Shenzhen KingBoard Technology Co., Ltd.** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The device compliance RF exposure requirement and can be installed and used without restriction