

# SPEAKER USER MANUAL

MODEL NO.: KTS-1042




## Accessories

Wireless speaker: 1PCS  
Operation manual: 1PCS  
Power supply cable: 1PCS  
3.5MM Audio cable: 1PCS  
Remote control: 1PCS  
Wired microphone: 1PCS  
Adapter: 1PCS

## Specifications

Operation range: 10M  
Battery: built-in rechargeable 2\*1200mAh Lithium-ion  
Output power: 15W\*2  
Input voltage: DC 5V  
Frequency response: 100Hz-20KHz  
Loudspeaker: 6.5inch 15W\*2  
Distortion:  $\leq 10\%$   
S/N ratio:  $\geq 80\text{dB}$   
Multimedia input: Micro SD/USB  
FM frequency range: 87.5-108.0Mhz

## Description of parts

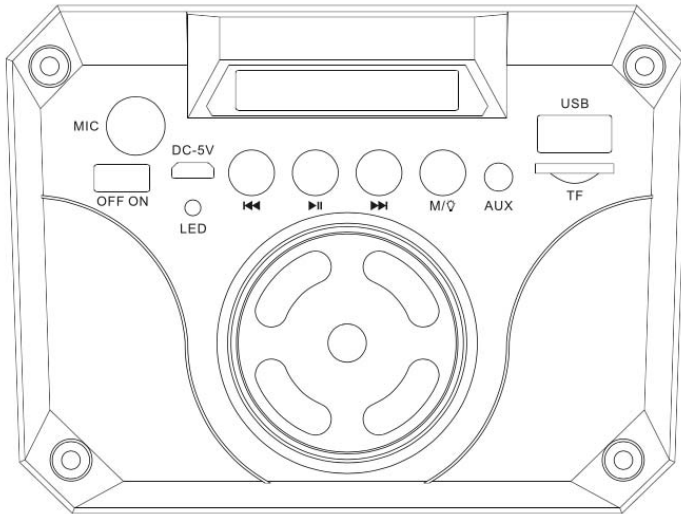

1. LED display
2. Microphone jack
3. Power ON/OFF
4. Charging port
5. Previous track
6. Play/Pause
7. Next track
8. M button
9. AUX-IN jack
10. USB slot
11. Micro SD(TF) card slot
12. Vol--/ Vol+

### Wireless

Turn on the speaker and it will come into the wireless mode directly. After pairing the device, it can play the music. Short press "▶||" button to Play/Pause, press "◀◀" or "▶▶" button to previous track or next track. Revolve the knob to turn down and turn up the Volume.

### AUX-IN

AUX-IN, Insert the audio cable into AUX slot, and press M button to switch to Aux-in mode. Long press "◀◀" or "▶▶" button to increase or decrease the Volume. Under AUX-IN status, it cannot shift previous track or next track by the speaker unit, only can control it by the device itself.

## **USB/TF Card**

Insert the U flash memory or Micro-TF card into the USB/TF slot, **KTS-1042** will read the MP3 format music automatically. Press ▶|| button to Play/Pause, press "◀◀" or "▶▶" button to previous track and next track. Revolve the knob to turn down and turn up the Volume.

## **FM RADIO**

Press M button to search FM channel automatically. This operation will scan all FM stations and Pre-record them to memory. The scan procedure will take several minutes and cannot be interrupted. Once completed, you can short press "◀◀" or "▶▶" button to move forward or backward. Long press "◀◀" or "▶▶" button to increase or decrease Volume.

## **KARAOKE**

Insert the wireless microphone cable into the MIC port

## **Charging**

Plug the USB cable into speaker charging port and connect to power source. Red LED on panel when charging.

## **HOW TO USE THE REMOTE CONTROL**

1. Unit on/off
2. MODE: Mode shift button. Short press and shift to USB/TF mode once, more to AUX/FM mode & default mode will be Wireless mode. Press and hold the Mode button on the host speaker to reactivate the pairing process between speakers.
3. Mute
4. ◀◀: Under FM/USB/TF/ Wireless mode, short press to move to previous channel/track.
5. Play/Pause
6. ▶▶: Under FM/USB/TF/Bluetooth mode, short press to move to next channel/track.
7. Decrease the volume
8. Increase the volume
9. EQ: Press to exchange the EQ mode.
10. LED: Turn on or turn off the LED light.



## **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen KingBoard Technology Co., Ltd. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.