



smart hub quick start guide



Congratulations on your purchase of the Iris™ smart hub.

It's easy to install. Let's get started.

Your Iris™ smart hub comes equipped with an Ethernet cable and a power cord.

ready to install?

Before you get started, please check that you have the following:

- Router with an open Ethernet port
- Open power outlet near your router
- Broadband always-on internet service

Follow these easy steps to set-up & install your Iris™ smart hub.



- Visit lowes.com/iris
- Click on **Register** and we'll walk you through the steps.
- For additional help please visit lowes.com/iris/support.

There are four stages to complete the Iris™ set-up. Once you register, we'll walk you through each:

1. Hub Set-up
2. Account Details
3. Service Options
4. Powering and Pairing Devices



For more information or support please call 1-855-469-IRIS (4747).

Approvals

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Conforms to FCC Part 15B

FCC ID: T3L-SS009

IC: 12192A-SS009



Industry Canada licence-exempt RSS Standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should

be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by CentraLite Systems, Inc. could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.