

BETTER BY BROOKSTONE® WE CREATE PRODUCTS
TO MAKE LIFE BETTER. THROUGH INNOVATIVE
DESIGN, BEST-IN-CLASS PRODUCT SELECTION AND
AN UNYIELDING COMMITMENT TO EXCELLENCE, WE
MAXIMIZE THE QUALITY OF OUR PRODUCTS—AND
HELP YOU ENHANCE THE QUALITY OF YOUR LIFE.

Merrimack, New Hampshire 03054 • Customer Service 800-846-3000 • www.brookstone.com

533067



Brookstone®

tv hear™
wireless remote
television speaker





Bb
Bb

Bb
Bb
Bb
Bb



SPECIFICATIONS

TRANSMITTER

Range: 30'
Fine Tuning: Automatic
Number of Channels: 1
Dimensions: 2.1" x 2.7" x 0.8"
Power supply: AC Adapter (included)

SPEAKER

Power On/Off: Yes
Volume Control: Yes
Fine Tuning: Automatic
Speaker Unit: One 3" Speaker
Frequency Level: 80 Hz to 18k Hz
Dimensions: 4.9" x 4.1" x 5.4"
Power supply: AC Adapter (included)
6 AA batteries (not included)



3. To turn the speaker off, turn the POWER/VOLUME WHEEL counterclockwise until you hear a click. The speaker's POWER INDICATOR no longer illuminates.

CARE AND MAINTENANCE

Wipe the transmitter and speaker with a damp cloth. Do not use abrasive chemicals.

tv hear™ wireless remote television speaker

BETTER BY BROOKSTONE®

We believe that exacting standards are the core of our success. The TV Hear™ Wireless Remote Television Speaker has been thoroughly tested to be certain it meets our rigorous quality control criteria. We stand behind every Brookstone® product, promising 100% satisfaction, 100% of the time.

Our TV Hear™ Wireless Remote Television Speaker brings TV sound to you without wires or headphones. It's ideal for use with larger TVs and media rooms. Just place the speaker close to where you are sitting instead of turning up the main TV sound.



Bb

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO WATER OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

SPEAKER OPERATION

INSTALLING THE SPEAKER BATTERIES

1. Remove the BATTERY COMPARTMENT COVER.
2. Insert 6 AA batteries (not included) according to polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER.

USING THE SPEAKER

1. If you are not using battery power, insert one end of the SPEAKER POWER ADAPTER into the speaker's AC ADAPTER JACK and the other end into an electrical outlet.
2. Turn the POWER/VOLUME WHEEL clockwise until you hear a click. The speaker's POWER INDICATOR illuminates. Continue to turn the POWER/VOLUME WHEEL to the left or right to adjust the volume to your desired listening level.





Bb
Bb

CONNECTING TO A 3.5MM HEADPHONE JACK

1. Insert one end of the TRANSMITTER POWER ADAPTER into the transmitter's AC ADAPTER JACK and the other end into an electrical outlet.
The transmitter's POWER INDICATOR illuminates.
2. Insert one end of the 3.5MM TO RCA CABLE into the appropriately colored AUDIO IN R/L JACKS on the transmitter, and the other end into your television's 3.5MM headphone jack.

Note: If your television has a 1/4" headphone jack, you will need a 1/4" adapter (not included).



WARNING

1. Do not disassemble the unit.
2. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. Do not place the unit near heat sources such as radiators and heating vents.
4. Do not store the speaker in extreme temperatures.
5. Turn the unit off when not in use.





Bb
Bb

BATTERY PRECAUTIONS

- Dispose of old batteries properly. Do not dispose of old batteries in a fire.
- Do not leave batteries where a child or pet could play with or swallow them. If batteries are swallowed, contact a physician immediately.
- Batteries may explode if mistreated. Do not attempt to recharge or disassemble batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.



TRANSMITTER OPERATION

CONNECTING THE TRANSMITTER

The transmitter may be connected two ways depending on your television. If your television has left and right RCA output jacks, use the DUAL RCA CABLE. If your television does not have left and right output jacks, but rather a 3.5mm headphone jack, use the 3.5MM TO RCA CABLE.

CONNECTING TO LEFT AND RIGHT RCA OUTPUT JACKS

1. Insert one end of the TRANSMITTER POWER ADAPTER into the transmitter's AC ADAPTER JACK and the other end into an electrical outlet. The transmitter's POWER INDICATOR illuminates.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored AUDIO IN R/L JACKS on the transmitter, and the other end into your television's left and right audio output jacks.

Note: Do not connect the DUAL RCA CABLE to speaker terminals on your television. Doing so may damage the transmitter or your television.




BB



ACCESSORIES

8. SPEAKER POWER ADAPTER
9. TRANSMITTER POWER ADAPTER
10. DUAL RCA CABLE
11. 3.5MM TO RCA CABLE

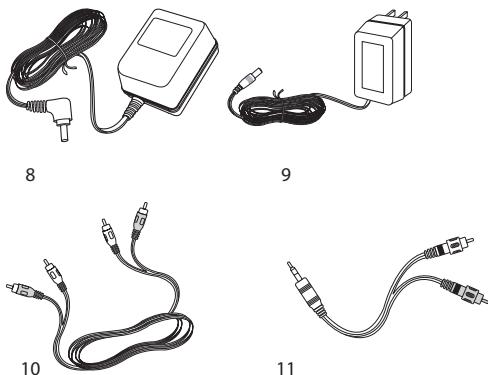

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Bb
Bb

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.



LOCATION OF CONTROLS


SPEAKER

1. POWER INDICATOR
2. POWER/VOLUME WHEEL
3. AC ADAPTER JACK
4. BATTERY COMPARTMENT COVER

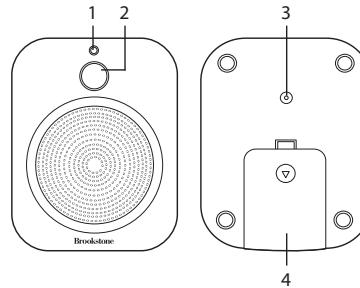

TRANSMITTER

5. POWER INDICATOR
6. AC ADAPTER JACK
7. AUDIO IN R/L JACKS

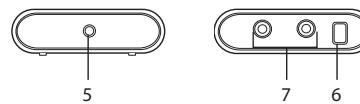

FRONT

BACK