





EGF0100-Mainboard location in unit.

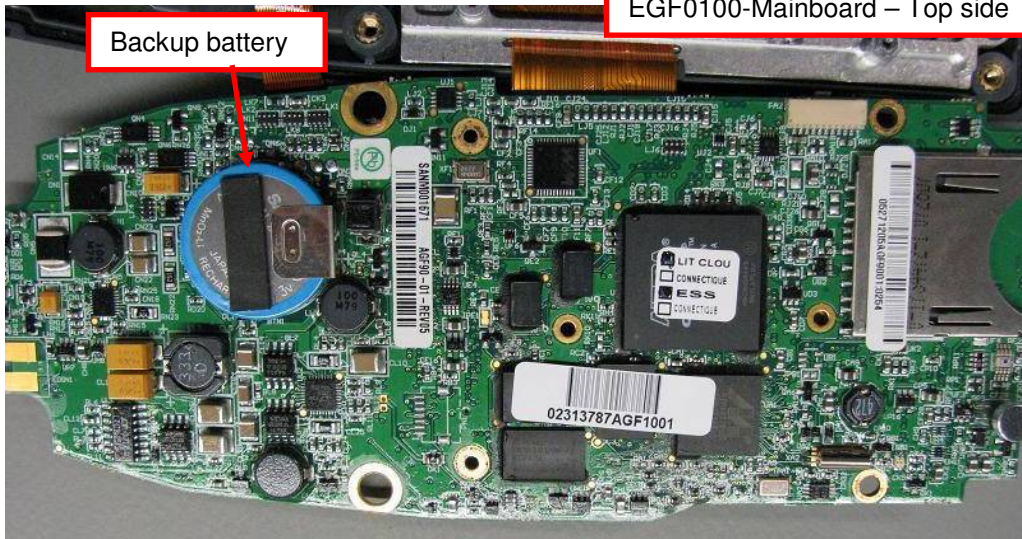

Backup battery

EGF0100-Mainboard – Top side

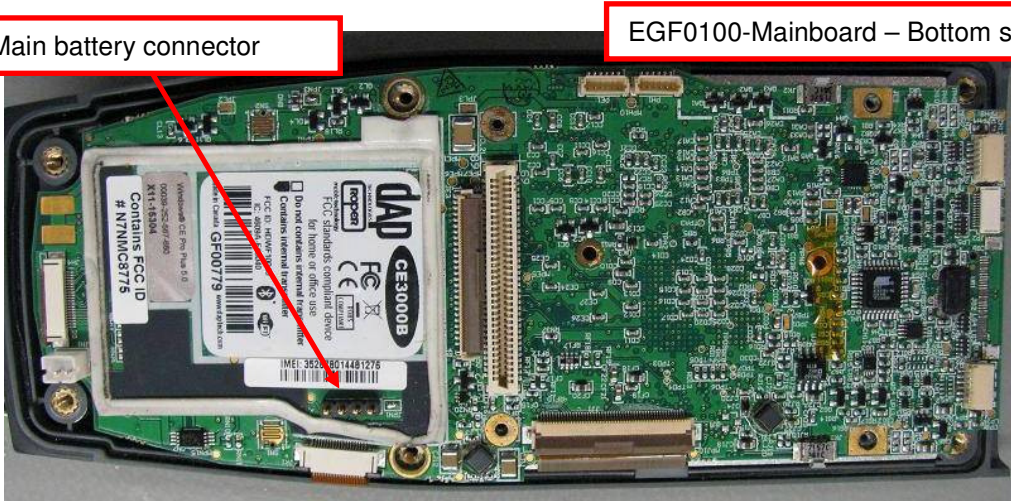


Main battery connector


EGF0100-Mainboard – Bottom side



EHC1600-SAM_MSK PCB-Top side.

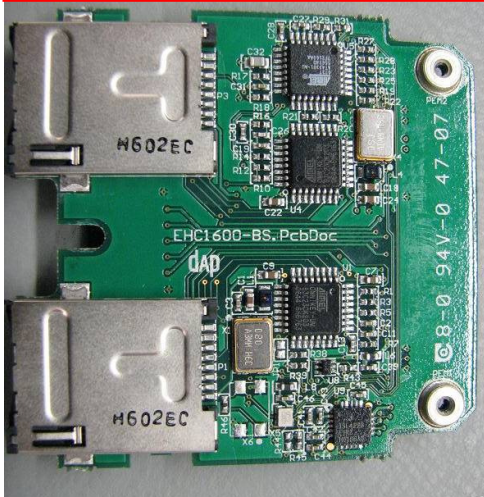


EHC1600-SAM_MSK PCB-Bottom side.

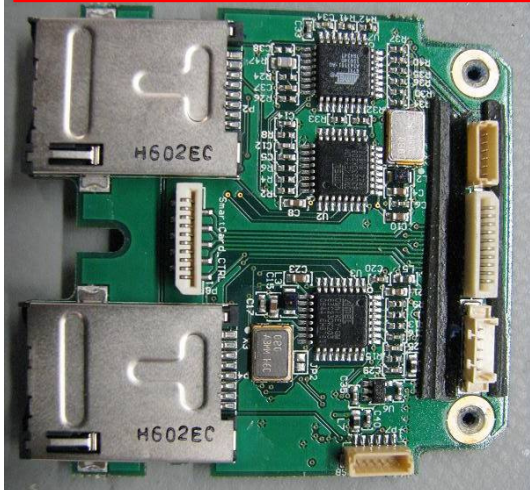




FCE056-SMART CARD READER-ANTENNA PCB-location in unit.

FCE056-SMART CARD READER-ANTENNA PCB-Top side.

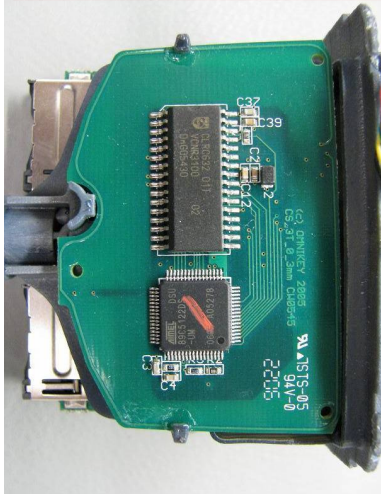


FCE056-SMART CARD READER-ANTENNA PCB-Bottom side.

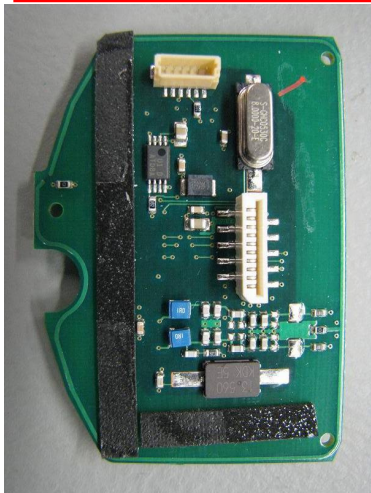




EHC1700-Fingerprint PCB-location in unit.

EHC1700-Fingerprint PCB-Top side.

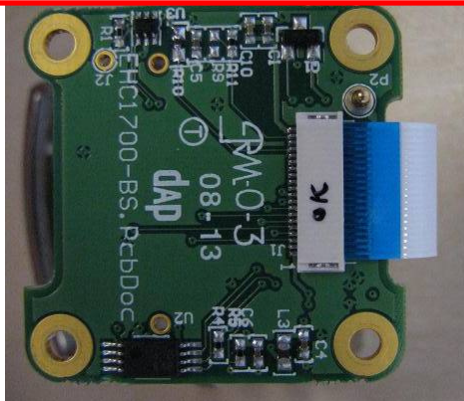


EHC1700-Fingerprint PCB-Bottom side.

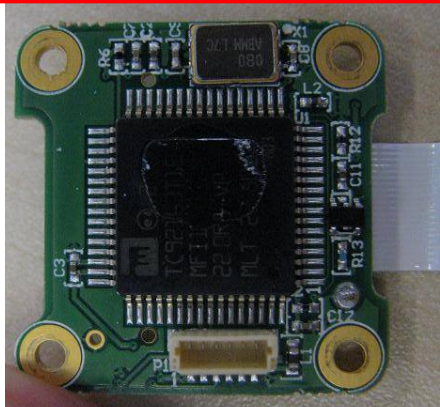




EGF0200-KEYBOARD PCB-location in unit.

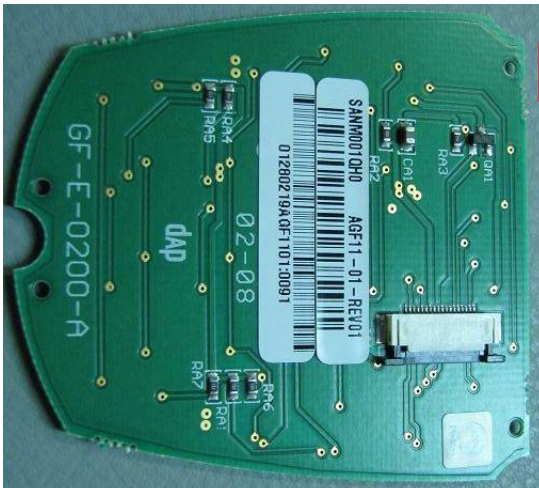

EGF0200-KEYBOARD PCB-Top side.

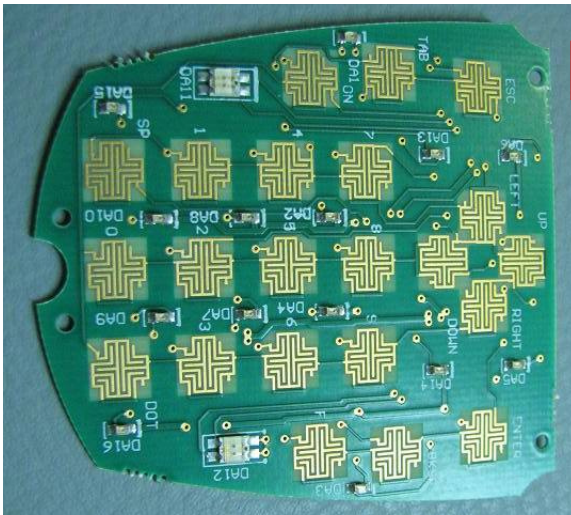

EGF0200-KEYBOARD PCB-Bottom side.