

Important Safety Information

Follow all warnings and instructions marked on the product or contained in the owner's manual.

When using this product, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons, including the following:

- This unit is NOT waterproof. DO NOT expose this unit to rain or moisture.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power adapters, power cords and batteries indicated in the manual.
- If more than one type of power adapter is included in the product, the manual specifies which adapter should be used for each component. Be sure to use the proper adapter for each product component.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Do not subject the product to high temperatures or leave it in direct sunlight for an extended period of time.
- Never dispose of any batteries in a fire: batteries can explode if subjected to extreme heat.

SAVE THESE INSTRUCTIONS!

Rechargeable Battery Information

CAUTION!

**Risk of explosion if battery is replaced by an incorrect type!
Dispose of used batteries according to the instructions.
Do not open or mutilate the battery.
Disconnect the battery before shipping this product.**

- This equipment contains a rechargeable Lithium-Ion (Li-Ion) battery.
- The battery is not user-serviceable. Do not attempt to open the battery cell. In case of exposure to the cell contents, wash the affected area thoroughly and seek medical attention.
- Do not expose the battery to temperatures in excess of 140° F (60° C).
- Do not short-circuit the battery.
- Exercise care when handling the battery around conducting materials such as rings, bracelets, and buttons: conducting materials can short the battery, and the battery or conductor can overheat and cause burns.
- When charging this equipment, only use the charger designed to charge the battery pack as specified in the owner's manual: using any other charger may damage the product or cause the battery pack to explode.
- Before placing the handset in the charger, make sure the battery is installed and the battery cover is securely in place.
- Do not place the batteries in your regular trash. All batteries must be recycled or disposed of in an environmentally sound manner. Contact your local waste management officials for information and regulations on the proper collection, recycling, and disposal of batteries.

**Rechargeable batteries must be recycled
or disposed of properly.**
