

## REMOTE CONTROL CAR

### 1) The install method of batteries

How to install batteries for emitter: open the cover and place two AA batteries based on the symbol indicated correctly, and then close the cover.

How to install batteries for remote control car: open the cover and place four AA batteries based on the symbol indicated correctly, and then close the cover.

### 2) Operating method

1. You could continue the next steps when the batteries are installed correctly.
2. Push the power switch on the bottom of the car from OFF to ON;
3. Push the left joy stick onwards, the car will be moved onwards; if push backwards, it will be receded. Also, it could be turned right when you put the right joy stick to rightward, at the same time, it could be turned left while to leftward. While you operate both joy sticks, the car could be moved left or right when push towards or backwards freely. The front lights is turned on when controlling.
4. You could adjust direction adjustment on the bottom if the car couldn't run straight line.
5. Please change the batteries on the bottom if the car runs slowly.
6. Please change the batteries in the controller if it couldn't control long distance.
7. Please turn off the switch from ON to OFF and take out the related batteries when you're not using it