

2
PLAYER
ACTION!

CORDLESS
OPERATE TWO ROBOTS VIA
REMOTE CONTROLS

COMPETITIVE
THROW HOOKS AND JABS
IN AN ATTEMPT TO KNOCK OUT
YOUR OPPONENT

VERSATILE
OMNI-DIRECTIONAL FUNCTION
PROVIDES EASY MANEUVERING
DURING PLAY



THE BLACK SERIES™

by shift³

THE BLACK SERIES™

by shift³

WARNING!
CHOKING HAZARD - Small parts.
Not suitable for children under 3 years.

**HEAD
EJECTS**
when chest
is hit

DX2013G

**360
ROBOT
BOXING
ACTION**

**BATTERY
OPERATED
PLAY ROBOTS**
AGES 6 AND UP

**2
PLAYER
ACTION!**

32.5x22x27cm

WINDOW DIE-CUT
Tray Insert Prints 40C/100Y (Green)

THE BLACK SERIES™

by shift³

cyber boxing robots

head-2-head RC boxing



- robot's head ejects when chest plate is hit by opponent
- two robots/remote controls for thrilling 2-player battles
- perform hooks, jabs and 360 degree spins
- play head-to-head for hours of interactive fun

Each robot requires 3 "AAA" 1.5V alkaline batteries (not included). Each remote control requires 1 "9V" alkaline battery (not included). See bottom panel for important battery information. Colors and styles may vary.

A BLOW TO THE CHEST PLATE
OF YOUR OPPONENT'S ROBOT
RESULTS IN A KNOCK-OUT!

cyber boxing robots

head-2-head RC boxing

THE BLACK SERIES™

Toy RC Boxing Robots

cyber boxing robots

head-2-head RC boxing


SAFETY PRECAUTIONS:

- Do not use product for other children or animals. The decorative head can pose a choking hazard.
- Adult supervision is recommended at all times.
- Read and follow all safety instructions and warnings on the product or its packaging.
- Keep the product out of reach of children when not in use.
- Do not use the product near water.
- Do not use the product near fire or other heat sources.
- Do not use the product near electrical outlets or power lines.
- Do not use the product near moving vehicles, machinery, or other equipment.
- Do not use the product near people, animals, or property.
- Do not use the product near people, animals, or property.
- Do not use the product near people, animals, or property.

OPERATING INSTRUCTIONS

Each robot requires 3 "AAA" 1.5V alkaline batteries (not included). Each remote control requires 1 "9V" alkaline battery (not included). When changing batteries, adult supervision is required. Use alkaline batteries for best performance.

1. Carefully remove items from the package.
2. Locate the battery compartment on the back of each robot, as well as each remote.
3. On robots, loosen the screws and remove battery doors. Slide doors open on RC units.
4. Insert "AAA" batteries inside robots while observing the correct polarity on each compartment base diagram. Insert one "9V" battery into each remote control.
5. Replace the battery doors and tighten screws.
6. Switch robot and remote control power switches to the "ON" position. The power switch is located on the side of the robot(s).

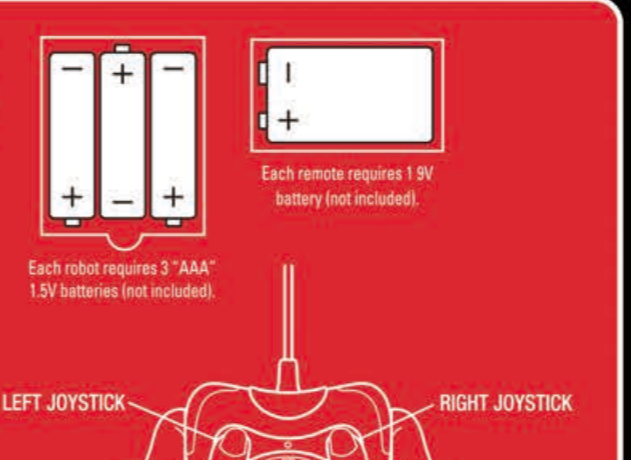

BATTERY WARNINGS:

- Do not use alkaline, standard carbon zinc, or rechargeable pocket cell batteries.
- Do not mix different types of batteries.
- Do not mix old and new batteries.
- Do not use batteries with different capacities. Do not interconnect the positive terminals.
- Remove batteries when not in use. Replace or dispose of exhausted batteries according to local, state, and federal laws. Do not dispose of batteries in fire, on, or near any heat or water.
- Do not use the manufacturer's specified (rechargeable) battery under any circumstances.
- Always use proper and safe disposal of rechargeable batteries under adult supervision.

NOTE: Before use, adjust the robot(s) to make sure both feet have good contact with the ground. Use one hand. Do not touch and crawl for best results.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

OPERATING CONTROLS

- Left Joystick: Move robot forward, backward, left, and right.
- Right Joystick: Move robot forward, backward, left, and right.
- Buttons: Perform various actions.

HOW TO PLAY

There are several levels to play through each robot's chest plate. The object of the game is to knock the opposing robot's head off by making contact with the chest. When the head ejects, the power will be cut off. To control the robot, the head has to be attached to the body. To return the head to the body, the robot must be moved into the chest and the head must be pushed into the chest.

2903011 (32596)
94202 31384
Made in China

©2013 Mattel Inc. All rights reserved. The Black Series, The Black Series by shift³, and associated logos are trademarks of Mattel Inc. All rights reserved.
For technical support, please visit www.mattel.com or call 1-800-234-2174.
The product and design of this equipment are protected by US copyright law and may not be reproduced, distributed, published, sold, or used for any purpose without prior written permission. If you purchase a later version of this equipment, please refer to the copyright notice on the packaging.
WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.