

37cm W x 30.5cm H x 13cm D



**INSERT 2 "AAA" BATTERIES** 

**INSERT 3 "AA" BATTERIES** 

RADIO CONTROLLED ANIMATED ACTION DINOSAUR

Operation requires 3 "AA" 1.5V batteries (included) for the dinosaur,

**NOTE:** For best results, replace dinosaur batteries upon purchase.

and 2 "AAA" batteries for the radio controller (not included).

INSTALLING THE REMOTE'S BATTERIES

Using a screwdriver, remove the screw from the

Open the battery compartment door and insert

INSTALLING THE DINOSAUR'S BATTERIES

Locate the battery compartment located on the side

Using a screwdriver, remove the screw from battery

Using a screwdriver, attach the battery compartment

Open the battery compartment door and insert

door back onto the dinosaur's tail.

 Using a screwdriver, attach the battery compartment door back onto the remote.

2 "AAA" batteries (Fig. 1).

products, precautions should be observed during handling and use to

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts

educe the risk of electrical shock.

oe repaired or replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Always use, replace, and recharge (if applicable) batteries under adult supervision.

