



BLUE HAT TOY COMPANY

SUMO KING WRESTLING

WIRELESS HEAD-2-HEAD RC FIGHTERS



12.75"L x 9"H x 8.5"D



SUMO KING WRESTLING

WIRELESS HEAD-2-HEAD RC FIGHTERS

BATTERY WARNING:

• Do not use damaged, modified, loose, or recharged/replaceable batteries.

• Do not use batteries with different capacities. Do not use mixed battery types.

• Always use the correct type of battery (e.g., AA, AAA, C, D, NiMH, NiCd, etc.).

• Do not use batteries with different brands or types.

• Always use the correct polarity (+/-) when inserting batteries.

• Always use the correct voltage (e.g., 1.5V, 3.0V, 4.5V, 6.0V, 9.0V, 12.0V).

• Always use the correct number of batteries.

• Always use the correct type of battery (e.g., AA, AAA, C, D, NiMH, NiCd, etc.).

• Always use the correct polarity (+/-) when inserting batteries.

• Always use the correct voltage (e.g., 1.5V, 3.0V, 4.5V, 6.0V, 9.0V, 12.0V).

• Always use the correct number of batteries.

OPERATING INSTRUCTIONS:

Each wrestler requires 2 "AAA" (LR44) batteries (not included). Each remote control requires one 9V battery (not included). When changing batteries, adult supervision is required. See below for important battery information. Colors and sizes may vary.

1. Carefully remove faces from the package.
2. Locate the battery compartment on the inside of each wrestler, as well as each remote.
3. Remove the battery covering. Insert the correct battery. Do not use mixed battery types.
4. On wrestler, loosen the screws and remove battery doors. Make doors open in correct compartment (see diagram). Insert one 9V battery into each remote control.
5. Replace the battery doors and tighten screws.
6. Switch wrestler and remote control power switches to the "ON" position. The power switch is located on the bottom of the remote.

NOTE: For best results, operate wrestlers on hard surface.

TURN LEFT/TURN RIGHT: FORWARD / BACKWARD

POWER ON / OFF:

HOW TO PLAY:

The object of the game is to knock the opposing wrestler out of the ring by making contact with the wrestler's body, thus forcing the wrestler forward by sheer force.

2906064 | 35008

2906064 35008

MADE IN CHINA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference from the same authorized operation.

©2015 MicroStar, LLC. Blue Hat Toy Company, Blue Hat Toy Company Logo and Sumo King Wrestling are trademarks of MicroStar, LLC. Used under license. All rights reserved.

MicroStar, LLC, Irvine, CA 92618.

For technical support, please visit www.microstar.com or call 1-800-328-2746.

The actual appearance of this device may vary from the illustration and cannot be held responsible. Additional product information is available for this device. Please refer to the user manual for more information. © is not permitted in other, similar or identical any trademarks or copyright notice from this package.

PACKAGING INSERT

