



12.75"L x 9"H x 8.5"D



BATTERY WARNING:

- Do not use damaged, modified, old, or recharged (nickel-cadmium) batteries.
- Do not use alkaline batteries.
- Do not use different types of batteries in the same device.
- Never allow any short circuit (e.g., by touching the positive and negative terminals).
- Do not use batteries with different capacities or different types (e.g., alkaline, silver-oxide).
- Always use correct polarity and safety instructions when inserting batteries.

OPERATING INSTRUCTIONS:

Each wrestler requires 2 "AAA" (LR44) batteries (not included). Each remote control requires one 9V battery (not included). When changing batteries, adult supervision is required. See the battery section for best performance.

1. Carefully remove faces from the package.
2. Locate the battery compartment on the inside of each wrestler, as well as each remote.
3. Remove the battery covering. Insert the correct battery (check the label).
4. On wrestler, loosen the screws and remove battery doors. Make doors open in correct compartment (see diagram). Insert one 9V battery into each remote control.
5. Replace the battery doors and tighten screws.
6. Switch wrestler and remote control power switches to the "ON" position. The power switch is located on the bottom of the remote.

NOTE: For best results, operate wrestlers on hard surface.

TURN LEFT/TURN RIGHT
FORWARD/BACKWARD
POWER ON/OFF

HOW TO PLAY:
The object of the game is to knock the opposing wrestler out of the ring by making contact with the wrestler's body, thus forcing the wrestler forward by sheer force.

2906064 | 35008

MADE IN CHINA

WARNING: Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference from the same authorized operation.

©2015 MicroStar, LLC. Blue Hat Toy Company, Blue Hat Toy Company Logo and Blue Hat Sumo are trademarks of MicroStar, LLC. Used under license. All rights reserved. All other trademarks are the property of their respective owners.

FOR TECHNICAL SUPPORT: please visit www.microstarusa.com or call 1-800-328-2764.

The return policy of MicroStar may vary by retailer. All products are sold as-is. Additional product information is available for each product. Please refer to the product manual for more information. © is not permitted to alter, remove or modify any trademarks or copyright notice from this package.

PACKAGING INSERT

