

ART DEPARTMENT			
Job # / Filename	20160420_BMC_C_ChargeCar_Car_ChargeCar_1	Product Line	Blue Hat Toy Company
Developer	Brand Manager	Finished Size	20cm W x 23.5cm H x 28.5cm D
Draw Tool	Line Navigator	Color	CMYK Process
File Format	Adobe Illustrator CC (Swatch) (CMYK)	Print Date / User	Comments
Printing Process / Finishing	Class: PF Coating		

- Hyper-Speed Racing On Any Terrain
- Oversized Knobby Tires And 4-Wheel Suspension
- Full Function Wireless Remote
- Available In 2 Frequencies For Competitive Racing



VENGEOANCE



VENGEOANCE

RADIO CONTROLLED ALL-TERRAIN RACE CAR



AGES 6+

- BOX CONTAINS THE FOLLOWING FREQUENCY:
- 27 MHz
 - 49 MHz

BATTERY OPERATED PLAY VEHICLE
AGES 6 AND UP

WARNING! CHOKING HAZARD
Small parts. Not suitable for children under 3 years.



WIRELESS RC ACTION!



VENGEOANCE

RADIO CONTROLLED ALL-TERRAIN RACE CAR



VENGEOANCE

RADIO CONTROLLED ALL-TERRAIN RACE CAR



EXCITING RC DRIVING ACTION!

- Hyper-Speed Racing On Any Terrain
- Oversized Knobby Tires And 4-Wheel Suspension
- Full Function Wireless Remote
- Available In 2 Frequencies For Competitive Racing



VENGEOANCE

RADIO CONTROLLED ALL-TERRAIN RACE CAR

BATTERY INSTALLATION

Operation requires one NiCad rechargeable battery pack (included) for car and one 9V battery (included) for radio controller.

- Carefully remove items from package.
- Remove the battery compartment cover of each item.
- Loosen screws on the back of the car to open the battery cover, and connect the battery pack.
- Replace the battery compartment door of the controller.
- Insert the one 9V battery following the correct polarity.
- Replace the battery compartment door.

BASIC CAR OPERATION

- Forward
- Back Up
- Right Turn
- Left Turn

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, snow and snow when operating car.
- Do not use the car on uneven or slippery surfaces.
- Never operate car in a confined or crowded area, and do not use people or animals as obstacles.
- Do not use your car on furniture, objects or hard surfaces, as this will cause damage to the car and the surface.
- Keep fingers, hair and loose clothing away from the gears and motor while the car is in motion.
- Do not use the car on wet or icy surfaces.
- Remove all batteries when not in use to avoid accidental operation.
- Fully charge your car in a well-ventilated area.

STERING ALIGNMENT ADJUSTMENT:

- Turn the car in the direction you want to adjust.
- Loosen the screws on the steering knuckle.
- Turn the knuckle in the direction you want to adjust.
- Tighten the screws.

BATTERY WARNING:

- Do not use the car in wet or icy conditions.
- Do not use the car on uneven or slippery surfaces.
- Do not use the car on furniture, objects or hard surfaces.
- Do not use the car on wet or icy surfaces.
- Do not use the car on wet or icy surfaces.

BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

- Do not dispose of batteries in the trash.
- Do not dispose of batteries in the trash.
- Do not dispose of batteries in the trash.

MADE IN CHINA