

Operation requires 5 "AA" 1.5V batteries (not included) for motorcycle, and one 9V battery (not included) for radio controller.

Remove the battery compartment.

the controller. (Fig.2)

before operating.

LEFT JOYSTICK FORWARD & REVERSE

BATTERY WARNING:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

After removing your motorcycle from the box, you must

remove the paper tray. Unscrew the fastener underneath

Insert 5 "AA" 1.5V batteries according to the polarity

Replace the battery compartment and battery cover.

Insert the one 9V battery following the correct polarity.

Replace the screw/battery compartment door securely

diagram located on the battery tray . (Fig. 1)

Slide open the battery compartment door of

Switch the controller power switch to the "ON" position.

Operate the motorcycle according to the controls diagram below.

OPERATING CONTROLS

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

Remove batteries when not in use. Recycle or dispose of exhausted batteries according to

federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode. Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified

Insert batteries using the correct polarity. Do not short-circuit the supply terminal.

Always use, replace, and recharge (if applicable) batteries under adult supervision.

To start your motorcycle press the left joystick forward and slightly turn the motorcycle in the opposite direction in which it is resting.

RIGHT JOYSTICK
LEFT & RIGHT

reduce the risk of electrical shock.

be repaired or replaced.

Consult the dealer or an experienced radio / TV technician for help.

Distributed by MerchSource, LLC, Irvine, CA 92618.

For technical support, please visit www.mscustomercare.com or call 1-800-374-2744.

