

# Instruction manual

## Remote-controller's battery installation

- 1 ) release the cover of battery box
- 2 ) Install two AA batteries into battery compartment according to the right poles
- 3 ) Close the cover of the battery box

## Car battery installation

- 1 ) use screw drive to remove the cover of the battery compartment which is under the bottom of the car ;
- 2 ) Install four AA batteries into battery compartment according to the right poles
- 3 ) close the cover of the battery compartment
- 5 ) lock the cover with screw driver again.

## Use instruction

- (1)Turn the power switch of controller and car-body to "ON" position;
- (2)The light on controller will be on; When the light is turning dimmer and dimmer, the batteries are to be replaced;
- (3)Operate the handle of the controller, the car can move forward/backward/left/right; The head-light and tail-light will also light.
- (4)After play, turn the power switches to "OFF" position.

**NOTE:**

**THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.**