Instruction Manual

Remote-controller's battery installation

- 1) realease the cover of battery box
- 2) Install a 9V 6F22ND battery into battery compartment according to the right poles
- 3) Close the cover of the battery box

Car battery installation

- 1) Turn the lock screw of the battery compartment off right position;
- 2) Remove the cover of the battery compartment;
- 2) Install six AA batteries into battery compartment according to the right poles
- 3) close the cover of the battery compartment;
- 5) lock the cover again

Use instruction

- (1) Turn the power switch of controller and car-body to "ON" position;
- (2) The light on controller will be on. When the light is turning dimmer and dimmer, the batteries are to be replaced;
- (3)Operate the handle of the controller, the car can move forward/backward, roll left/right or stop.
- (4) After play, turn the power switches to "OFF" position.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.