

Operation Description

Transmitter:

When press the control key forward/backward/right-ward/left-ward, the instruction were input to the coding circuit; The coded signal is amplified together with high frequency vibration signal; After LC filter, the signal istransmit by the antenna.

Receiver:

High frequency signal passes the antenna and enter the decoding circuit; After decoding, output action signal(+5V); The action signal voltage is amplified and drive the motors running individually.