

instruction manual

remote-controller's battery installation

- 1• Release the cover of battery box
- 2• Install a 9V 6F22ND battery into battery compartment according to the right poles
- 3• Close the cover of the battery box

car battery installation

- 1• Turn the lock device of the battery compartment to a right position;
- 2• Remove the cover of the battery compartment ;
- 2• Install six AA batteries into battery compartment according to the right poles
- 3• Close the cover of the battery compartment;
- 5• Lock the cover again

use instruction

- (1) Turn the power switch of controller and car -body to "ON" position;
- (2) The light on controller will be on. When the light is turning dimmer and dimmer, the batteries are to be replaced;
- (3) Operate the handle of the controller, the car can move forward/backward, roll left/right or stop. The body-light can also light.
- (4) After play, turn the power switches to "OFF" position.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT