

**FCC NOTE:**

The antenna provided is a unique antenna. By installation of unauthorized antenna to this equipment. Such unauthorized installation could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could also void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**BORN TO BE WILD**

Words and Music by MARS BONFIRE

©SONGS OF UNIVERSAL, INC. O/B/O UNIVERSAL MUSIC PUBLISHING,  
A.D.O. UNIVERSAL MUSIC CANADA LTD. (SOCAN)/BMI/SOCAN  
International Rights Secured. All rights reserved.

**GIMME ALL YOUR LOVIN'**

Words and Music by Bill F Gibbons/Dusty Hill/Frank Beard

©STAGE THREE SONGS (ASCAP)  
International Rights Secured. All rights reserved.

©2006 Innovage, Inc.

All Rights Reserved

Printed in China

Imported by:

Innovage, Inc., 19511 Pauling,  
Foothill Ranch, CA 92610

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

# monster jammer

## OPERATING INSTRUCTIONS

Please read this entire manual before operating this product.









 



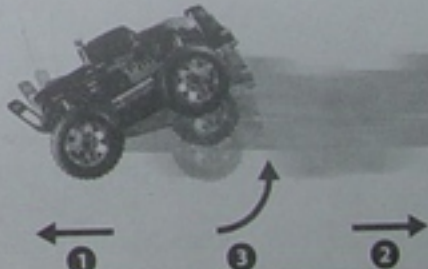 



**CAUTION! ELECTRIC TOY:** Not recommended for children under 6 years of age. As with all electrical products, pre-cautions should be observed during handling and use to reduce the risk of electric shock.

**ATTENTION PARENTS:** It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

2006 9 1

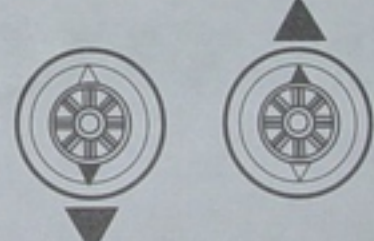 KEEP THIS MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

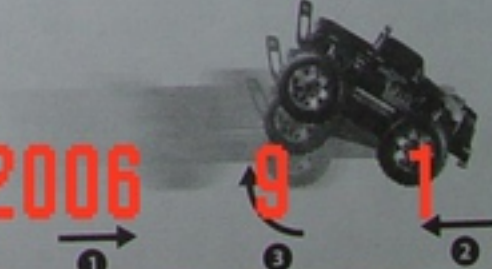

| FUNCTIONS                          | DIRECTIONS  | RADIO-CONTROL FUNCTION  | TRUCK STUNT   |
|------------------------------------|---|---|---|
| <b>FORWARD</b>                     | PRESS <b>FORWARD</b> ON BOTH LEFT AND RIGHT CONTROL PADS TOGETHER TO MOVE THE TRUCK FORWARD.  |    |    |
| <b>REVERSE</b>                     | PRESS <b>REVERSE</b> ON BOTH LEFT AND RIGHT CONTROL PADS TOGETHER TO MOVE THE TRUCK BACKWARD.   |    |    |
| <b>360° CLOCKWISE SPIN</b>         | PRESS <b>FORWARD</b> ON THE LEFT-HAND SIDE AND <b>REVERSE</b> ON THE RIGHT-HAND SIDE TO SPIN THE TRUCK 360° CLOCKWISE.  |    |    |
| <b>360° COUNTER-CLOCKWISE SPIN</b> | PRESS <b>REVERSE</b> ON THE LEFT-HAND SIDE AND <b>FORWARD</b> ON THE RIGHT-HAND SIDE TO SPIN THE TRUCK 360° COUNTER CLOCKWISE.  |   |   |
| <b>FRONT WHEEL WHEELIE</b>         | PRESS AND HOLD BOTH <b>REVERSE</b> DIRECTION BUTTONS TO MOVE THE TRUCK BACKWARDS FIRST. THEN QUICKLY PRESS DOWN ON BOTH <b>FORWARD</b> DIRECTION BUTTONS TO MAKE THE TRUCK PERFORM A FRONT WHEEL WHEELIE. | <p><b>STEP 1</b></p>  <hr/> <p><b>STEP 2</b></p>  |  |
| <b>REAR WHEEL WHEELIE</b>          | PRESS AND HOLD BOTH <b>FORWARD</b> DIRECTION BUTTONS TO MOVE THE TRUCK FORWARD FIRST. THEN QUICKLY PRESS DOWN ON BOTH <b>REVERSE</b> DIRECTION BUTTONS TO MAKE THE TRUCK PERFORM A REAR WHEEL WHEELIE.    | <p><b>STEP 1</b></p>  <hr/> <p><b>STEP 2</b></p>  |  |

2006 9 1



## TROUBLE-SHOOTING

### PROBLEM

Truck does not move or moves slowly

### POSSIBLE SOLUTIONS

- Make sure power switch on truck and transmitter control are in the "ON" position
- Make sure the battery in the truck and transmitter are installed properly
- Replace exhausted battery with new "9V" alkaline battery and recharge truck battery

Truck moves erratically or transmitter range is short

- Change locations as there may be radio interference in the area
- Move away from other radio-control trucks or gadgets as they may be operating on the same frequency
- Make sure antenna in transmitter is screwed in tight and fully extended
- Make sure transmitter battery connection is in good condition

Truck does not work after going through water, snow or sand

 
- Allow truck to dry thoroughly for 24 hours
- Avoid driving in water, snow or sand

## SAFETY PRE-CAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your truck.
- Do not submerge truck or controller in water.
- Never operate your truck on the street or highway.
- Never operate your truck in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your truck into furniture, objects or hard surfaces, as this will cause damage to both the objects and the truck.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the truck is switched to "ON".
- Do not leave truck or transmitter near sources of heat or under direct sunlight for long period of time.
- Do not leave truck or transmitter outside overnight. Dampness is harmful to interior components.
- Remove all batteries when not in use to avoid accidental operation.
- Adult supervision is recommended when operating this truck.

## CHARGING

1. Before first use, the rechargeable battery pack must be charged with the included special charging adapter plug for at least 10 hours.
2. Connect the plug end of the battery pack to the charging plug of the adapter as shown.

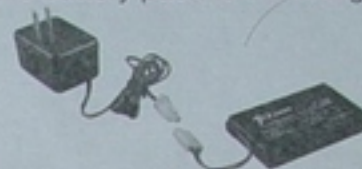

3. Plug the AC adapter into wall outlet (110V) and let it fully charged for at least 10 hours for the first time. Subsequent recharging requires approximately 6 - 7 hours.
4. DO NOT charge the rechargeable battery pack for more than 16 hours.

## RADIO-CONTROL TRANSMITTER SET-UP

1. Remove the screw on the back of the transmitter from the battery compartment cover with the provided screwdriver.
2. Remove the cover and insert the included 9V battery in the correct polarity as shown in the battery compartment.
3. Replace the cover and tighten the screw.
4. Attach the antenna to the top of the transmitter by winding it clockwise until tight.

## STUNT MUSIC TRUCK SET-UP

1. Power must be in OFF position (truck underside) before connecting the rechargeable battery pack.
2. Rechargeable battery pack must be fully charged for at least 10 hours before first use.
3. Remove the two screws from the chrome color panel behind the truck cab.
4. Connect the rechargeable battery pack to the battery plug inside the battery compartment. Attach the two plug ends securely.
5. Insert the rechargeable battery pack into the battery compartment.
6. Replace the chrome color panel and screws securely.

 
(Please refer to diagrams in BATTERY REPLACEMENT on page 7).

## OPERATION


1. Turn the music truck on by switching the power to ON (truck underside). Red color power indicator light on the top of the truck will appear.
2. Switch the radio-control unit to ON (transmitter underside). Red color power indicator light lit on the front.
3. Press SELECT button once to start up the truck and hear the ignition and engine idle sounds.
4. Press SELECT button to alternate between the 2 horn sounds.
5. Press MODE button to enter into Music/Song mode. Press SELECT to cycle between the two programmed classic rock songs ("Born to be Wild" and "Gimme All Your Lovin").
6. Press MODE button again to turn off all sounds; other functions remain.



## PARTS IDENTIFICATION

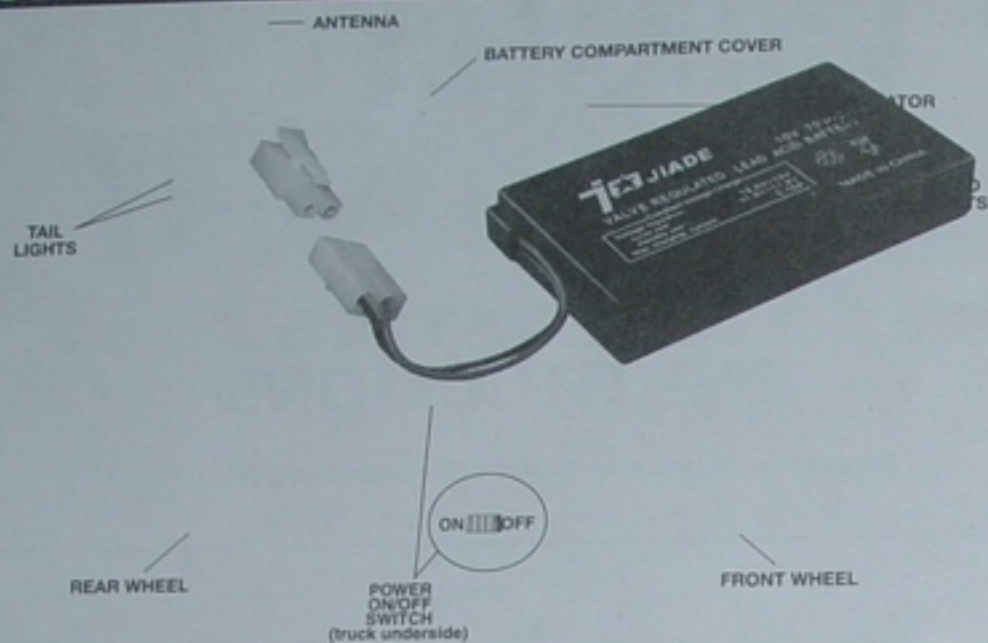

STUNT MUSIC TRUCK

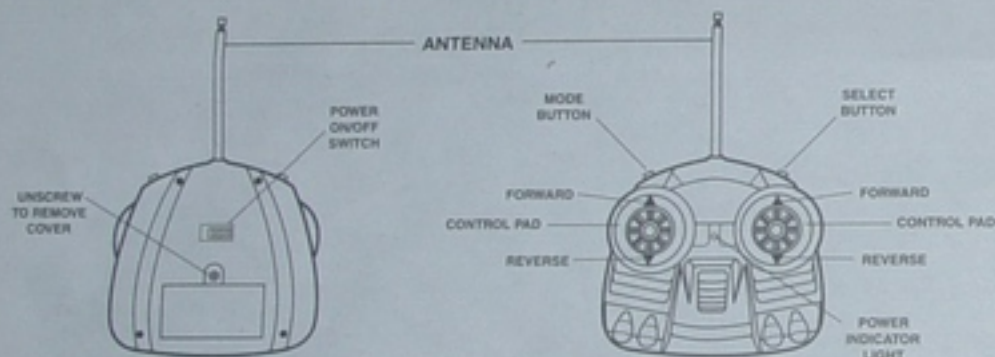 

RADIO-CONTROL TRANSMITTER


**This box includes one each of the following**

 1. Stunt Music Truck
  2. Radio-Control Transmitter
  3. 10V 700mA Rechargeable Lead Acid Battery
  4. CUL Approved Charging Adapter
  5. 9V battery
  6. Phillips screwdriver
- (Remove items from package with care.)


## BATTERY PRE-CAUTION

- Insert battery according to the correct polarity.
- Do not short circuit battery contacts.
- Remove battery in radio-control transmitter and truck if they will not be used for a long period of time.
- Check battery regularly for leakage.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- Do not dispose batteries in a fire - batteries may leak or explode.

**\*\*CONTAINS RECHARGEABLE LEAD ACID BATTERY\*\***  
**BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY**  
**ACCORDING TO LOCAL DISPOSAL REQUIREMENTS.**

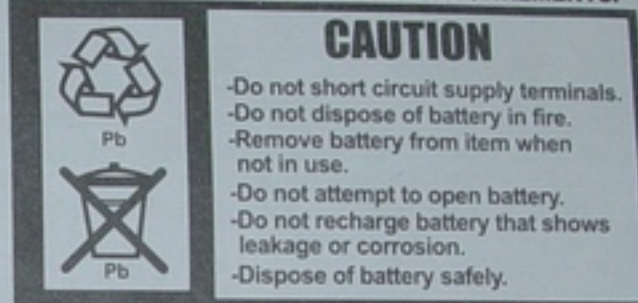

## BATTERY REPLACEMENT

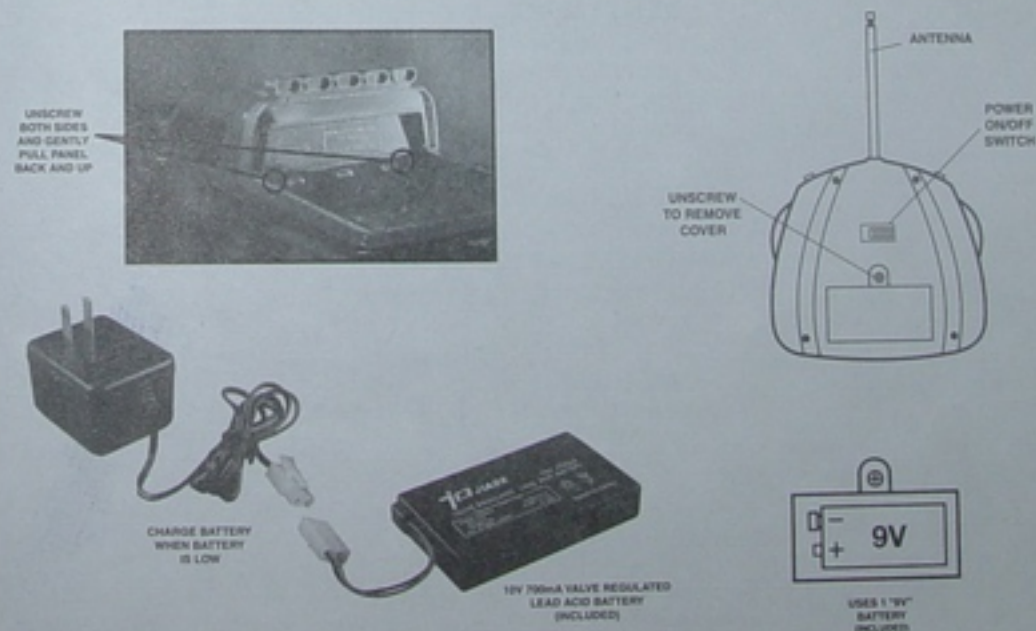 

TRUCK BATTERY DIAGRAM

RADIO-CONTROL BATTERY DIAGRAM

2006 9 1